Setup

Setup the conveyor Belt

Control mode	Description
Robot control mode	The Conveyor Belt is controlled by a Niryo robot.
External control box	The Conveyor Belt is controlled by the external control box to vary speed and direction.

Control with Ned2

The Conveyor Belt communicates with Ned2 via the TTL Bus.

To use the Conveyor Belt with Ned2, connect the robot control connector on the motor side of the Conveyor Belt on the back of Ned2 on port A or B. (see illustration below).

> TAKE CARE TO CONNECT THE WIRE **FIRST** TO THE **CONVEYOR** BEFORE THE NED2
> ! RISK OF DAMAGING THE CONVEYOR



To use the infrared sensor with the Conveyor Belt and the robot, connect the sensor to the back of Ned2 (Port C).

Control with control box

The Conveyor Belt can be controlled using an optional control box.




Please connect the C1 to the robot control connector of the Conveyor Belt (1) and the C2 to the standalone controller connector (2) on the Conveyor Belt side; then connect the C0 to the control box (1).

Connect the IR sensor to the connector (2) of the Control box if necessary.



Connect the power supply to the connector.

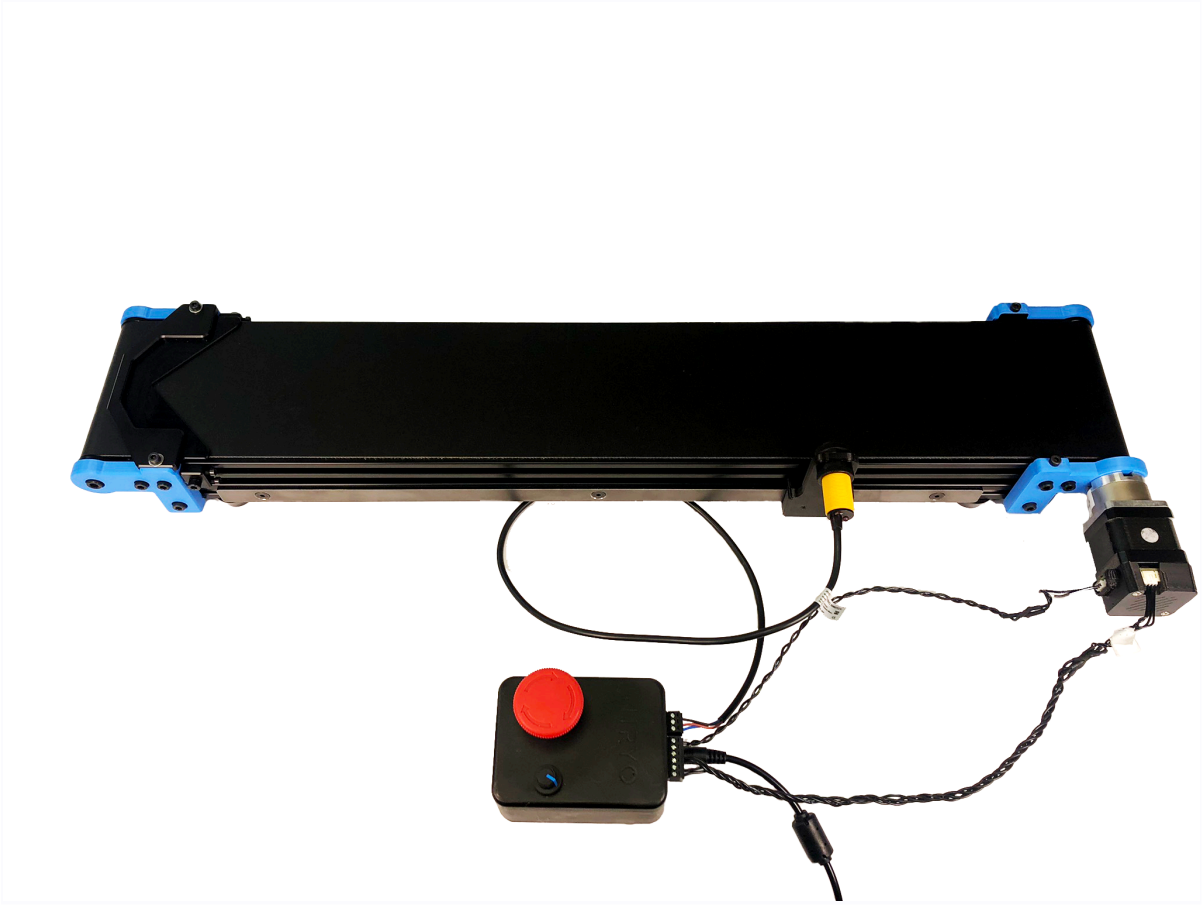

> Follow the order of connection of the control box to avoid any damage.

> Activate the emergency stop button in emergency or abnormal situation.

Made with Docsie.io