

OMNI

The desktop command pad · handmade, hand-tuned.

*Nine keys. Two dials.
One quiet command of your
desk.*

A 3D-printed control pad with four switchable modes — Work, Music, Designer, and Phone — plus offline voice, a security lock, and a companion app. Set it down, plug it in, take the day.

01	02	03	04
3 × 3 grid	Two dials	Four modes	Hold S9
Mechanical keys, S1 – S9.	Volume above brightness.	Work · Music · Designer · Phone.	Offline voice. Stays on the desk.

DESIGNED & ASSEMBLED IN-HOUSE ·
MATTE-GREY EDITION

SKU OMNI-MG-01
/ EN



— a portrait of the desk's quietest tool.


§ 01 · HELLO

Welcome.

OΣNI is the small, handsome thing that lives next to your keyboard and quietly runs the rest of the desk. Nine keys you can map to anything, two friendly dials, a little screen that tells you where you are, and a microphone that listens only when you ask it to.

It works the moment you plug it in. The pages that follow take five minutes to read, and you will not need them again.

Φ ANATOMY OF THE UNIT

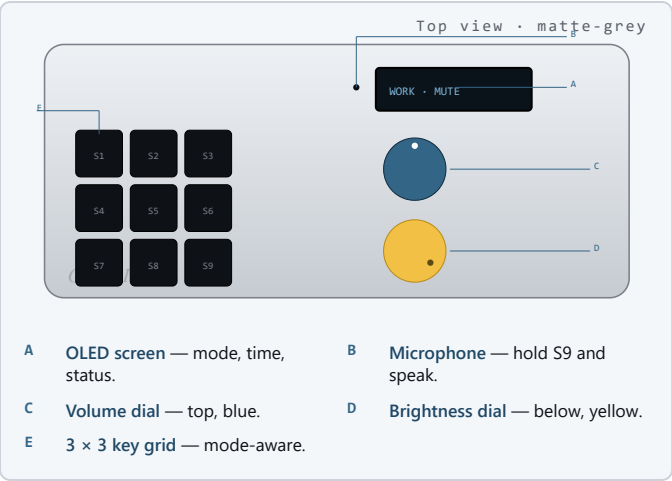

→ FIRST FIVE MINUTES

- 01 Place it.** Set OΣNI to the right of your keyboard, dials facing you. The rubber feet grip without marking.
- 02 Plug in.** Use the included braided cable. The OLED greets you with a small sunrise.
- 03 Pick a mode.** Tap S9 to cycle: Work → Music → Designer → Phone. The screen confirms.
- 04 Try the dials.** Spin the blue knob for volume, the yellow knob for brightness — in any mode.
- 05 Say hello.** Hold S9 and say "music mode". It listens offline, only while held.
- 06 Open the app.** Hold S7 to launch the OMNI companion app on your computer.

🌐 THE FOUR MODES, BRIEFLY

- Work** One-tap launch for your everyday apps — Outlook, Teams, Chrome, VS Code — plus a quick screenshot.
- Music** Media controls for anything playing: next, previous, mute, volume, shuffle and like.
- Designer** Open Photoshop, Blender or Krita and fire the core shortcuts — new, save, undo, redo, fullscreen.
- Phone** Run Microsoft Teams calls — answer, decline, mute, camera, raise hand, share screen.

§ 02 · LAYOUTS

One pad, four moods.

Tap **S9** to cycle modes — the OLED announces the new layout and keys remap instantly. **S9** is also the multi-tool: hold it to talk, hold longer for voice training.

⦿ THE TWO DIALS



The **blue** knob, on top. Spin to raise or lower system volume — works in every mode.



The **yellow** knob, below. Spin to set screen brightness — works in every mode.

🗣️ TALK TO IT — OFFLINE

Hold **S9**, then say a command. Recognition runs on-device — no audio is recorded or sent.

"Work mode." ↳ switches mode

MODE · 01

Work

One-tap launch for your daily apps.

- S1** Outlook
- S2** Teams
- S3** Chrome
- S4** Screenshot
- S5** Claude
- S6** File Explorer
- S7** VS Code · app
- S8** Calculator
- S9** Mode ▶ voice

MODE · 02

Music

Media controls for anything playing.

- S1** Next track
- S2** Previous
- S3** Mute
- S4** Volume +
- S5** Volume −
- S6** Shuffle
- S7** Like · app
- S8** Lock (+S9)
- S9** Mode ▶ voice

MODE · 03

Designer

Open creative apps; core shortcuts.

- S1** Photoshop
- S2** Blender
- S3** Krita
- S4** New
- S5** Save
- S6** Undo
- S7** Redo · app
- S8** Fullscreen
- S9** Mode ▶ voice

MODE · 04

Phone

Microsoft Teams call controls.

- S1** Answer call
- S2** Decline call
- S3** Hang up
- S4** Mute mic
- S5** Camera on/off
- S6** Raise hand
- S7** Blur · app
- S8** Share screen
- S9** Mode ▶ voice

NOTE Across every mode, **hold S7** opens the companion app, **S8 + S9** engages the security lock, and **S9** is the multi-tool — tap to switch mode, hold to talk.

§ 03 · SECURITY

Lock the desk in a single chord.

Press **S8** + **S9** together to engage the lock. The OLED slips to a starfield and the pad ignores every input except your unlock pattern.

Forgotten the pattern? Hold **S5** for about eight seconds and confirm on the screen — the pad guides you through a fresh setup.

§ 04 · COMPANION APP

A second seat for OΣNI.

Hold **S7** to open the OMNI companion app on your computer. No account, no cloud — it talks to the pad over the cable.

Remap any key in any mode, change the voice commands, and tune the display — no technical knowledge needed.

§ 05 · READING THE OLED

A screen for glances.

WORK · Current mode — always on the left.

14:22 Clock — shown when the pad is idle.

■■■□□ The dial you last touched, with value.

• **REC** Recording or in a live call.

◆ **LOCK** Security engaged. Enter pattern to wake.

§ 06 · QUICK HELP

If something feels off —

The pad won't wake.

Press any key. If the OLED stays dark, reseal the cable on the device end.

A dial drifts on its own.

Open the app → Calibrate. Spin a full revolution each way.

Voice is not listening.

Hold S9 while you speak. If it still misses, re-train it from the S9 voice screen.

A key feels mushy.

Keycaps pull straight up. Wipe the stem, click it back. No tools.

Wrong app responds.

Phone mode follows the frontmost call window — tap to give it focus.

I want a fresh start.

App → Settings → Reset. Your modes export as a file first.

§ 07 · CARE

Keeping it well.

☼ Clean gently.

A dry microfibre is enough. For knobs, a cotton swab with a drop of water. Never spray directly.

🕒 Live well.

The case prefers 0 – 35 °C. Avoid direct sun for long stretches — the matte finish is happiest indoors.

♻️ Goodbye, one day.

The case is fully recyclable; the electronics carry a take-back card. Thank you for sending it back when its time comes.