

FRITZ!Box configuration for DoorP4

Create the DoorP4 telephone device

Open Telephony → Telephony Devices.

Click Set Up New Device to create the telephone device that will be used by DoorP4.


The following steps configure DoorP4 as an IP door intercom connected to the FRITZ!Box via the local network.



Select the device type

Select Door intercom as the type of telephony device.

Then click Next.

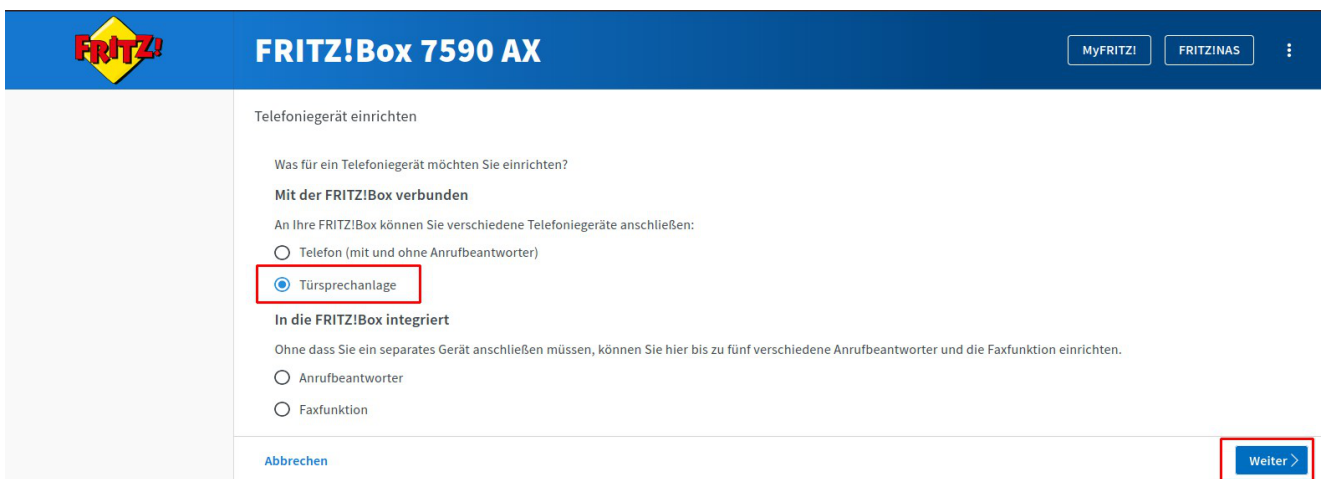

Select the connection type

Select LAN / WLAN (IP door intercom).

Enter a name for the device, for example DoorP4.

Then click Next.

The screenshot shows the 'Türsprechanlage anschließen' (Connect door intercom) page. It has a blue header with the FRITZ! logo and 'FRITZ!Box 7590 AX'. On the right are 'MyFRITZ!' and 'FRITZINAS' buttons. The main content area has three steps: 1. Connect the door intercom to a free FON port. 2. Select the connection type. Three radio buttons are shown: 'FON 1 (Türsprechanlage mit a/b-Schnittstelle) - belegt', 'FON 2 (Türsprechanlage mit a/b-Schnittstelle) - belegt', and 'LAN / WLAN (IP-Türsprechanlage)' which is selected and highlighted with a red box. 3. Enter a name for the door intercom. A text input field contains 'Türsprechanlage'. At the bottom, there is an 'Abbrechen' button on the left and '< Zurück' and 'Weiter >' buttons on the right, with the 'Weiter >' button highlighted with a red box.

Configure the SIP credentials

Enter a username and password for the DoorP4 SIP connection.

These credentials must later be entered in main.cpp as:

```
SIP_USER = "YOUR_SIP_USER"
```

```
SIP_PASS = "YOUR_SIP_PASSWORD"
```

The registrar is the FRITZ!Box itself (fritz.box or its local IP address).

Make a note of the username and password, then click Next.

The screenshot shows the 'IP-Türsprechanlage' (IP door intercom) page. It has the same blue header as the previous page. The main content area has a note: 'Notieren Sie sich den Benutzernamen, den Registrar und das Kennwort, das Sie selbst festlegen. Mit diesen Anmeldedaten können Sie Ihre IP-Türsprechanlage anschließend an der FRITZ!Box anmelden.' Below this are three input fields: 'Registrar' with 'fritz.box oder 192.168.3.1' above it, 'Benutzername', and 'Kennwort'. Red lines connect the 'Benutzername' and 'Kennwort' fields to the corresponding lines in the 'main.cpp' code snippet shown to the right: '// const char* SIP_USER = "YOUR_SIP_USER";' and '// const char* SIP_PASS = "YOUR_SIP_PASSWORD";'. At the bottom, there is an 'Abbrechen' button on the left and '< Zurück' and 'Weiter >' buttons on the right, with the 'Weiter >' button highlighted with a red box.

Configure the doorbell button

Set the doorbell button number to 11.

This number is also used as the SIP call target in main.cpp.

Under Forward ringing to, select the telephone or telephones that should ring when the doorbell button is pressed. In this example, all telephones are selected.

Then click Next.

Klingeltaste	Rufnummer der Klingeltaste	Klingeln weiterleiten an
Klingeltaste 1	11	alle Telefone

Abbrechen

< Zurück Weiter >

Review the settings

Check the settings once more to make sure everything is correct.

If all settings are correct, click Apply to create the DoorP4 IP door intercom in the FRITZ!Box.

Telefoniegerät	Türsprechanlage
Name der Türsprechanlage	Türsprechanlage
angeschlossen an	LAN / WLAN (IP-Türsprechanlage)

Abbrechen


< Zurück Übernehmen

Confirm the configuration

For security reasons, the FRITZ!Box requires an additional confirmation.

Use a telephone connected to the FRITZ!Box and dial the confirmation code shown on the screen. Then press the call button and wait for the confirmation tone.

After successful confirmation, the setup will continue automatically.

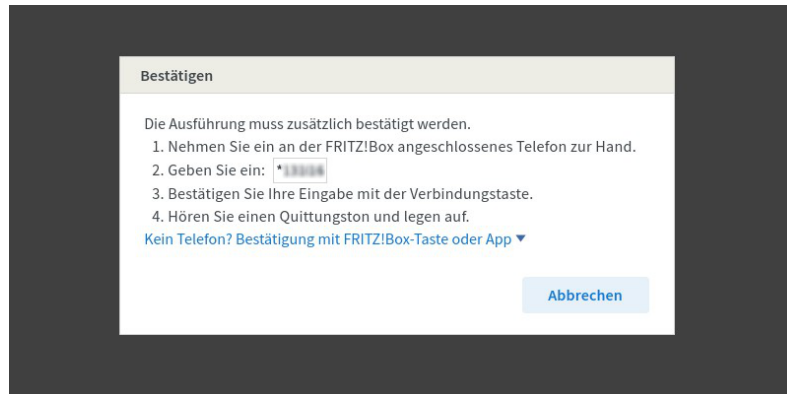

DoorP4 telephone device created

After the setup is completed, the new DoorP4 device appears in the list of telephony devices.

The FRITZ!Box automatically assigns an internal number to the device, for example **621. The actual number may be different depending on the telephony devices already configured in the FRITZ!Box.

This internal number is managed by the FRITZ!Box and does not need to be entered in main.cpp.

DoorP4 uses the previously configured SIP username and password for registration. The doorbell button number 11, configured earlier, is used as the SIP call target in main.cpp.

