

Handheld Mobile Computer

BT-W Series

BT Application Design Tool

User Manual

Version 2.10



Contents

Introduction	7
Software License Agreement	8
Terminology	9
Relevant Manuals	9
 1. BT Application Design Tool Overview	 10
1.1. Software Included with BT-H1AGA/BT-SH1AGA	10
1.2. Connection Configuration	10
1.3. Operating Environment	11
 2. Preparations before Development	 12
2.1. Installing BT Application Design Tool	12
2.2. Installing the USB Driver	14
 3. Appliation Development Flow	 16
3.1. Device Application Development Method	16
3.1.1. Template Selection	16
3.1.2. Configure Screen Layout	17
3.1.3. Configure Device Settings	20
3.1.4. Simulate	21
3.1.5. Application Deployment	22
3.1.6. Testing the Application	24
3.2. PC Application Development Flow	26
3.2.1. Operation Settings	26
3.2.2. Editing PC Applications	27
3.2.3. Running PC Applications	29
3.2.4. Deploying PC Applications	32
3.2.5. PC Application Usage Method	33
 4. BT Application Design Tool Operation Method	 35
4.1. Names of BT Application Design Tool Parts	35
4.2. Work Flow	37

4.2.1. File	37
4.2.2. Screen Layout/Screen Transition	39
4.2.3. Device Settings	40
4.2.4. Simulate	44
4.2.5. Deploy Applications	46
4.2.6. Operation Settings	49
4.2.7. Editing PC Applications	55
4.2.8. Starting PC Applications	56
4.2.9. Deploying PC Applications	58
4.2.10. Options	59
4.2.11. Support Page	62
4.3. Screen List (Device Application)	63
4.3.1. New Template	63
4.3.2. New Screen	64
4.3.3. Tree View	64
4.3.4. Thumbnail View	65
4.4. Screen Layout/Screen Transition	67
4.4.1. Screen Layout	67
4.4.2. Screen Transition	69
4.5. Control List (Device Application)	70
4.5.1. Input Order	70
4.5.2. Input Completion	71
4.5.3. Data Format	77
4.5.4. Function Keys	80
4.5.5. Adding Controls	84
4.6. Library (Device Application)	85
4.7. Properties (Device Application)	86
4.8. Screen Outline (PC Application)	87
4.9. Editing PC Applications (PC Application)	89
4.10. Library (PC Application)	96
4.11. Properties (PC Application)	97
5. Device Application Parts, Controls and Windows	98
5.1. Labels	98
5.1.1. Label	98
5.1.2. Shared Parameter Labels	104
5.1.3. System Parameter Labels	108

5.2. Boxes.....	112
5.2.1. Text Box	112
5.2.2. Date Input Box	121
5.2.3. Drop-down List Boxes	128
5.2.4. Check Boxes	135
5.2.5. Option (Radio) Boxes	139
5.2.6. Lookup Boxes	144
5.3. Buttons.....	147
5.3.1. Button	147
5.3.2. Stop Watches	156
5.3.3. External Application Execution Buttons	158
5.4. Views	166
5.4.1. Picture View	166
5.4.2. Table View	169
5.5. Controls.....	173
5.5.1. Input Item Count Control	173
5.5.2. DataMatch Control	175
5.5.3. Search/View Control	180
5.5.4. Master Check Control	188
5.5.5. Send Data File Control.....	195
5.5.6. Receive Master File Control.....	197
5.5.7. Feedback Control.....	199
5.5.8. UserDefined	201
5.6. Windows.....	204
5.6.1. New Window	204
5.6.2. Send Data File Window.....	206
5.6.3. Receive Master File Window.....	208
5.6.4. History Data View Window	210
5.6.5. Item List View Window	212
5.6.6. Receive Work List Window	214
5.6.7. DataMatch NG Window.....	217
5.6.8. Top Menu Window.....	220
5.6.9. Communication Error Result Window	224
6. PC Application Parts, Controls, and Windows.....	227
6.1. Labels	227
6.1.1. Label	227
6.1.2. Calculation label.....	232
6.2. Boxes.....	237

6.2.1. Search input boxes	237
6.3. Button.....	246
6.3.1. Adjust inventory button.....	246
6.3.2. Output file Buttons	253
6.3.3. Report printing Buttons	258
6.3.4. Clear Buttons	264
6.3.5. Filter Buttons.....	269
6.4. Views	275
6.4.1. Picture Views	275
6.4.2. Progress table Views	278
6.4.3. Progress graph	283
6.5. Screen Components	292
6.5.1. Window	292
6.5.2. Sheet	295
6.5.3. Table	303
6.5.4. PC Application.....	314
7. Application Usage Methods	317
7.1. Device Application	317
7.2. PC Application Usage Method	320
7.3. Operation Communication Software	322
8. Template Usage Method	334
8.1. PokaYoke	334
8.1.1. Device Application.....	334
8.1.2. PC Application.....	336
8.2. Storage and Retrieval	337
8.2.1. Device Application.....	337
8.2.2. PC Application.....	339
8.3. Inventory	340
8.3.1. Device Application.....	340
8.3.2. PC Application.....	341
8.4. Record	342
8.4.1. Device Application.....	342
8.4.2. PC Application.....	343
8.5. Picking.....	344
8.5.1. Device Application.....	344

8.5.2. PC Application.....	346
----------------------------	-----

9. Technical Tips 348

9.1. Custom Mode.....	348
-----------------------	-----

9.2. Configuration Procedures according to Operation Situations	350
---	-----

9.2.1. Automatically Updating the Device Master File	350
--	-----

9.2.2. Operation Using Wakeup Mode	351
--	-----

Introduction

This manual explains the procedure for developing BT-W device applications to use with the device and how to operate the software used during this application development. Be sure to read and fully understand the contents of this manual before developing the device applications to use with the BT-W device.

- Windows and Excel are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.
- The formal name of Windows is Microsoft Windows® Operating System.
- Screen captures have been used according to the Microsoft Corporation guidelines.
- microSD™ is a trademark of the SD Association.
- Hiragino is a registered trademark of SCREEN Holdings Co., Ltd.
- This manual may not be used or reproduced in whole or in part without the permission of KEYENCE.

Software License Agreement

You may only use this software under the condition that you accept the terms of the following software license agreement (hereinafter referred to as "this agreement"). Your use of this software in whole or in part will constitute your acceptance of the terms of this agreement.

Article 1 (usage rights)

1. KEYENCE Corporation (hereinafter referred to as "KEYENCE") gives you the right to use this software in a non-monopolistic manner under the condition that you strictly adhere to this agreement.
2. You can install this software on one computer. The computer on which this software is installed can be used by multiple users.

Article 2 (copying restrictions)

You can make only one copy of this software for the purpose of backing it up.

Article 3 (prohibited items)

You are prohibited from doing the following regarding this software.

- a. Changing the software's functions in whole or in part such as removing, copying, altering, or adding to the functions. This does not apply to acts specifically indicated by KEYENCE such as installing program updates and additional functions provided by KEYENCE.
- b. Applying any form of reverse-engineering, such as reverse-compiling or reverse-assembling, to analyze this software
- c. Reselling, transferring, redistributing, enabling the use of, renting, leasing, etc. this software or other items provided by KEYENCE such as this software's license key to a third party. This does not apply in the case that you obtain consent from KEYENCE in advance.

Article 4 (copyright)

KEYENCE or a third party permitted usage rights by KEYENCE reserves all copyrights to this software and its manual.

Article 5 (disclaimer)

KEYENCE accepts no responsibility for any damages suffered by you or a third party as a result of using this software.

Article 6 (support)

On the basis of this agreement, KEYENCE shall provide technical support such as responding to questions that you have regarding this software. However, this does not guarantee that KEYENCE's technical support will enable you to attain your goals.

Article 7 (termination)

1. This agreement will automatically be terminated when you stop using this software by disposing of it and its copy.
2. KEYENCE can terminate this agreement in the case that you violate any of the articles contained herein. In this situation, you will be required to immediately dispose of this software and its copy or return these items to KEYENCE.
3. If KEYENCE suffers damages due to you violating any of the articles contained herein, you will be required to provide KEYENCE with appropriate compensation.

Article 8 (base laws and ordinances)

This agreement complies with Japanese laws.

* This product contains redistributable code made by Microsoft Corporation.

In order to use this redistributable code, you must agree to the following terms.

- (i) When end users develop software products to expand the usage of the redistributable code by adding important and major functions, this redistributable code must be redistributed only as object code together with these software products and as a part of these software products.
- (ii) End users are not permitted to use the Microsoft trade name, logo, or trademark in the sale of their applications.
- (iii) End user applications must display valid copyrights.
- (iv) Microsoft shall be exempted from, protected from, and compensated for any disputes or litigation resulting from the use or distribution of end user applications (including exemption from, protection from, and compensation for legal fees).

Users of end user applications are not permitted to redistribute redistributable code whose usage has been expanded.

Terminology

Terminology used in this manual is shown below.

Development PC:	PC used for development
Operation PC:	PC used for operation
BT-W Series:	BT-W70 Series, BT-W80 Series, BT-W100 Series
BT device application:	Application that runs on the BT-W Series
PC application:	PC application used to view and manage a database
Communication software:	PC application used to send and receive data

Relevant Manuals

Read the following manuals together with this one.

Manual type	Manual description
Instruction Manual	This manual contains information about the BT-W Series such as the specifications, part name, package contents, usage precautions, battery replacement method and external dimensions.
Getting Started Guide	This manual is designed for developers and contains the procedure from SDK installation to actual product operation as well as information about how to operate PCSimulator and terminal remote control. Read this manual first when you are using BT-WHD1GA to develop embedded applications.
Software Manual	This manual details the basic user operation of the BT-W Series. Topics include the system configuration, device control through hardware and software, and navigating the user interface.
System Menu Manual	This manual contains detailed instruction for every option available in the BT System Menu. Overall, this manual should be referenced when configuring the BT-W Series devices.

1. BT Application Design Tool Overview

BT Application Design Tool is a piece of software that can be used to easily create applications that run on the BT- W Series (referred to as "BT- W device applications") and applications that run on PCs and are used to display data (referred to as "PC applications"). BT Application Design Tool is included with BT-H1AGA and BT-SH1AGA (trial version).

1.1. Software Included with BT-H1AGA/BT-SH1AGA

The following software is included with BT-H1AGA/BT-SH1AGA (trial version).

BT Application Design Tool

This software can be used to easily create BT device applications.

Communication software

This software is used to send and receive data.

USB driver

This driver must be installed when performing communication through a USB communication cradle.

BT-SH1A (trial version) has the following limitations.

- The software cannot be upgraded.
- BT Application Design Tool can only be used for 30 days.
- The message "This application is a trial version." is displayed when the device applications created with BT Application Design Tool are started, the resume setting is disabled, and the time before the power is turned off automatically is fixed to 5 minutes.

1.2. Connection Configuration

BT device applications created with BT Application Design Tool can be connected to the following devices.



1.3. Operating Environment

The BT-H1AGA operating environment is shown below.


Item	Description
Supported Model	BT-W100GA / W155GA / W80GA / W85GA / W70GA / W75GA
Development PC OS	Windows 10 Professional (32 bit/64 bit)
	Windows 8.1 Professional (32 bit/64 bit)
	Windows 8 Professional (32 bit/64 bit)
	Windows 7 Professional (32 bit/64 bit)
Operation PC OS	Windows 10 Professional (32 bit/64 bit)
	Windows 8.1 Professional (32 bit/64 bit)
	Windows 8 Professional (32 bit/64 bit)
	Windows 7 Professional (32 bit/64 bit)
	Windows Server 2012/2012 R2 (64 bit)
	Windows Server 2008 R2 (64 bit)
Recommended PC specifications	CPU Intel Core i5 2.60 GHz or higher
	Memory 4 GB or higher
	Display 1366 × 768 or higher
	Hard disk drive free space 1 GB or higher

2. Preparations before Development


This chapter explains the preparations to perform before using BT Application Design Tool.

2.1. Installing BT Application Design Tool


1. Run setup.exe in the BTApplicationDesignTool folder on the BT-H1AGA CD.
2. A screen for installing the items required in order to use BT Application Design Tool is displayed. Click "Install."
The items that are installed may vary depending on your PC environment.

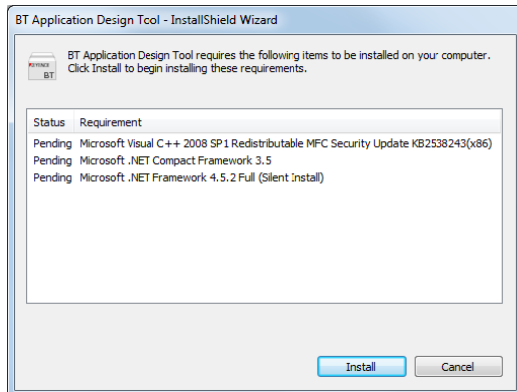


3. The following screen is displayed. Click "Next >."

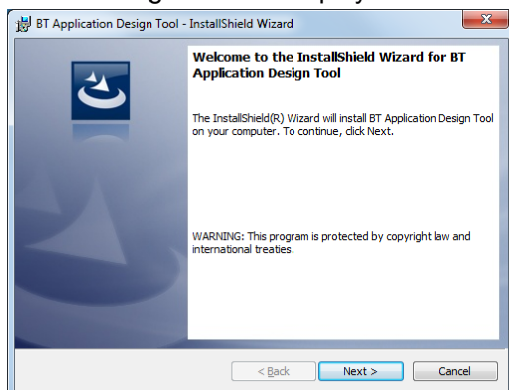


4. The usage license agreement is displayed. Read the agreement, and if you agree with the contents therein, select "I accept the terms in the license agreement," and then click "Next >."

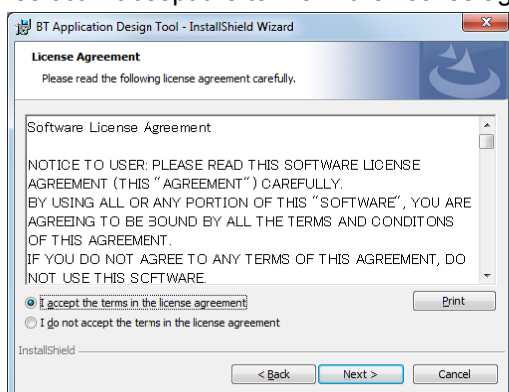


5. The installation destination folder is displayed. Change this folder if necessary, and then click "Next >."

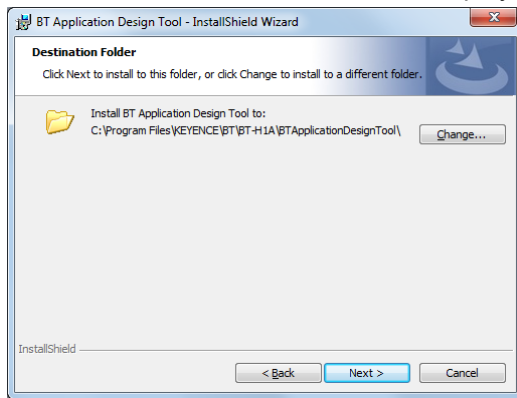

6. Click "Install" to start the installation.

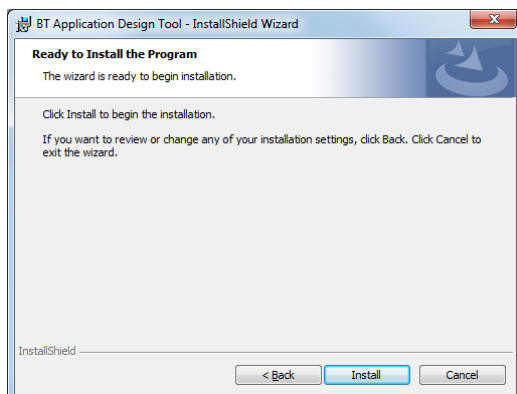

7. When the installation is complete, the following screen is displayed. Click "Finish."

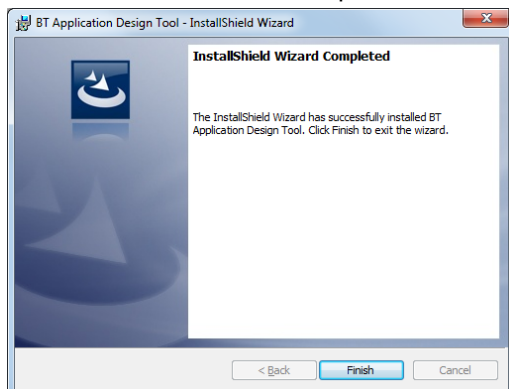


2.2. Installing the USB Driver


The USB driver must be installed when performing communication through a USB communication cradle.

1. Change the BT device's "USB Comm Cradle" setting to "COM."


In the BT System Menu, under "231.Connection type" select "USB Comm Cradle," set "Type:" to "COM," and then click "OK."

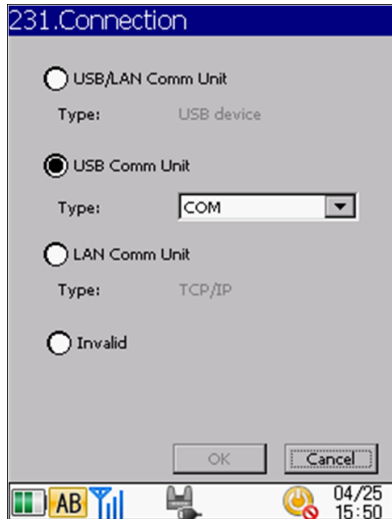


2. Place the BT device in the USB communication cradle, and then use a USB cable to connect the cradle and the PC.
3. By right-clicking on "Computer" in the Start Menu on your PC, open the Device Manager. And you will see, "BT-Wxxx" (xxx: model name) displayed under "Other devices."

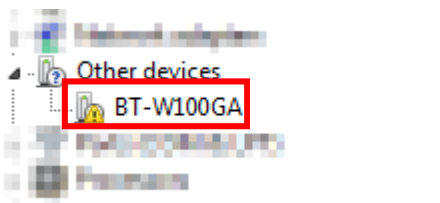


4. " Right-click "BT-Wxxx" and then click "Update Driver..." on the menu that appears.

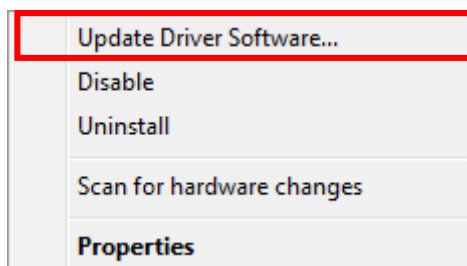


5. Select "Browse my computer for driver software."

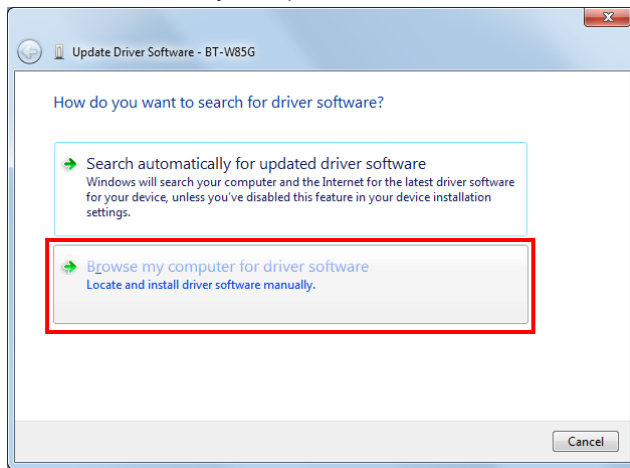

6. Press the "Browse" button and select the "USBDriver" folder in the BT-H1AGA CD or downloaded .zip file. Then press "Next >".

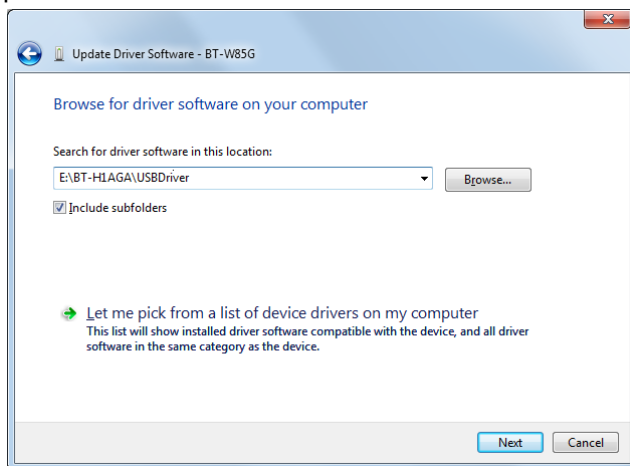

7. When the installation is complete, the following screen is displayed. Click "Close (C)."

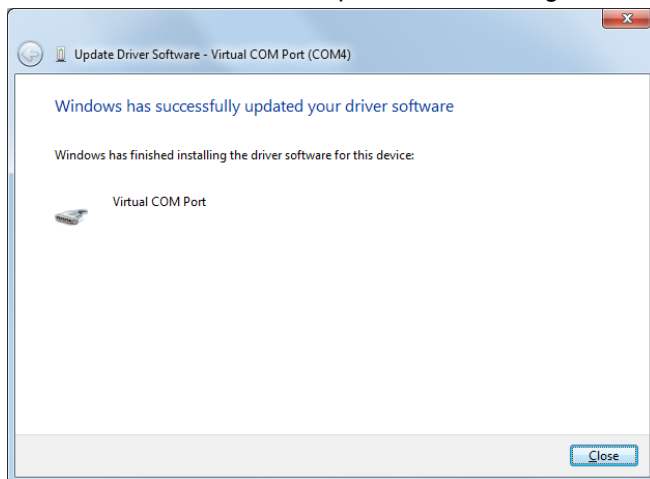

3. Appliation Development Flow


The following chapter uses the 'Inventory' application template to demonstrate the flow of development when using the BT Application Design Tool. For details on each item, see chapter 4 and the later chapters.

3.1. Device Application Development Method


3.1.1. Template Selection

1. Start BT Application Design Tool (BTApplicationDesignTool).

2. Click "New."

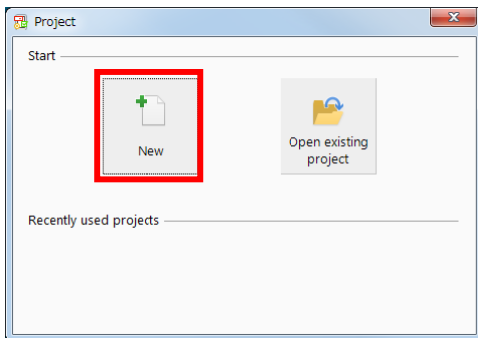

3. Select the target model series to develop for then a project template to use. For example, set the target model to "BT-W80 Series" and the template to "Inventory." Lastly, set the project name and the save destination folder, and then click "OK."

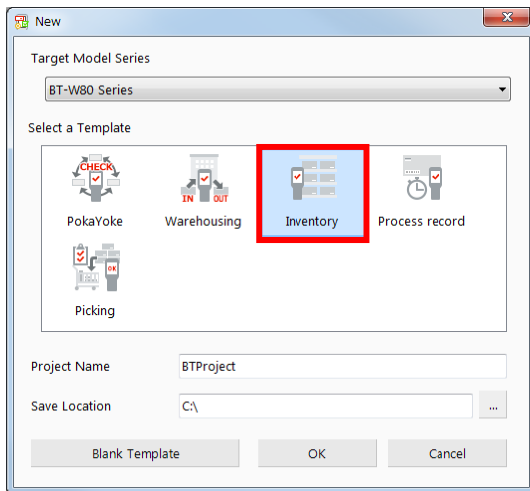


4. An 'inventory' template project is created.


3.1.2. Configure Screen Layout

Customize the application interface and operation according to the requirements.
Proceed to "[3.1.3.Configure Device Settings](#)", if you aren't making customizations,
For details, see "[4. BT Application Design Tool Operation Method](#)."


1. Select the screen to customize on the "Tree View" tab under the "Screen List."

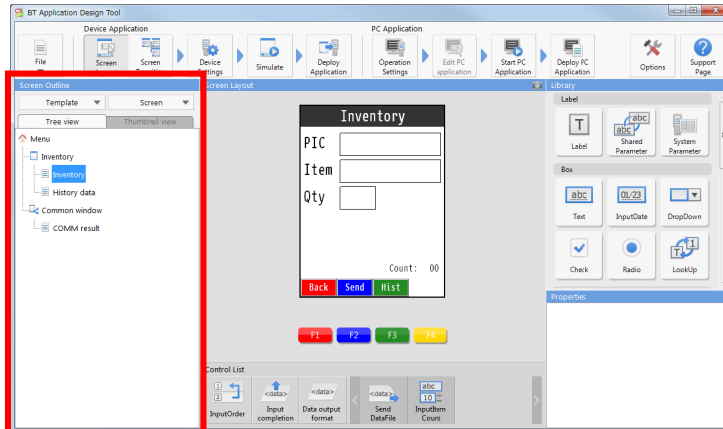


2. You can freely move GUI parts by dragging them.

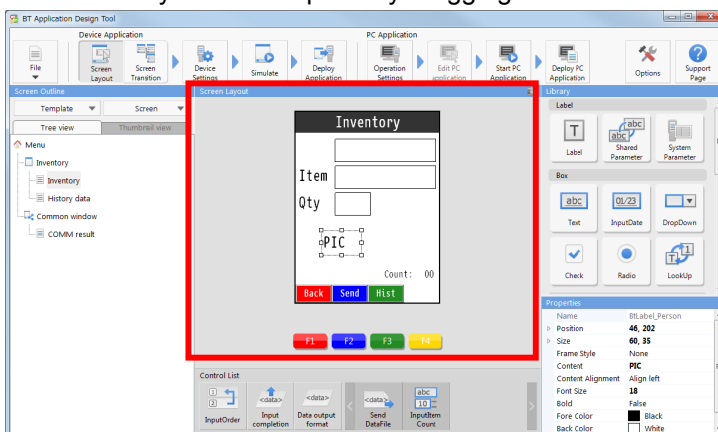


3. Double-click a GUI part to display the dialog box for editing part.

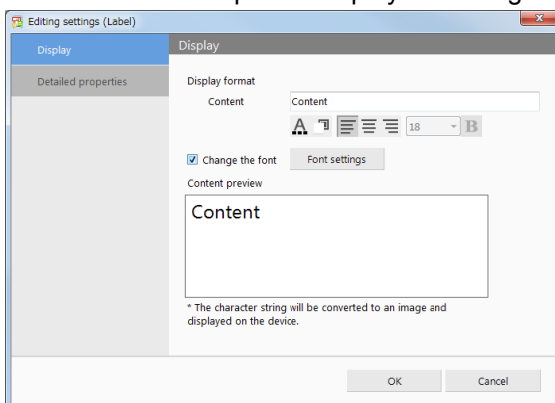

4. You can add GUI parts or Controls by dragging them from the "Library."

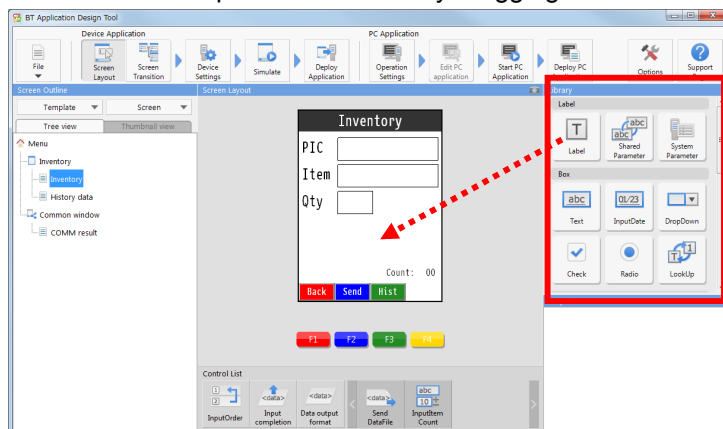


5. If necessary, configure "InputOrder," "OutputData," or "DataFormat" under "Control" by double-clicking to open the edit dialog box.

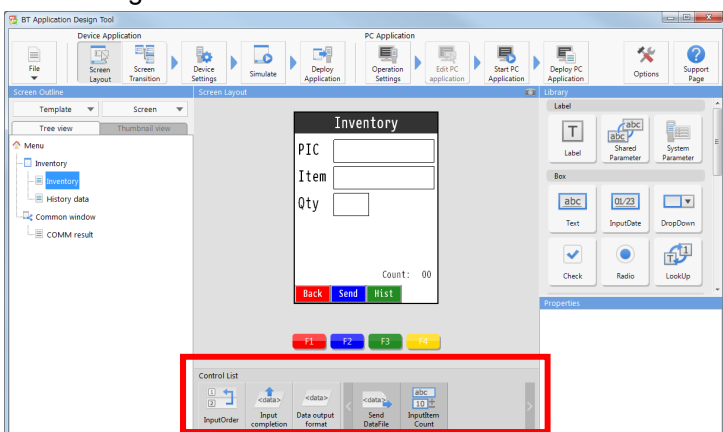


About "InputOrder"

Use this control to configure looping of the focus through GUI parts. This is helpful for determining where focus should be directed after user input.

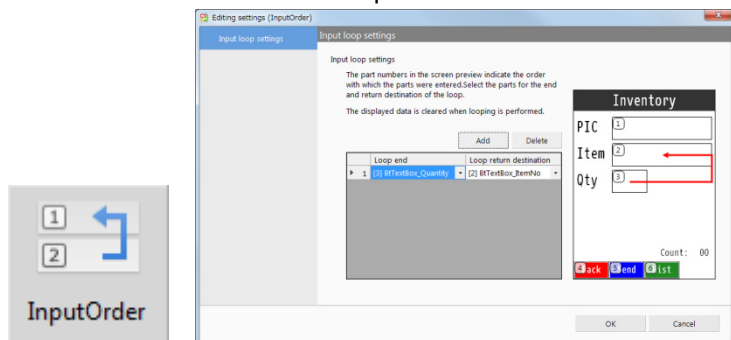



About "InputCompletion"

Use this control to configure the timing of data capturing or perform an action after a certain GUI part receives input.

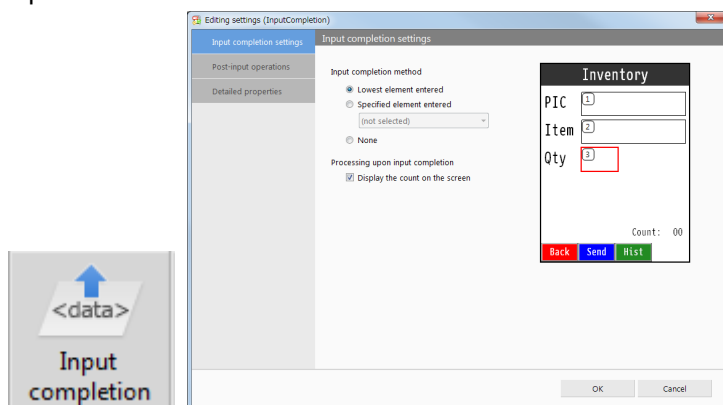

About "DataOutputFormat"

Use this control to assign and format data captured from GUI parts for saving. This is helpful when data must be in a particular order, have a specific field name, or be delimited.

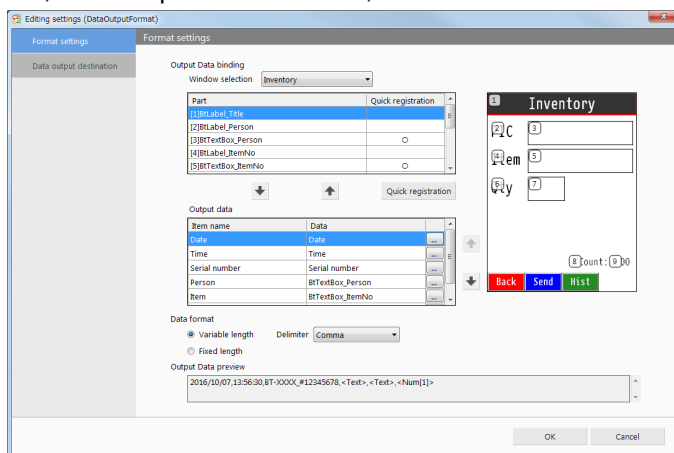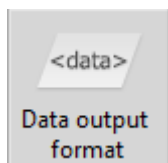

- Combine the above settings to customize the screen layout according to the requirements. For detailed settings, see ["4. BT Application Design Tool Operation Method."](#)


3.1.3. Configure Device Settings

Device Settings such as screen brightness, power control, or the communication path can be set according to the application's requirements.

If you choose to not configure these settings, they will be set to default values, and you may proceed to "[3.1.4. Simulate.](#)"


For details, see "[4.2.3. Device Settings.](#)"

1. Click "Device settings" at the top of BT Application Design Tool to display the Device Settings dialog box.

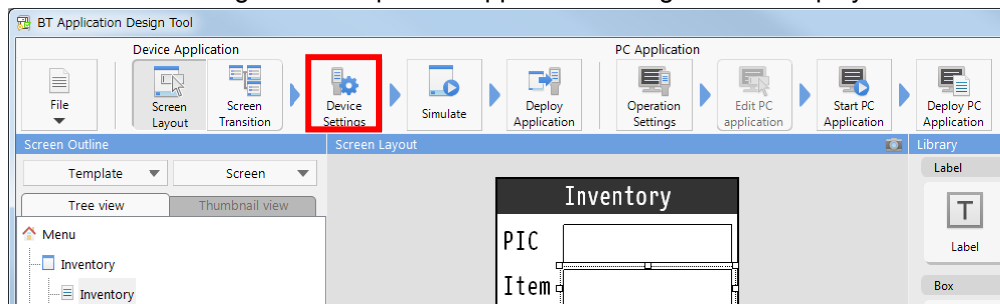

2. Configure the settings as necessary.


Basic settings	Set the start method, screen brightness, screen display, and power control.
Communication settings	Set communication parameters such as the IP address of the destination PC and the communication path.
Hardware feedback settings	Set the key/screen touch sound and the hardware feedback after reading.

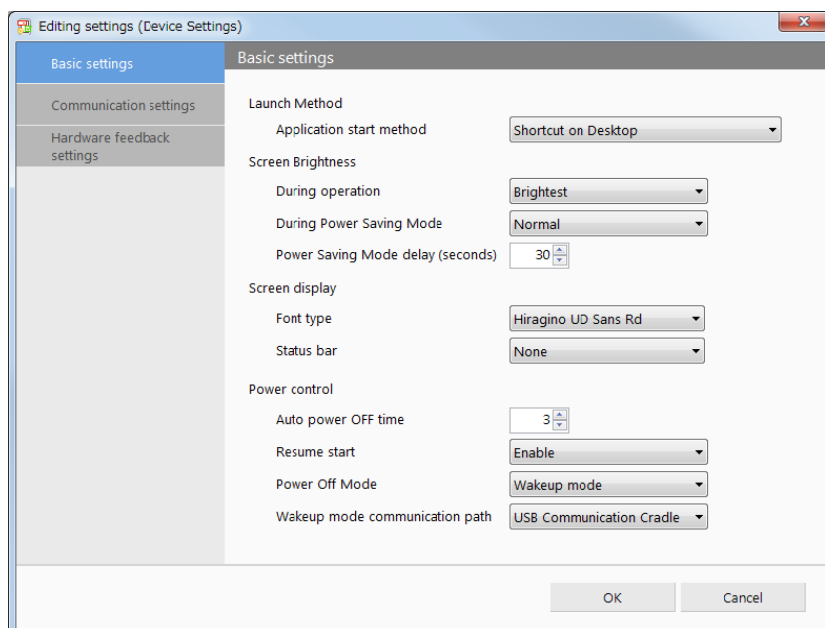

3.1.4. Simulate

This function simulates BT device applications on the PC developed with the BT Application Design Tool. For details, see ["4.2.4 Simulate."](#)

1. Click "Simulate" at the top of BT Application Design Tool.

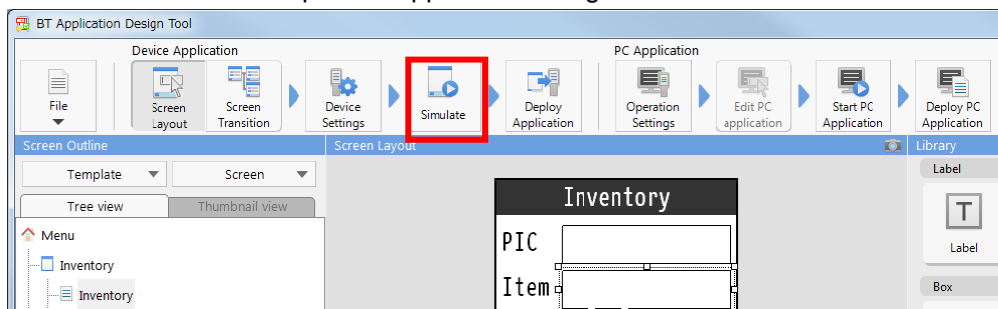

2. The following screen is displayed. Check the operation of the BT device application.



3.1.5. Application Deployment


For details, see "[4.2.5. Deploy Applications.](#)"

The below steps to deploy the application to a BT-W Series handheld use a 'wired' method and require the USB Communication Cradle.


Note

* The USB driver must be installed in advance. * See "[2.2. Installing the USB Driver.](#)"

1. Place the BT-W device in the USB Communication Cradle. Ensure that the cradle has AC power by verifying that the BT-W's LED is signaling charging. Also verify the USB cable is connecting the PC and cradle.
2. Set the BT-W device to standby for communication.
In the BT System Menu, click "6. Receive file," set the communication dropdown to "USB Comm Cradle(COM)" and then click "Start standby."
3. Click "Send application" at the top of BT Application Design Tool.

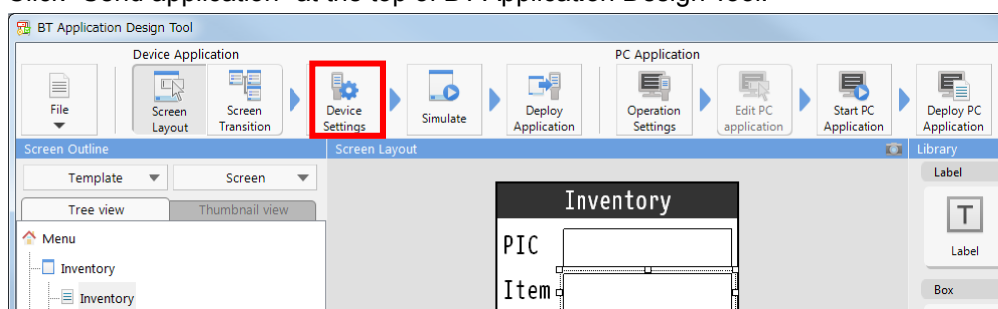

4. In the Send Application dialog box, set "Communication settings" to "USB communication cradle," and then select "COM* (BT-W Series)" from the list.

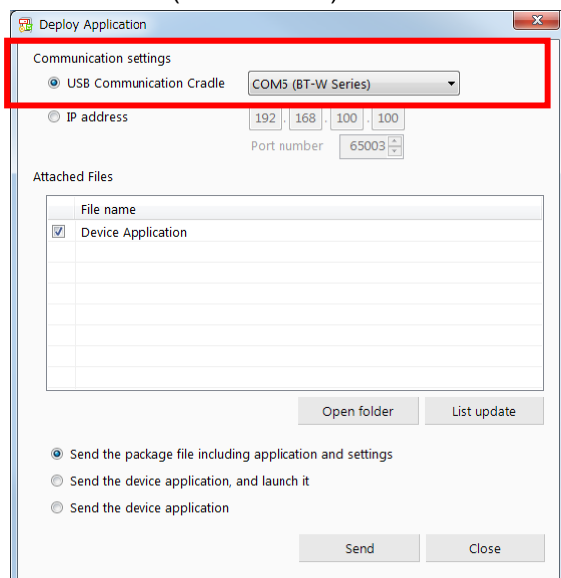

5. Select the transfert method, and then click "Send."

Deploy Application

Communication settings

☒ USB Communication Cradle COM5 (BT-W Series)

☐ IP address 192.168.100.100 Port number 65003

Attached Files

File name
☒ Device Application

Open folder List update

☒ Send the package file including application and settings

☐ Send the device application, and launch it

☐ Send the device application

Send Close

■ **About the transfer modes**

- **"Send the package file including application and settings"**

Be sure to select this mode for the initial deployment. Also select this mode when you have changed the system parameters in "[3.1.3. Configure Device Settings](#)" as the BT-W should be restarted to apply system setting changes by double-clicking the setting file in the BT-W device.

- **"Start the device application, and restart."**

After the application has been sent and installed, the BT-W device will launch the application.

Use this option if your device is in kiosk mode because it is not possible to manually start applications.

* You can use "Application start method" in "[3.1.3. Configure Device Settings](#)" to select kiosk mode.

- **"Send the device application"**

This option simply sends the application to the BT-W device. This is the fastest deployment method and is recommended when the above two methods are not necessary.

3.1.6. Testing the Application


* For details, see "[8.3.1.Device Application.](#)"

After deploying, start "HTApplication" found on the desktop to launch the application.

Note

*The images below show the interface flow of the 'Inventory' template as reference.

■ Screen transitions

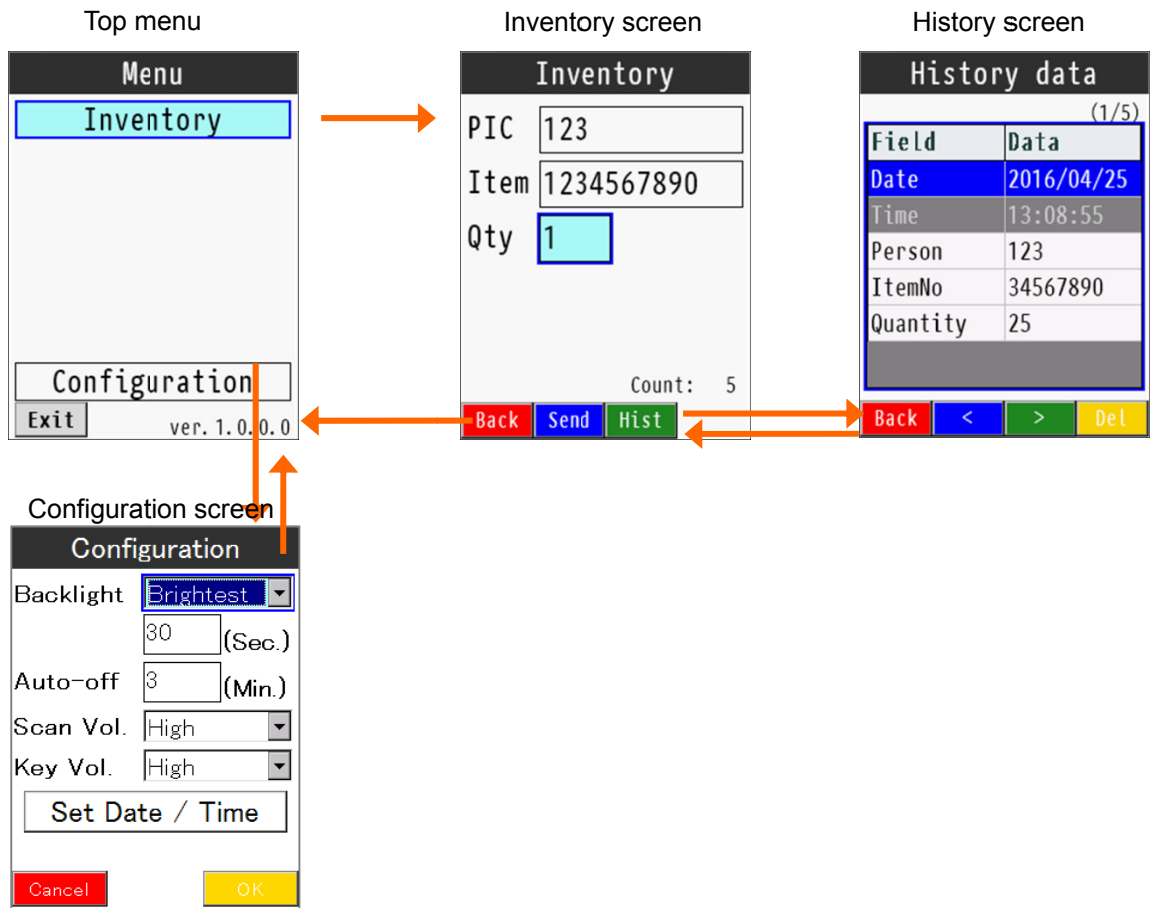

■ Inventory screen

The Inventory screen form shows the following fields and steps:

- PIC:** 123 (1) - Step 1: Enter the code of the person in charge.
- Item:** 1234567890 (2) - Step 2: Enter the item code.
- Qty:** 1 (3) - Step 3: Enter the quantity.

At the bottom, it shows 'Count: 5' and buttons for 'Back', 'Send', and 'Hist'.

Enter values in the following order. After you enter (3), return to (2).

- (1) Enter the code of the person in charge.
- (2) Enter the item code.
- (3) Enter the quantity.

"Back" ... Return to the top menu.

"Send" ... Send the data file.

"Hist" ... Switch to the history data screen.

■ History data screen

History data	
(1/5)	
Field	Data
Date	2016/04/25
Time	13:08:55
Person	123
ItemNo	34567890
Quantity	25
Back	< > Del

You can check the history of the data that has been output.

You can select items in the table in the center of the screen by selecting it and pressing the ENT key. Select an item and press the ENT key to edit the "Data" value.

"Back" ... Return to the inventory screen.

"<" ... Display the next history data entry.

">" ... Display the previous history data entry.

"Del" ... Delete the history data. You can select whether to delete one entry or all entries.

■ Configuration screen

Configuration	
Backlight	Brightest (Sec.)
Auto-off	3 (Min.)
Scan Vol.	High
Key Vol.	High
Set Date / Time	
Cancel	OK

Backlight ... Set the brightness of the LCD backlight and the length of time until the backlight switches to power saving mode.

Auto-off ... Set the length of time until the power is turned off when there are no operations.

Scan Vol ... Set the volume of the sound when a barcode is scanned.

Key Vol ... Set the volume of the key operation and touch panel sounds.

Set Date / Time ... Set the date and time of the BT-W Series.

"Cancel" ... Cancel the settings.

"OK" ... Confirm the settings.


3.2. PC Application Development Flow

3.2.1. Operation Settings


* For further details, see "[4.2.6. Operation Settings.](#)"

Set the method for receiving data in the PC application.

1. Click "Operation settings" at the top of BT Application Design Tool.

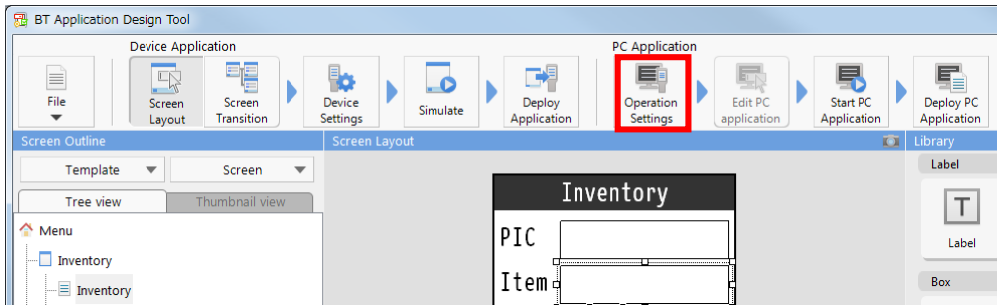

2. In the Operation Settings dialog box, select the method of operation that best suites the application's requirements.

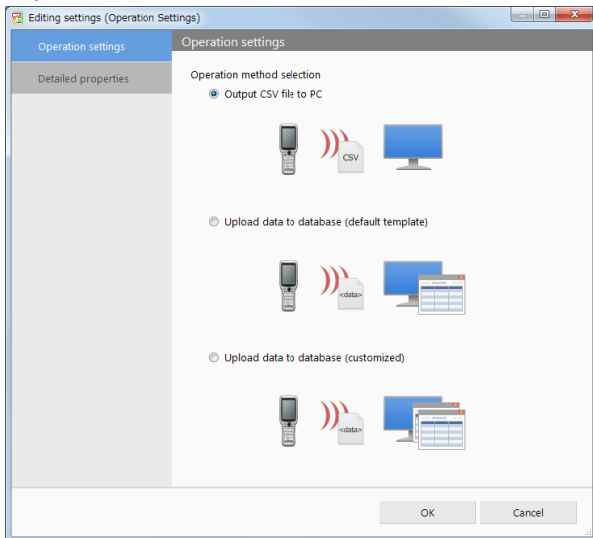

■ About operation settings

Output CSV file to PC

A CSV file generated from the application will be output from the device and sent to the PC application.

Upload data to database (default template)

The BT-W device's data will be uploaded to a dedicated database with the BT Application Design Tool. This database can be viewed with the PC Application. Select this option when the data format of the template has not been changed and when parts will not be added to the PC application. The "Edit PC application" button is enabled.

Upload data to database (customized)


The BT-W device's data will be uploaded to a dedicated database with the BT Application Design Tool. This database can be viewed with the PC Application. Select this option when the data format of the template has been changed and when parts will be added to the PC application. The "Edit PC application" button is enabled.

3.2.2. Editing PC Applications


* For details, see "[4.2.7 Editing PC Applications.](#)"

Configure settings such as the display and operation of PC applications.


1. Click "Edit PC application" at the top of BT Application Design Tool.

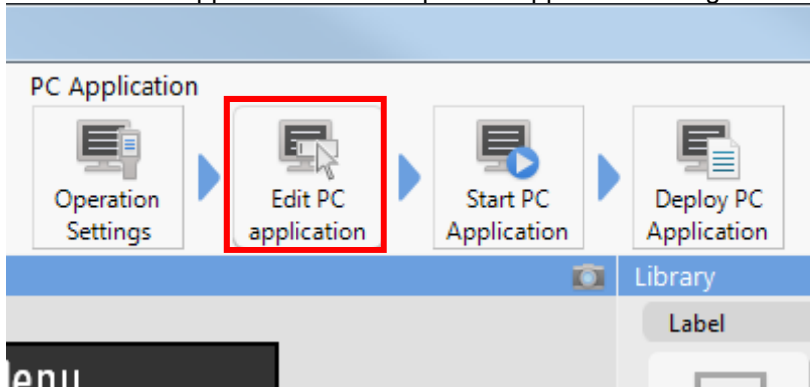


2. Select the screen (sheet) to customize on the "Tree view" tab under "Screen Outline."

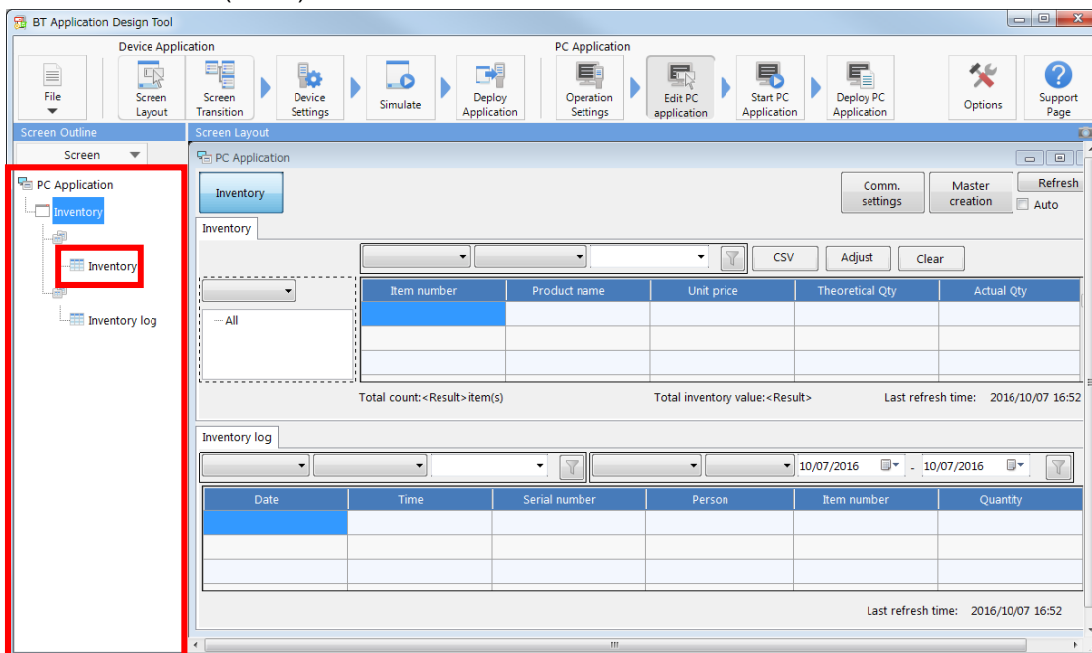


3. You can freely move the parts placed on the sheet by dragging them.

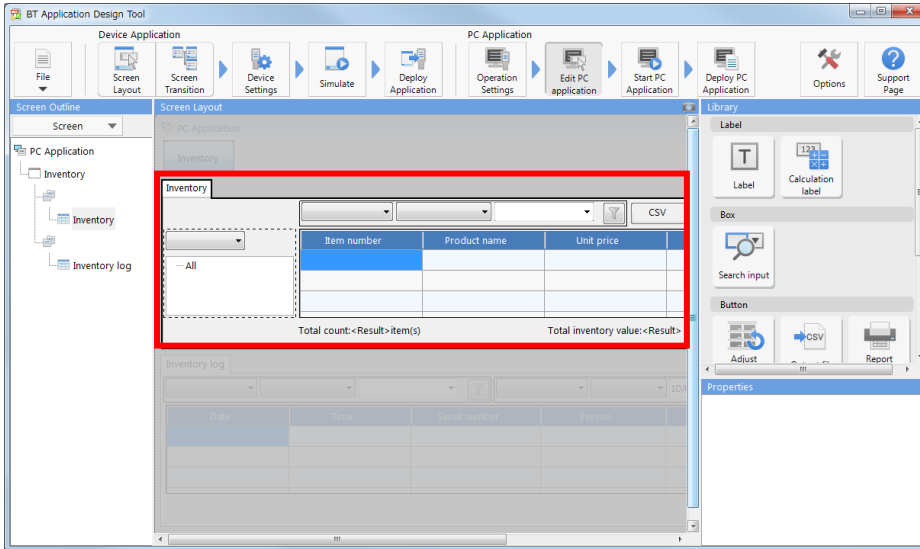

4. Double-click a GUI part to display the following dialog box to edit the settings.

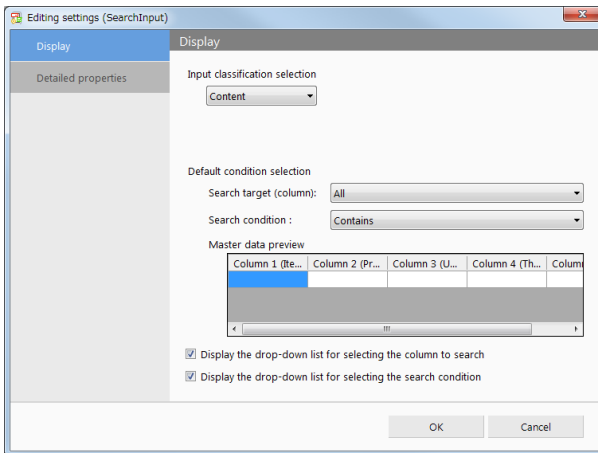

5. You can add parts by dragging them from the "Library."

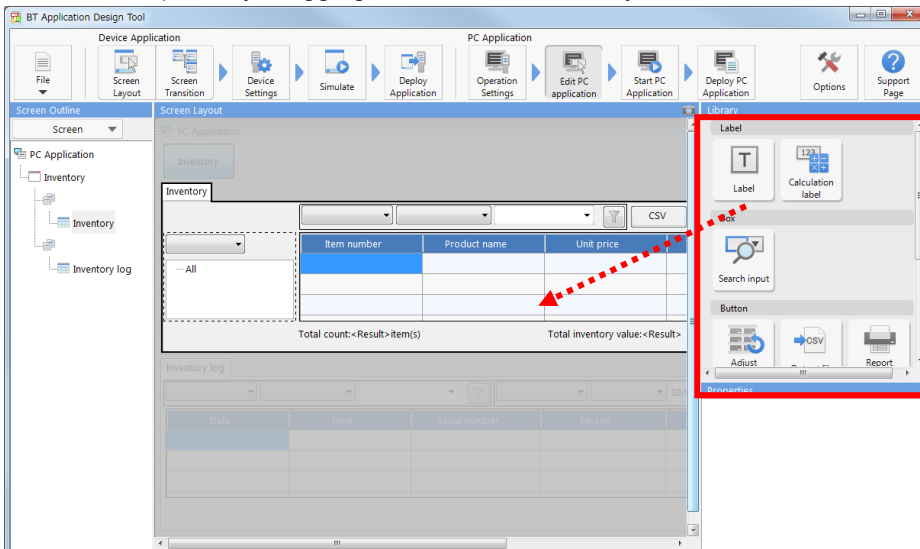

Use the method explained above to create your desired PC application. For details, see ["4.9 Editing PC Applications \(PC Application\)."](#)


3.2.3. Running PC Applications

* For further details, see "[4.2.8 Starting PC Applications](#)"


Depending on the selected operation method for the PC Application, different settings may need to be configured for communication between the BT-W device and PC.

■ When you've selected "Output CSV file to PC"


1. Click "Start PC application" at the top of BT Application Design Tool.

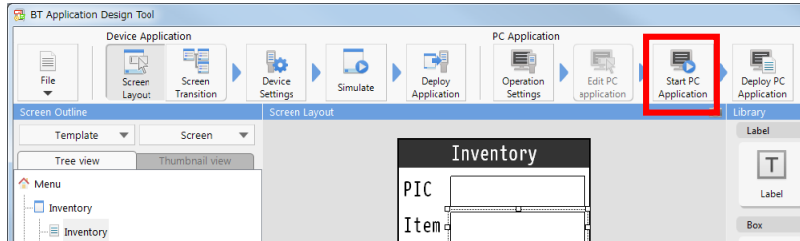


2. After the communication software starts, select "Standby for communication from device."

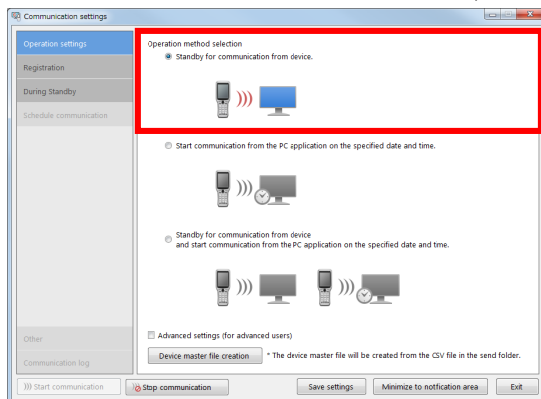

3. Click on the "Registration" tab from the left side of the screen, then set the reception folder on the PC for the CSV file.

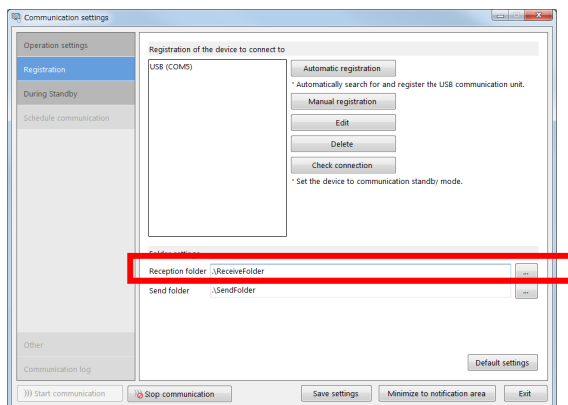

4. Click on the "During Standby" tab from the left side of the screen, then set "When a duplicate CSV file is received."

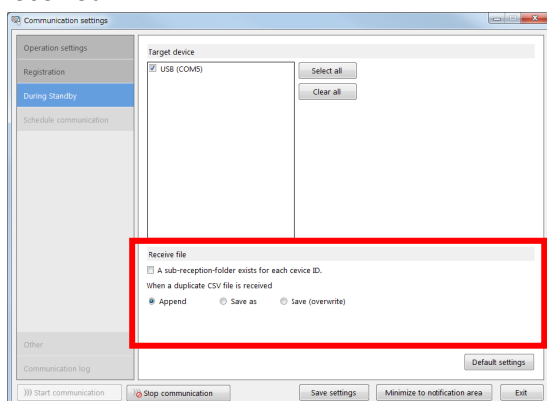

About "When a duplicate CSV file is received"

- **Append**

The new data will be saved to the end of the data in the file, and then the file will be saved.

- **Save as**

A number will be added to the end of the file name, and then the data will be saved as a new file. For a file named "InventoryLog.csv," new files will be saved with the file name changed in order such as "InventoryLog~1.csv," "InventoryLog~2.csv," and then "InventoryLog~3.csv."

- **Save (overwrite)**

The existing file will be overwritten.

5. Use the BT-W with the embedded application to record data then send it to the PC. Check that the data has been uploaded correctly.

Note


* For details on the how to use the template applications, see "[3.1.6. Testing the Application.](#)"

* About communication settings

When you are using a USB communication cradle, the communication settings are configured automatically, so there's no need to configure them manually. If you are using a wireless LAN or LAN communication cradle, see "[7.3.Operation PC Communication.](#)"

■ When you've selected "Upload data to database (default template)" or "Upload data to database (customized)"

1. Click "Start PC application" at the top of BT Application Design Tool.

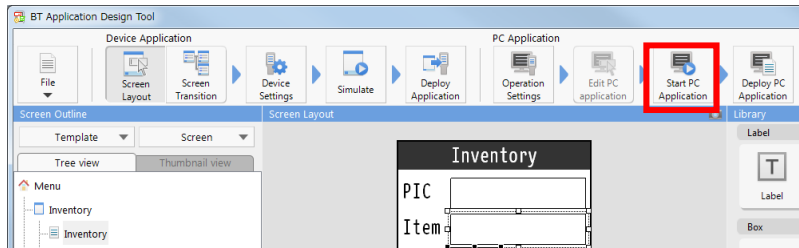

2. Once the PC application starts, click "Inventory" to display the theoretical product inventory and the results of the actual inventory.

Item number	Product name	Unit price	Theoretical Qty	Actual Qty	2016/10/07	(Difference)	Inventory value
BT-W1000	SAMPLE_1	310000	1	0	1	-9	
BT-W1550	SAMPLE_2	350000	1	0	1	-34	
BT-W1700	SAMPLE_3	60000	5	0	5	4	
BT-WUC10L	SAMPLE_4	60000	0	0	0	-5	
BT-WUC10L	SAMPLE_5	280000	3	0	3	0	
BT-WUC120U	SAMPLE_6	310000	0	0	0	-10	
BT-WUC320U	SAMPLE_7	50000	0	0	0	-20	
BT-W1000							
BT-W1550							

Date	Time	Serial number	Person	Item number	Quantity	Update result
2016-10-07	18:06:36	BT-WBST_#DA310063	123	BT-W1000	1	OK
2016-10-07	18:06:27	BT-WBST_#DA310063	123	BT-W1550	1	OK
2016-10-07	18:06:29	BT-WBST_#DA310063	123	BT-WUC10L	5	OK
2016-10-07	18:06:31	BT-WBST_#DA310063	123	BT-W800	3	OK

3. Use the BT device to enter and send data.

Note

* For details on the how to use BT device applications, see "[3.1.6. Testing the Application.](#)"

4. Click "Refresh" to import the data into the log database.
Check that the data has been uploaded correctly.

Date	Time	Serial number	Person	Item number	Quantity	Update result
2016-10-07	18:09:55	BT-WBST_#DA310063	123	BT-WUC10L	10	OK
2016-10-07	18:09:57	BT-WBST_#DA310063	123	BT-W800	3	OK
2016-10-07	18:10:04	BT-WBST_#DA310063	123	BT-W850	5	OK
2016-10-07	18:10:07	BT-WBST_#DA310063	123	BT-W800	3	OK

Log database

This stores all the data that has previously been sent.

Note

* About communication settings


When you are using a USB communication cradle, the communication settings are configured automatically, so there's no need to configure them manually. If you are using a wireless LAN or LAN communication cradle, see "[7.3. Operation Communication Software.](#)"

3.2.4. Deploying PC Applications


* For further details, see "[4.2.9. Deploying PC Applications.](#)"

Here you can package the configured PC Application to a specified folder for deployment to other computers.

1. Click "Deploy PC application" at the top of BT Application Design Tool.

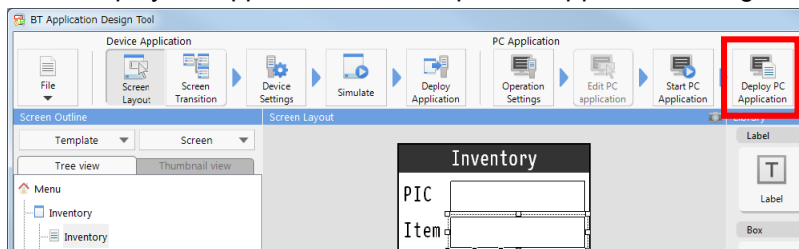

2. Select the folder to output the communication software or PC application to, and then click "Save."

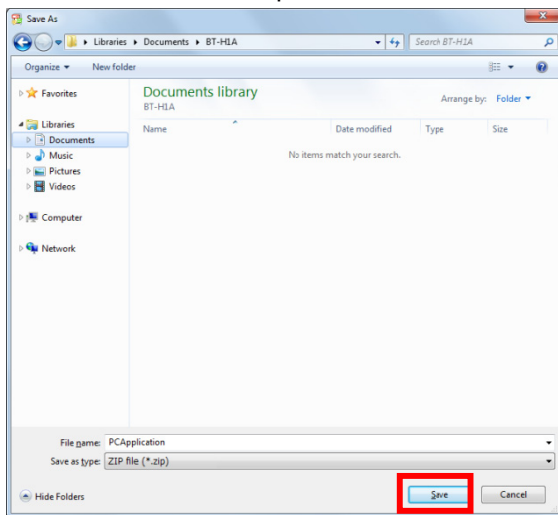

3. Use a USB memory stick or a similar piece of media to distribute the output file to the operation PC.

3.2.5. PC Application Usage Method

1. On the operation PC, perform the procedure listed under "[2.2 Installing the USB Driver.](#)"
2. Decompress to the operation PC the ZIP file that was output in "[3.2.4. Deploying PC Applications.](#)"
3. Install ".NET Framework 4.5.2," which is located in the Runtimes folder inside the decompressed folder.
Run "NDP452-KB2901907-x86-x64-AllOS-ENU.exe."
4. When you run "PCApplication.exe" inside the decompressed folder, the communication software or PC application starts.

■ When you have selected "Output CSV file to PC"

The communication software starts. Configure the settings in the same manner as explained in "[3.2.4. Deploying PC Applications.](#)" When you send data from the BT-W Series, it is saved as a CSV file in the set reception folder. The following are the most common management methods.

Saving the CSV file as-is on the PC

This is the fastest and easiest management method to deploy.

Managing the data by importing it into Excel

In this method, Excel is used as a simple database. Use Excel macros and similar functions to manage the data.

Uploading the data to another business application

It is possible to link with other business applications so long as they have a function for importing CSV files. You can freely change the data format with the BT device application settings.

■ When you have selected "Upload data to database (default template DataFormat)" or " Upload data to database (customized)"

The PC application starts. Configure the settings in the same manner as explained in "[3.2.4. Deploying PC Applications](#)." Data sent from the BT-W Series is saved in the database, and you can check the details from the PC application. You can click "Refresh" to update the inventory results.

PC Application

Inventory

Comm. settings Master creation Refresh Auto

Inventory

All Contains CSV Adjust Clear

Item number	Product name	Unit price	Theoretical Qty	Actual Qty	2016/10/07	(Difference)	Inventory r
BT-W1000	SAMPLE_1	310000	1	0	1	-9	
BT-W1550	SAMPLE_2	350000	1	0	1	-14	
BT-WUC10U	SAMPLE_3	60000	5	0	5	4	
BT-WUC10L	SAMPLE_4	60000		0	0	-5	
BT-W800	SAMPLE_5	280000	3	0	3	0	
BT-W850	SAMPLE_6	310000		0	0	-10	
BT-WUC80U	SAMPLE_7	50000		0	0	-20	

Total count: 21 item(s) Total inventory value: 1,800,000 Last refresh time: 2016/10/07 18:07

Inventory log

All Contains All Period 10/07/2016 - 10/07/2016

Date	Time	Serial number	Person	Item number	Quantity	Update result
2016-10-07	18:06:26	BT-W85T_#DA310063	123	BT-W1000	1	OK
2016-10-07	18:06:27	BT-W85T_#DA310063	123	BT-W1550	1	OK
2016-10-07	18:06:29	BT-W85T_#DA310063	123	BT-WUC10U	5	OK
2016-10-07	18:06:31	BT-W85T_#DA310063	123	BT-W800	3	OK

Last refresh time: 2016/10/07 18:07

Adjust Inventory button

Record in the management database the results of comparing the theoretical inventory against the actual inventory and apply the actual inventory counts to the theoretical inventory.

Management database

This database can be used to aggregate the data stored in the log database and check the inventory status.

Log database

This stores all the data that has previously been sent.


4. BT Application Design Tool

Operation Method

This chapter explains the BT Application Design Tool operation method.

4.1. Names of BT Application Design Tool Parts

This section explains the names and functions of BT Application Design Tool parts.

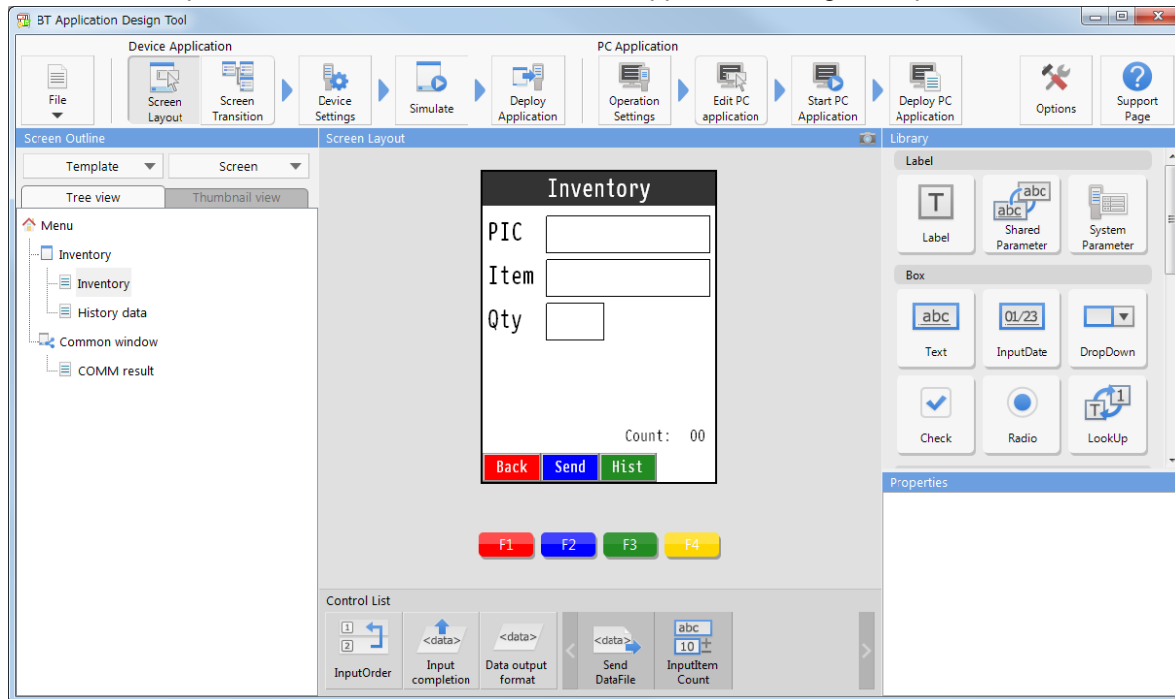

Work Flow

Following the Work Flow along the top from left to right can direct development and ensure every necessary option or setting is addressed.

Screen List

This displays an outline of jobs and screens within the application. You can use the tabs at the top to switch between tree and thumbnail views. With the dropdowns, you can add screen or job templates.

Screen Layout/Screen Transition

Within these views, the screen layout and the flow between screens can be edited.

Control List

Controls that are added to jobs can be viewed and edited from this section.


Library

The Library is a collection controls, GUI parts, and view items that can be added into applications simply by dragging onto the Screen Layout or Controls List.

Properties

You can check and edit the properties of each part.

This section explains the functions of each part of the “Edit PC application.”

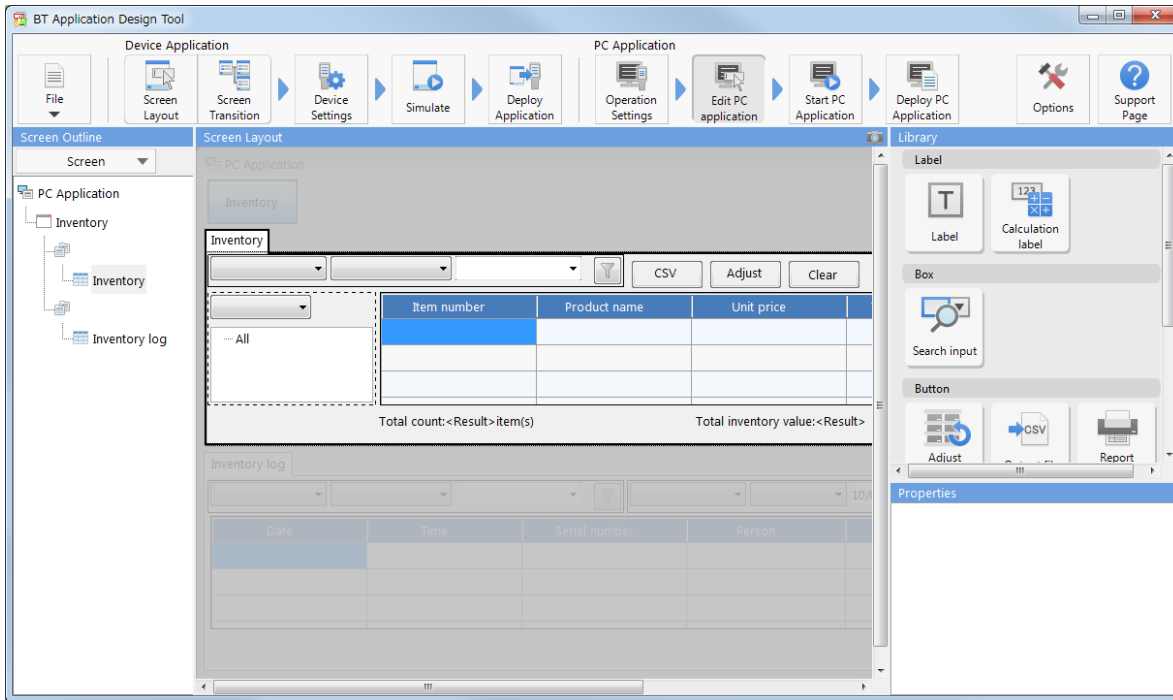

[Screen Outline \(PC Application\)](#)

Displays the PC application screen list as a tree.

[Editing PC Applications \(PC Application\)](#)

You can check and edit the PC application screen.

[Library \(PC Application\)](#)


This is a collection of PC application displays and input parts. Drag and Drop the parts to place them on the screen.

[Properties \(PC Application\)](#)

You can check and edit the properties of each part on the screen.


4.2. Work Flow

This section explains the functions of the buttons placed in the work flow.



4.2.1. File

Click "File" to display the following menu.

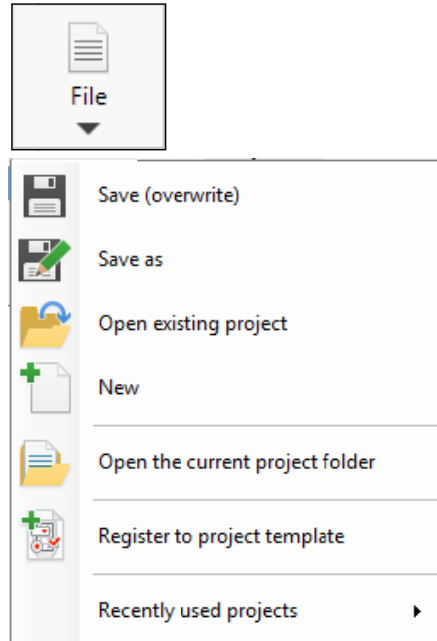

Save (overwrite)

Save (overwrite) the current project. (Keyboard shortcut: [Ctrl] + [S])

Save as

Save the current project with a new name.

Open existing project

Open a project that has already been created.

New


Create a new project.

Open the current project folder

Open the folder in which the current project has been saved.

Register to project template

Register the open project. After registering a template, you can select it by following the procedure under "[3.1.1 Template Selection](#)," as shown in the following figure.

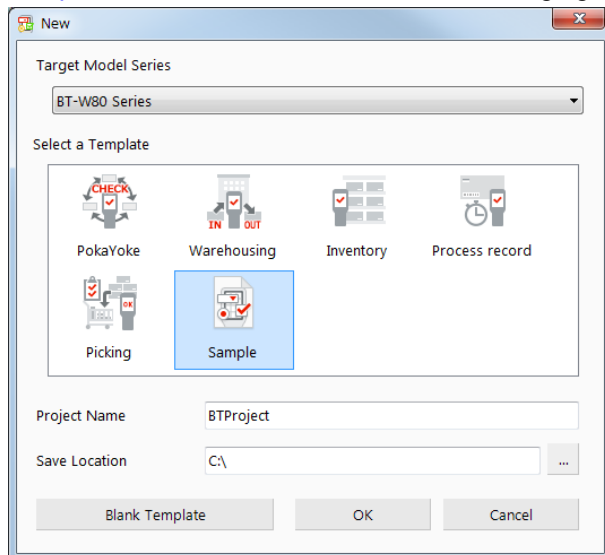


Recently used projects

Open a recently used project.


4.2.2. Screen Layout/Screen Transition

Click "Screen Layout" or "Screen Transition" to switch between the views displayed in the center of the BT Application Design Tool.


Screen Layout

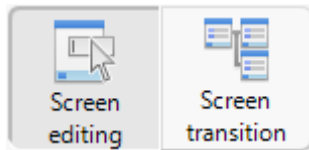


Selecting this option allows for editing of the selected screen's layout.

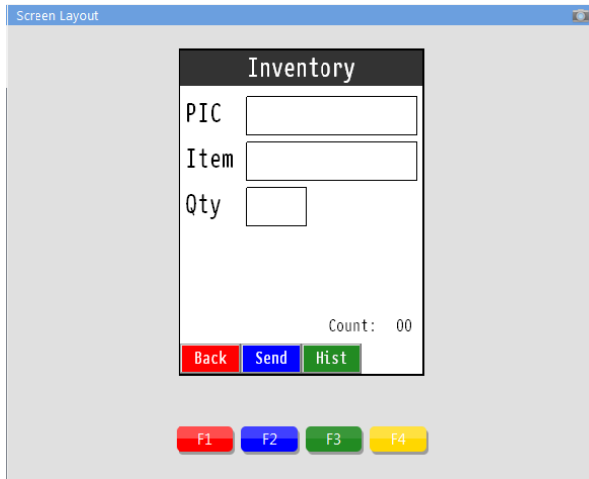

Screen Transition

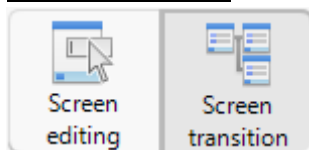


Selecting this option shows the screen transitions for the selected job.

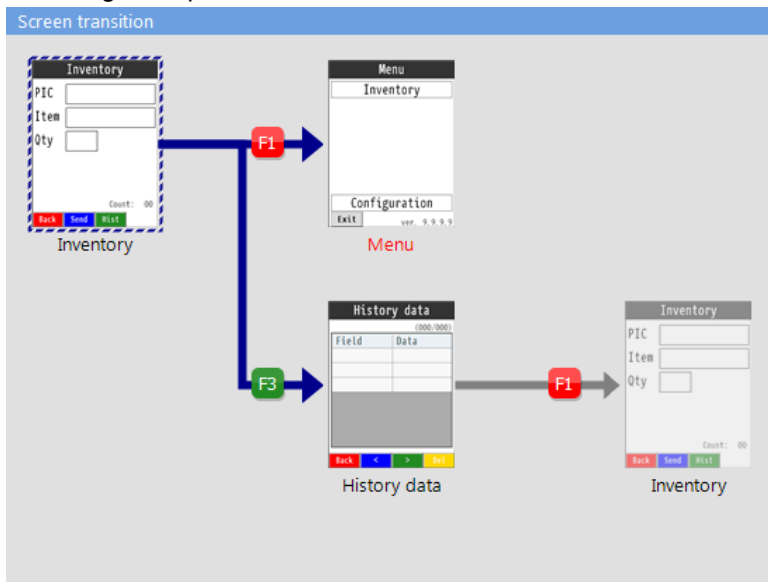


4.2.3. Device Settings

Settings such as the application's start method, power control, and communication method may be configured here. Click "Device Settings" to display a dialog box.

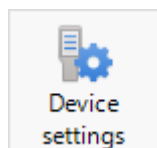

■ Basic settings

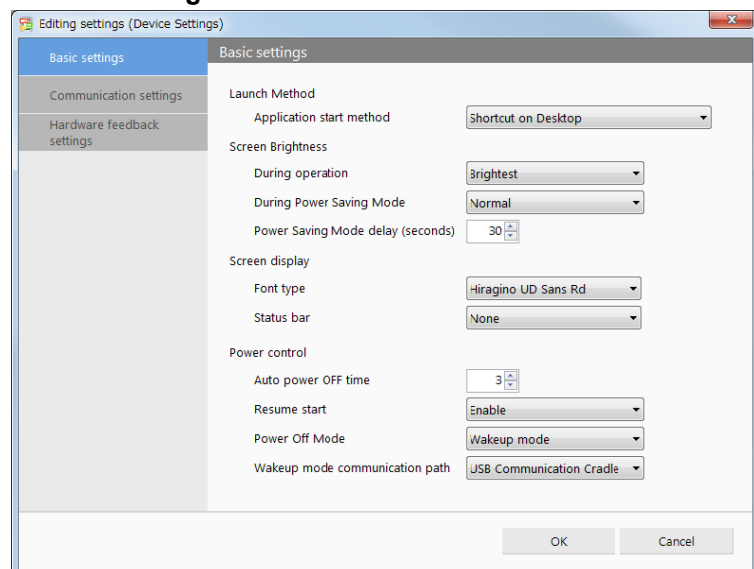

Launch method

• Application start method

Select the method for how to launch the application.

"Shortcut on Desktop" : a shortcut will be placed on the desktop when you deploy the application.

"Kiosk Mode" : a mode in which the Desktop is never displayed. The application will start as soon as the BT-W device powers on. This helps prevent incorrect use of the handheld.

[Options] Shotcut on Desktop | Kiosk Mode

Note

* Precautions in Kiosk mode

We recommend that you configure the settings shown in "[5.6.8.Top Menu Window](#)", so that no close button is displayed. If the application is closed, the following screen will be displayed. To start the BT System Menu, hold down the [Fn] key and the [1] key for 2 seconds. To restart, hold down the [Fn] key and the [2] key for 2 seconds.



Screen Brightness

- **During operation**

Set the screen brightness when operating the BT-W device.

[Options] Normal | Bright | Brightest

- **During Power Saving Mode**

Set the screen brightness when the BT-W device is in power saving mode due to no recent activity.

[Options] Off | Normal | Bright | Brightest

- **Power Saving Mode delay (seconds)**

Set the length of time before the BT-W device enters Power Saving Mode due to inactivity.

[Setting range] 1 to 127 seconds

Screen display

- **Font type**

Select the type of font used in the application.

[Options] Tahoma | Segoe UI | Hiragino UD Sand Rd | Hiragino UD Sans

- **Status bar**

Select whether to display the status bar on the BT-W device and the position when displayed.

[Options] None | Top | Bottom

Power control

- **Auto power OFF time**

Set the length of time before the BT-W device powers off due to inactivity.

[Setting range] 0 to 60 minutes

* Set this to "0" to disable the automatic power off setting.

- **Resume start**

Select whether to enable or disable the resume start function. When you enable this function, the screen that was in use before the last power off is displayed when powered back on. When you disable this function, the BT-W device will be restart when it turns on next time.

[Options] Disable | Enable

- **Power Off Mode**

"Background mode" : The BT-W device will operate normally, including performing communication, but will not show the screen, nor respond to key or touch panel input. This mode is effective in situations when you want to continue performing communication even when the BT-W device is off.

"Wakeup mode" : The BT-W device will have the same status as "Background mode" but will also automatically respond to communication from the PC. This mode is effective in situations when you are using scheduled communication with communication software.

Note

* For details on scheduled communication, see ["7.3.Operation Communication."](#)


[Options] Normal mode | Background mode | Wakeup mode

- **Wakeup mode communication path**

Only set this when you have selected "Wakeup mode" for the above setting. Select the communication path.

[Options] USB Communication Cradle | LAN Communication Cradle | Wireless LAN

■ Communication settings

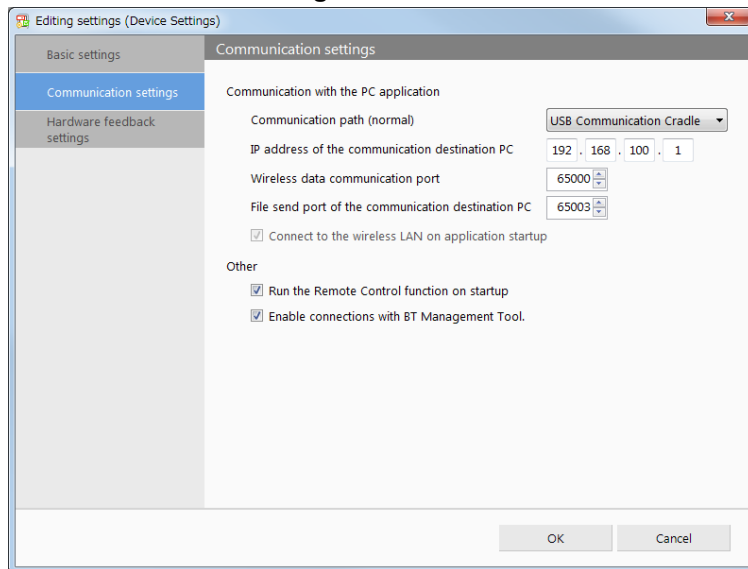

Communication with the PC application

- **Communication path (normal)**

Select the communication path when communicating with the PC.

[Options] USB communication Cradle | LAN communication Cradle | Wireless LAN

- **IP address of the communication destination PC**

Specify the IP address of the target PC.

- **Wireless data communication port**

Set the target PC's port to use in wireless data communication.

- **File send port of the communication destination PC**

Set the target PC's port to use for sending files.

[Setting range] 1 to 65535

- **Connect to the wireless LAN on application startup**

Check this check to connect to the wireless LAN when the application starts.

Other

- **Run the Remote Control function on startup**

Check this box to enable the remote control function. You can use the remote control function to operate the BT-W device remotely from a PC.

Note

* BT-WHD1GA or BT-WHM1GA must be installed on the PC.


- **Enable connections with BT Management Tool.**

Check this box to enable connections with BT Management Tool.

Note

* BT-WHM1GA must be installed on the PC.

■ Hardware feedback settings

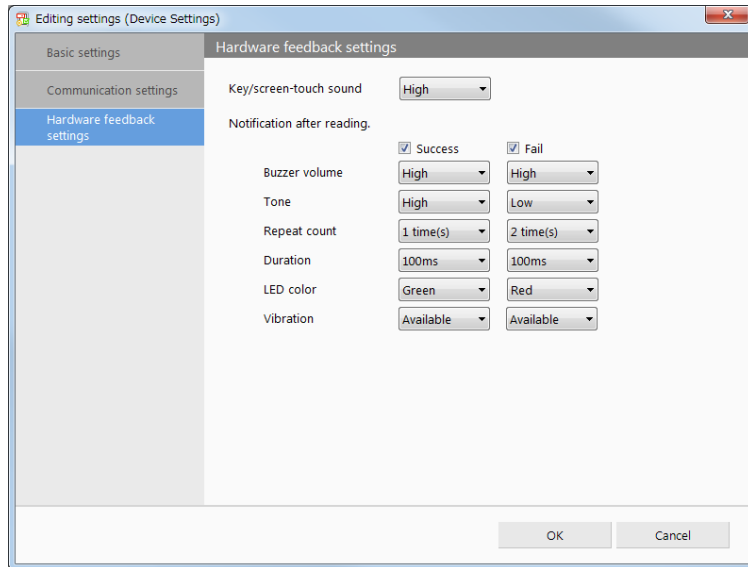

Key/screen-touch sound

Set the volume of the key and touch panel operations.

[Options] Off | Low | Medium | High

Notification after reading

Set the buzzer, vibration, and LED operations when barcode reading is successful, or fails.

•Buzzer volume

[Options] Off | High | Medium | Low

•Tone

[Options] High | Medium | Low

•Repeat count

[Setting range] 1 time to 10 times

•Duration

[Options] 100ms | 200ms | 500ms | 1000ms

•LED color


[Options] Off | Green | Red

•Vibration

[Options] Unavailable | Available

4.2.4. Simulate

This function simulates BT device applications on the PC with the BT Application Design Tool. When you click "Simulate," the simulation screen is displayed.

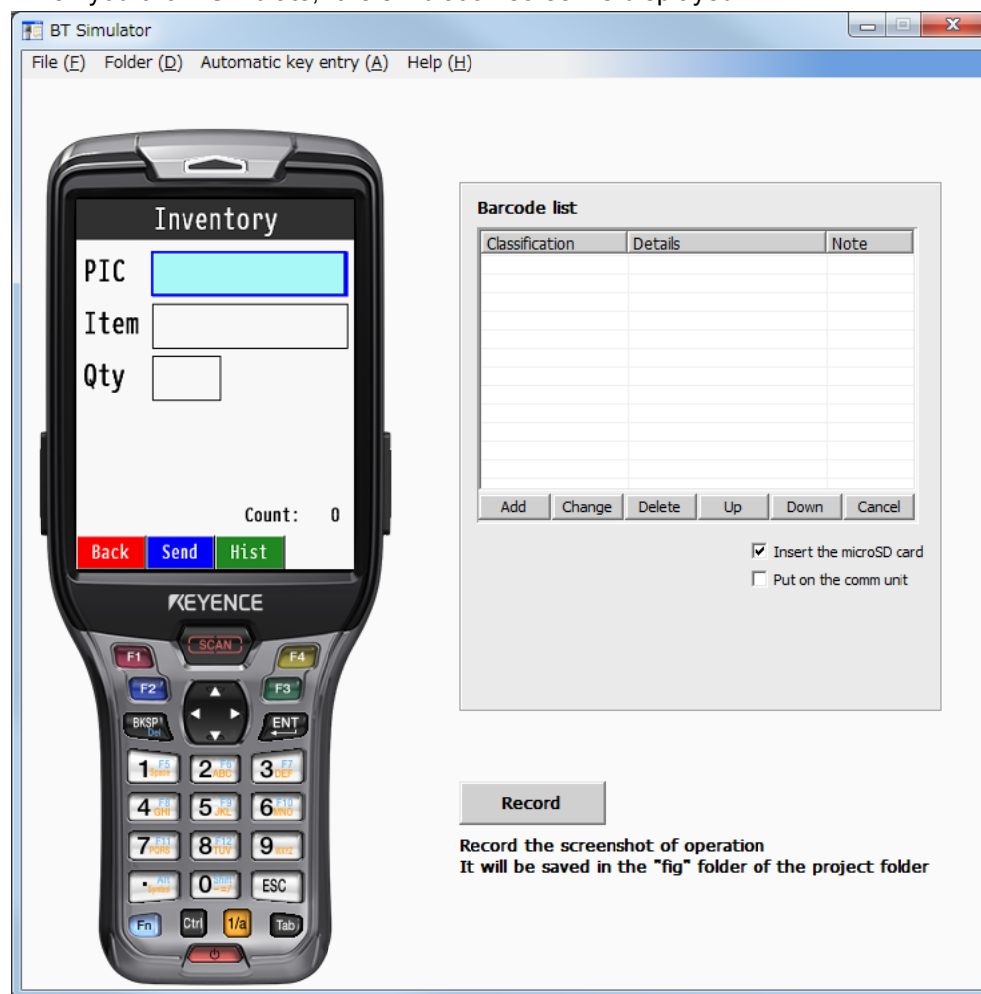

■ Menu bar

File (F)

This menu can be used to run applications that have recently been simulated and to exit the simulation.

Folder (D)

This menu opens the "application root" folder in which the BT device applications are saved and the "fig" folder in which the images that can be acquired with the "Record" button are saved.

Automatic key entry (A)

This menu can be used to record operations in the simulator and to automatically execute these operations continuously.

Help (H)

Check the version of the device library.

■ **Barcode list**

You can create barcodes and scan them with the BT device on the simulator. When you select a barcode in the list, the barcode is displayed above the BT device.

Insert the microSD card

Check this box to switch the BT device to the state in which a microSD card is inserted.

Put on the comm unit

Check this box to switch the BT device to the state in which it is inserted in the communication cradle.

■ **"Record" button**

Records an image of the created screen. The recorded images are stored in the "fig" folder, which is accessed from the "Folder" menu.

■ **Wireless communication between simulated BT device applications and PC applications**

If you configure the following settings, you can perform wireless communication between a simulated BT device application and a PC application on the same PC.

Using wireless communication to send files

Register the IP address "127.0.0.1" under "Registration of the device to connect to" according to the information under "[7.3 Operation Communication Software](#)."

Using wireless communication to send data in real time


Register the IP address "127.0.0.1" to "IP address of the communication destination PC" according to the information under "[4.2.3 Device Settings](#)."

■ **Operation differences between the actual BT device and the simulator**

- The BT-W70/W80/W100 Series status bar is not displayed in the simulator.
- Message boxes have different appearances.
- The Fn, Tab, and 1/A keys can not be operated in the simulator.

4.2.5. Deploy Applications

Deploy applications developed in the BT Application Design Tool to the BT-W device. Click "Deploy application" to display the configuration dialog box.

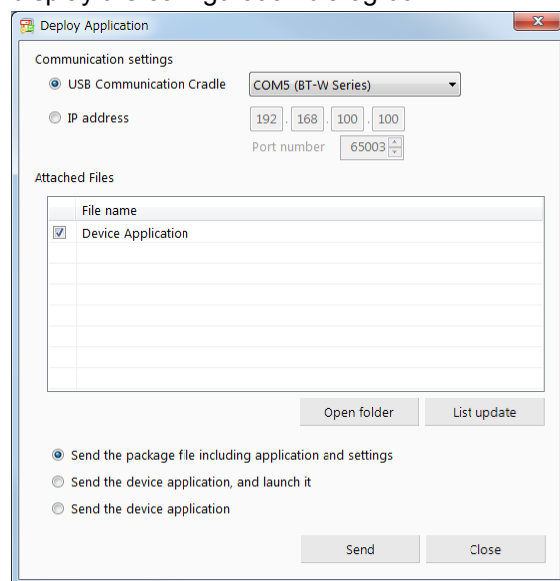

Communication settings

Select the communication path to use when sending applications to a BT-W. To send applications using a USB communication cradle, select "USB Communication Cradle." To send applications using a LAN Communication Cradle or wireless LAN, select "IP address."

• USB Communication Cradle

Select the communication cradle port number from those displayed in the list. If the desired port number is not displayed, the USB device may not have been recognized correctly. See ["2.2. Installing the USB Driver."](#)

• IP address

Enter the IP address of the BT-W device to send applications to.

Attached Files

This displays a list of the files to send to the BT-W device. In addition to the application, the master file and image files are also displayed if they are referenced by the application. Clear the check boxes of the files that you do not want to transfer.

• Open folder

Click this button to add files to send. When you click "Open folder," the project folder > root > BT_FILES folder opens in File Explorer. You can add files to send by saving them in the "drv1," "drv2," and "drv5" folders. The folders correspond to the send destinations on the BT-W device as shown below.

"drv1" ... \FlashDisk\BT_FILES\drv1

"drv2" ... \RamDisk\BT_FILES\drv2

"drv5" ... \SDCard\BT_FILES\drv5 * When a MicroSD card is inserted

• List update

Update the list of files to send. Click this button after using the "Open folder" button to add files.

Sending method

Select which operation to perform after deploying an application.

•Send the package file including application and settings

The BT device application will be sent together with the "device settings." Select this method when you have changed the details in "[4.2.3. Device Settings.](#)"

•Send the device application, and launch it

The "device settings" will not be included. Select this method when you have not changed the details in "[4.2.3. Device Settings.](#)" The BT device application will be started after it is sent. If you have selected kiosk mode for the "Application start method," there is no way to start the BT device application after sending it, so you have to select this option.

•Send the device application

The "device settings" will not be included. Select this method when you have not changed the details in "[4.2.3. Device Settings.](#)"

Select "Send the package file including application and settings" the first time that you send the application and the last time when development is finished. However, this method takes time because the device must restart, so we recommend that you select "Send the device application, and launch it " or "Send the device application " during development.

■ About the sending method

Use the procedure below which matches the communication path.

Deploy Application

Communication settings

☒ USB Communication Cradle COM5 (BT-W Series)

☐ IP address 192.168.100.100 Port number 65003

Attached Files

File name
☒ Device Application

Open folder List update

☒ Send the package file including application and settings

☐ Send the device application, and launch it

☐ Send the device application

Send Close

Communication path: USB Communication Cradle

* The USB driver must be installed in advance. "[2.2. Installing the USB Driver](#)"

1. Place the BT-W in the USB Communication Cradle. Ensure that the cradle has AC power by verifying that the BT-W's LED is signaling charging. Also verify the USB cable is connecting the PC and cradle.

2. Set the BT-W device to standby for communication.

In the BT System Menu, click "6. Receive file," set the communication dropdown to "USB Comm Cradle(COM)" and then click "Start standby."

Communication path: LAN Communication Cradle


1. Set the BT-W device network settings for communication with the PC.
In the BT System Menu, click "2.Network," "3.Comm Cradle," and then "1.Connection." Then, set the network to "LAN Comm Cradle(TCP/IP)."
2. Place the BT-W in the LAN Communication Cradle. Ensure that the cradle has AC power by verifying that the BT-W's LED is signaling charging. Also verify the LAN cable is connecting the PC and cradle.
3. Set the BT-W device to standby for communication.
In the BT System Menu, click "6. Receive file," set the communication dropdown to "LAN Comm Cradle" and then click "Start standby."

Communication path: Wireless communication

1. Set the BT-W device wireless communication and network to enable communication with the PC.
In the BT System Menu, click "2.Network," "1.Wireless LAN," and then click "2.Network." Then, set the network.
In the BT System Menu, click "2.Network," "1.Wireless LAN," and then click "1.Connect/Authenticate" to set the wireless communication.
2. Set the BT-W device to standby for communication.
In the BT System Menu, click "6. Receive file," set the communication dropdown to "Wireless LAN" and then click "Start standby."

Receive file Tool


When you select the "Send the package file including application and settings" method and send the application, the "Receive file Tool" application is placed on the BT-W device's Desktop. The function is the same as "6.Receive file" in the BT System Menu. You can use this application to eliminate the hassle of starting the BT System Menu when you send an application.

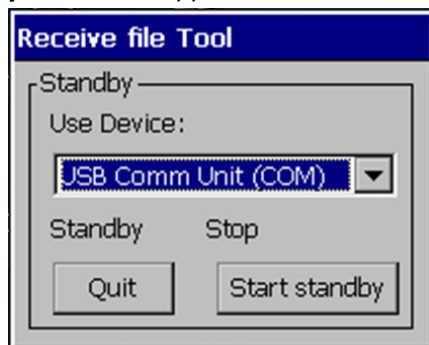

4.2.6. Operation Settings

Set the method for receiving data in the PC application. Click "Operation settings" to display the Operation Settings dialog box.

■ Operation settings

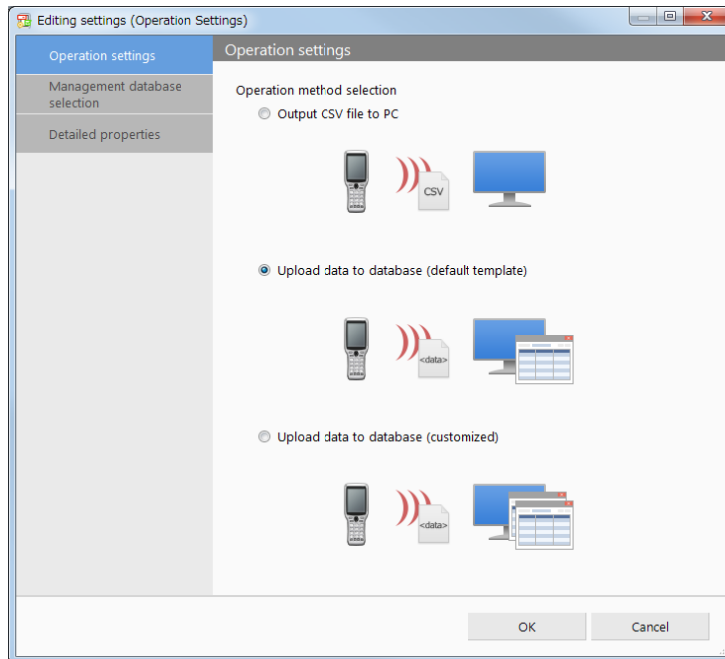

Operation method selection

•Output CSV file to PC

A CSV file generated from the application will be output from the device and sent to the PC application.
"Management database selection" will not be displayed in the menu on the left side of the dialog box.

•Upload data to database (default template)


The device's data will be uploaded to a database dedicated for use with BT Application Design Tool.
"Management database selection" will be displayed in the menu on the left side of the dialog box.

•Upload data to database (customized)

The BT-W device's data will be uploaded to a dedicated database with the BT Application Design Tool. This database can be viewed with the PC Application. Select this option if the DataFormat control settings have been changed.

"Management database selection" will be displayed in the menu on the left side of the dialog box.

■ Management database selection

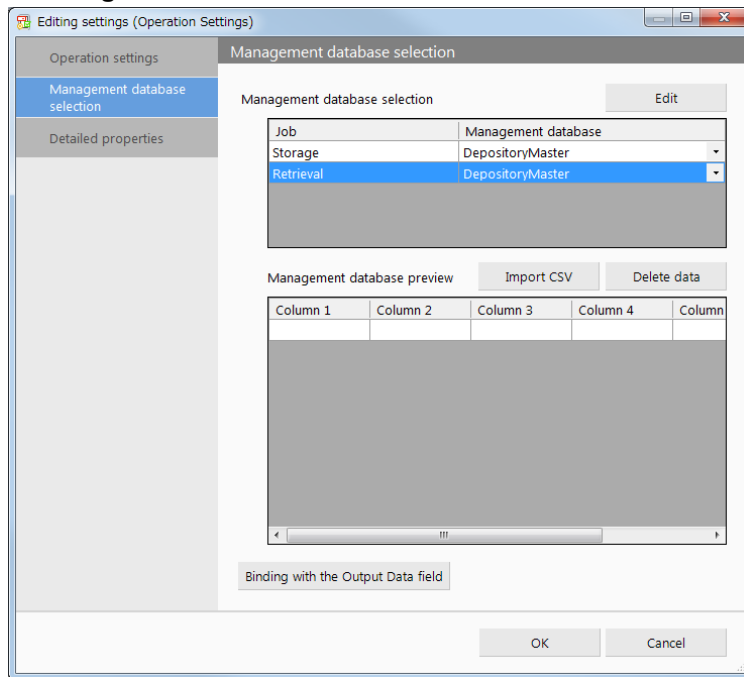


Management database selection

Select the management database.

“Edit” button

To create a new management database or edit an existing management database, click "Edit." A dialog box is displayed.

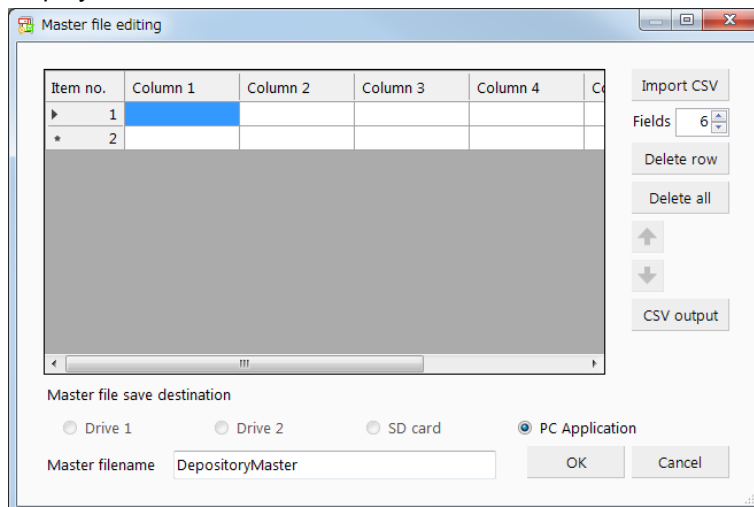

Enter the data in the cells directly to create or edit the management database.

- **"Import CSV" button**

Import a CSV file to create the management database. The CSV file contains comma-segmented data entries.

- **Fields**

You can set the number of columns in the management database.

- **"Delete row" button**

Delete the selected row.

- **"Delete all" button**

Delete all the data in the management database.

- **"↑" and "↓" buttons**

Move the selected row up or down, respectively.

- **"CSV output" button**

Save the created management database to a CSV file.

- **Master file save destination**

This is fixed to "PC Application."

- **Master filename**

Set the name of the management database.

Management database preview

You can check the management database preview.

"Import CSV" button

Import a CSV (comma-segmented value) file into the management database.

"Delete data" button

Delete all the data in the management database.


Binding with the output data field

This button is enabled when you select "Upload data to database (customized)."

For example, use the data uploaded with the Storage/Retrieval template to search column 1 for "Location" and with column 2, "ItemNo," in the management database, and then add (for storage) the "quantity" to or subtract (for retrieval) the "quantity" from column 5 in the found record. If you have changed the BT device application data format, you will have to redefine which column is searched and with what data as well as which columns are updated with what data and in which manner.

You can click "Binding with the Output Data field" to bind the selected job with the selection in the management database.

■ Binding with the Search/DataMatch target (example: Storage/Retrieval)

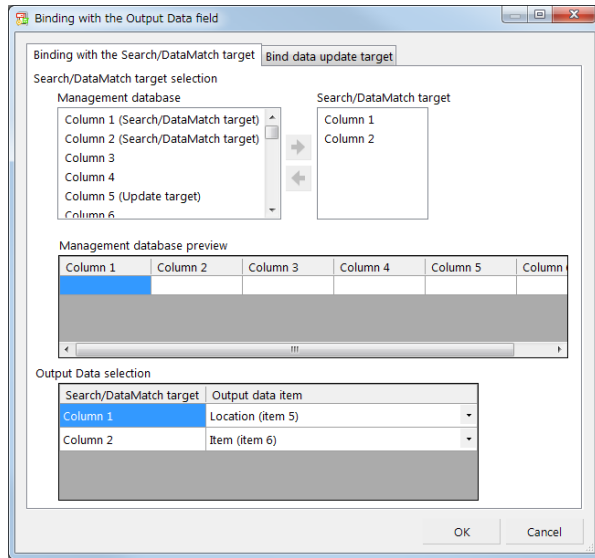

Search/DataMatch target selection

Select which columns to search in the management database. To add a column to the search target, select the column, and then click "→."

To delete a column from the search target, select the column, and then click "←."


Management database preview

You can check the management database preview.

Output Data selection

Select which data obtained from the BT device to use in searching the columns selected under "Search/DataMatch target selection."

■ Bind data update target (example:Storage/Retrieval)

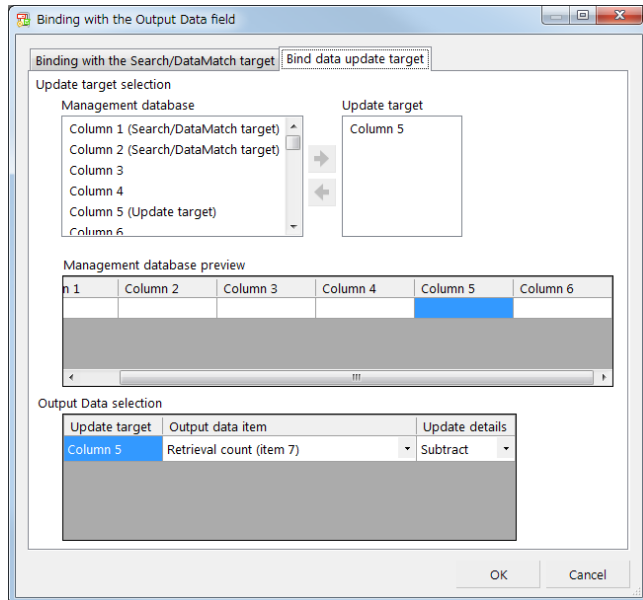

Update target selection

Select which columns to update in the management database. To add a column to the update target, select the column, and then click "→."

To delete a column from the update target, select the column, and then click "←."

Management database preview


You can check the management database preview.

Output Data selection

Select which data obtained from the BT device to use in updating the columns selected under "Update target selection." Also set the update details.

[Update details] Overwrite | Add | Subtract


■ Detailed properties

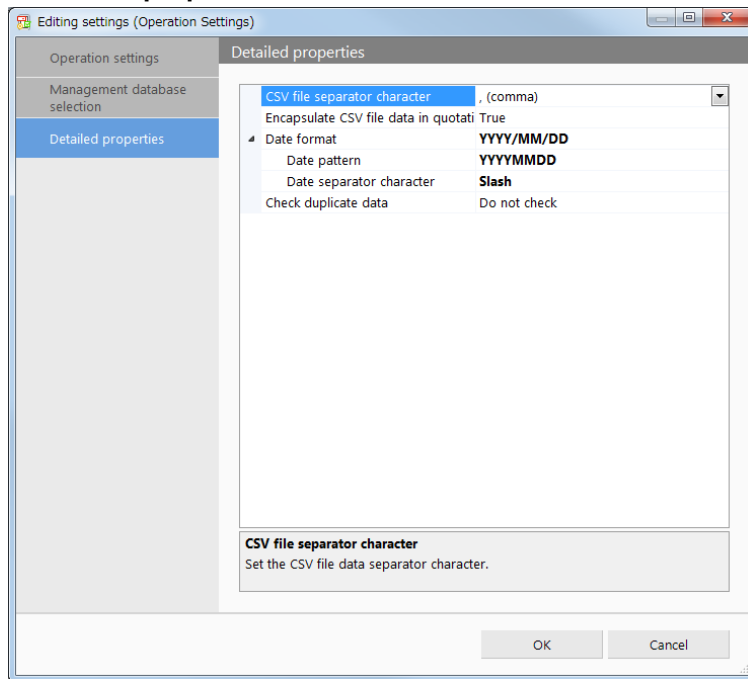

CSV file separator character	Select the separator character of the CSV file to be imported into the management database. [Options] , (comma) Tab Space
Date format	Check the preview of the date format.
Date pattern	Select the date pattern. [Options] YYYYMMDD YYYYMM YYMMDD YYMM MMDDYYYY MMYYYY MMDDYY MMY
Date separator character	Select the character to use to separate the year, month, and day. [Options] None Slash Period Hyphen Space
Check duplicate data	When you enable this function, the data uploaded to the log database is checked for duplications, and any duplicate data is automatically deleted. "Per record": The check for duplication is performed for each record. Note that if the data, date, and time (hours, minutes, and seconds) completely match, the entry will be deleted. "Per received data entry": The check for duplication is performed for the received data which has the same entries as the previous data. [Options] Do not check Per record Per received data entry

4.2.7. Editing PC Applications

Click "Edit PC application" to display the PC application editing screen in the center of BT Application Design Tool as shown below. This button is enabled when you select "Upload data to database (default template)" or "Upload data to database (customized)" in [4.2.6 Operation Settings](#)."

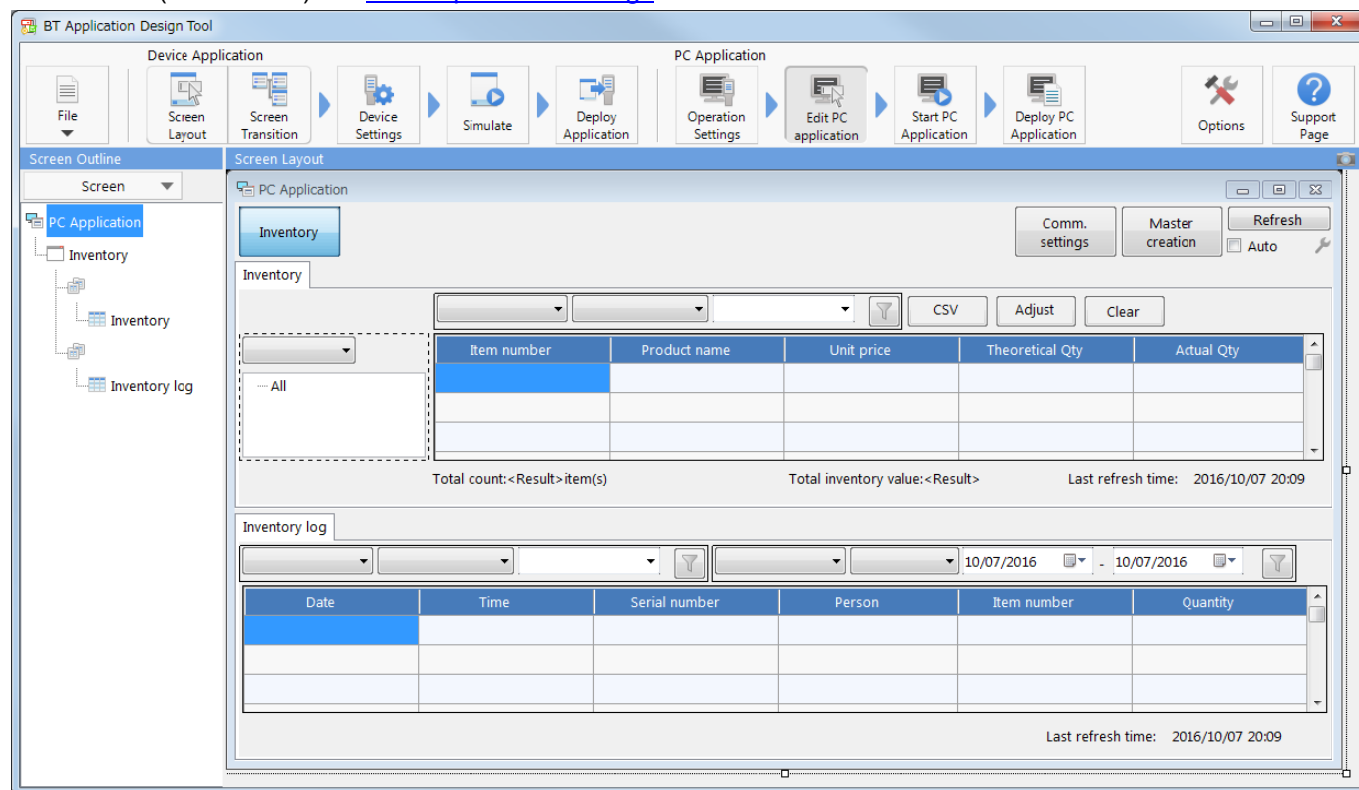


For the detailed editing method, see [4.9 Editing PC Applications \(PC Application\)](#)."

4.2.8. Starting PC Applications

Depending on the selected operation method for the PC Application, different settings may need to be configured for communication between the BT-W device and PC. When you click "Start PC application," the communication software or the PC application starts according to ["4.2.6. Operation Settings."](#)

■ When you have selected "Output CSV file to PC"


Select the communication method, set the folders for sending and receiving CSV files, configure the communication settings, and then click "Save settings" or "Minimize to notification area." For details, see ["7.2.PC Application Usage Method."](#)

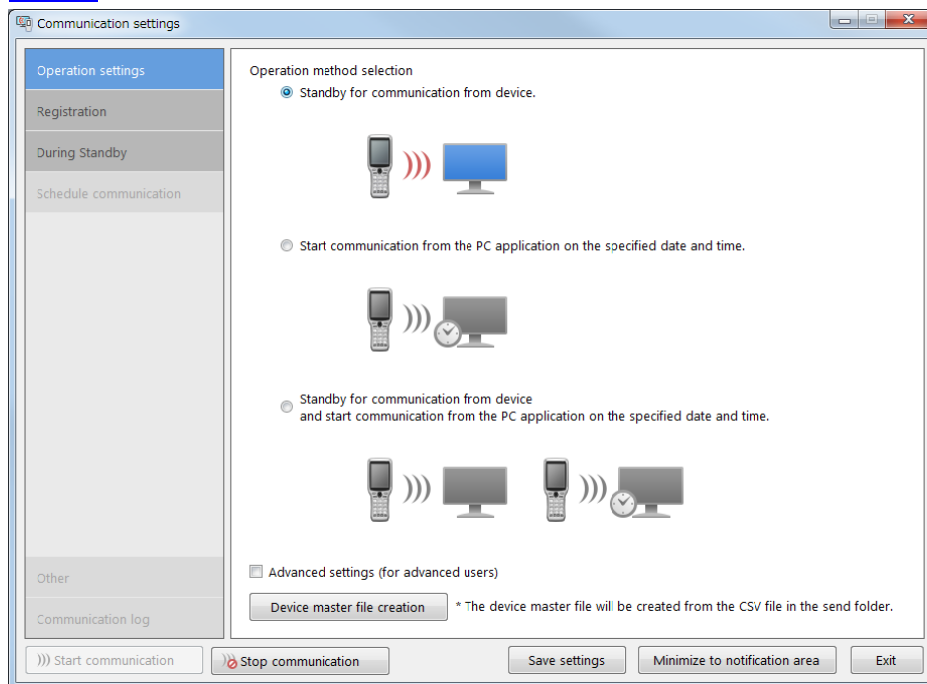


After configuring the communication settings, use the BT-W device with the embedded application to record data then send it to the PC. Check that the data has been uploaded correctly.

■ **When you have selected "Upload data to database (default template)" or "Upload data to database (customized)"**

The PC application starts with the Top Menu displayed. First, click "Comm. settings" to set the communication method. Select the communication method, set the folders for sending and receiving CSV files, configure the communication settings, and then click "Save settings" or "Minimize to notification area." For details, see ["7.2.PC Application Usage Method."](#)

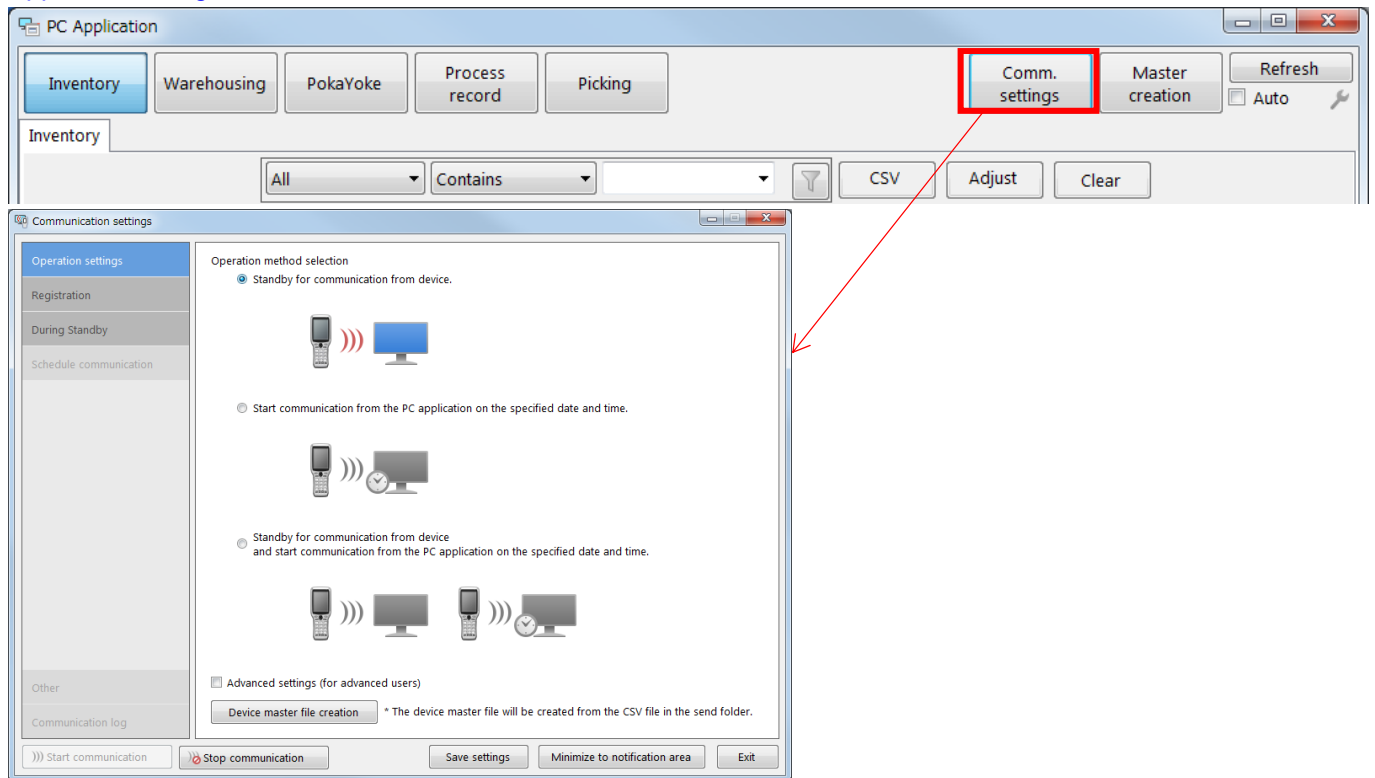


Selecting a job in the Top Menu will display the PC Application for that job. For details, see ["7.2.PC Application Usage Method."](#)

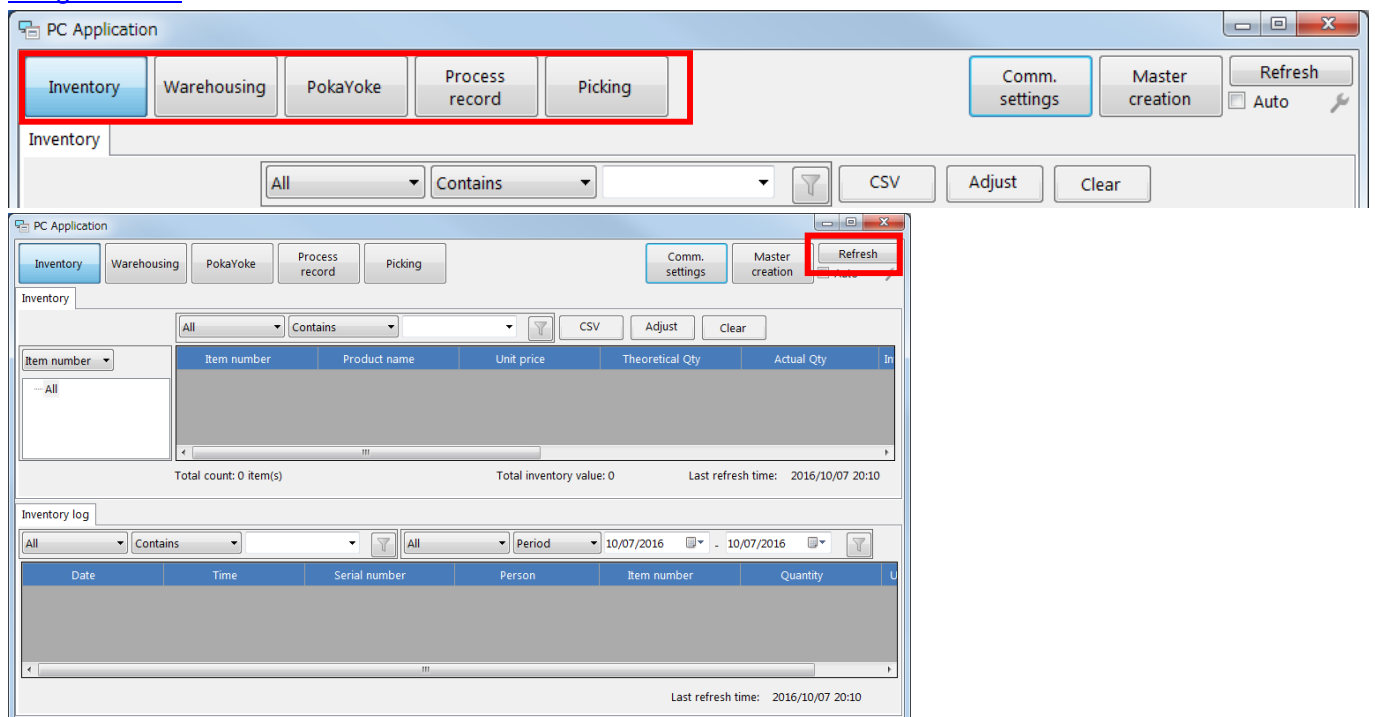

Use the BT-W device with the embedded application to record data then send it to the PC Click "ImportData," and then check whether the data has been applied correctly.

4.2.9. Deploying PC Applications

Here you can package the configured PC Application to a specified folder for deployment to other computers. Click "Deploy PC application" to display the "Save As" dialog box.

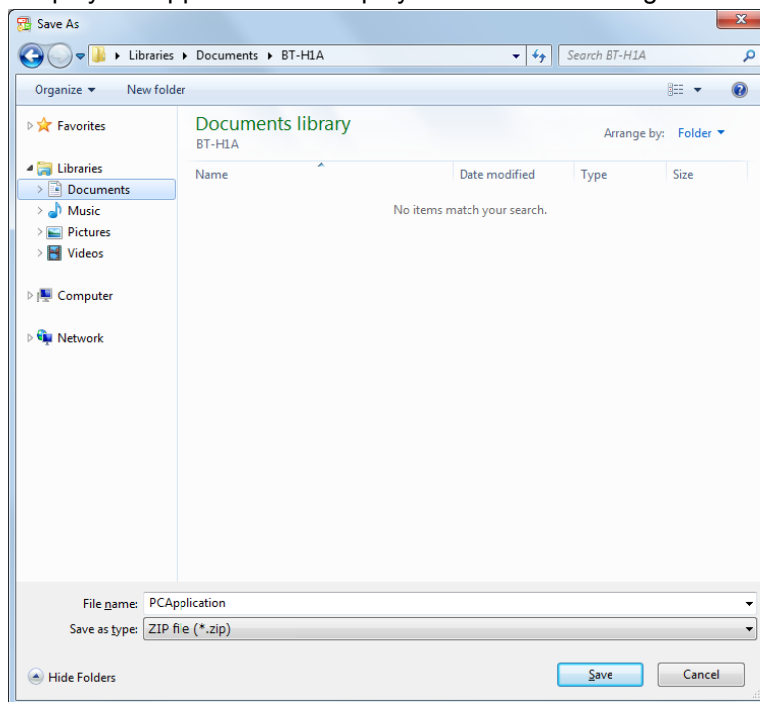


Select the folder to output the communication software or PC application to, and then click "Save." For details on operations, see ["7.2.PC Application Usage Method."](#)

Note

* When using the BT-W device in a DHCP environment:


Installation of NIResolver is necessary. Run "ServiceInstall.exe" from the PCApplication folder shown in the above steps. The application shown below will start. Click "Install."

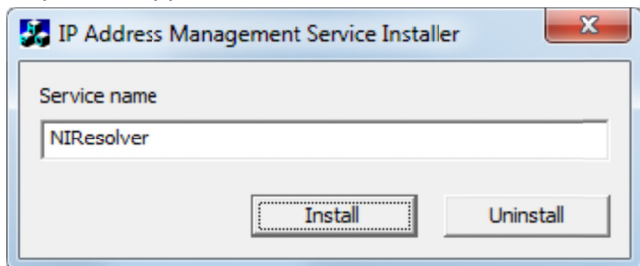

4.2.10. Options

Set the options. Click "Options" to display a dialog box.

■ Display settings

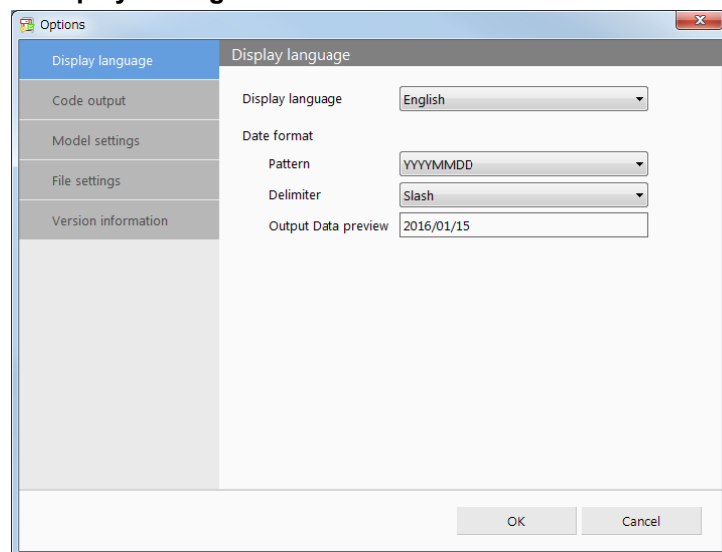

Display language

You can set the display language of BT Application Design Tool.

[Options] English only


Date format

You can set the date format of BT Application Design Tool.

[Pattern options] YYYYMMDD | YYYYMM | YYMMDD | YYMM | MMDDYYYY | MMYYYY | MMDDYY |
 MMYYY | DDMMYYYY | DDMMYY

[Separator options] None | Slash | Period | Hyphen | Space

■ Code output

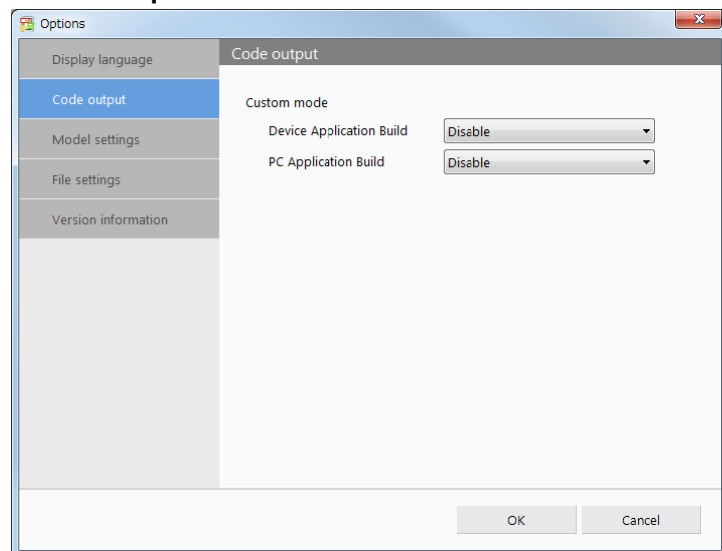


Custom mode

This mode is used to develop programs by outputting as code created with BT Application Design Tool. You can enable custom mode separately for BT device applications and PC applications.

For details on how to operate custom mode, see "[9.1 Custom Mode](#)"

■ Model settings

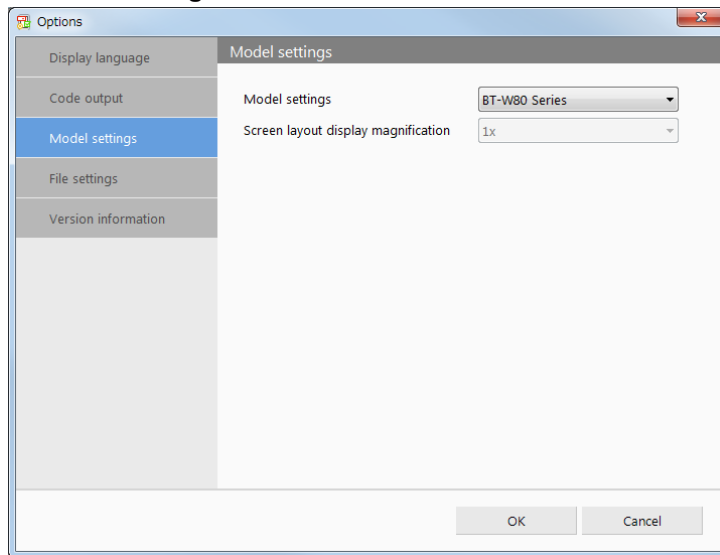

Model settings

This displays the current project's applicable BT-W models.


[Options] BT-W70 Series | BT-W80 Series | BT-W100 Series

Screen layout display magnification

You can change the display magnification of the layout. For the BT-W100 Series, you can select "1/2x" or "1x." For the BT-W80 Series and the BT-W70 Series, this is fixed to "1x."

[Options] 1x | 2x (BT-W100 Series only)

■ File settings

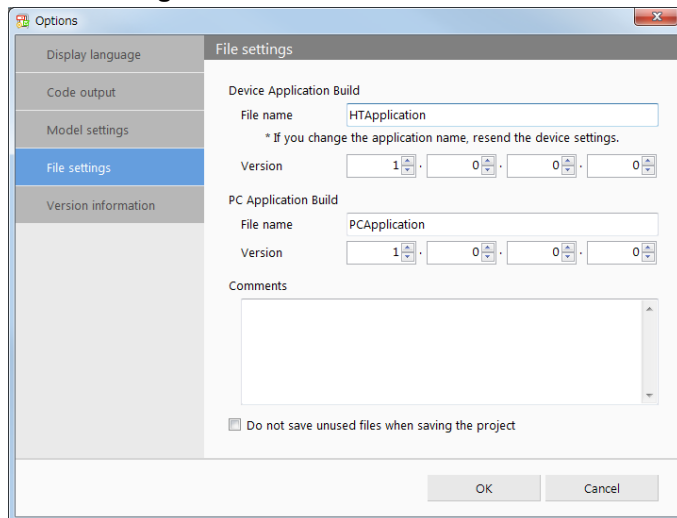

Device Application Build

You can set the file name and version of the application.

PC Application Build

You can set the file name and version of the PC application.


Comments

You can save a comment to the project. You can use this comment freely. Some examples include recording the application's revision history and characteristics.

Do not save unused files when saving the project

If you check this box, files such as master files that are not bound to the project will not be included when the application is deployed in ["4.2.5. Deploy Applications"](#)

■ Version information

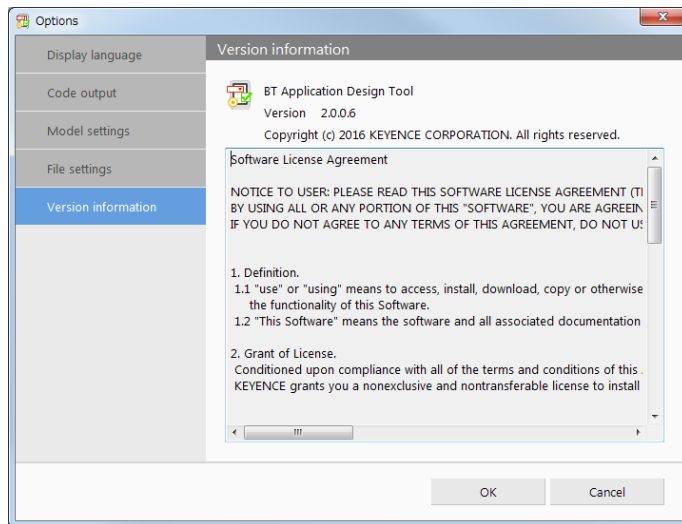

The BT Application Design Tool version and the software license agreement are displayed on this screen.

4.2.11. Support Page

The software has a link to the KEYENCE BT Series User Support webpage. You can download documents and tools, upgrade software, view a FAQ, and use a form to contact KEYENCE for technical support.

<https://www.keyence.com/btus>



BT Series User Support



Materials / Tools

You can download the Manuals, Drivers and many sample programs



Version Upgrades

You can get the latest device firmware and PC software




Contact Us

Ask our expert Engineers about your technical questions?




4.3. Screen List (Device Application)

This section explains the functions of the parts of the Screen list.

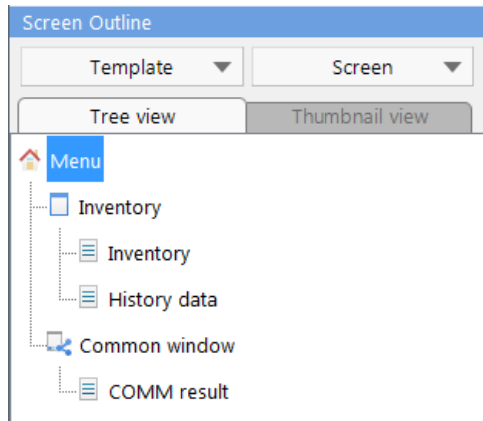


4.3.1. New Template

Click "Template" to display the following list. Select a job to add to the application.

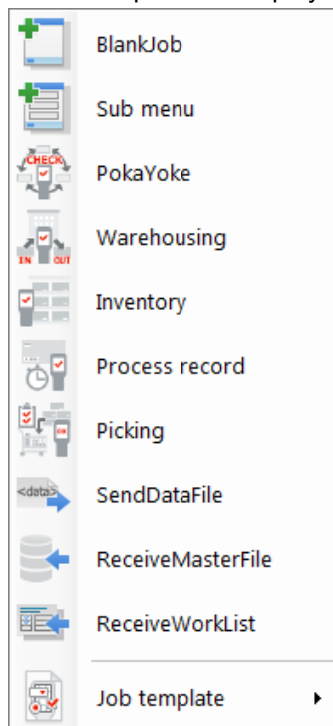


4.3.2. New Screen

Click "Screen" to display the following list. Select a new screen to add to the application.

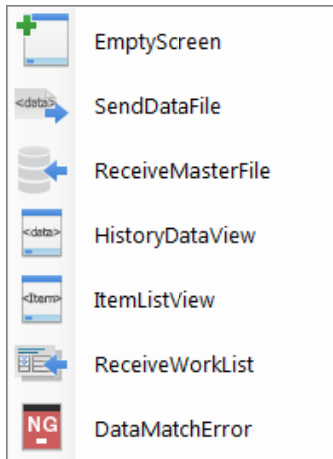


4.3.3. Tree View

The Screen list is displayed as a hierarchy tree. The screen selected in the tree view is displayed of the the center screen of the BT Application Design Tool. You can move templates and screens by dragging them. The top screen within a job will be the entry point

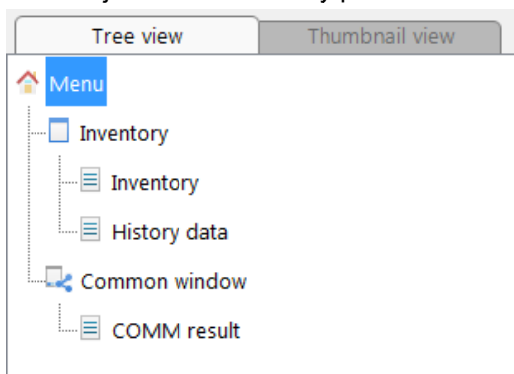


4.3.4. Thumbnail View

The Screen list is displayed as a series of thumbnails. The screen selected in the thumbnail view is displayed in the center screen of the BT Application Design Tool.

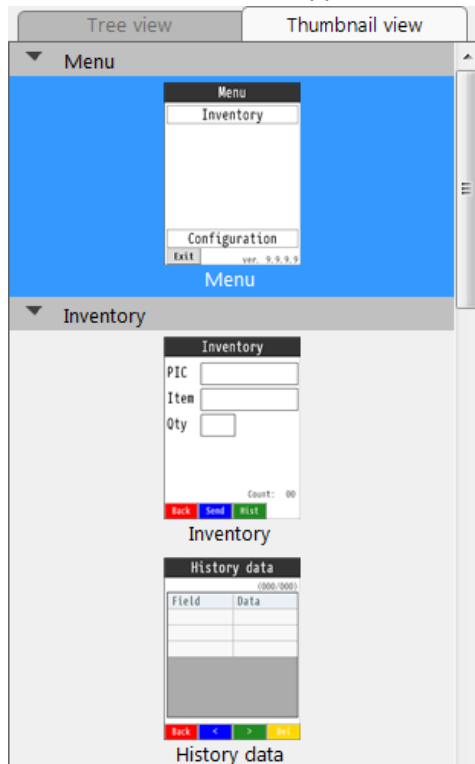


Right-clicking an item in the Screen list

Right-click an item in the Screen list to display the following menu.

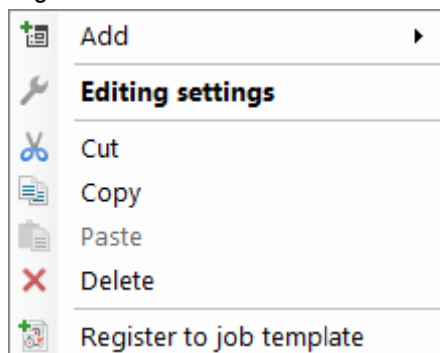

• Add

Add a template or screen. The operations are the same as those explained in "[4.3.1.New Template](#)" and "[4.3.2.New Screen](#)." When you select "Menu," you can add a sub menu. You cannot add a sub menu to a sub menu.

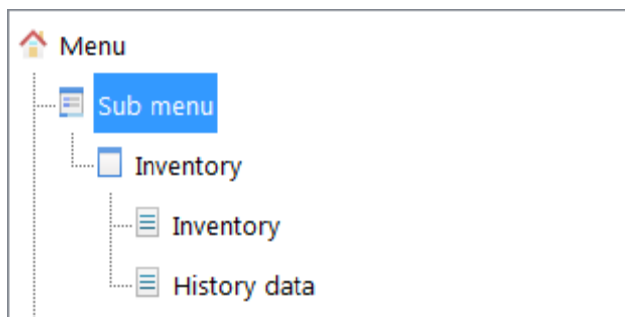

- **Editing settings**

You can edit the settings of the selected item. A dialog box is displayed.

- **Cut**

Cut the selected item. (Keyboard shortcut: [Ctrl] + [X])

- **Copy**

Copy the selected item. (Keyboard shortcut: [Ctrl] + [C])

- **Paste**


Paste the cut or copied item. (Keyboard shortcut: [Ctrl] + [V])

- **Delete**

Delete the selected item.

- **Register to job template**

Register the selected job as a template. After registering a template, you can select it as shown in the following figure.

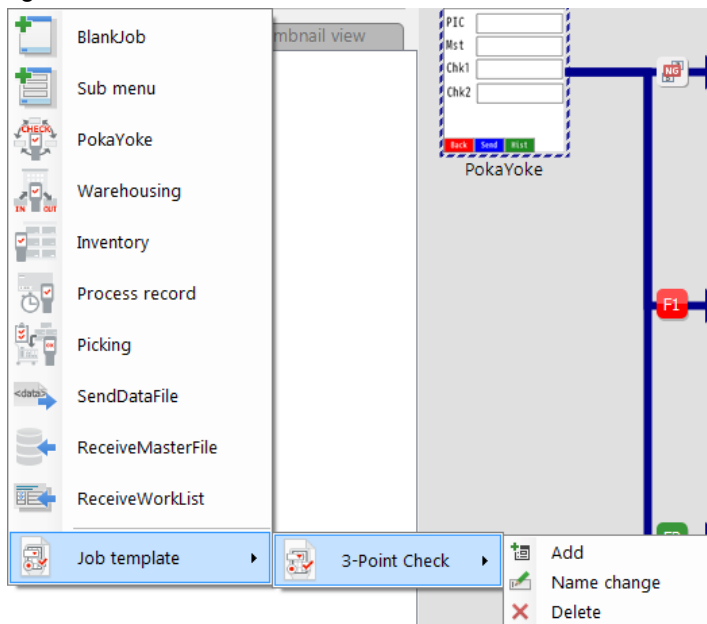


4.4. Screen Layout/Screen Transition

You can use this to edit the application screens and to check the screen transitions.

4.4.1. Screen Layout

Edit the application screen layout. You can freely change the locations of the GUI parts.

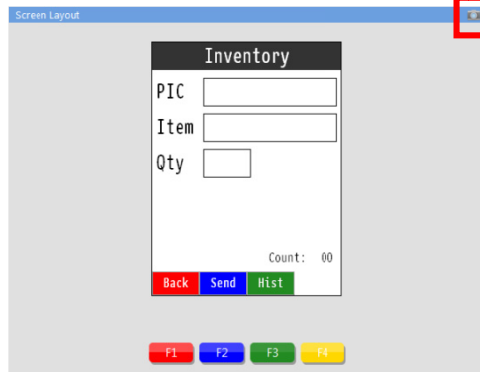


Screenshot button

Copy the screen as an image.

You can use this function when you are creating manuals for operators.


GUI part addition

You can add parts by dragging them from the Library.

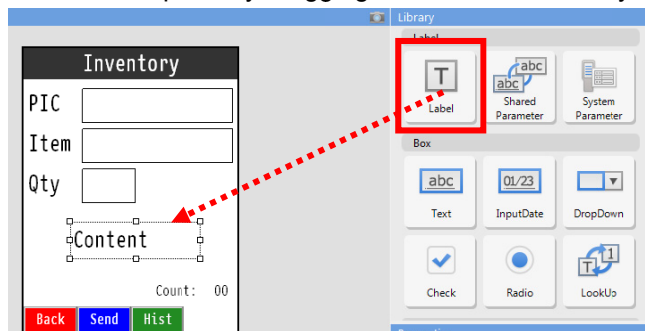

Part editing


Double-click a part to display the editing dialog box.

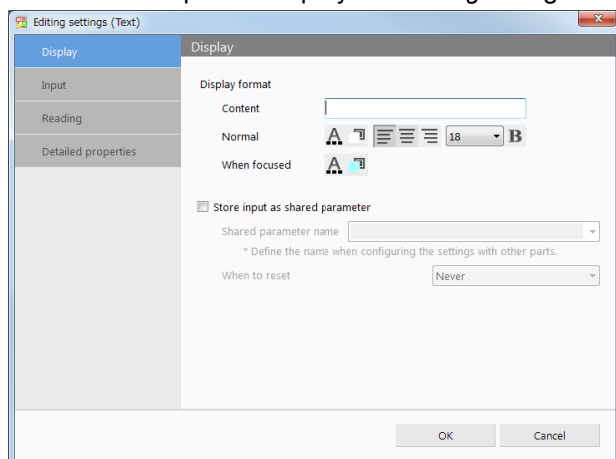

For details on GUI parts, see ["5. Device Application Parts, Controls and Windows."](#)

Right-clicking a part in the screen layout

Right-click an item in the screen layout to display the following menu.

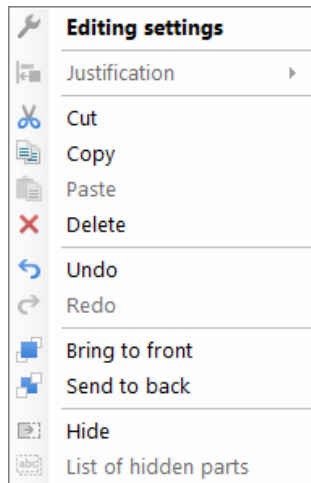

- **Editing settings**

Display the same dialog box as when you double-click a part.

- **Justification**

When you have selected multiple parts, you can align their positions.

[Options] Align left | Center | Align right | Align top | Align middle | Align bottom

- **Cut**

Cut the selected part. (Keyboard shortcut:[Ctrl] + [X])

- **Copy**

Copy the selected part. (Keyboard shortcut:[Ctrl] + [C])

- **Paste**

Paste the cut or copied part. (Keyboard shortcut:[Ctrl] + [V])

- **Delete**

Delete the selected part.

- **Undo**

Return to the state before the previous operation. (Keyboard shortcut:[Ctrl] + [Z])

- **Redo**

Return to the state before the "Undo" operation. (Keyboard shortcut:[Ctrl] + [Y])

- **Bring to front**

Move the part to the front.

- **Send to back**

Move the part to the back.

- **Hide**


Hide the part. Use this when you want to hide labels or shared parameter values and only set these items as references for calculations or data comparisons.

Right-click in the screen layout to display the following button.



Click this button to display a list of the hidden parts, as shown below.

You can select "Editing settings," "Redisplay," or "Delete" for each part listed.

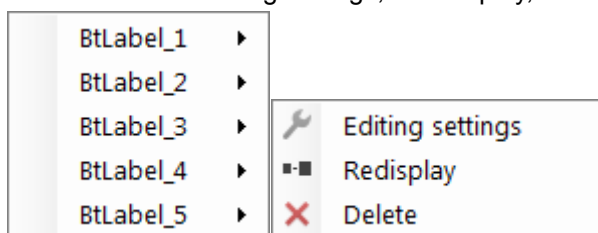


- **List of hidden parts**

Select this to display the same list of hidden parts as explained above.

4.4.2. Screen Transition

You can check the screen transitions and conditional branching. Double-click a screen to switch to Screen Layout for editing.

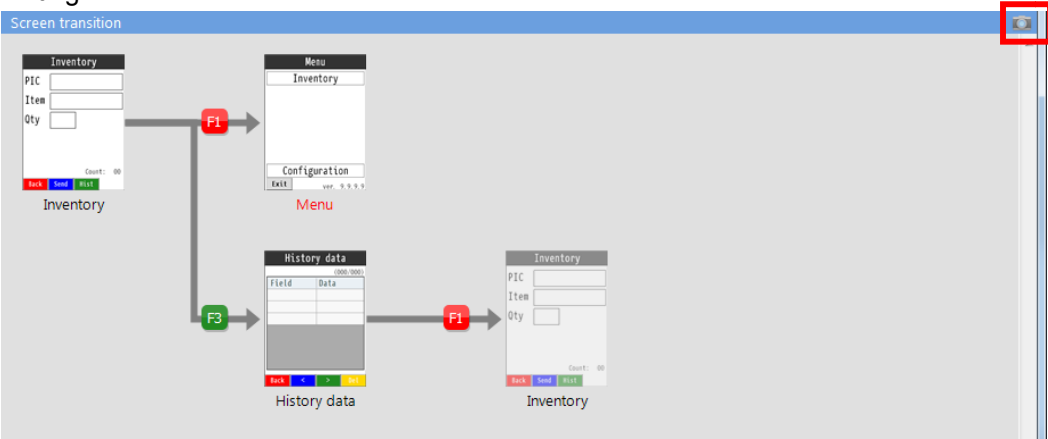

Screenshot button
Copy the screen transitions list as an image. You can use this function when you are creating manuals for operators.

Double-click an arrow or icon to display the control's dialog box.



: Function key dialog box




: DataMatch control dialog box



: Data output control dialog box


4.5. Control List (Device Application)

The parts that set the operation and management of the application are known as controls. Double-click a control and use the dialog box that appears to configure the settings. The "InputOrder," "OutputData," "DataFormat," and function key controls must be set for each screen. You can add other controls from the library as desired.

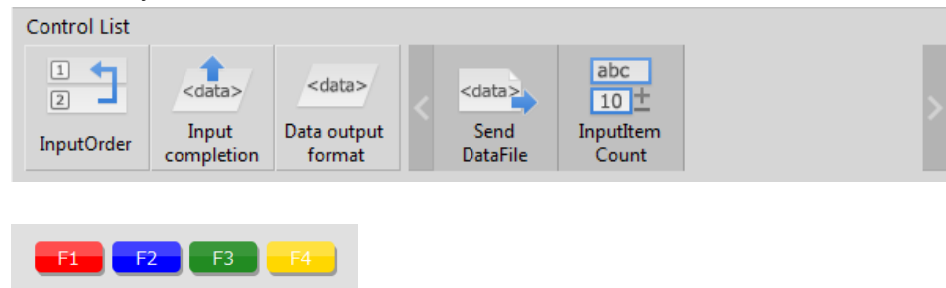

4.5.1. Input Order

Set the input order of items on the screen. Double-click the "InputOrder" part to display the following dialog box.

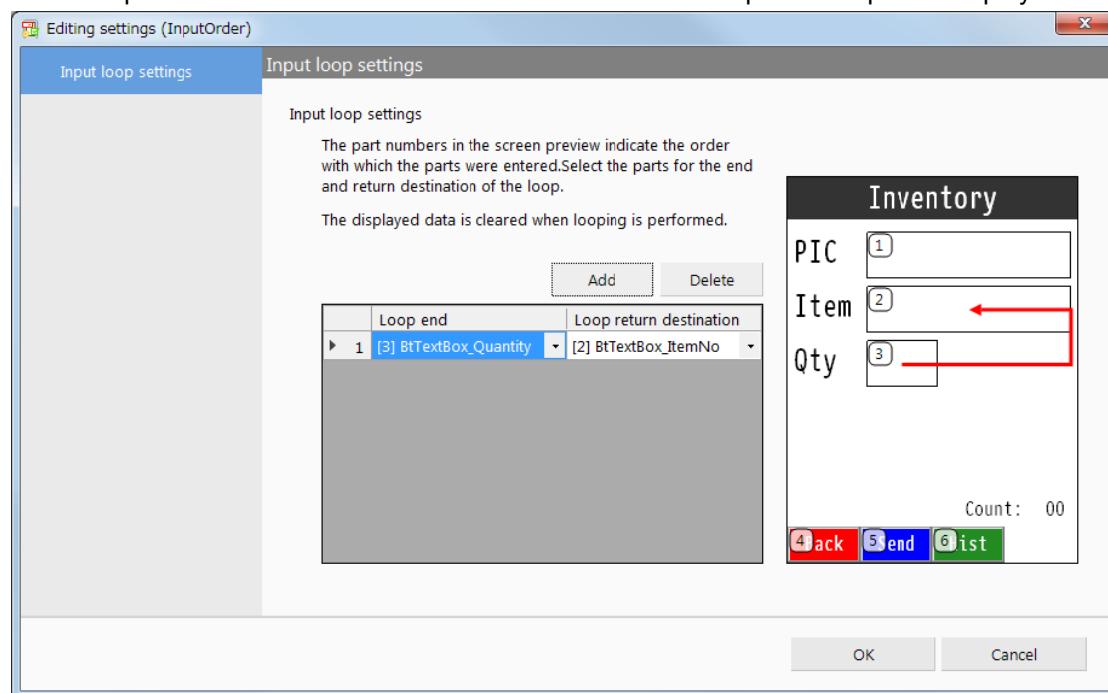

Input loop settings

Select the parts for the end and return destination of the input loop. The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen. If you do not set a loop, the input order of the parts will be the order of the numbers shown in the preview.

4.5.2. Input Completion

Set the data output, the timing of the screen transition, and post-input operations such as screen transitions.

■ Input completion settings

Editing settings (InputCompletion)

Input completion settings

Post-input operations

Detailed properties

Input completion method

- ☒ Lowest element entered
- ☐ Specified element entered
(not selected)
- ☐ None

Processing upon input completion

- ☒ Display the count on the screen

Inventory

PIC 1

Item 2

Qty 3

Count: 00

Back Send Hist

OK Cancel

The timing of the input completion of this screen

Set which part will be used to complete the input. Once this element has an input, the form will be completed and the post-input operations will be executed.

- **Lowest element entered**

Post-input operations are triggered when the element lowest on the screen receives input.

- **Specified element entered**

Post-input operations are triggered when the specified element receives input.

- **None**

No element input will trigger post-input operations. Select this option in situations when you are only using buttons to output data or perform screen transitions.


Note

* Input parts are Text boxes, date input boxes, drop-down list boxes, check boxes, option (radio) boxes and lookup boxes

Processing upon input completion

Check this box to place a label that displays the number of records whose data has been output.

■ Post-input operations

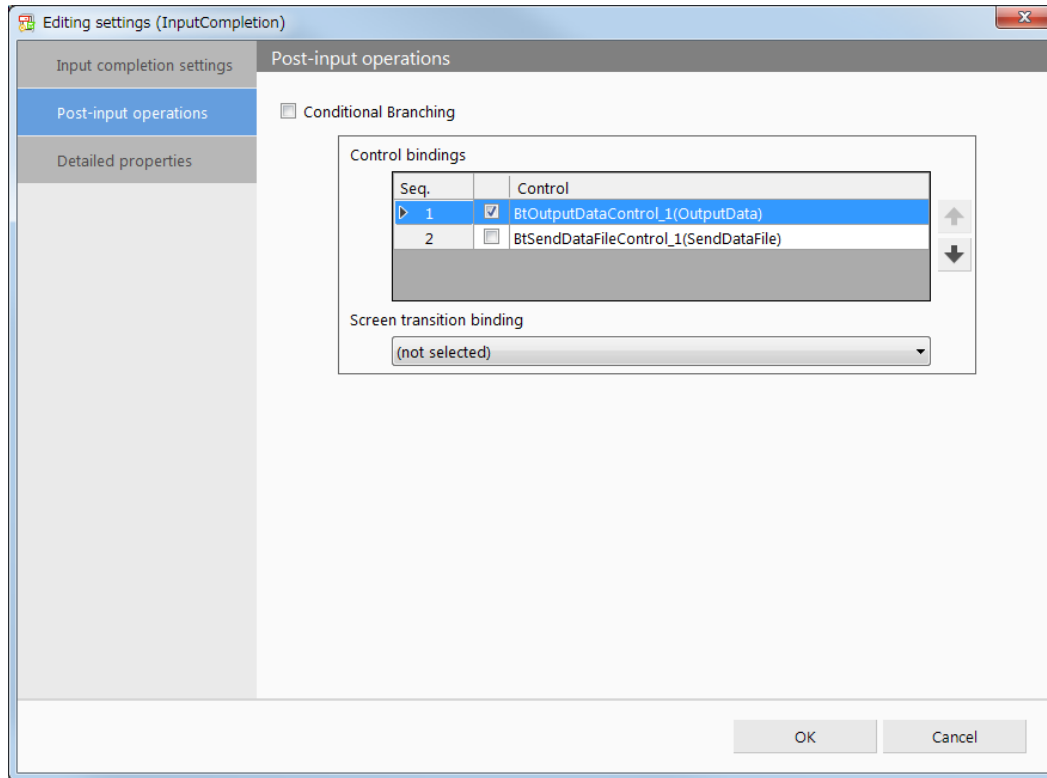

Control bindings


Controls that can currently be used are displayed here. Select the check box corresponding to the control to execute when input is complete. You can execute multiple controls at the same time and use the arrow buttons to change the execution order.

Screen transition binding


If you want to transition to a screen after completion of input, select the screen, you can transition to this screen at the same time as you execute the controls. In this situation, the controls will be executed first.

Set the conditional branching

If you check this box, the following screen will be displayed. In addition to setting screen transition bindings, you can add, delete, and edit the conditional statements for executing these operations. Click "Edit" to display a dialog box for setting conditional branching.

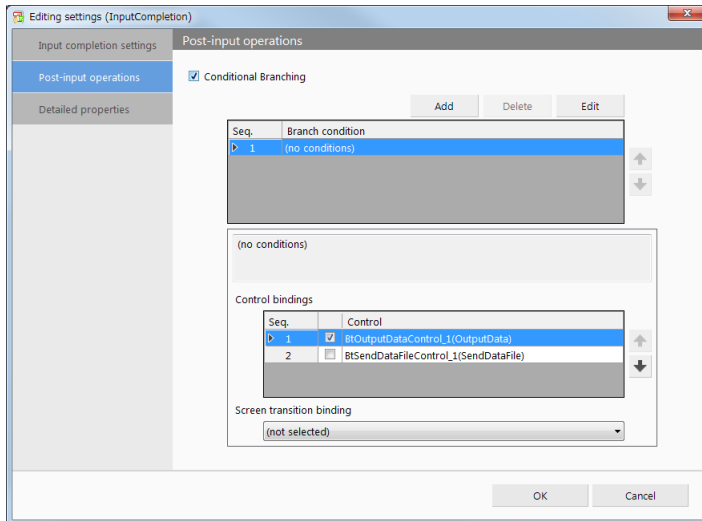

Click "Add" to set a condition.

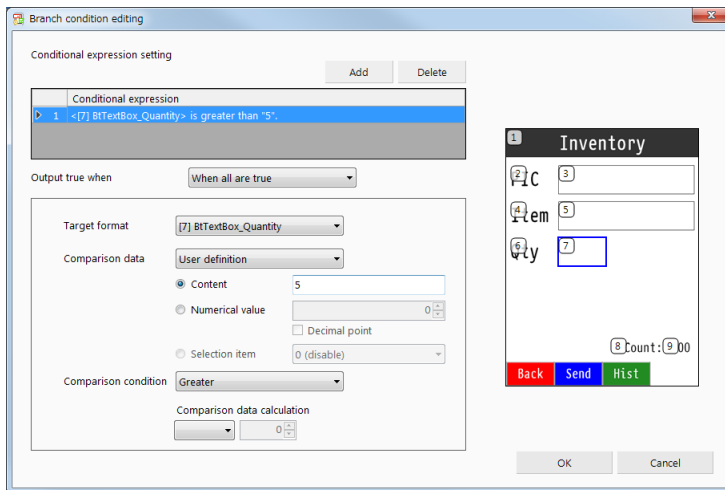

Conditional expression setting

The list of conditional expressions is displayed here. You can combine conditions by adding them together. When combining conditions, select "When all are true" (an "AND" condition) or "When either is true" (an "OR" condition).

Target format

Select the part that will be the target for the comparison of the conditional expression. You can also set the current date of the device or the current time of the device as the comparison target.

Note

* The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen.

Comparison data

Select the part that will be the comparison data for the conditional expression. If you select "User definition," select "Content," "Numerical value," or "Selection item," and then set the data.

Note

* "Selection item" is enabled when you select an option (radio) box or check box for the comparison target.

* The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen.

Comparison condition

Set the comparison condition. If you have selected a numerical value for the comparison data, the "Comparison data calculation" setting will be enabled.

- **When comparing character strings**

[Options] Match (character string) | No match (character string) | Contains

- **When comparing numerical values**

[Options] Equal (numerical value) | Not equal (numerical value) | Grater | Less | Or greater | Or less

- **When "Selection item" is selected for the comparison data**

[Options] Equal (numerical value) | Not equal (numerical value)

Comparison data calculation


After you set "Target format" to a calculation, the comparison is performed against the comparison data. You can set the operator and the calculation value.

[Options] + | - | × | ÷


[Example]

Consider the case of applying conditional branching to the quantity entered in the "Inventory" template so that the form is completed using "OutputData" when the quantity is 1, the CSV data is sent using "SendDataFile" when the quantity is 2, and the application returns to the "Menu" screen when the quantity is 3.

1. Add three branching conditions.

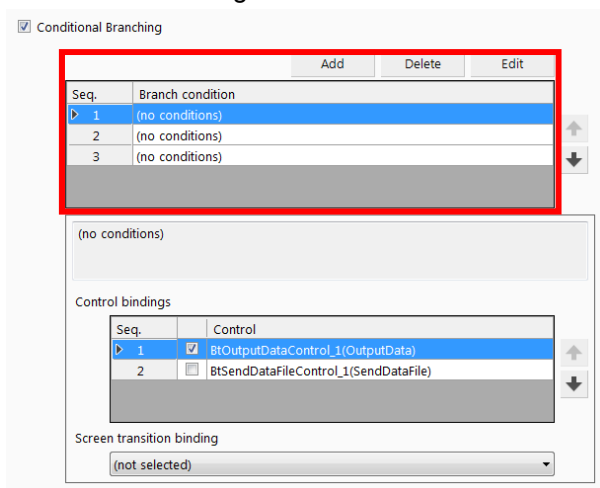

2. Set the branching conditions as shown below. In the following example, the quantity is "1," so set "Numerical value" in the comparison data to "2" and "3" for the other branch conditions where the quantity is "2" and "3," respectively.

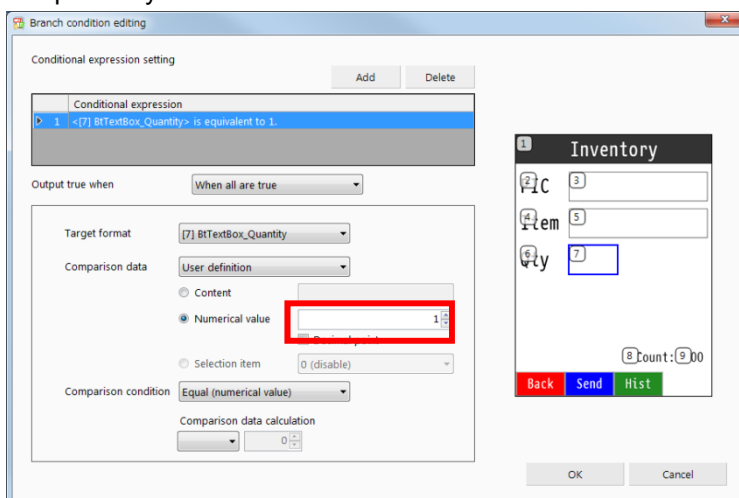

3. Set the interlock operations for each branching condition as shown below.

The image displays three screenshots of the 'Conditional Branching' configuration interface, showing different branching conditions and their associated control bindings. Each screenshot has a red box highlighting the selected branching condition and its corresponding control bindings.

Screenshot 1 (Top Left): The 'Conditional Branching' section shows three conditions. The first condition, '<BTTextBox_Quantity> is equivalent to 1.', is selected. The 'Control bindings' table shows two entries: '1' for 'BTOutputDataControl_1(OutputData)' and '2' for 'BTSendDataFileControl_1(SendDataFile)'. The 'Screen transition binding' is set to '(not selected)'.

Seq.	Branch condition
1	<BTTextBox_Quantity> is equivalent to 1.
2	<BTTextBox_Quantity> is equivalent to 2.
3	<BTTextBox_Quantity> is equivalent to 3.

Seq.	Control
1	☒ BTOutputDataControl_1(OutputData)
2	☐ BTSendDataFileControl_1(SendDataFile)

Screen transition binding: (not selected)

Screenshot 2 (Top Right): The 'Conditional Branching' section shows three conditions. The second condition, '<BTTextBox_Quantity> is equivalent to 2.', is selected. The 'Control bindings' table shows two entries: '1' for 'BTOutputDataControl_1(OutputData)' and '2' for 'BTSendDataFileControl_1(SendDataFile)'. The 'Screen transition binding' is set to '(not selected)'.

Seq.	Branch condition
1	<BTTextBox_Quantity> is equivalent to 1.
2	<BTTextBox_Quantity> is equivalent to 2.
3	<BTTextBox_Quantity> is equivalent to 3.

Seq.	Control
1	☐ BTOutputDataControl_1(OutputData)
2	☒ BTSendDataFileControl_1(SendDataFile)

Screen transition binding: (not selected)


Screenshot 3 (Bottom Left): The 'Conditional Branching' section shows three conditions. The third condition, '<BTTextBox_Quantity> is equivalent to 3.', is selected. The 'Control bindings' table shows two entries: '1' for 'BTOutputDataControl_1(OutputData)' and '2' for 'BTSendDataFileControl_1(SendDataFile)'. The 'Screen transition binding' is set to 'Menu'.

Seq.	Branch condition
1	<BTTextBox_Quantity> is equivalent to 1.
2	<BTTextBox_Quantity> is equivalent to 2.
3	<BTTextBox_Quantity> is equivalent to 3.

Seq.	Control
1	☐ BTOutputDataControl_1(OutputData)
2	☐ BTSendDataFileControl_1(SendDataFile)

Screen transition binding: Menu

■ Detailed properties

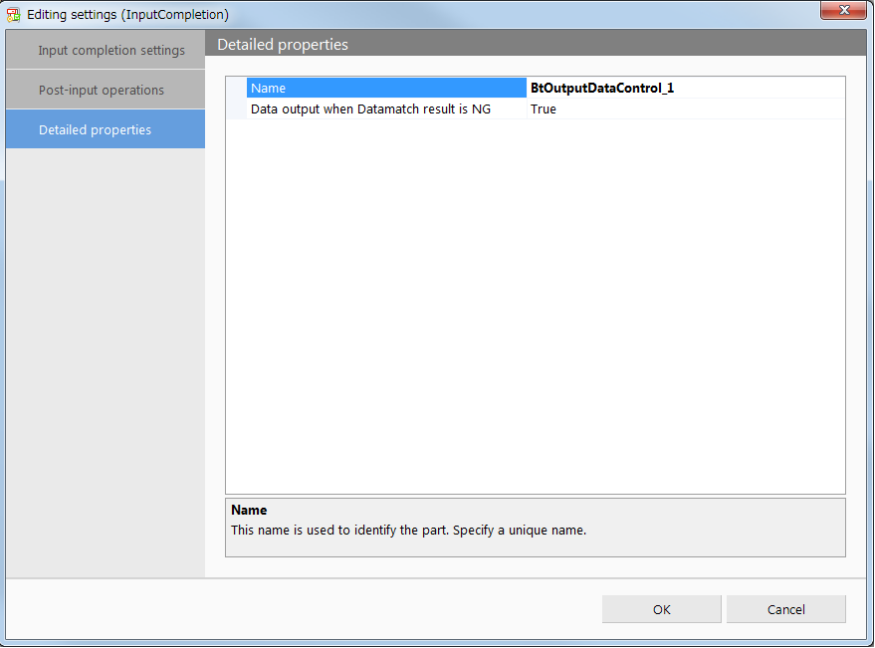


Name	Set the name of the control.
Data output when DataMatch result is NG	When using a DataMatch control, select whether to enable data output when the DataMatch is NG (when it fails). [Options] True False

4.5.3. Data Format

Set the format when outputting data obtained using the application.

■ Format settings

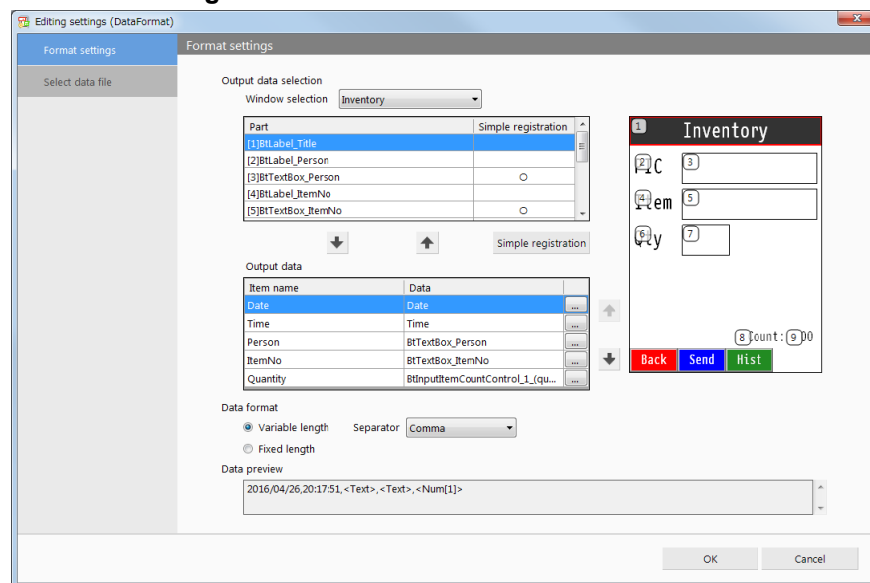

Output data selection

Select the output data for an item such as the screen or system parameter.

• Window selection

Use "Window selection" to change the listed parts that are displayed.

[Options] Screens in the job | Shared parameters | System parameters | Fixed character strings

* The value inside the brackets ([]) of the selected item corresponds to the numbers on the parts in the preview on the right side of the screen.

The arrow buttons below have the following functions.

↓button ... Add the part selected in the group of window parts to the output data.

↑button ... Delete the item from the output data.

• Simple registration

You can click "Simple registration" to add to the output data all the parts for which a circle is displayed in the "Simple registration" column.

Input parts that are frequently added to output data are targets for simple registration.

Note

* Input parts are Text boxes, date input boxes, drop-down list boxes, check boxes, option (radio) boxes and lookup boxes

- **Output data**


A list of registered output data is displayed here. You can change the item names as desired. These names are shown in the history data display screen. You can use the arrow buttons to the right of the list to change the output data order.

Note

* Item names must be unique.


Click  to configure detailed format settings. The dialog box that is displayed will vary depending on the data type.

- **Date type**

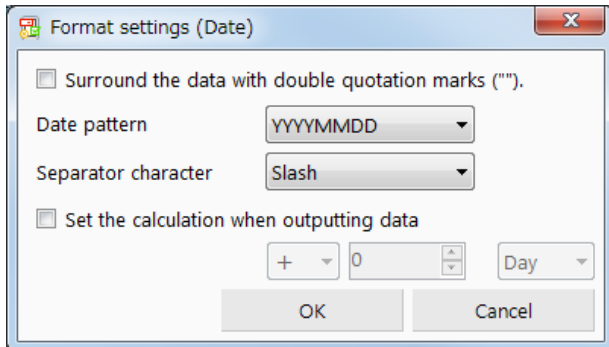


The 'Format settings (Date)' dialog box contains the following elements: a checkbox for 'Surround the data with double quotation marks (")' which is unchecked; a 'Date pattern' dropdown menu set to 'YYYYMMDD'; a 'Separator character' dropdown menu set to 'Slash'; a checkbox for 'Set the calculation when outputting data' which is unchecked; a calculation field with a '+' button, a dropdown, and a numeric input set to '0'; a unit dropdown menu set to 'Day'; and 'OK' and 'Cancel' buttons at the bottom.

- **Time type**

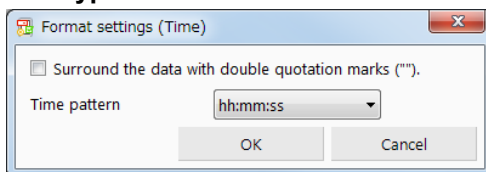

The 'Format settings (Time)' dialog box contains the following elements: a checkbox for 'Surround the data with double quotation marks (")' which is unchecked; a 'Time pattern' dropdown menu set to 'hh:mm:ss'; and 'OK' and 'Cancel' buttons at the bottom.

- **Other numeric/character data types**

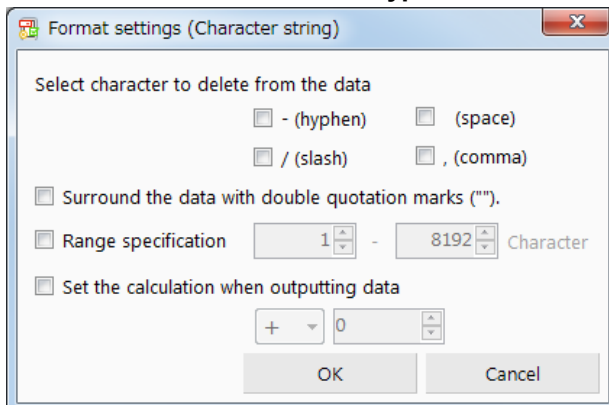

The 'Format settings (Character string)' dialog box contains the following elements: a section 'Select character to delete from the data' with checkboxes for hyphen, space, slash, and comma; a checkbox for 'Surround the data with double quotation marks (")' which is unchecked; a 'Range specification' section with a dropdown, a '-' sign, and a numeric input set to '8192' followed by the text 'Character'; a checkbox for 'Set the calculation when outputting data' which is unchecked; a calculation field with a '+' button, a dropdown, and a numeric input set to '0'; and 'OK' and 'Cancel' buttons at the bottom.

Data format

Select whether the output data length is variable or fixed. For variable length, select "Comma," "Tab," or "Space" for the separator.

Data preview

A preview of the output data is displayed here. You can check whether there are any errors.

■ Select data file

Editing settings (DataOutputFormat)

Format settings

Data output destination

Data output destination selection

- ☒ Output data to device data file
- ☐ Send data to PC application

☒ Resend the data that caused the communication error the next time data is sent

Data filename

InventoryLog3.csv

☐ Add date at start of filename (ex: YYYYMMDD_logdata.csv)

☐ Set change-of-day time

00 : 00 The time from midnight to [set time] is the previous day.

OK Cancel

Set the target saving the data

Data output destination

• **Output data to device data file**

The data is stored on the BT device.

• **Send data to PC application**

The data is sent to a PC application in real time.

Resend the data that caused the communication error the next time data is sent

You can Check this box when you have selected "Send data to PC application" for "Data output destination selection." If a communication error occurs during the sending of data, you can send this data the next time that data is sent.

Data filename/Data table

You can set the name of the data file or data table that is output.

• **Add date at start of filename**

Check this box to add to the start of the file name the date when the data file was sent.

• **Set change-of-day time**


When you are adding the date at the start of the file name, set the time at which the date changes.

4.5.4. Function Keys

Set the operation when a function key is pressed.



■ Post-input operations

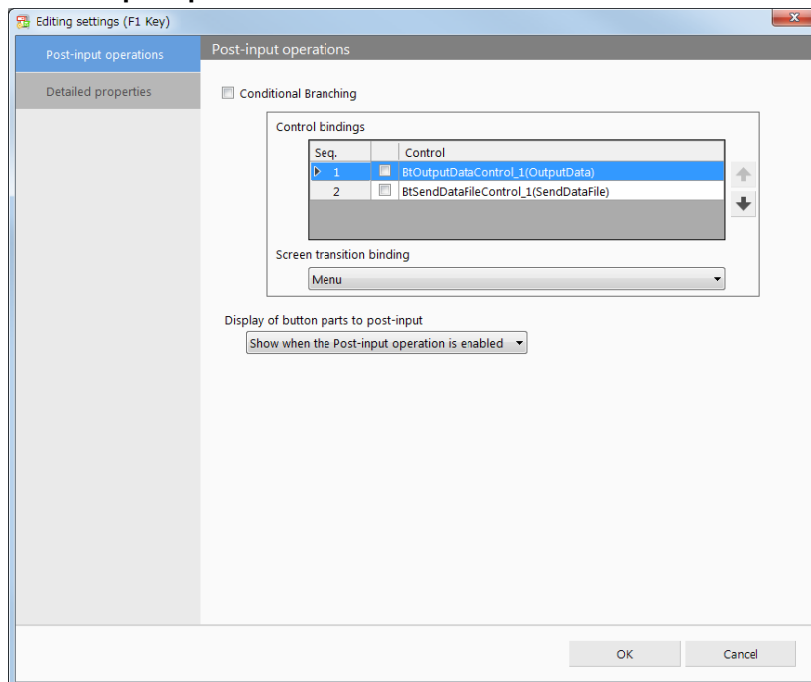

Control bindings


Controls that can currently be used are displayed here. Select the check box corresponding to the control to execute when input is complete. You can execute multiple controls at the same time and use the arrow buttons to change the execution order.

Screen transition binding

If you want to transition to a screen after completion of input, select the screen. You can transition to this screen at the same time as you execute the controls. In this situation, the controls will be executed first.


Display of button parts to post-input

Place buttons on the screen that perform the same operations as the function keys.

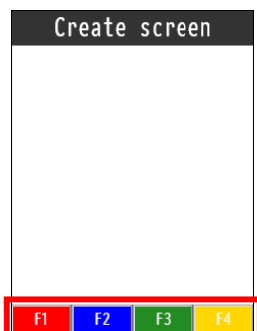


Set the conditional branching

If you check this box, the following screen will be displayed. In addition to setting the interlock operations, you can add, delete, and edit the conditional statements for executing these operations. Click "Edit" to display a dialog box for setting conditional branching.

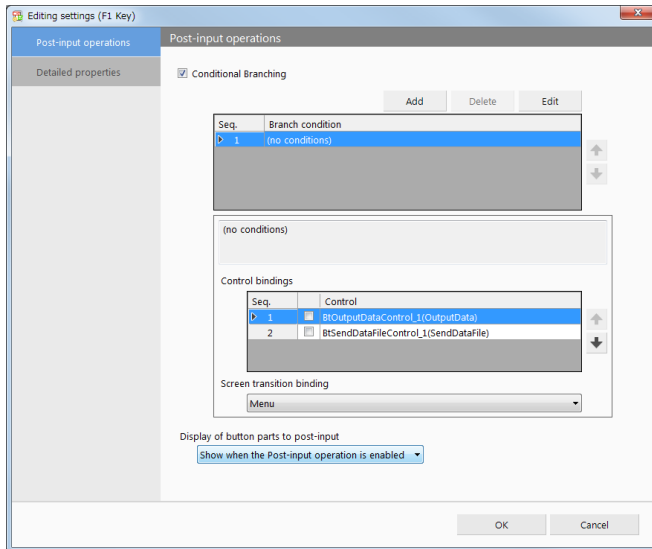

Click "Add" to set a condition.

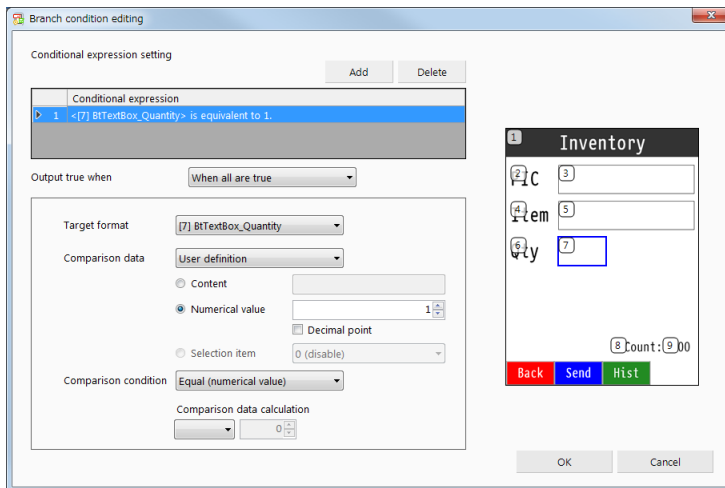

Conditional expression setting

The list of conditional expressions is displayed here. You can combine conditions by adding them together. When combining conditions, select "When all are true" (an "AND" condition) or "When either is true" (an "OR" condition).

Target format

Select the part that will be the target for the comparison of the conditional expression. You can also set the current date of the device or the current time of the device as the comparison target.

Note

* The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen.

Comparison data

Select the part that will be the comparison data for the conditional expression. If you select "User definition," select "Content," "Numerical value," or "Selection item," and then set the data.

Note

* "Selection item" is enabled when you select an option (radio) box or check box for the comparison target.

* The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen.

Comparison condition

Set the comparison condition. If you have selected a numerical value for the comparison data, the "Comparison data calculation" setting will be enabled.

- **When comparing character strings**

[Options] Match (character string) | No match (character string) | Contains

- **When comparing numerical values**

[Options] Equal (numerical value) | Not equal (numerical value) | Greater | Less | Or Greater | Or Less

- **When "Selection item" is selected for the comparison data**

[Options] Equal (numerical value) | Not equal (numerical value)

Comparison data calculation


After you set "Target format" to a calculation, the comparison is performed against the comparison data. You can set the operator and the calculation value.

[Options] + | - | × | ÷


[Example]

Consider the case of applying conditional branching to the quantity entered in the "Inventory" template so that the form is completed using "OutputData" when the quantity is 1, the CSV data is sent using "SendDataFile" when the quantity is 2, and the application returns to the "Menu" screen when the quantity is 3.

1. Add three branching conditions.

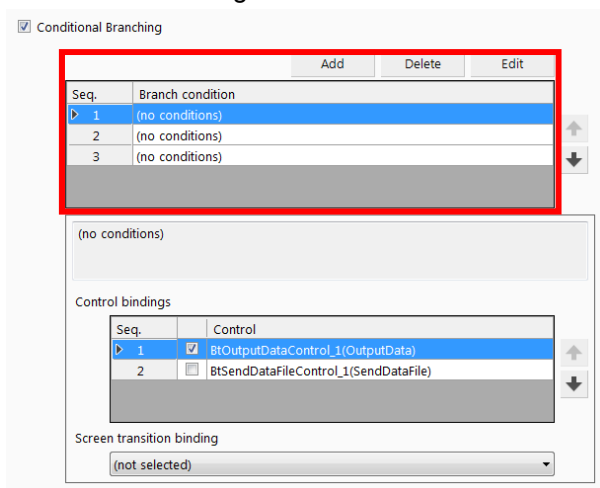

2. Set the branching conditions as shown below. In the following example, the quantity is "1," so set "Numerical value" in the comparison data to "2" and "3" for the other branch conditions where the quantity is "2" and "3," respectively.

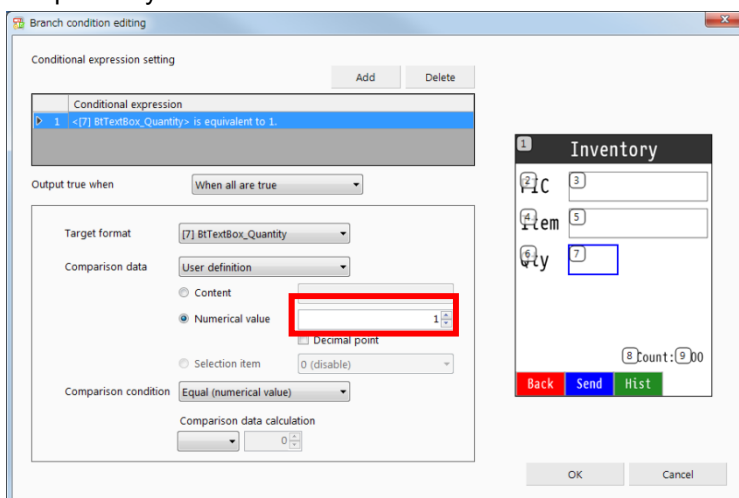

3. Set the interlock operations for each branching condition as shown below.

Conditional Branching

AddDeleteEdit

Seq.	Branch condition
1	<BTTextBox_Quantity> is equivalent to 1.
2	<BTTextBox_Quantity> is equivalent to 2.
3	<BTTextBox_Quantity> is equivalent to 3.

<BTTextBox_Quantity> is equivalent to 1.

Control bindings

Seq.	Control
1	☒ BtOutputDataControl_1(OutputData)
2	☐ BtSendDataFileControl_1(SendDataFile)

Screen transition binding

(not selected)

Conditional Branching

AddDeleteEdit

Seq.	Branch condition
1	<BTTextBox_Quantity> is equivalent to 1.
2	<BTTextBox_Quantity> is equivalent to 2.
3	<BTTextBox_Quantity> is equivalent to 3.

<BTTextBox_Quantity> is equivalent to 2.

Control bindings

Seq.	Control
1	☐ BtOutputDataControl_1(OutputData)
2	☒ BtSendDataFileControl_1(SendDataFile)

Screen transition binding

(not selected)

Conditional Branching

AddDeleteEdit

Seq.	Branch condition
1	<BTTextBox_Quantity> is equivalent to 1.
2	<BTTextBox_Quantity> is equivalent to 2.
3	<BTTextBox_Quantity> is equivalent to 3.

<BTTextBox_Quantity> is equivalent to 3.

Control bindings

Seq.	Control
1	☐ BtOutputDataControl_1(OutputData)
2	☐ BtSendDataFileControl_1(SendDataFile)

Screen transition binding

Menu

Detailed properties

Editing settings (F1 Key)

Post-input operations

Detailed properties

Name

BtF1Key

Name

This name is used to identify the part. Specify a unique name.

OK

Cancel



Name	Set the name of the button.
------	-----------------------------

4.5.5. Adding Controls

You can freely add controls by dragging them from the Library to the screen or Control List.


Note

* For details on control parts, see "[5.5.Controls.](#)"

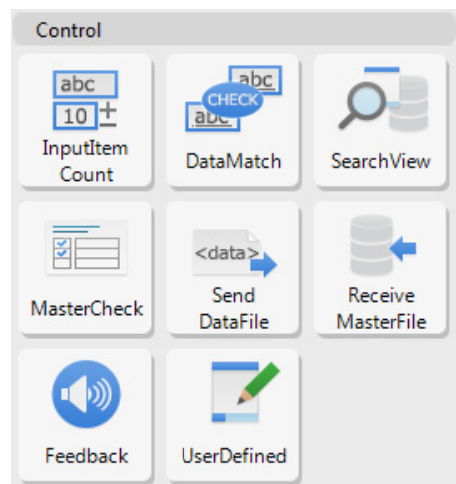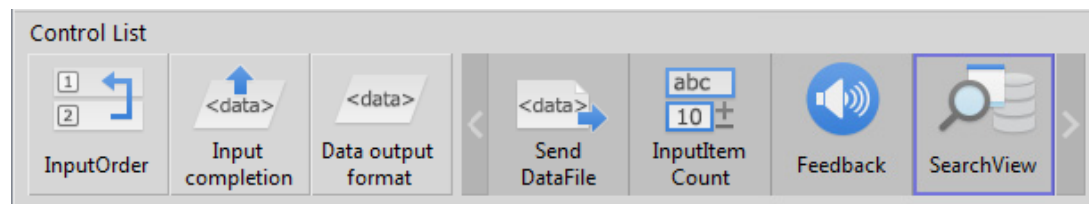

Right-clicking a control

Right-click a control to display the following menu.

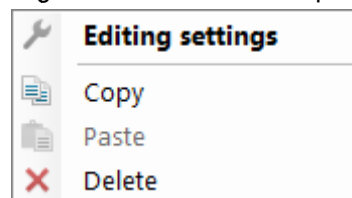

- **Editing settings**

You can edit the settings of the selected part. Double-click a part to perform the same operation.

- **Copy**

Copy the selected part. (Keyboard shortcut:[Ctrl] + [C])

- **Paste**


Paste the copied part. (Keyboard shortcut:[Ctrl] + [V])

- **Delete**

Delete the selected part.

4.6. Library (Device Application)

The Library contains the GUI parts that are used to develop applications. You can freely drag the parts to the Screen Layout and Controls List. For complete details on how to use parts, see "[5. Device Application Parts, Controls and Windows.](#)"

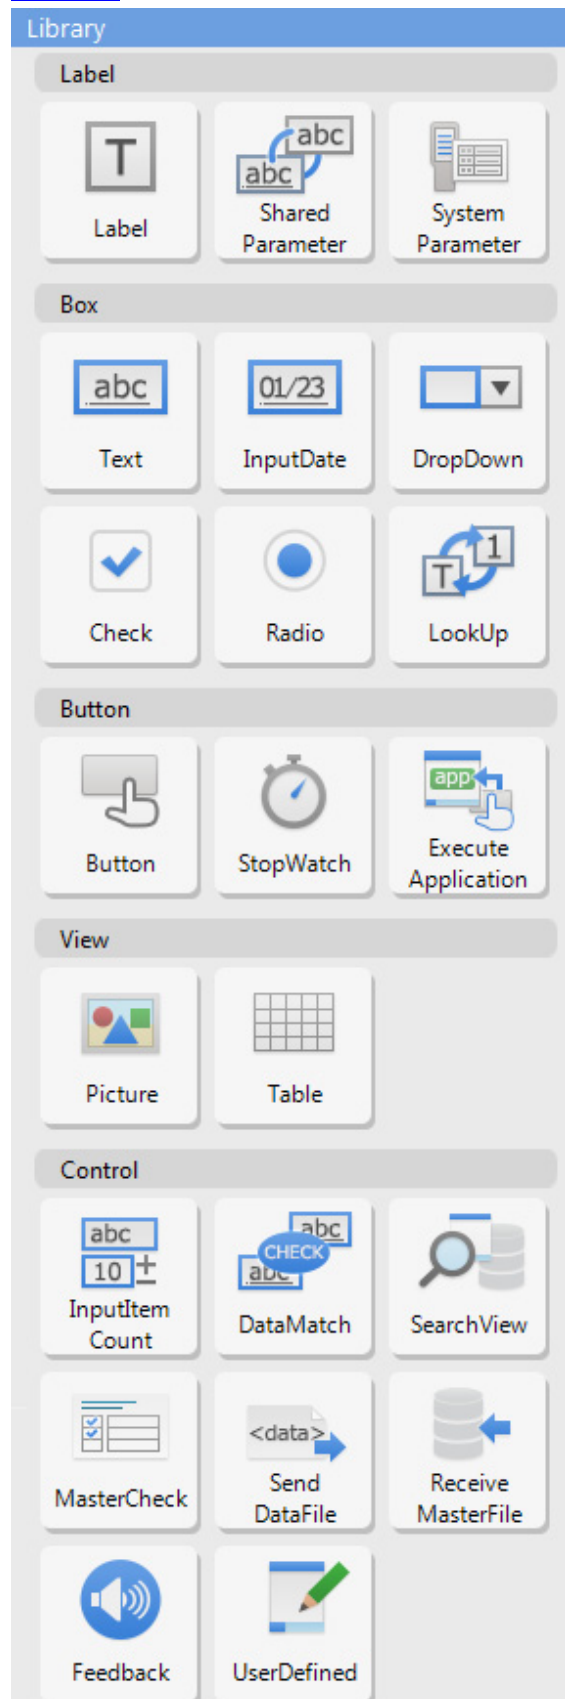

4.7. Properties (Device Application)

You can check and change the properties of the selected part at the bottom right of the screen.


Note

* For details on the setting properties, see ["5. Device Application Parts, Controls and Windows."](#)

Properties	
Name	BtLabel_Person
▷ Position	5, 45
▷ Size	60, 35
Frame Style	None
Content	PIC
Content Alignment	Align left
Font Size	18
Bold	False
Fore Color	 Black
Back Color	 White


4.8. Screen Outline (PC Application)

This section explains the screen outline that is displayed when editing PC applications.

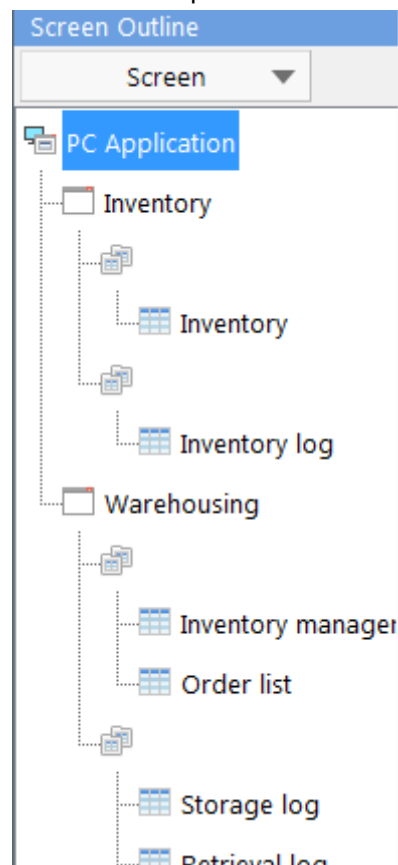

"Screen" button


Click "Screen" to display the following menu. Select the screen to add.



For details on windows and sheets, see "[4.9 Editing PC Applications \(PC Application\)](#)."

Right-clicking an item in the screen list

Right-click an item in the screen outline to display the following menu.

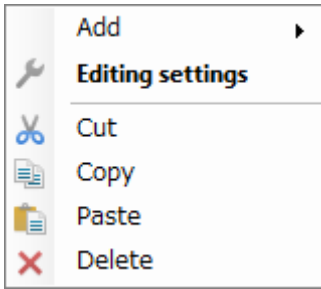

- **Add**

You can add a window or a sheet.

- **Editing settings**

You can edit the settings of the selected item. A dialog box is displayed.

- **Cut**

Cut the selected item. (Keyboard shortcut: [Ctrl] + [X])

- **Copy**

Copy the selected item. (Keyboard shortcut: [Ctrl] + [C])

- **Paste**


Paste the cut or copied item. (Keyboard shortcut: [Ctrl] + [V])

- **Delete**

Delete the selected item.


4.9. Editing PC Applications (PC Application)

Click "Edit PC application" ("[4.2.7 Editing PC Applications](#)") to display the following details in the screen editing area.

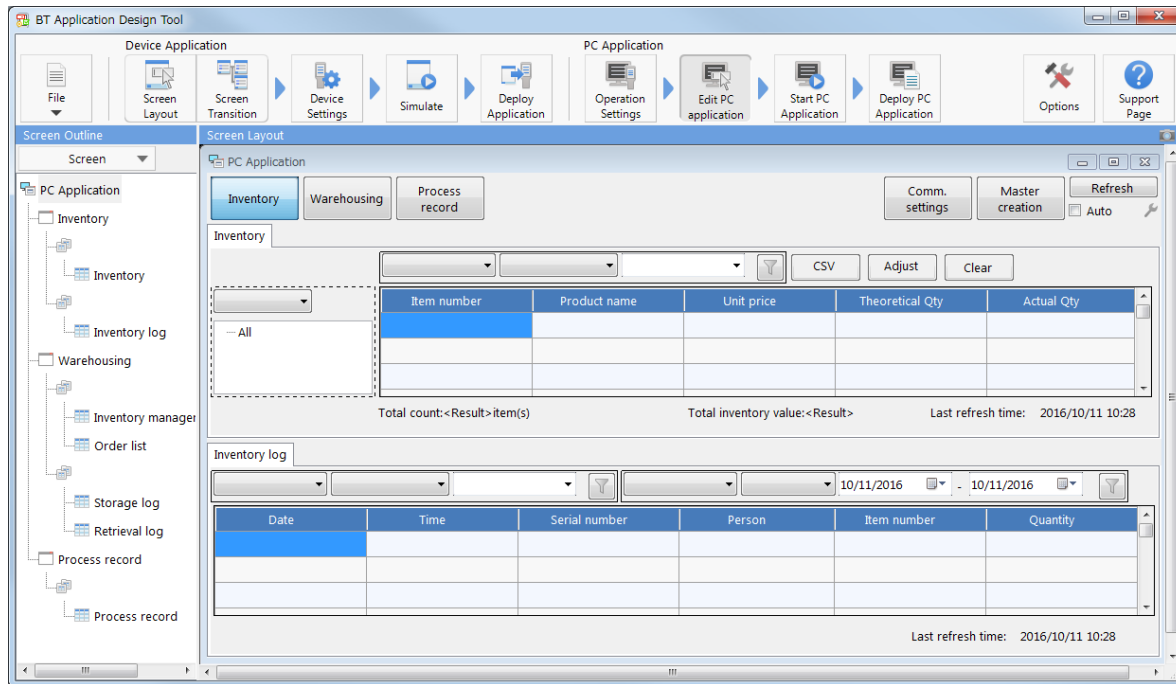


■ Windows

The screen for a unit of a single job is defined as a "window." This refers to the area shown below.

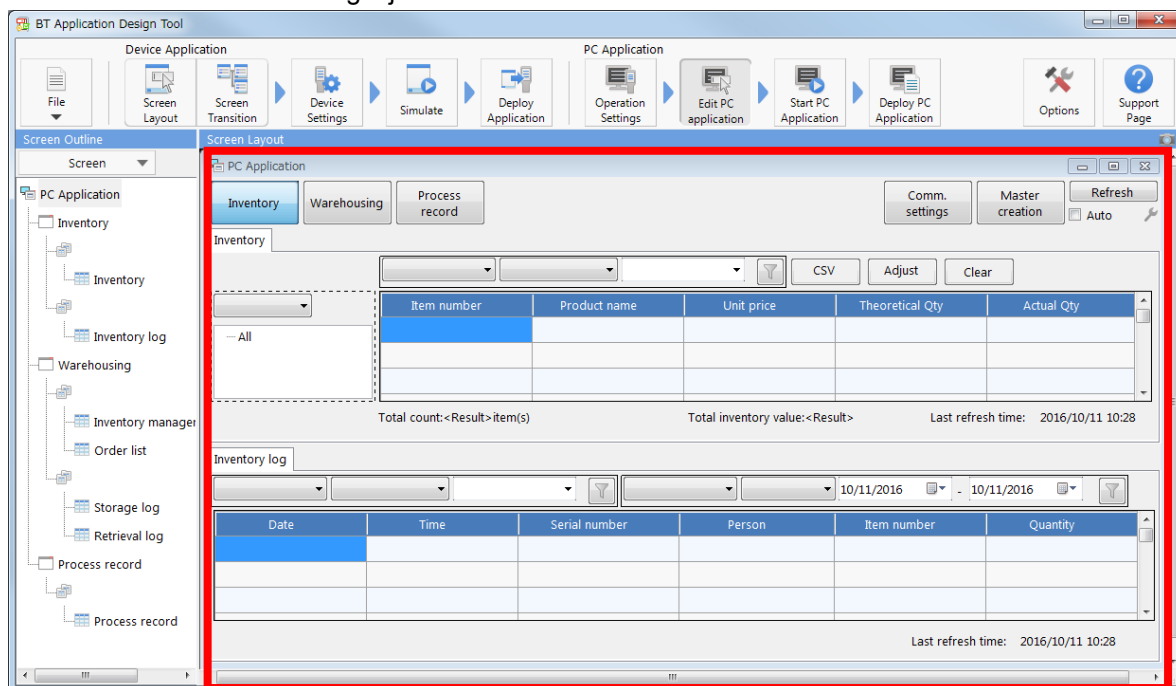


Operating the screen outline

Click the following areas under Screen Outline, to display the selected "window" in the screen editing area.

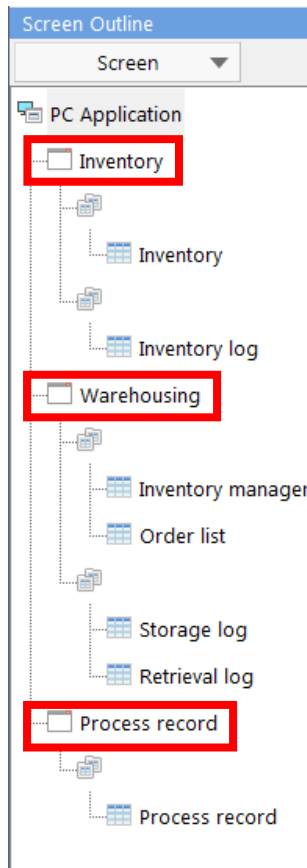


Double-click the items shown above to display the following dialog box.

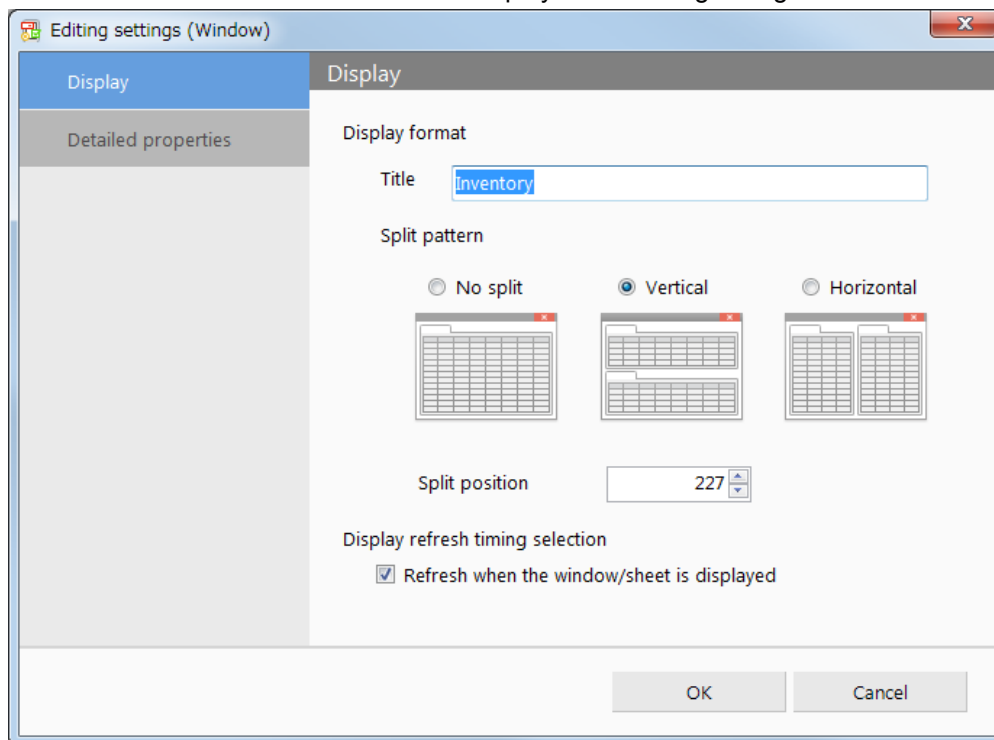

For details on windows, see "[6.5.1 Window](#)."

■ About sheets


The area highlighted below is referred to as a sheet. It displays database data in a table.

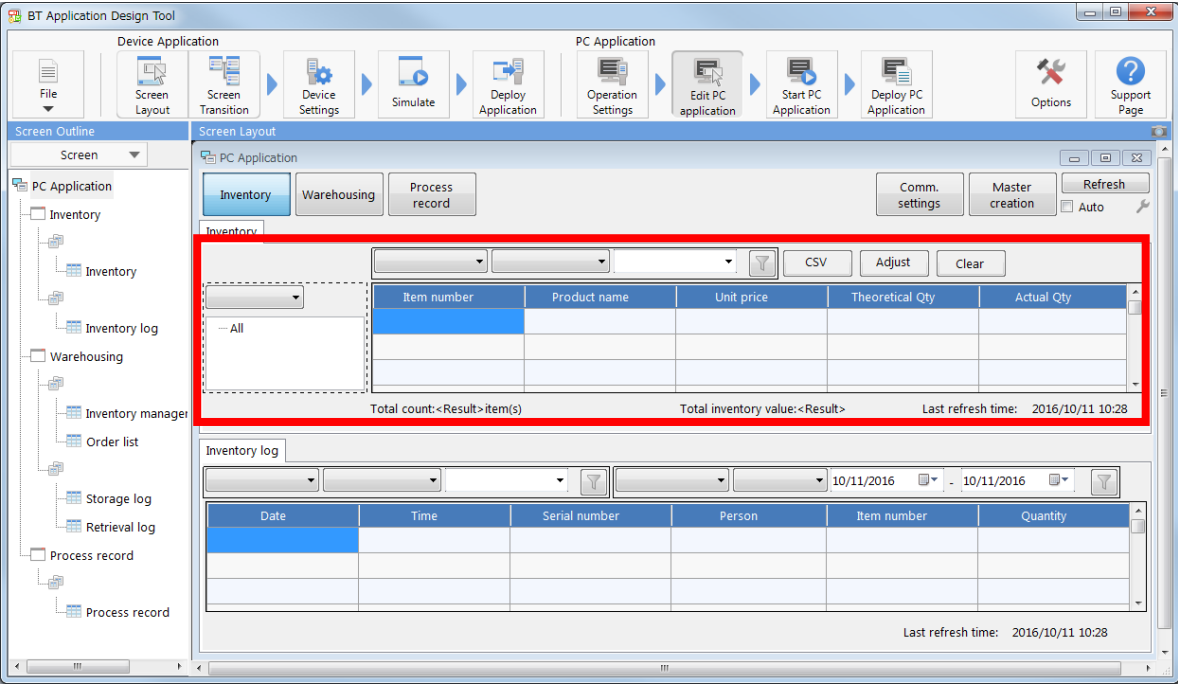

You can edit the sheet by double-clicking in the area shown above. The details that you can edit vary depending on what you have selected in ["4.2.6 Operation Settings."](#) The details are explained below.


In the case of “Upload data to database (default template)”

Details other than the areas that can be edited are displayed in gray, and the Properties screen is displayed. You can freely change the locations of the parts placed on the sheet. With this operation setting, you can edit part settings and delete parts, but you cannot add parts.

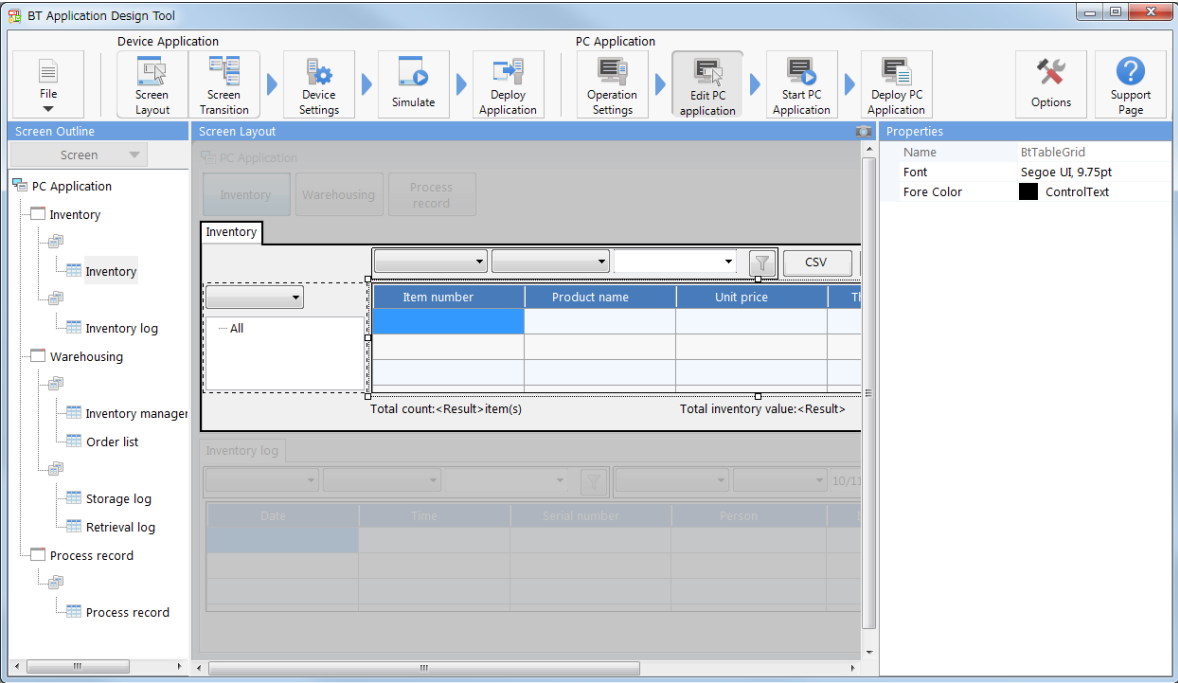


In the case of “Upload data to database (customized)”

Details other than the areas that can be edited are displayed in gray, and the Library and Properties screens are displayed. You can freely change the locations of the parts placed on the sheet. With this operation setting, you can edit part settings as well as add and delete parts.

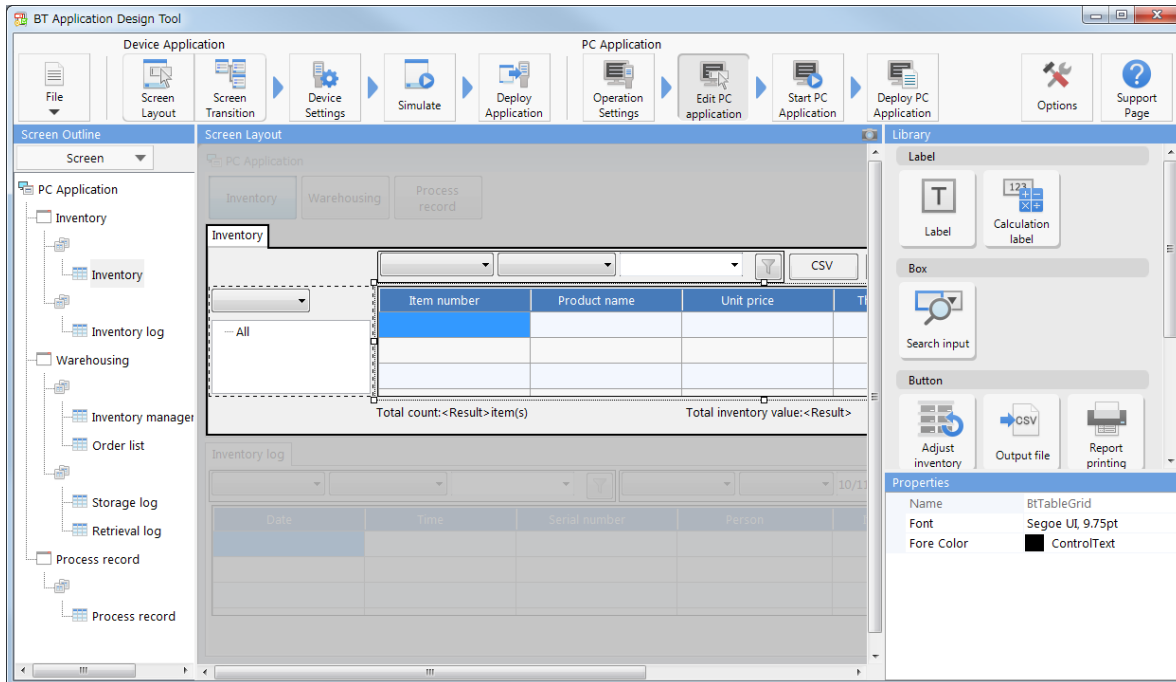


GUI part addition

You can add parts by dragging them from the library.

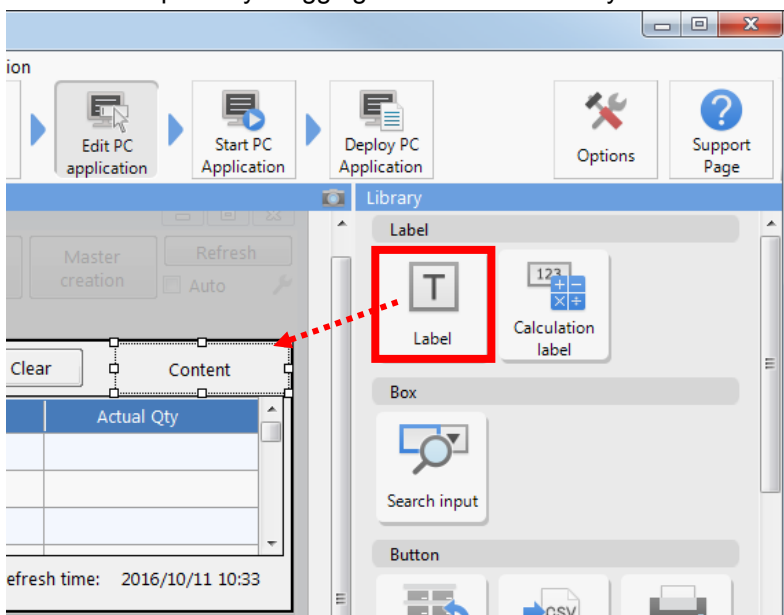

Part settings

Double-click a part to display the following dialog box for setting the part.

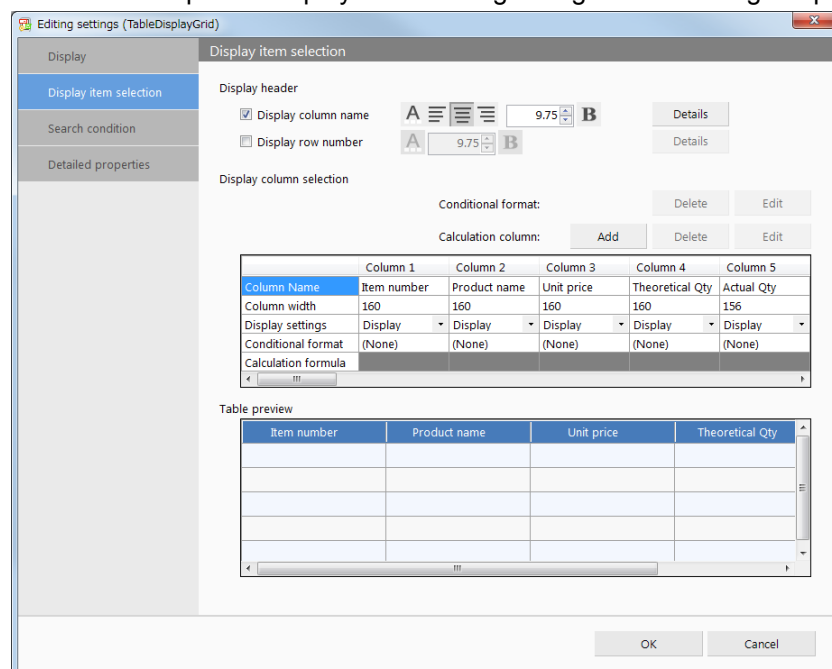

The dialog box is titled "Editing settings (TableDisplayGrid)". It has a sidebar on the left with four tabs: "Display", "Display item selection" (selected), "Search condition", and "Detailed properties". The main area is titled "Display item selection".

Display header:

- ☒ Display column name: A 9.75 B Details
- ☐ Display row number: A 9.75 B Details

Display column selection:

Conditional format: Delete Edit

Calculation column: Add Delete Edit

	Column 1	Column 2	Column 3	Column 4	Column 5
Column Name	Item number	Product name	Unit price	Theoretical Qty	Actual Qty
Column width	160	160	160	160	156
Display settings	Display	Display	Display	Display	Display
Conditional format	(None)	(None)	(None)	(None)	(None)
Calculation formula					

Table preview:


Item number	Product name	Unit price	Theoretical Qty

OK Cancel


For details on GUI parts, see "[6 PC Application Parts, Controls, and Windows](#)"

Operating the screen outline

Click the following areas under Screen Outline, to display the selected "sheet" in the screen editing area.

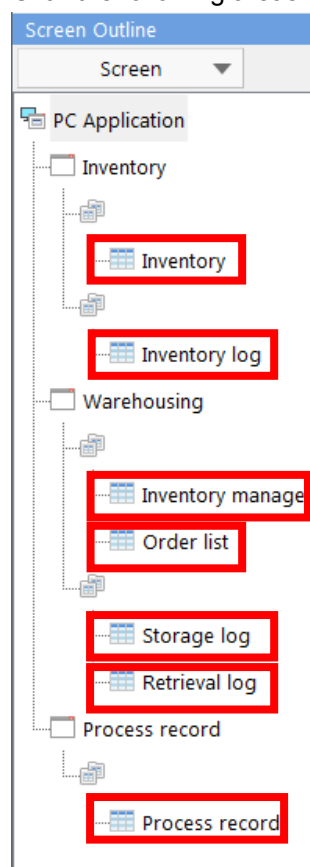


Double-click the items shown above to display the following dialog box.

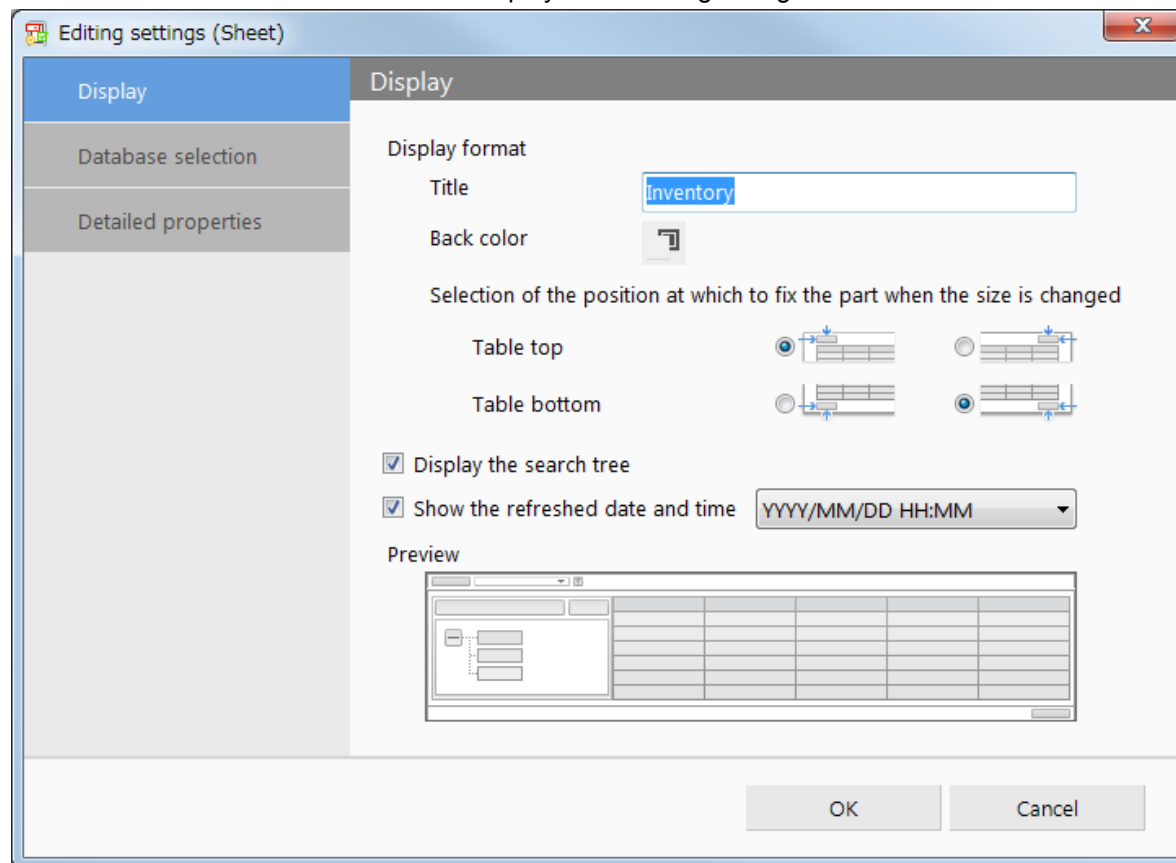

For details on sheets, see "[6.5.2 Sheet](#)."


■ About groups

The area in which multiple "sheets" are gathered together is defined as a "group." This is the area surrounded by the black dotted line below.

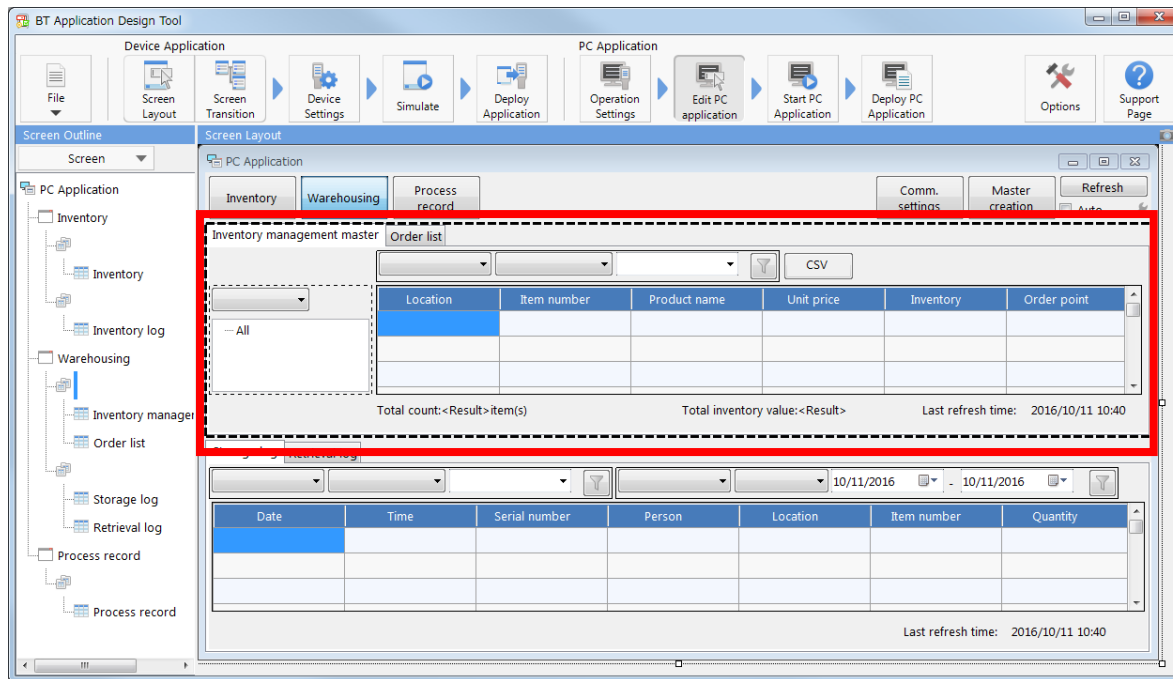


Operating the screen outline

Click the following areas under Screen Outline, to display the selected "group" in the screen editing area.

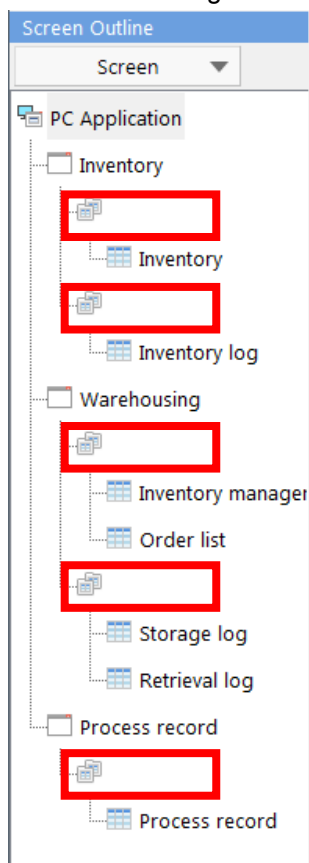


4.10. Library (PC Application)

Only when you have selected "Upload data to database (default template)" in "[4.2.6 Operation Settings](#)," this is displayed on the right side of the screen when you double-click a sheet as described in "[4.9 Editing PC Applications \(PC Application\)](#)." The library contains the GUI parts that are used to develop PC applications. You can freely drag the parts to the screen. For details on how to use parts, see "[6 PC Application Parts, Controls, and Windows](#)."

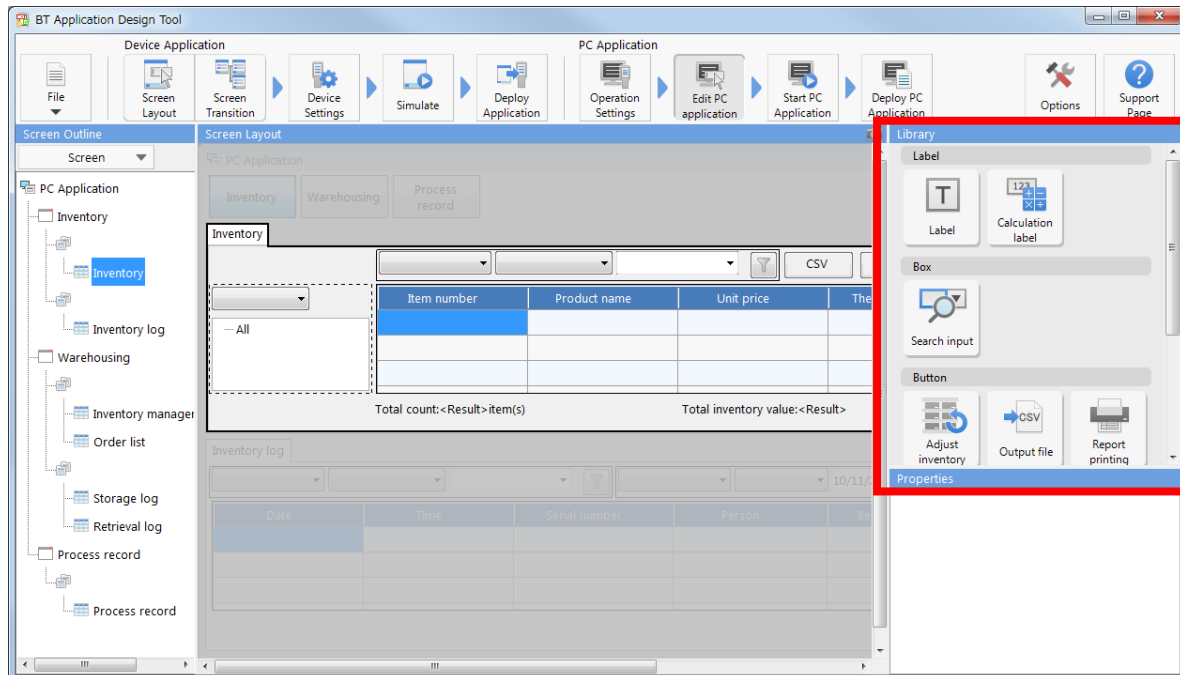

Library list

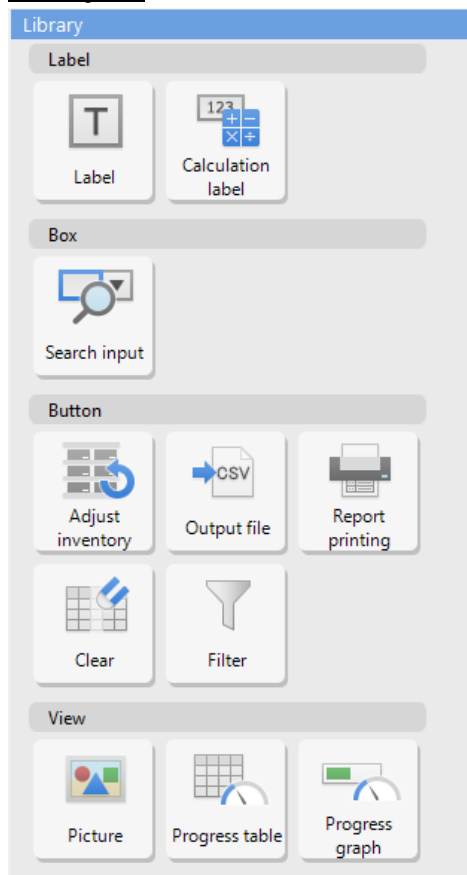

4.11. Properties (PC Application)

You can check and change the properties of the selected part. For details on the settings, see "[6 PC Application Parts, Controls, and Windows.](#)"

Properties	
Name	BtCalculationLabel_1
▷ Position	475, 160
▷ Size	210, 24
Frame Style	None
Content Alignment	Align middle right
Font	Segoe UI, 9.75pt
Fore Color	 ControlText
Back color	 Control

5. Device Application Parts, Controls and Windows

Develop applications by dragging parts from the Library. This chapter explains how to use the GUI parts.

5.1. Labels


5.1.1. Label

Use Labels to display text strings.

■ Part icon





■ GUI display

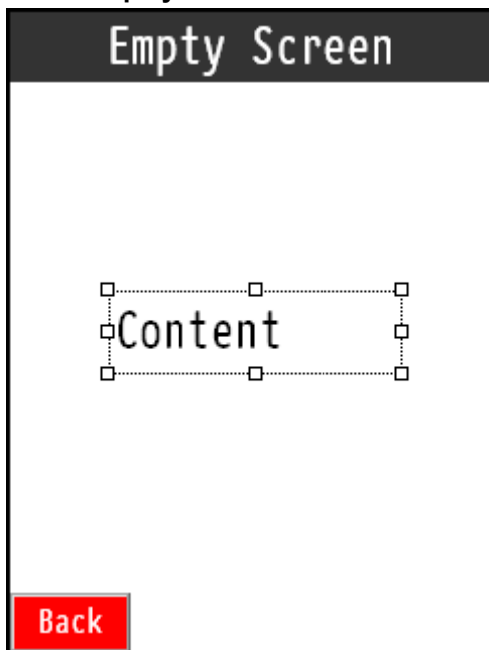


■ Part properties

Properties	
Name	BtLabel_1
▷ Position	52, 142
▷ Size	140, 35
Frame Style	None
Content	Content
Content Alignment	Align left
Font Size	18
Bold	False
Fore Color	 Black
Back Color	 White

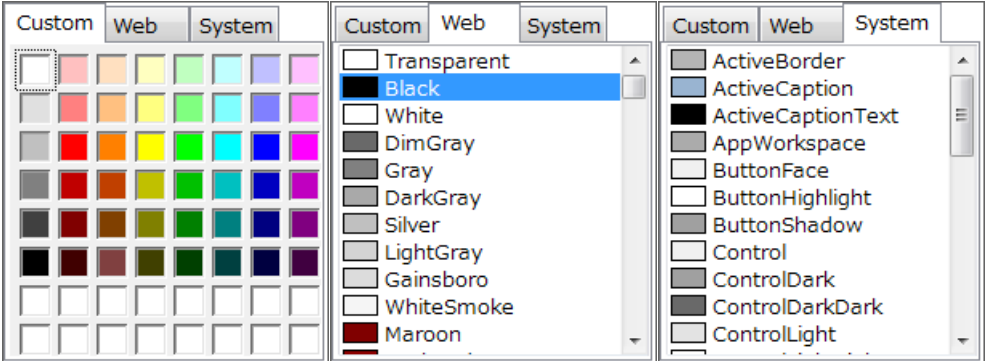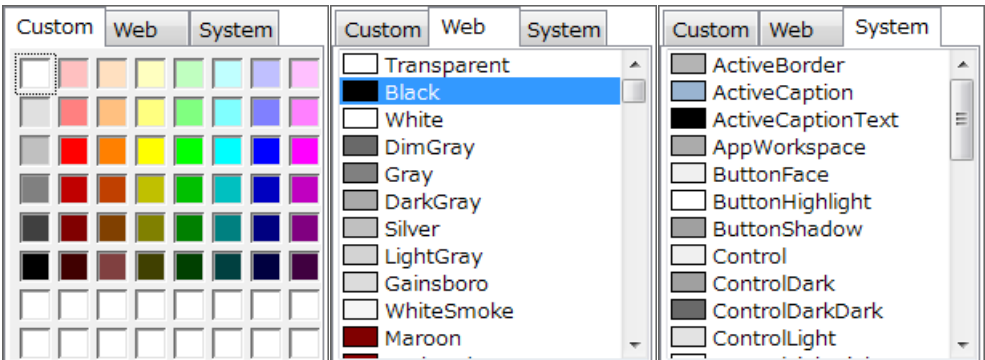Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Content	Set the content to display.
Content Alignment	Set the alignment of text in the part. [Options] Align left Center Align right
Font size	Set the font size. [Setting range] 6 to 144 pt
Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text. 
Back Color	Set the color of the part's background. 



Double-click on a part to display the following dialog box.


■ **Display**

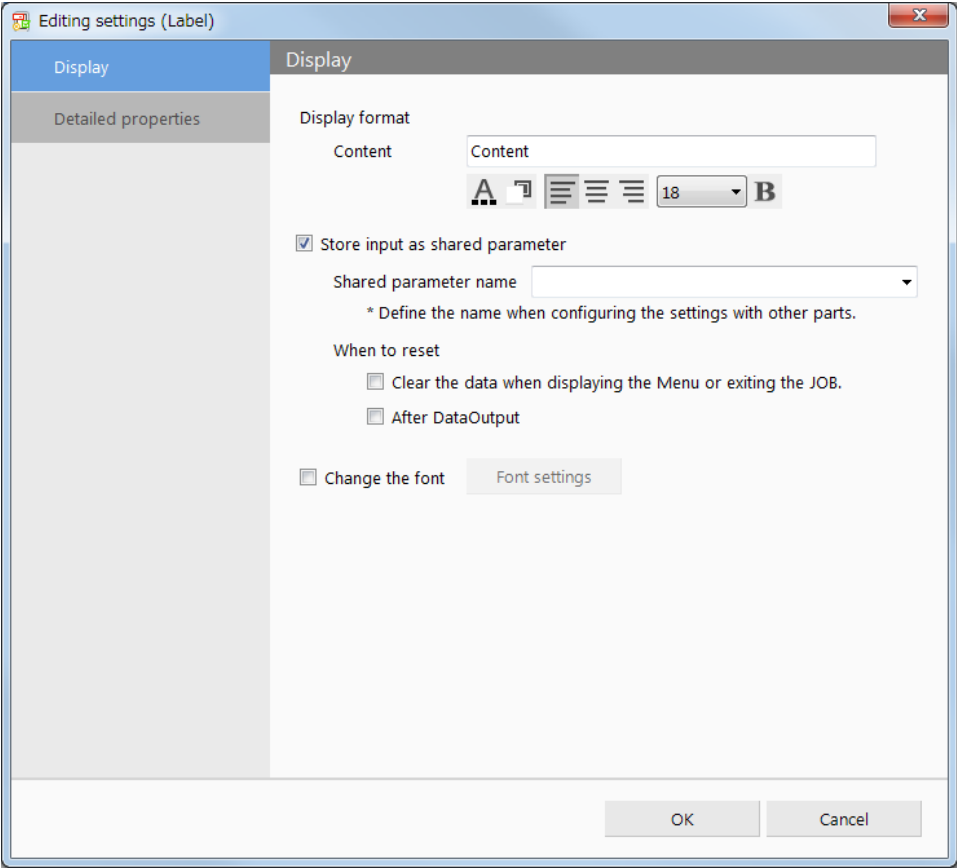

Display format

Configure settings such as the content to display, its color, and its font size.

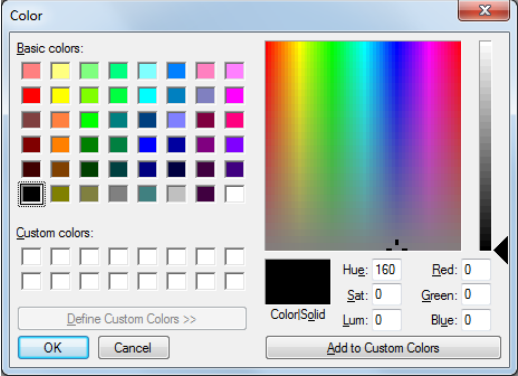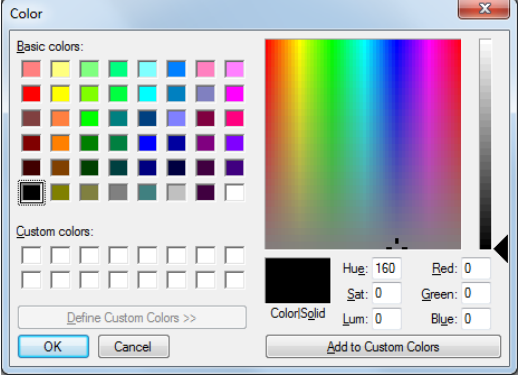	Set the color of the text. 
	Set the color of the part's background. 

	Set the content alignment to be left-aligned.
	Set the content alignment to be center-aligned.
	Set the content alignment to be right-aligned.
	Set the font size. [Setting range] 6 to 144 pt
	Set the font style to bold.

Share input value within application

• **Shared parameter name**

If you check this box, you can set the shared parameter name. Set this value and it will be displayed for the selection in "[5.1.2.Shared Parameter Labels](#)[Shared Parameter Labels](#)"

[Example]

Set the shared parameter as shown below.

☒ Share input value within application

Shared parameter name

* Define the name when configuring the settings with other parts.

Then, it will be displayed for the shared parameter label selection.

Display item

Shared parameter selection



• **When to reset**

Set the timing to clear the data of the shared parameter. Select "Clear the data when displaying the Menu or exiting the JOB." or "After DataOutput" according to the application requirements.

Change the font

By using the fonts installed on the development PC and converting to an image, any font may be used for label content.

☒ Change the font


Content preview

Content

* The character string will be converted to an image and displayed on the device.

Font settings


Click "Font settings" to display the following dialog box. You can configure settings such as the font type, style, size, and effects.

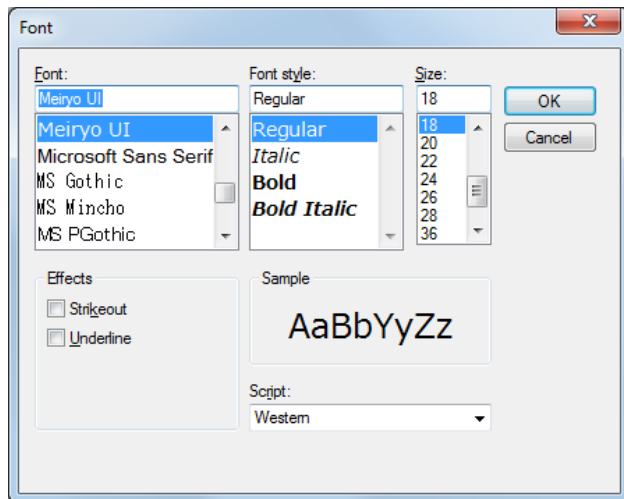

Content preview

You can use this to check the preview of the content's font set with "Font settings."

■ Detailed properties

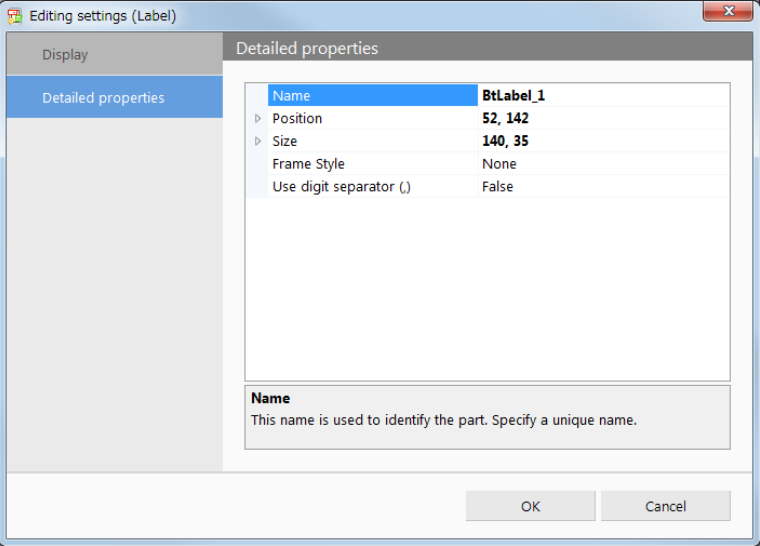


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Use digit separator (.)	Separate digits using a comma as in "1,000,000." [Options] False True


5.1.2. Shared Parameter Labels

Display shared parameters that are set with text boxes, date input boxes, or drop-down list boxes. Use this when the content should reflect entered values. Not only values on the same screen but values entered on other screens and menus may be referenced.

■ Part icon


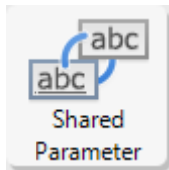


■ GUI display

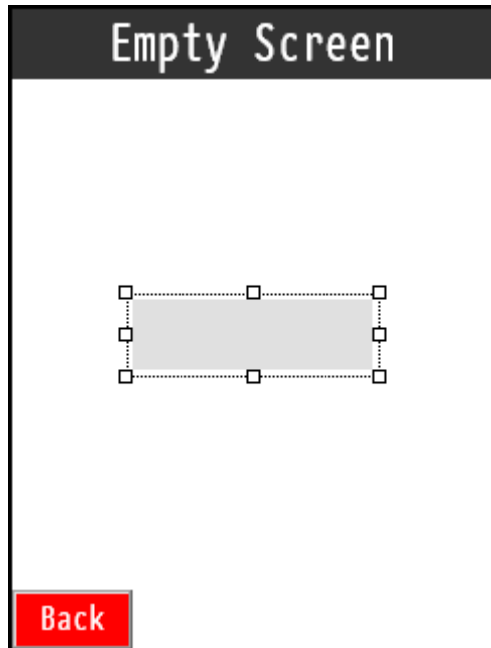


■ Part properties

Properties	
Name	BtSharedParameterLabel_1
▷ Position	60, 145
▷ Size	120, 35
Frame Style	None
Content Alignment	Align left
Font Size	18
Bold	False
Fore Color	 Black
Back Color	 224, 224, 224


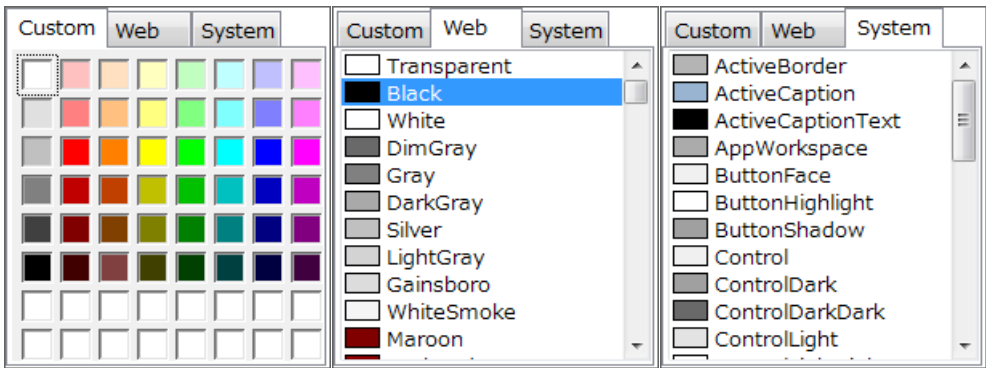
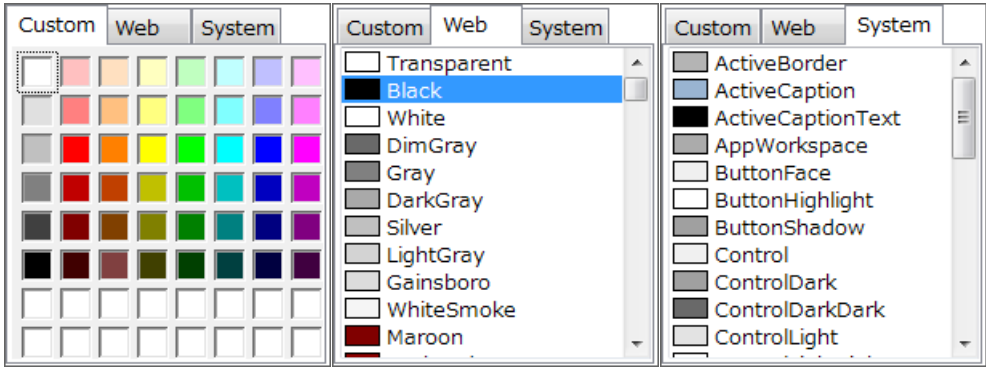
Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Content Alignment	Set the alignment of text in the par. [Options] Align left Center Align right
Font size	Set the font size. [Setting range] 6 to 144 pt
Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text. 
Back Color	Set the color of the part's background. 

■ Display

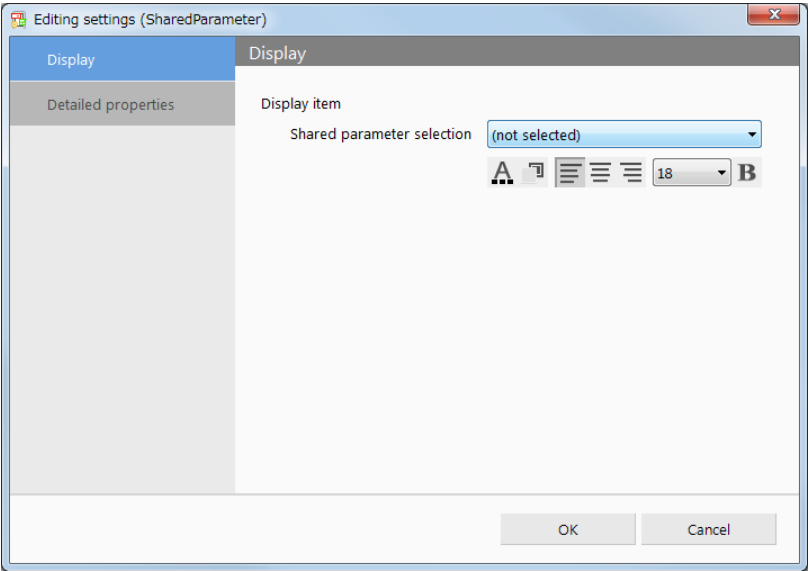


Display item

Select the shared parameter that has been set with a text box or other item. Also configure settings such as the color and font size to use when displaying this value.

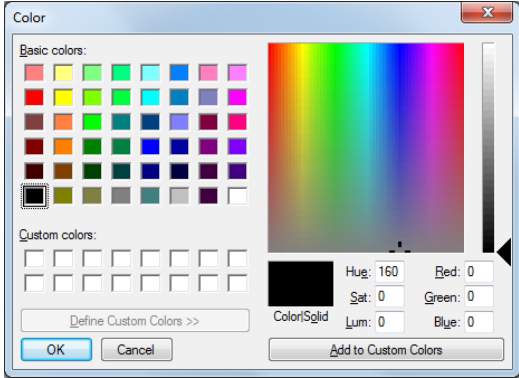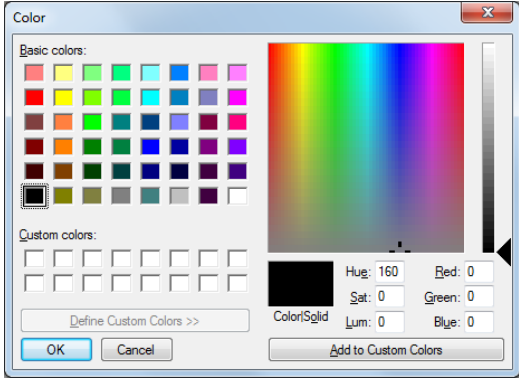	Set the color of the text. 
	Set the color of the part's background. 
	Set the content alignment to be left-aligned.
	Set the content alignment to be center-aligned.
	Set the content alignment to be right-aligned.
	Set the font size. [Setting range] 6 to 144 pt
	Set the font style to bold.

■ Detailed properties

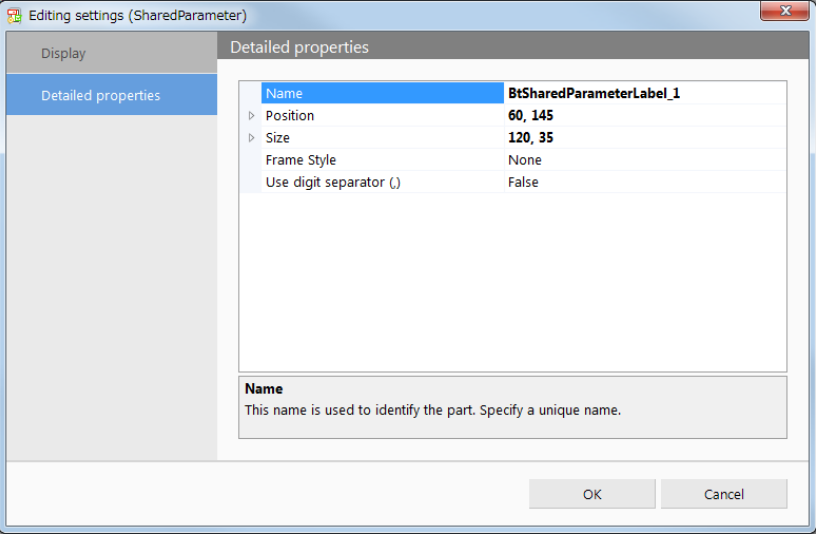


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Use digit separator (.)	Separate digits using a comma as in "1,000,000." [Options] False True


5.1.3. System Parameter Labels

Use System Parameter Labels to display content with system information such as the version, serial number, or current time.

■ Part icon


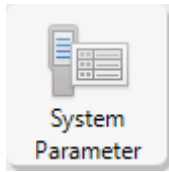


■ GUI display

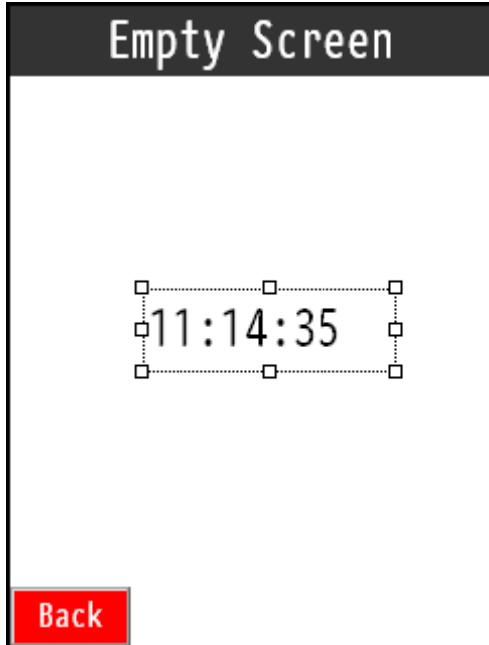


■ Part properties

Properties	
Name	BtSystemParameterLabel_1
▷ Position	69, 144
▷ Size	120, 35
Frame Style	None
Content Alignment	Align left
Font Size	18
Bold	False
Fore Color	 Black
Back Color	 White

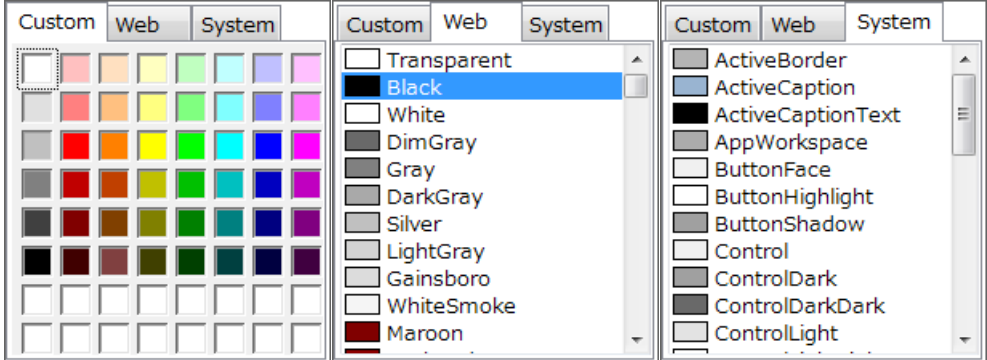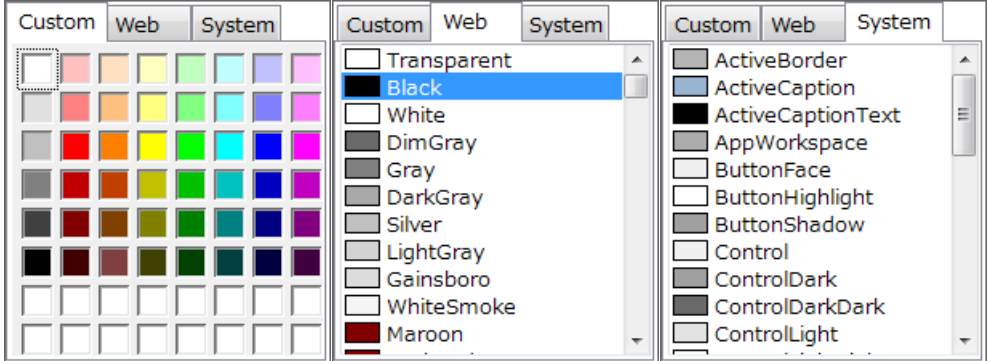Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Content Alignment	Set the alignment of text in the part. [Options] Align left Center Align right
Font size	Set the font size. [Setting range] 6 to 144 pt
Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text. 
Back Color	Set the color of the part's background. 

Double-click on a part to display the following dialog box.

■ **Display**

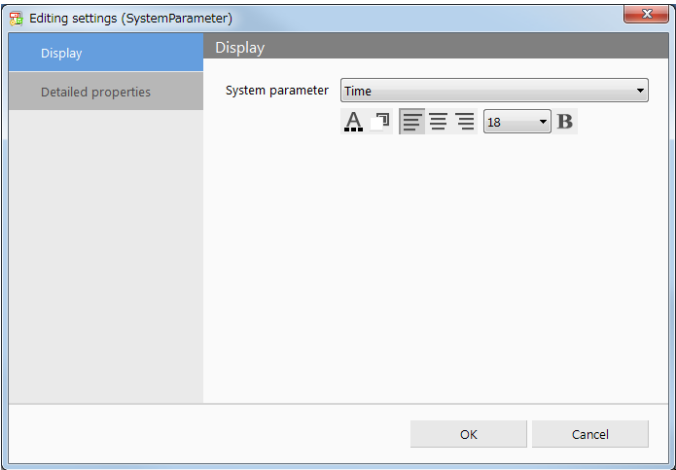


Display item

Select the information to display. Also configure settings such as the color and font size to use when displaying this value.

[Options] Application version | Firmware version | Device ID | Device name | Device IP | Serial number | Date | Time

	Set the color of the text.
	Set the color of the part's background.
	Set the content alignment to be left-aligned.
	Set the content alignment to be center-aligned.
	Set the content alignment to be right-aligned.
	Set the font size. [Setting range] 6 to 144 pt
	Set the font style to bold.

■ Detailed properties

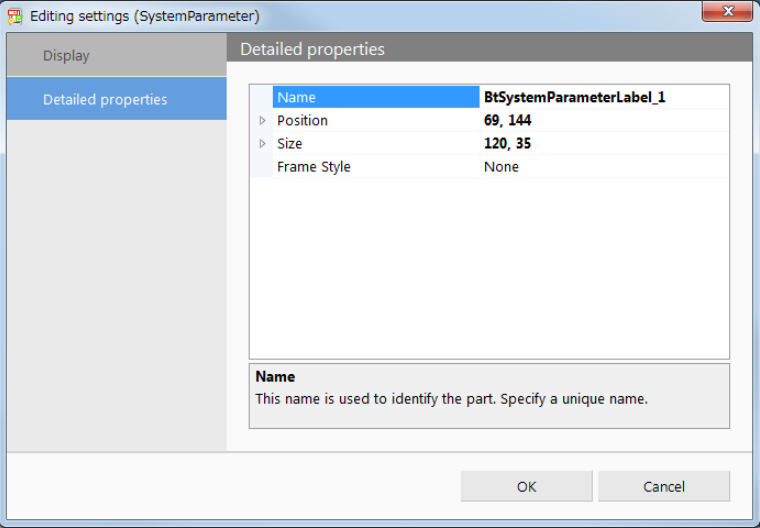


Name	Set the name of the part.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional

5.2. Boxes


5.2.1. Text Box

Text box parts are the main mode of input capture from reading barcodes to key entry.

■ Part icon

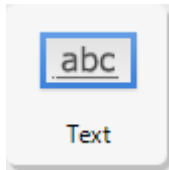




■ GUI display

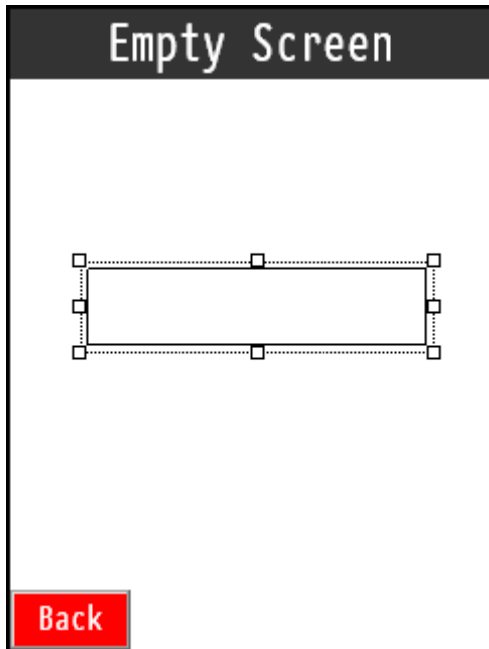

■ Part properties


Properties	
Name	BtTextBox_1
▶ Position	38, 129
Width	170
Frame Style	Line
Content	
Content Alignment	Align left
Font Size	18
Bold	False
Fore Color	 Black
Back Color	 White
Selection Fore Color	 Black
Selection Back Color	 162, 255, 255

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Width	Set the width of the part. [Setting range] 1 to 480
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Content	Set the content to display.
Content Alignment	Set the alignment of text in the part. [Options] Align left Center Align right
Font size	Set the font size. [Setting range] 6 to 144 pt
Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text. Custom Web System  Custom Web System Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon Custom Web System ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight

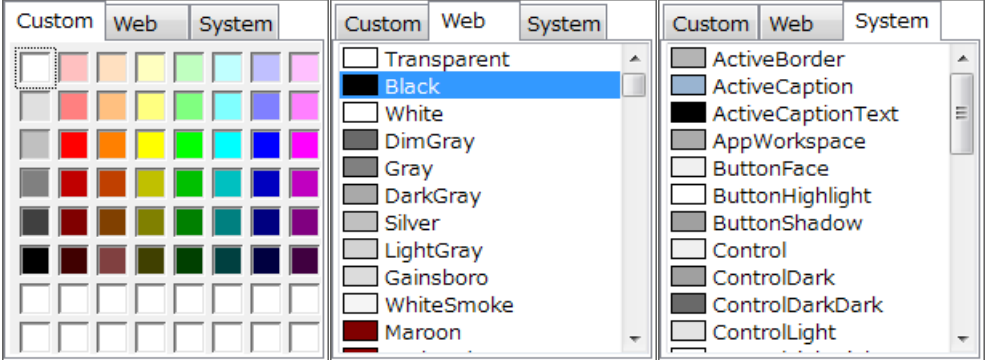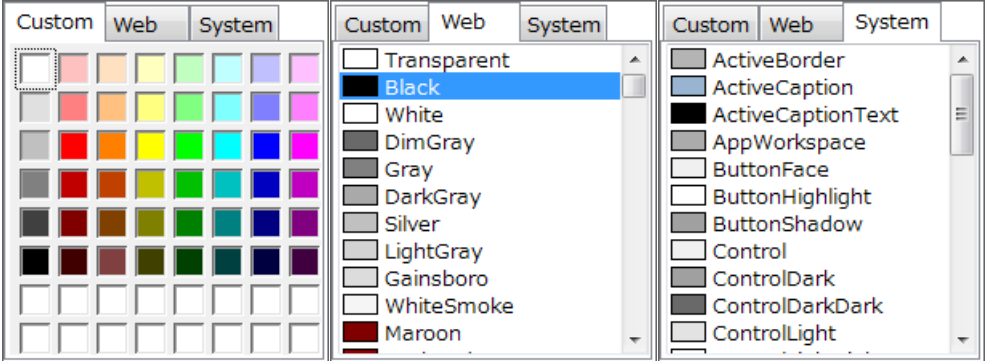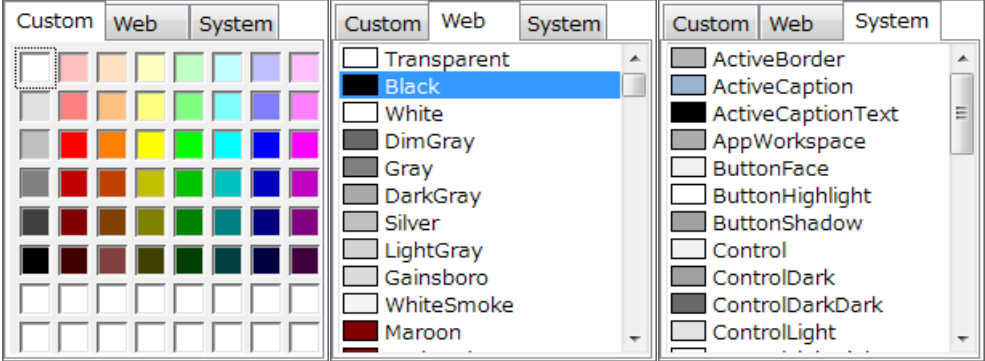Back color	Set the color of the part's background. 
Selection Fore Color	Set the color of text content when a part gains focus. 
Selection Back Color	Set the background color of a part when it is selected. 

Double-click on a part to display the following dialog box.

■ **Display**

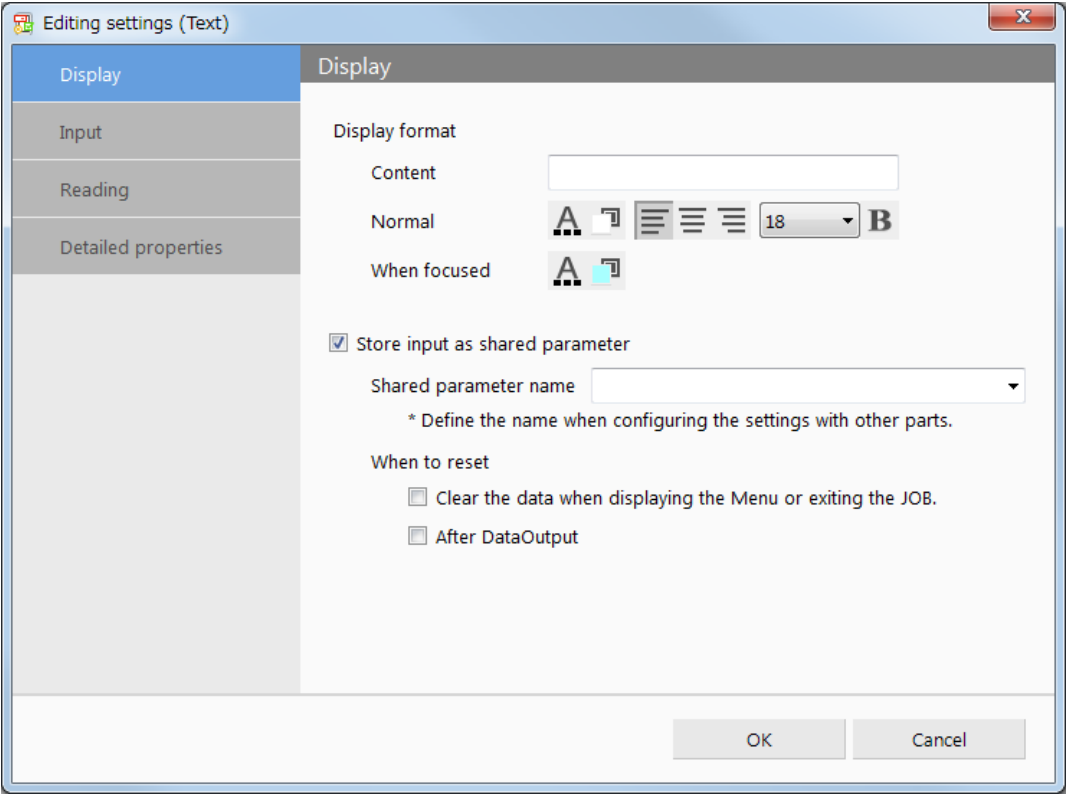



Display format


• **Content**

Set the default value to display in the text box.

• **Normal**



Configure settings such as the color and font size to use when a part is not selected.

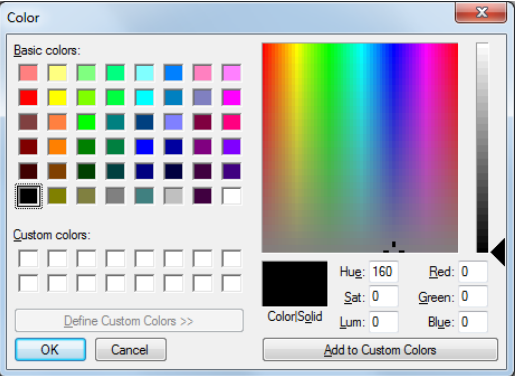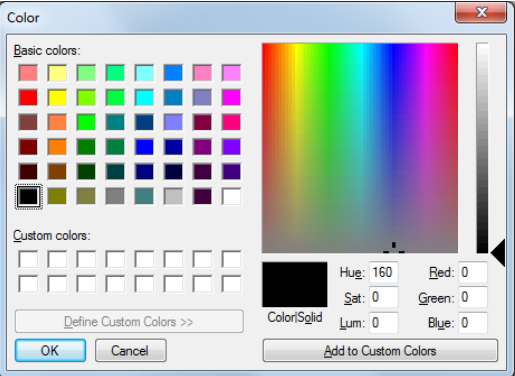	Set the color of the text. 
	Set the color of the part's background. 

	Set the content alignment to be left-aligned.
	Set the content alignment to be center-aligned.
	Set the content alignment to be right-aligned.
	Set the font size. [Setting range] 6 to 144 pt
	Set the font style to bold.

• **When focused**

Configure settings such as the color and font size to use when a partthe part is selected.

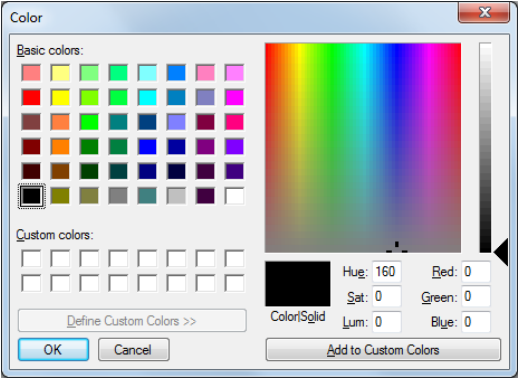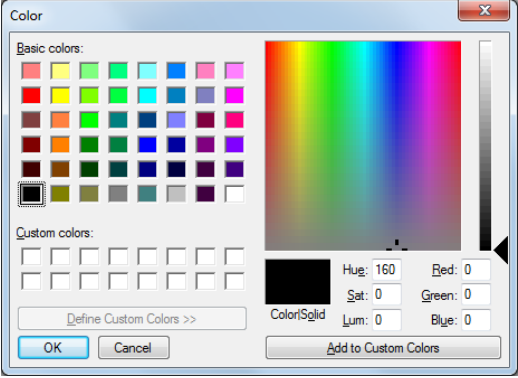	Set the color of text content. 
	Set the color of the part's background. 

Share input value within application

• **Shared parameter name**

If you check this box, you can set the shared parameter name. Set this value and it will be displayed for the selection in ""[5.1.2.Shared Parameter Labels](#)[Shared Parameter Labels](#)."

[Example]

Set the shared parameter as shown below.

☒ Share input value within application

Shared parameter name

* Define the name when configuring the settings with other parts.

Then, it will be displayed for the shared parameter label selection.

Display item

Shared parameter selection









- **When to reset**

Set the timing to clear the data of the shared parameter. Select "Clear the data when displaying the Menu or exiting the JOB." or "After DataOutput" according to the application requirements.

* When you set the same shared parameter for several parts, set the same timing to all parts.

■ Input

Input method

Set the text box's input method.

[Options] Read + key (alphanumeric) | Read + key (numeric only) | Read (alphanumeric) | Key (alphanumeric) | Key (numeric only)

- **Use the F2 key to switch to editing mode.**

Check this box to enable editing that continues from data that has already been entered.

Input Format

- **Maximum character length (single-byte)**

Set the length of the character string that can be entered.

* You can set this value when you have selected an input method that includes alphanumeric characters.

[Setting range] 1 to 8192 characters

- **Prevent Null values**

When you check this box, an error will be displayed if there is no data in the text box when data is entered.

* You can set this value when you have selected an input method that includes alphanumeric characters.

- **Input range**

Set the upper and lower limits of numerical input.

* You can set this value when you have selected an input method that only includes numerical values.

[Setting range] -2000000 to 2000000

- **After decimal digit length**

Set the number of digits after a decimal that may be accepted.

* You can set this value when you have selected an input method that only includes numerical values.

[Setting range] 0 to 3

Verification

- **Display error if an out-of-range numeric values is entered**

When you check this box, an error will be displayed when a numerical value outside the set range is entered.

* You can set this value when you have selected an input method that only includes numerical values.

- **Display alert if a repeated digits are entered**

When you check this box, an alert will be displayed when a value having repeated digits is entered. This prevents input errors.

* You can set this value when you have selected an input method that only includes numerical values.

- **Prevent the duplicating of unsent data**

When you check this box, an error will be displayed when data that has already been entered is entered again. This prevents input errors

* You can set this value when you have selected an input method that includes alphanumeric characters.

- **Limit**

Limit the data that can be entered.

! Match against multiple characters. You can only write this once within the character string.

Example) "!12": The full character string that ends in 12 (including the "12")

? Match against a single character string. You can write this multiple times within the character string.


Example) "?12": The three-character long character string that ends in 12.

[] Specify the range. You can only write this once within the character string.

Examples) [c-f]: c, d, e, f

[0-9]: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9

■ Reading

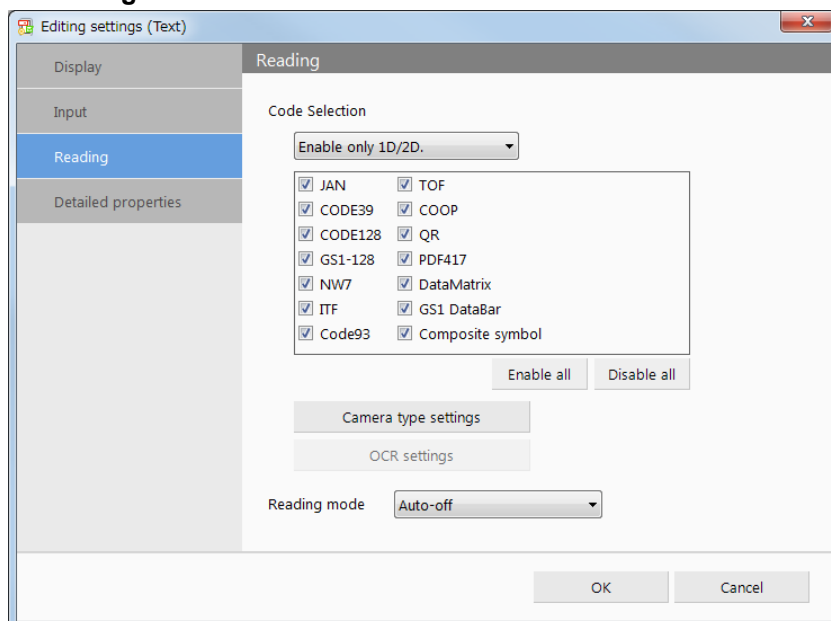

* You cannot configure any of the settings when you select an input method that does not include reading.

Code classification

Set the types of barcodes that can be read.

[Reading options] Enable only 1D/2D (fixed)

[Code type options] JAN | CODE39 | CODE128 | GS1-128 | NW7 | ITF | Code93 | TOF | COOP | QR | PDF417 | DataMatrix | GS1 DataBar | Composite symbol


Click "Enable all" to select all the code types.

Click "Disable all" to clear all the code types.

- **Camera type settings**

Configure image processing settings to better suit the environment or application requirements.

* You can configure these settings when you have selected a reading method that includes 1D/2D.

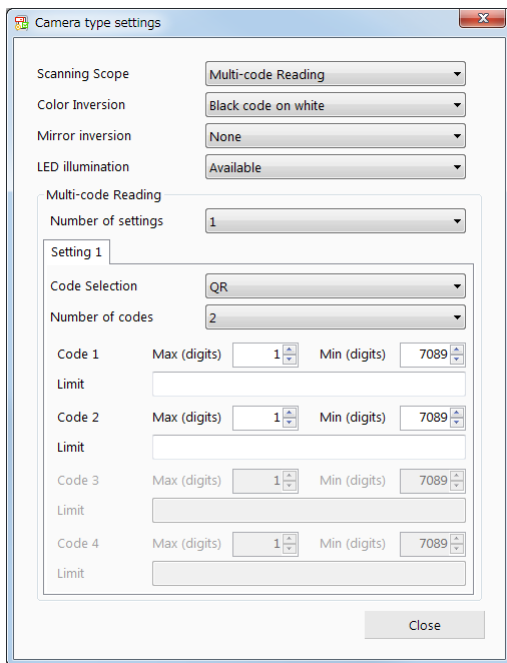

- **Scanning Scope**

Select the scanning method dependant on the relationship between the view/cross-hairs.

[Options] Normal | Center point | Horizontal line | Multi-code reading

- Normal ... Codes that enter the camera's field of view will be read.
- Center point ... Codes in the center of the field of view will be given priority when reading.
- Horizontal line ... Codes that cover the horizontal line of the aimer will be read.
- Multi-code reading ... Multiple codes of the same type will be read in a batch.

- **Black code on white**

Enable/disable the reading of codes whose black and white parts are inverted.

[Options] Black code on white | White code on black | Automatic

- **Mirror inversion**

Enable/disable the reading of codes that have been inverted into mirror images.

[Options] None | Inversion

- **LED illumination**

Set whether LED illumination is provided during reading. You may be able to improve the reading of codes and similar information marked on metal surfaces by turning off the LED illumination during reading to prevent halation.


[Options] Unavailable | Available

- **Multi-code Reading**

Set the type of code for Multi-code Reading, the number of codes to read (maximum: 4), and the minimum and maximum number of digits for each code (range of 1 to 7089 digits). You can save up to 4 types of settings.

* Configure each of the 4 types of settings with a different code type. This function will not operate correctly if you configure multiple settings with the same code type.

■ Detailed properties

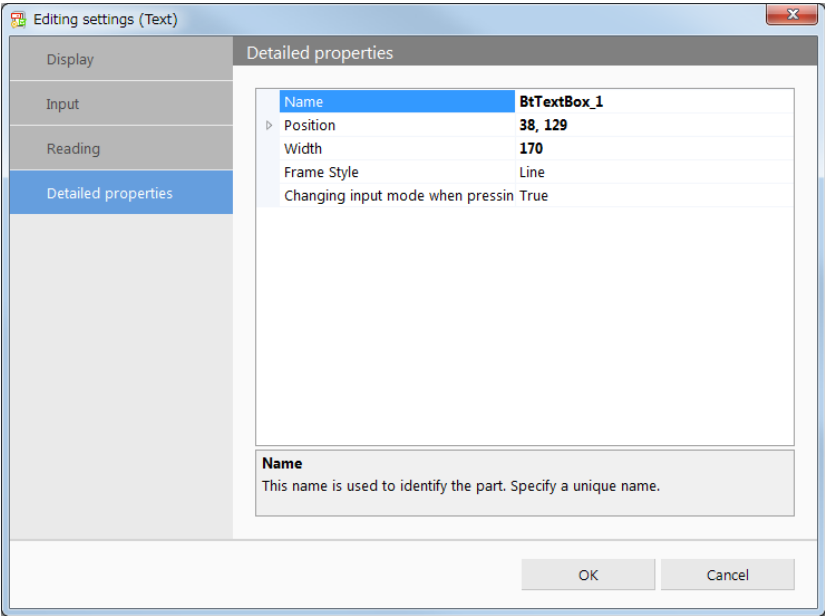


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Width	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Changing input mode when pressing F3 key	Enable or disable the switching of the input (between alphanumeric characters and numbers) when the [F3] key is pressed. [Options] True False


5.2.2. Date Input Box

By placing a date input box, you can enter the date in the specified format by using the key pad, the cross-cursor key. The date is output in the set format.

■ Part icon

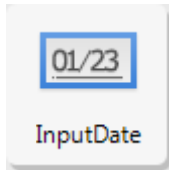





■ GUI display

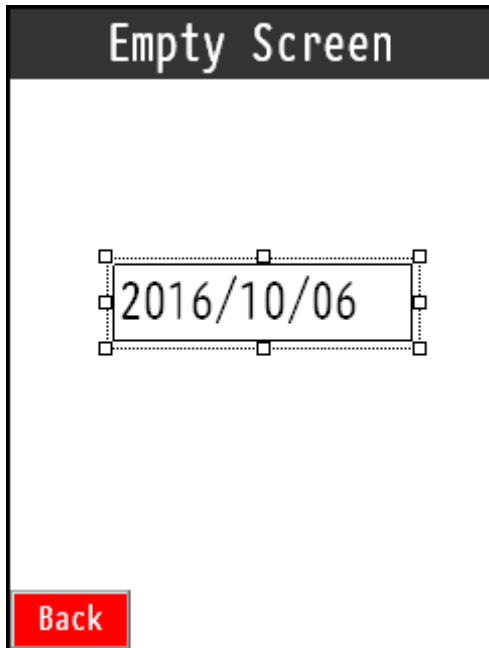

■ Part properties

Name	BtInputDialog_1
Position	51, 127
Width	150
Frame Style	Line
Content Alignment	Align left
Font Size	18
Bold	False
Fore Color	 Black
Back Color	 White
Selection Fore Color	 Black
Selection Back Color	 162, 255, 255

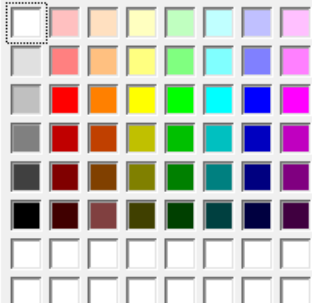Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Width	Set the width of the part. [Setting range] 1 to 480
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Content Alignment	Set the alignment of text in the part. [Options] Align left Center Align right
Font size	Set the font size. [Setting range] 6 to 144 pt
Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text. Custom Web System  Custom Web System - Transparent Black - White - DimGray - Gray - DarkGray - Silver - LightGray - Gainsboro - WhiteSmoke - Maroon Custom Web System - ActiveBorder - ActiveCaption - ActiveCaptionText - AppWorkspace - ButtonFace - ButtonHighlight - ButtonShadow - Control - ControlDark - ControlDarkDark - ControlLight

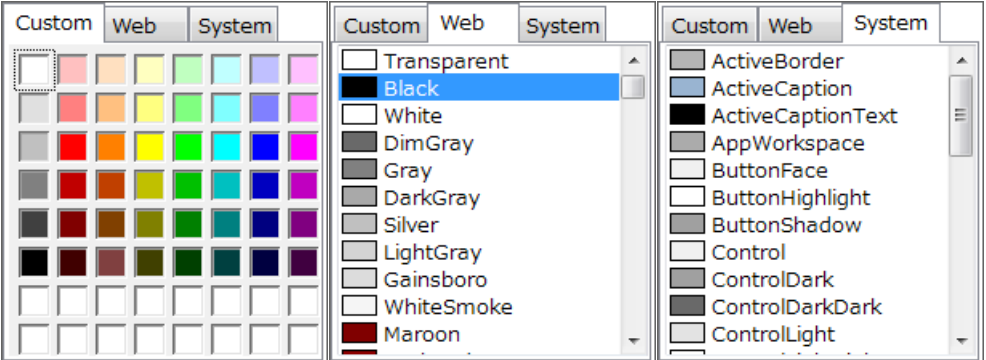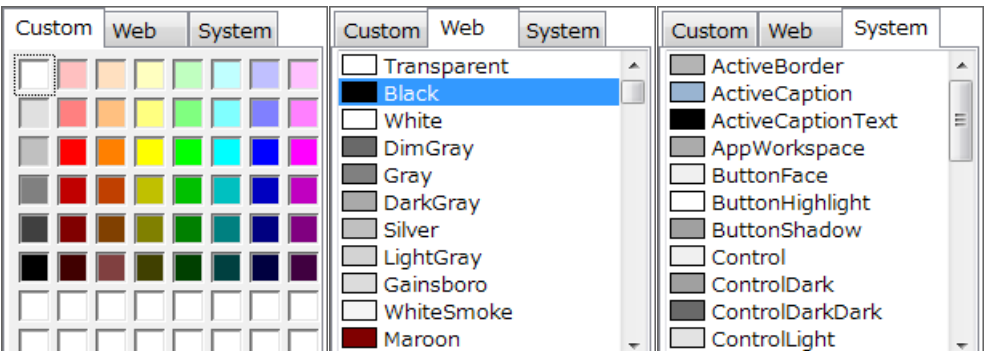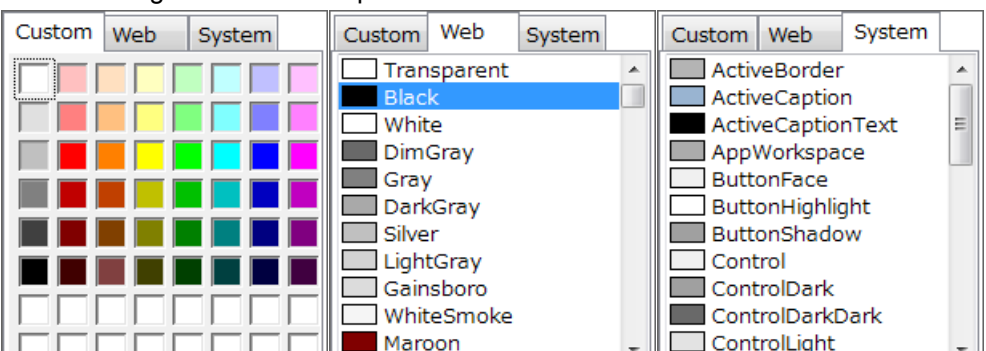Back color	Set the color of the part's background. 
Selection Fore Color	Set the color of text content when a part gains focus. 
Selection Back Color	Set the background color of a part when it is selected. 

Double-click on a part to display the following dialog box.

■ Display

Display format


• Normal

Configure settings such as the color and font size to use when the part is not selected.

	Set the color of the text.
	Set the color of the part's background.
	Set the content alignment to be left-aligned.
	Set the content alignment to be center-aligned.
	Set the content alignment to be right-aligned.
	Set the font size. [Setting range] 6 to 144 pt
	Set the font style to bold.

- **When selected**

Configure settings such as the color and font size to use when the part is selected.

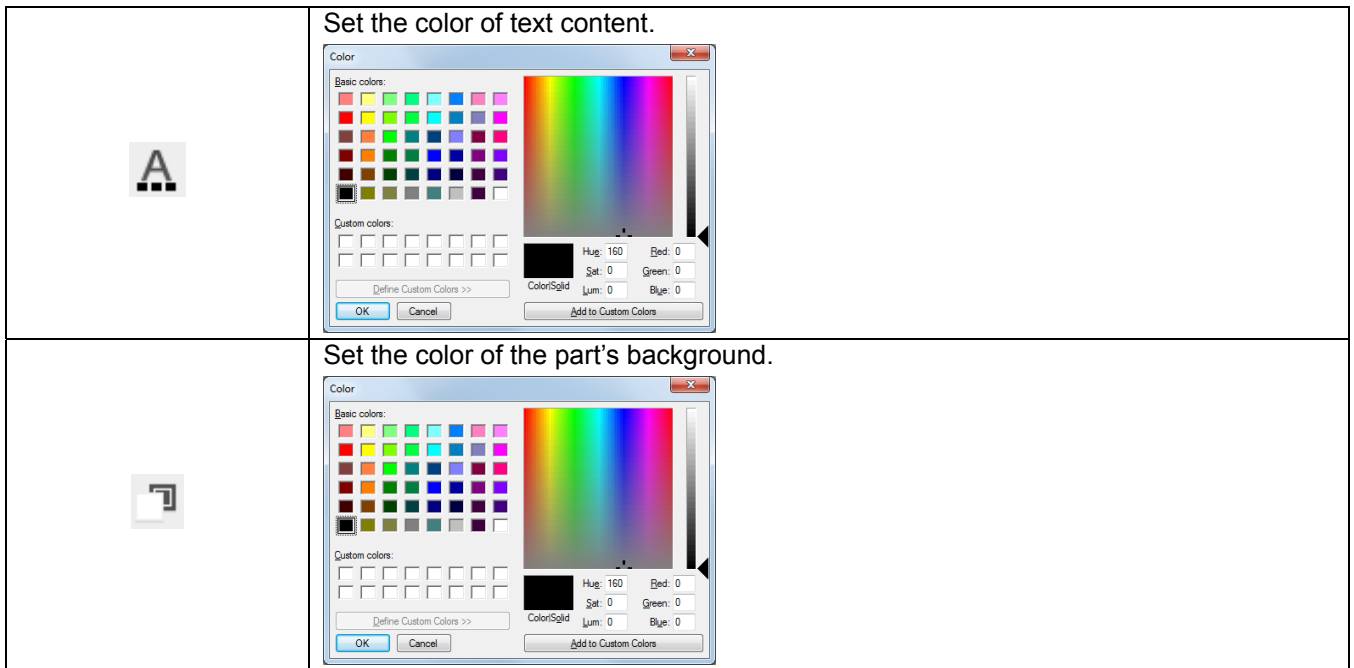

Date format

Set the format of read date data when it is output.

- **Pattern**

Select the order of the year, month, and day.

[Options] YYYYMMDD | YYYYMM | YYMMDD | YYMM | MMDDYYYY | MMYYYY | MMDDYY | MMY

- **Delimiter**

Set the separator between the year, month, and day.

[Options] None | Slash | Period | Hyphen | Space

- **Output Data preview**

A preview of the date set as shown above is displayed here. You can check whether there are errors in the settings.

Share input value within application

- **Shared parameter name**

If you check this box, you can set the shared parameter name. Set this value and it will be displayed for the selection in ""[5.1.2.Shared Parameter Labels](#)[Shared Parameter Labels](#).""

[Example]

Set the shared parameter as shown below.

☒ Share input value within application

Shared parameter name

* Define the name when configuring the settings with other parts.

Then, it will be displayed for the shared parameter label selection.

Display item

Shared parameter selection

- **When to reset**

Set the timing to clear the data of the shared parameter. Select "Clear the data when displaying the Menu or exiting the JOB." or "After DataOutput" according to the application requirements.

* When you set the same shared parameter for several parts, set the same timing to all parts.

- **Input**

Editing settings (InputDate)

Display

Input

Detailed properties

Input method

Ten-key pad

☐ Use the F2 key to switch to editing mode.

OCR settings

Anno domini (AD) digits: 2 digits or 4 digits

Date expression: Date exists/does not exist

☒ Read 1-digit month/day expressions.

Input character string example: 16/1

OK Cancel

Input method

Set the date input box's input method.

[Options] Ten-key pad | Cross-cursor key pad


* About cross-cursor key input

You can use the [left] and [right] keys of the cross-cursor key to change the month. You can use the [up] and [down] keys to change the day.

- **Use the F2 key to switch to editing mode.**

Check this box to enable editing that continues from data that has already been entered.

■ Detailed properties

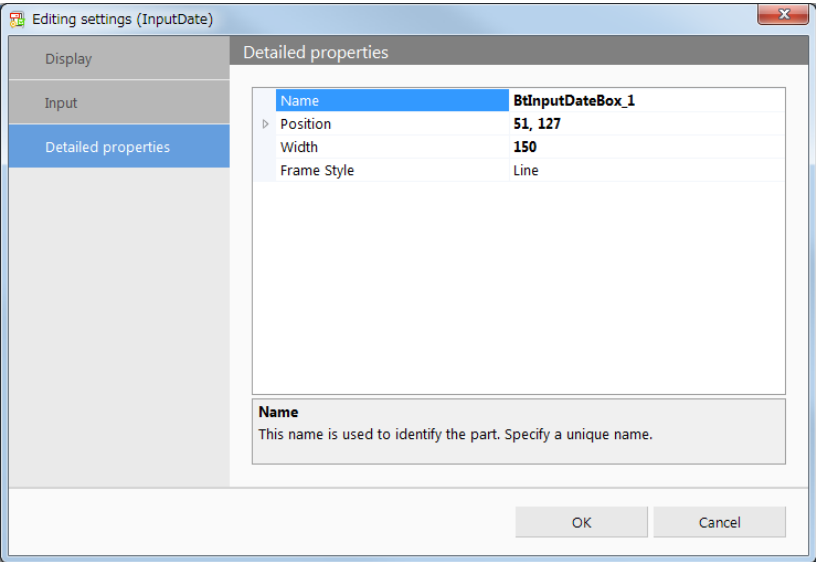


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Width	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional


5.2.3. Drop-down List Boxes

Drop-down list boxes are parts that are used to enter data selected from that which has been registered in advance.

■ Part icon


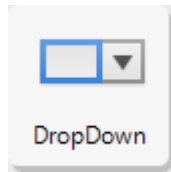




■ GUI display

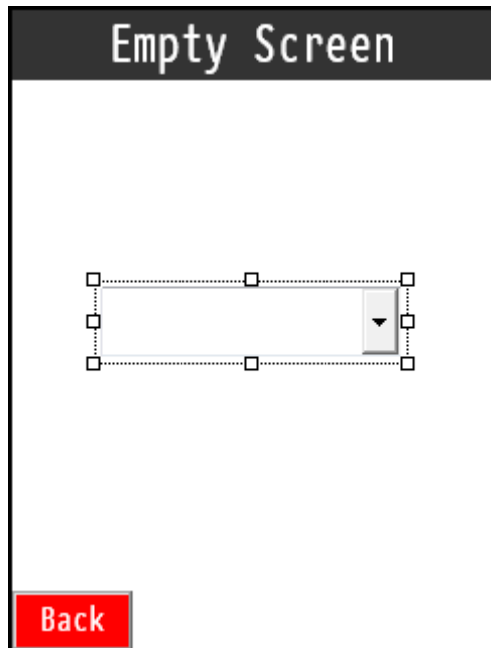

■ Part properties

Name	BtDropDownBox_1
Position	44, 138
Width	150
Font Size	18
Bold	False
Fore Color	Black
Back Color	White
Selection Fore Color	Black
Selection Back Color	162, 255, 255

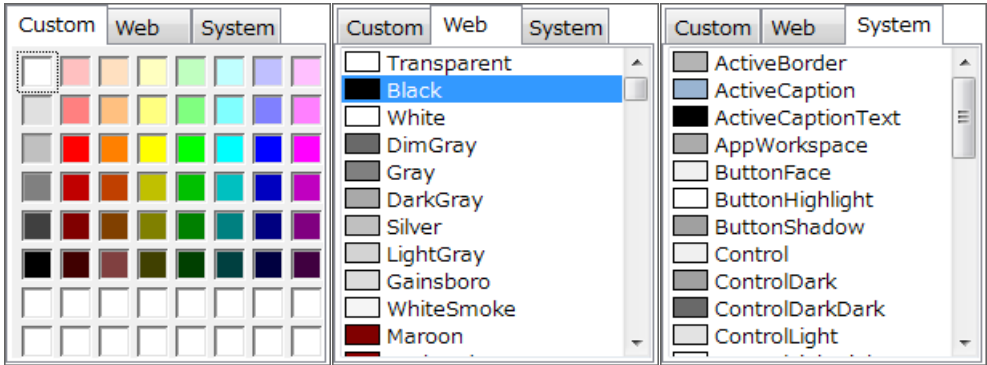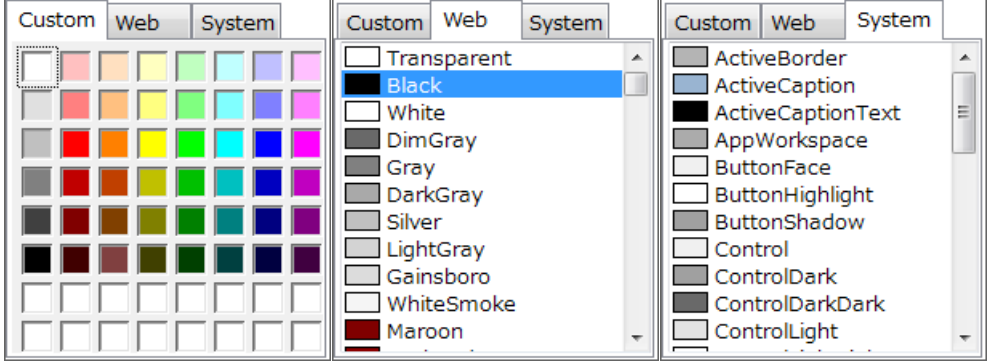Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Width	Set the width of the part. [Setting range] 1 to 480
Font size	Set the font size. [Setting range] 6 to 144 pt
Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text. 
Back color	Set the color of the part's background. 

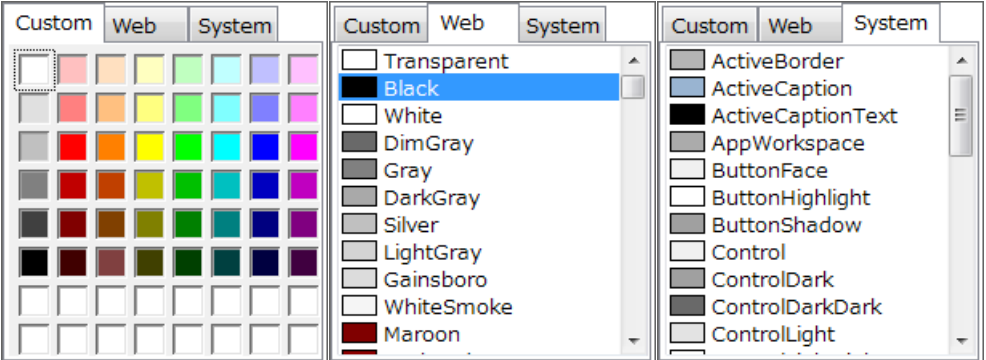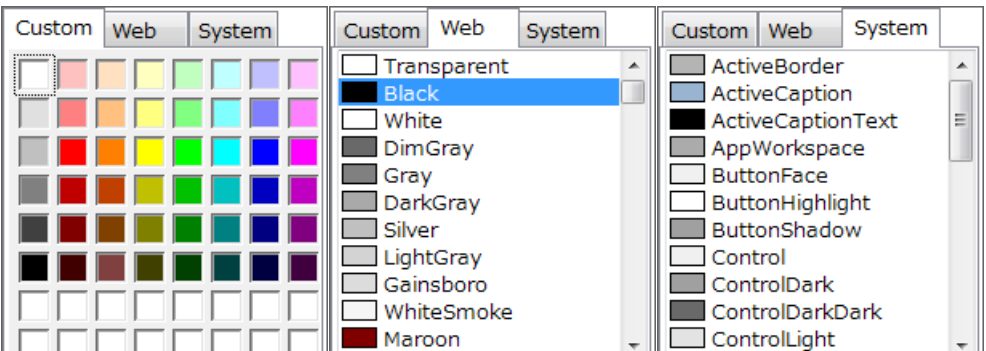Selection Fore Color	Set the color of text content when a part gains focus. 
Selection Back Color	Set the background color of a part when it is selected. 

Double-click on a part to display the following dialog box.

■ Display

Editing settings (DropDown)

Display

Detailed properties

Display format

Normal

When focused

☒ Store input as shared parameter

Shared parameter name

* Define the name when configuring the settings with other parts.

When to reset

☐ Clear the data when displaying the Menu or exiting the JOB.

☐ After DataOutput

Content selection

Masterfile

(not selected)

New

Default selection

1



OK

Cancel

Display format



• Normal

Configure settings such as the color and font size to use when the part is not selected.

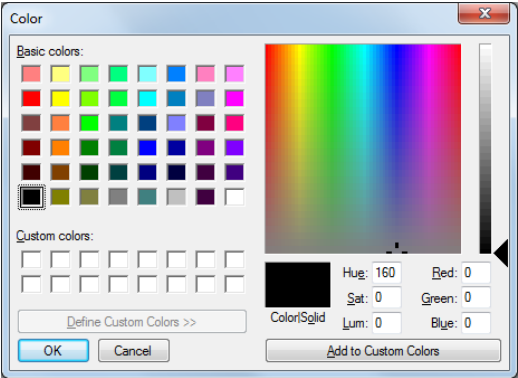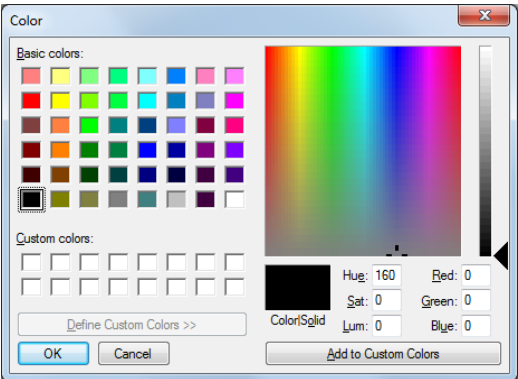	Set the color of text content. 
	Set the color of the part's background 
18	Set the font size. [Setting range] 6 to 144 pt
B	Set the font style to bold.

- **When selected**

Configure settings such as the color and font size to use when the part is selected.

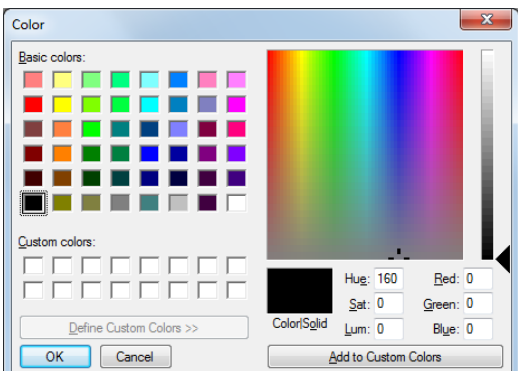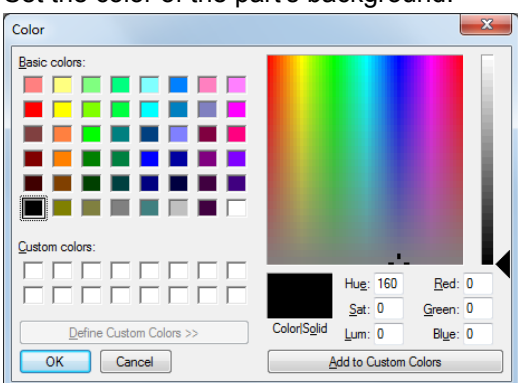	Set the color of text content. 
	Set the color of the part's background. 

Share input value within application

- **Shared parameter name**

If you select check this box, you can set the shared parameter name. Set this value and it will be displayed for the selection in "[5.1.2.Shared Parameter Labels](#)[Shared Parameter Labels](#)."

[Example]

Set the shared parameter as shown below.

☒ Share input value within application

Shared parameter name

* Define the name when configuring the settings with other parts.

Then, it will be displayed for the shared parameter label selection.

Display item

Shared parameter selection









- **When to reset**

Set the timing to clear the data of the shared parameter. Select "Clear the data when displaying the Menu or exiting the JOB." or "After DataOutput" according to the application requirements.

* When you set the same shared parameter for several parts, set the same timing to all parts.

Content selection

• Masterfile

You can select list populating data from master files that've already been created. Click "New" to display the following dialog box for creating the master file.

* When you have selected a master file that has already been created, the "New" button changes to the "Edit" button. Click "Edit" to display the following dialog box for editing the master file.

Item no.	Output data	Display data
1	111	BT-W100
2	222	BT-W80
3	333	BT-W70
4		

Master file editing

Import CSV

Fields: 2

Delete row

Delete all

↑

↓

CSV output

Master file save destination

☒ Drive 1 ☐ Drive 2 ☐ SD card

Master file name: MasterFile_1

OK Cancel

Enter data directly in the cells to create the master file. Column 1 is the "Output data" that is output when the master file is selected with the drop-down list box. Column 2 is the "Display data" that is shown in the drop-down list box.

• Import CSV

Read a CSV file to create the master file. The CSV file contains comma-separated data entries.

• Fields

You can set the number of data fields in the master file.

* Do not use this with drop-down list boxes.

• "Delete row"

Delete the selected row.

• "Delete all"

Delete all the data in the master file.

• "↑" and "↓" buttons

Move the selected row up or down, respectively.

• "CSV output"

Save the created master file to a CSV file.

• Master file save destination

Select the drive on the BT-W Series which to save the master file when deploying the application.

[Options] Drive 1 | Drive 2 | SD card


• Master filename

Set the name of the master file.

• Default selection

Set the initially selected item (position) in the drop-down list box (value represents row number from master file).

■ Detailed properties

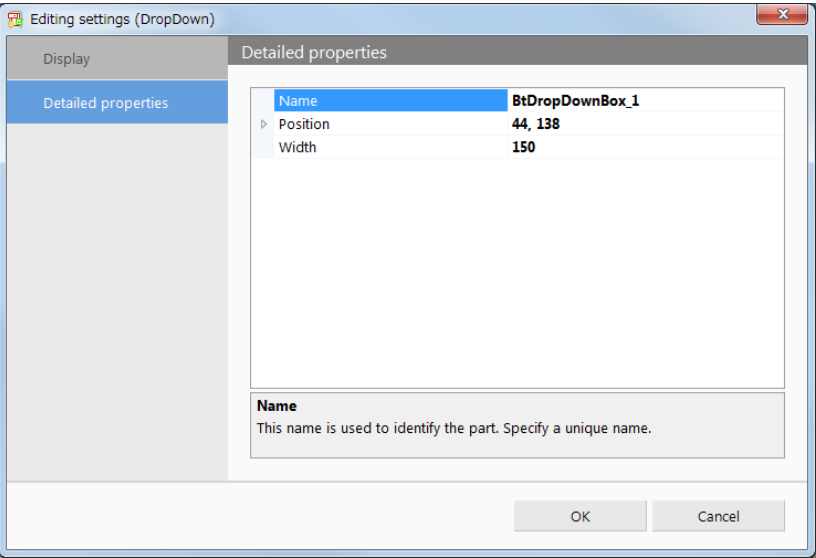


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Width	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640


5.2.4. Check Boxes

You can select and clear check boxes. When a check box is selected, "1" is output. When a check box is not selected, "0" is output.

■ Part icon

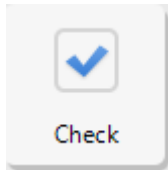


■ GUI display

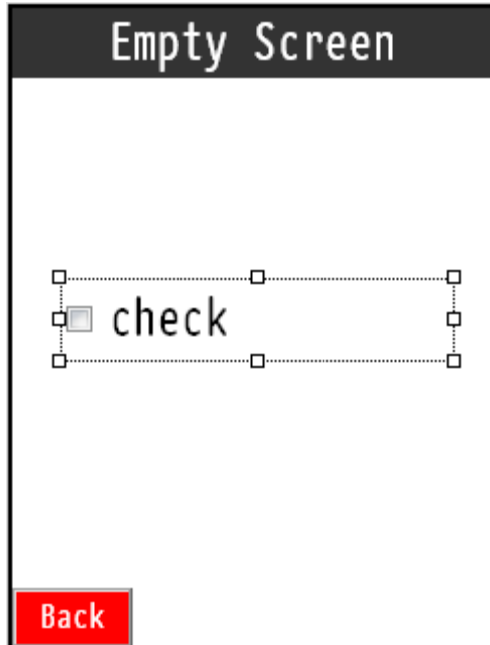


■ Part properties

Name	BtCheckBox_1
▷ Position	27, 138
▷ Size	190, 35
Content	check
Font Size	18
Bold	False
Fore Color	 Black
Back Color	 White

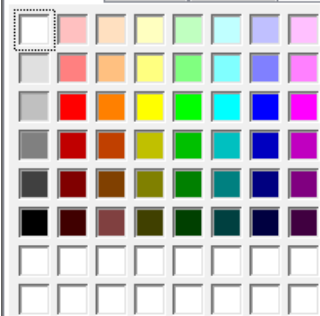Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Font size	Set the font size. [Setting range] 6 to 144 pt
Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text. Custom Web System  Custom Web System Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon Custom Web System ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight
Back color	Set the color of the part's background. Custom Web System  Custom Web System Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon Custom Web System ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight

Double-click on a part to display the following dialog box.

■ **Display**

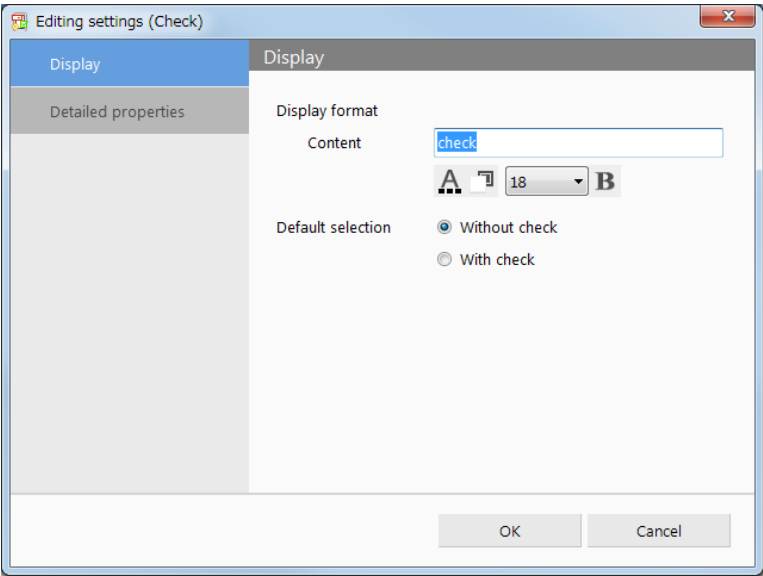

Display format


Configure settings such as the character string to display, its color, and its font size.

	Set the color of the text.
	Set the color of the part's background.
	Set the font size. [Setting range] 6 to 144 pt
	Set the font style to bold.

Default selection

[Options] Without check | With check

■ Detailed properties

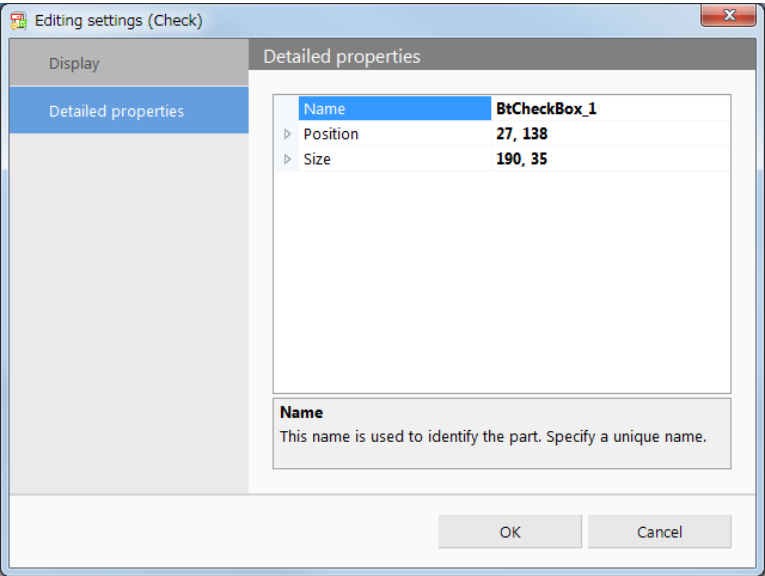


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640


5.2.5. Option (Radio) Boxes

Select the items set with an option (radio) box. The selected item number is output.

■ Part icon


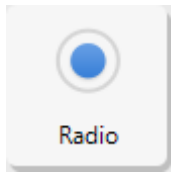


■ GUI display

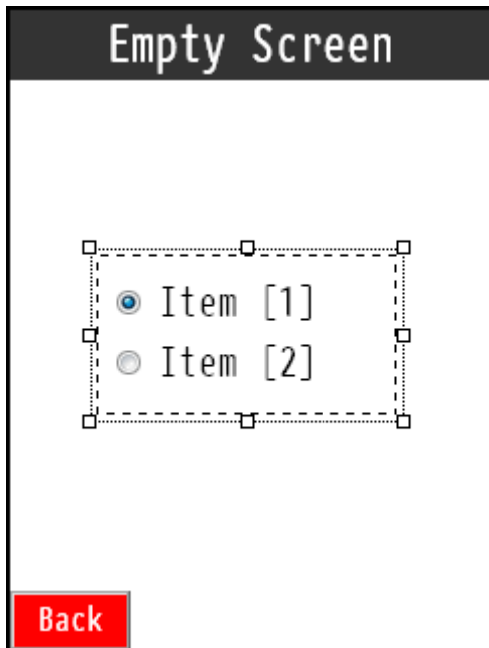


■ Part properties

Name	BtRadioButton_1
▷ Position	43, 122
▷ Size	150, 80
Font Size	14
Bold	False
Fore Color	 Black
Back Color	 White

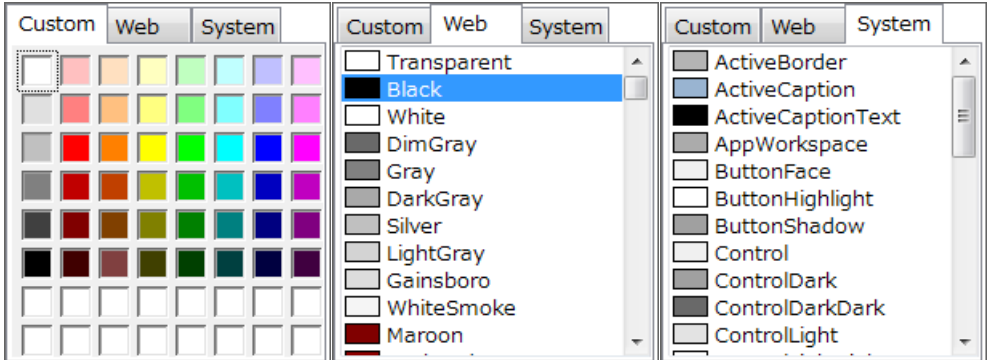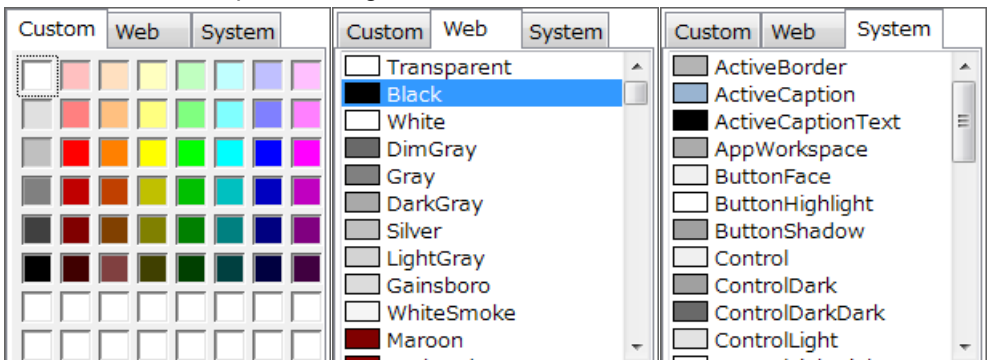Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Font size	Set the font size. [Setting range] 6 to 144 pt
Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text 
Back color	Set the color of the part's background. 

■ Properties display when an internal part is selected

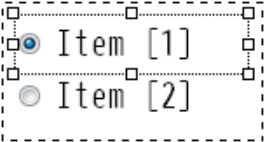


Name	BtRadioButtonItem_1
▷ Position	10, 10
▷ Size	128, 28
Content	Item [1]

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Content	Set the character string to display.



Double-click on a part to display the following dialog box.

■ **Display**

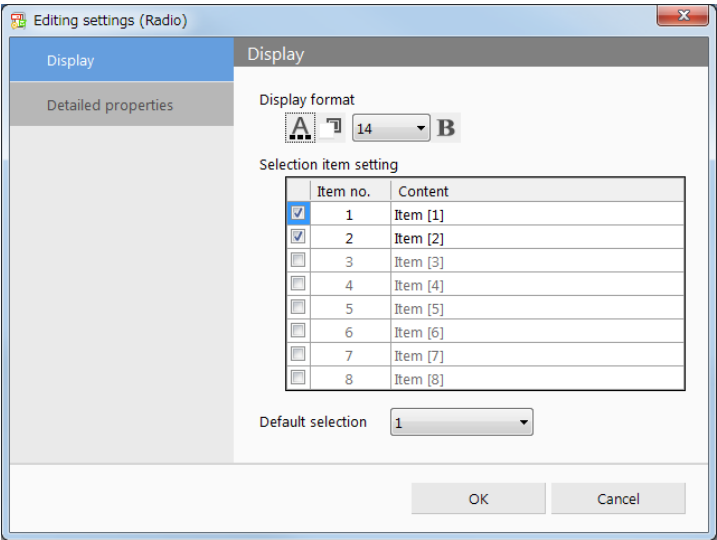

Display format

Configure settings such as the color and font size.

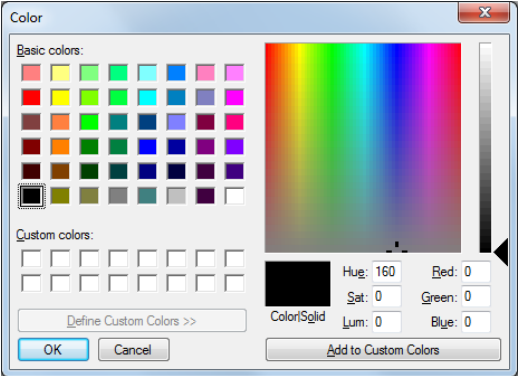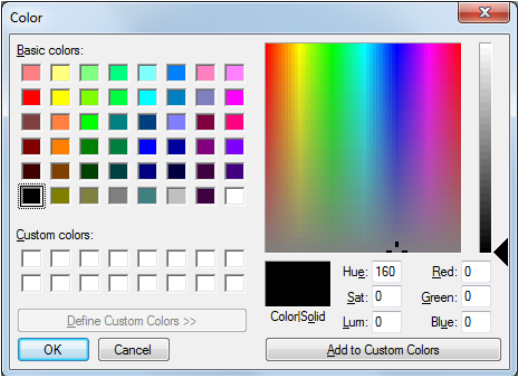	Set the color of the text. 
	Set the color of the part's background 
14 ▾	Set the font size. [Setting range] 6 to 144 pt
	Set the font style to bold.


Selection item setting

Set the number of option (radio) boxes to display (maximum: 8) and the character strings to display.

Default selection

Set the initially selected item in the option (radio) box.

■ Detailed properties

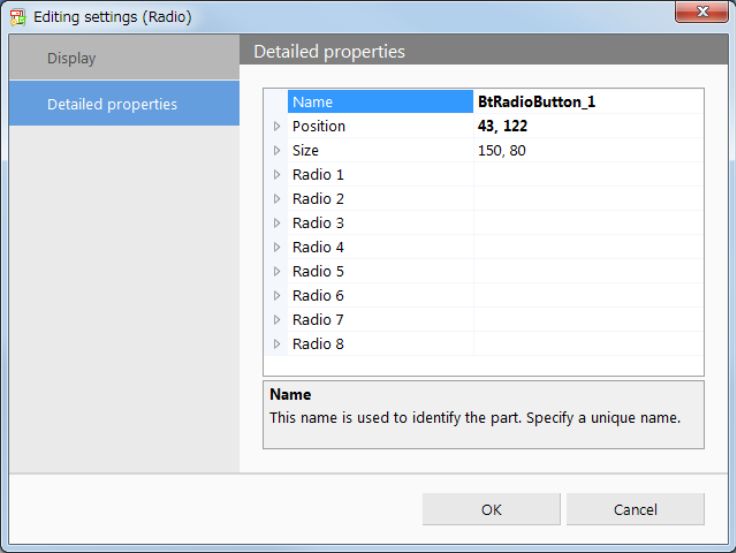

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Radio 1 to 8 Name	Set the name of the part.
Radio 1 to 8 Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Radio 1 to 8 Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640


5.2.6. Lookup Boxes

Use the data entered in a text box to search the master file and display the replaced data. For details on the settings of the internal parts, see "[5.1.1. Label](#)" and "[5.2.1Text Box](#)."

■ Part icon



■ GUI display

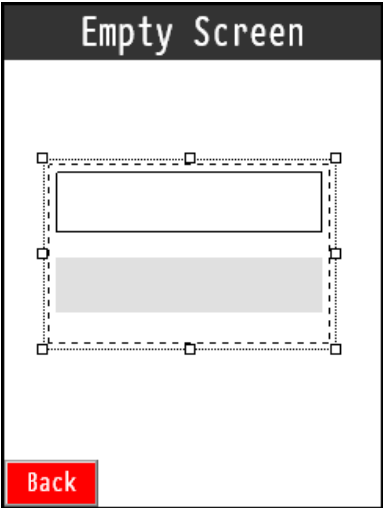


■ Part properties

Name	BtLookUpBox_1
▶ Position	28, 101
▶ Size	180, 115

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640

Double-click on a part to display the following dialog box.

■ Master file selection

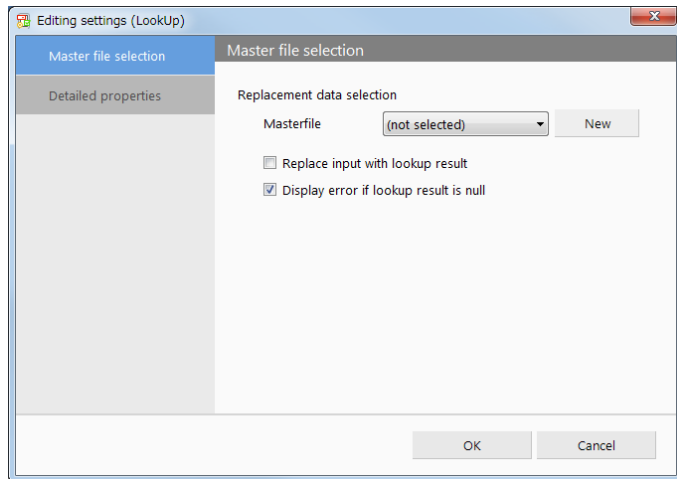


Replacement data selection

• Master file

You can select list populating data from master files that've already been created. Click "New" to display the following dialog box for creating the master file.

Note

* When you have selected a master file that has already been created, the "New" button changes to the "Edit" button. Click "Edit" to display the following dialog box for editing the master file.

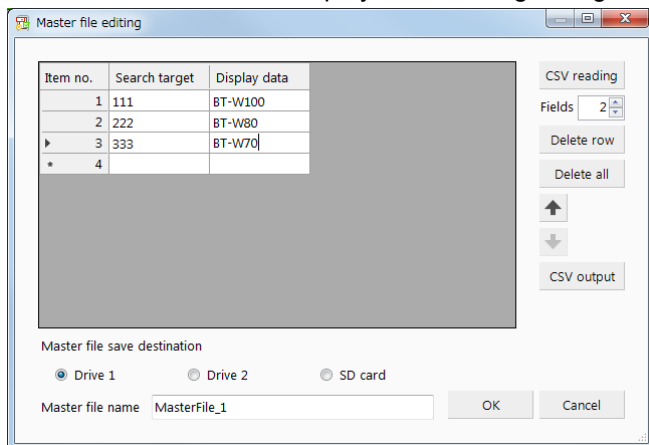

Enter data directly in the cells to create the master file. Column 1 is the "Search target" that is searched for the entered data. Column 2 is the "Display data" that is displayed as the replacement.

• Import CSV

Read a CSV file to create the master file. The CSV file contains comma-separated data entries.

• Fields

You can set the number of data fields in the master file.

* Do not use this with drop-down list boxes.

• "Delete row" button

Delete the selected row.

• "Delete all" button

Delete all the data in the master file.

• "↑" and "↓" buttons

Move the selected row up or down, respectively.

• "CSV output"

Save the created master file to a CSV file.


- **Master file save destination** Select the drive on the BT-W Series which to save the master file when deploying the application.
[Options] Drive 1 | Drive 2 | SD card
- **Master file name**
Set the name of the master file.

- **Replace input with lookup result**
When you check this box, the data entered in the text box will be replaced with the data result from the master file lookup. The internal label part will be deleted, as shown in the following figure.



- **Display error if lookup result is null**
An error will be displayed if the entered data does not match any data in the master file.

■ Detailed properties

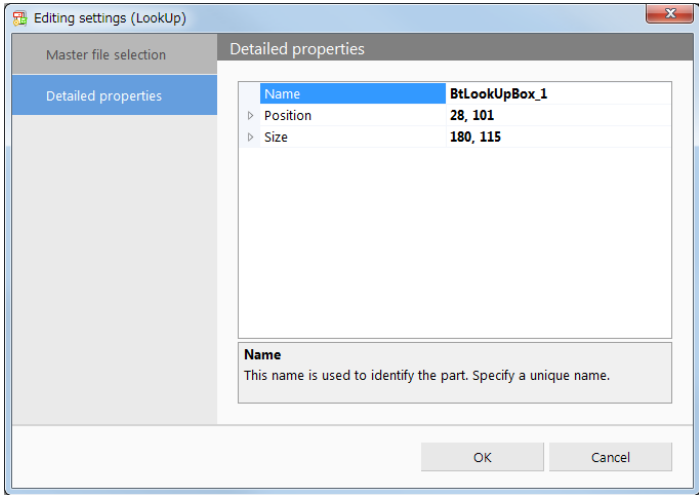


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640

5.3. Buttons


5.3.1. Button

Place a button and set its displayed shape and the operation that is performed when the button is tapped.

■ Part icon

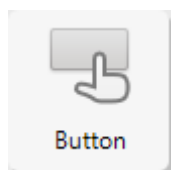





■ GUI display

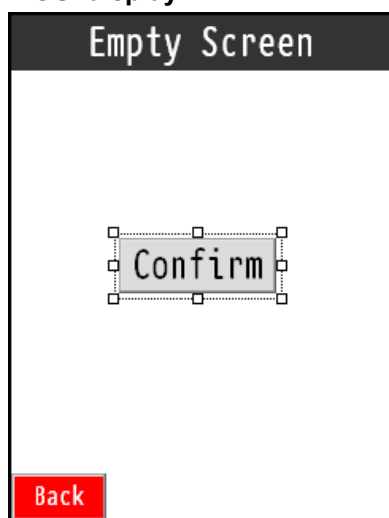

■ Part properties


Name	BtButton_1
▷ Position	68, 141
▷ Size	100, 35
Frame Style	Three dimensional
Content	Confirm
Content Alignment	Center
Font Size	18
Bold	False
Fore Color	Black
Back Color	Gainsboro
Selection Fore Color	Black
Selection Back Color	Gainsboro

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Character string	Set the character string to display.
Content Alignment	Set the alignment of text in the part. [Options] Align left Center Align right

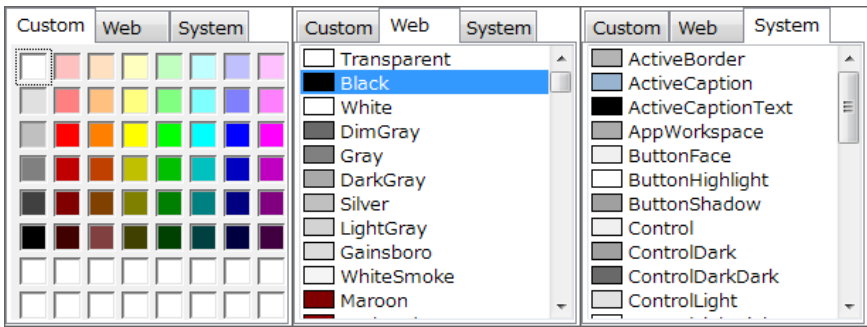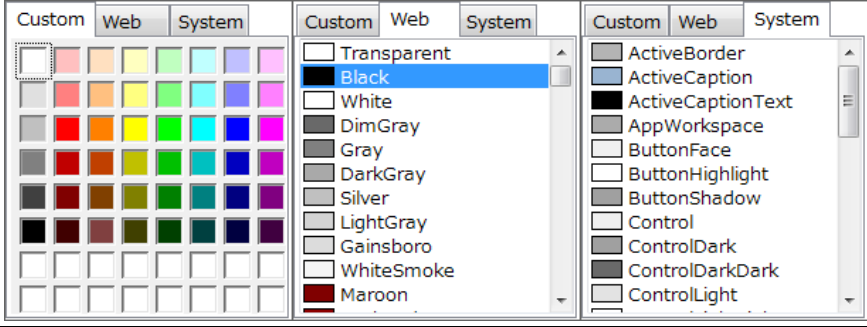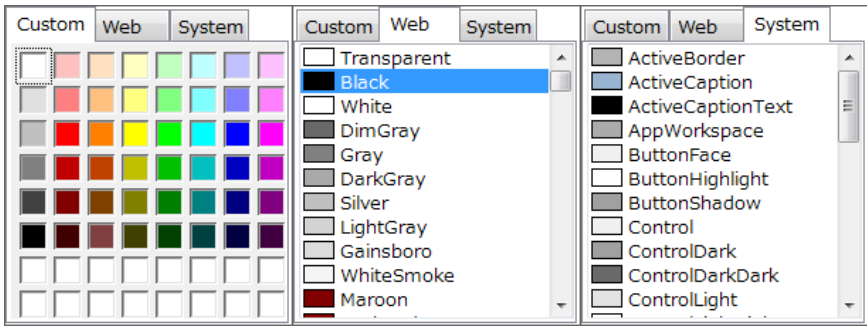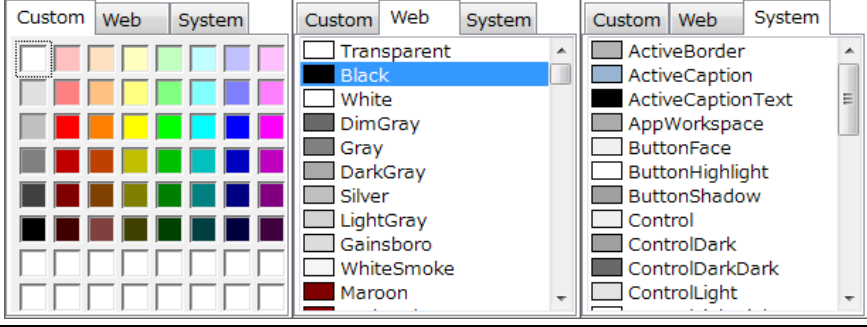Font size	Set the font size. [Setting range] 6 to 144 pt
Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text. 
Back color	Set the color of the part's background. 
Selection Fore Color	Set the color of text content when a part gains focus. 
Selection Back Color	Set the background color of a part when it is selected. 

Double-click on a part to display the following dialog box.

■ **Display (Content display format)**

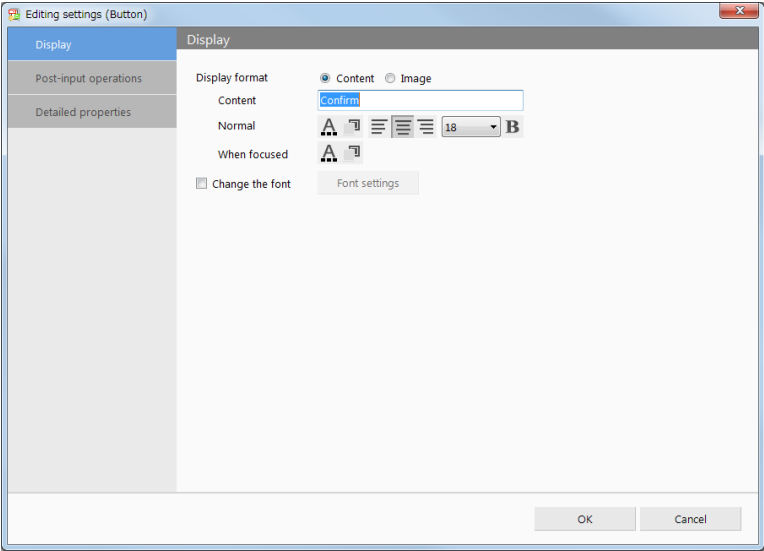



Display format

- **Content**
Set the character string to display on the button.
- **Normal**
Configure settings such as the color and font size to use when the part is not selected.

	Set the color of the text.
	Set the color of the part's background.
	Set the content alignment to be left-aligned.
	Set the content alignment to be center-aligned.
	Set the content alignment to be right-aligned.
	Set the font size. [Setting range] 6 to 144 pt
	Set the font style to bold.


- **When focused**

Configure settings such as the color and font size to use when the part is selected.

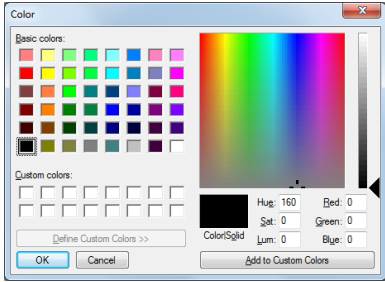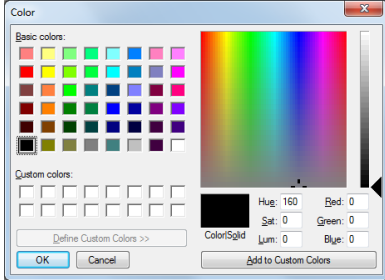	Set the color of text content. 
	Set the color of the part's background. 


Change the font

By using the fonts installed on the development PC and converting to an image, any font may be used for label content.

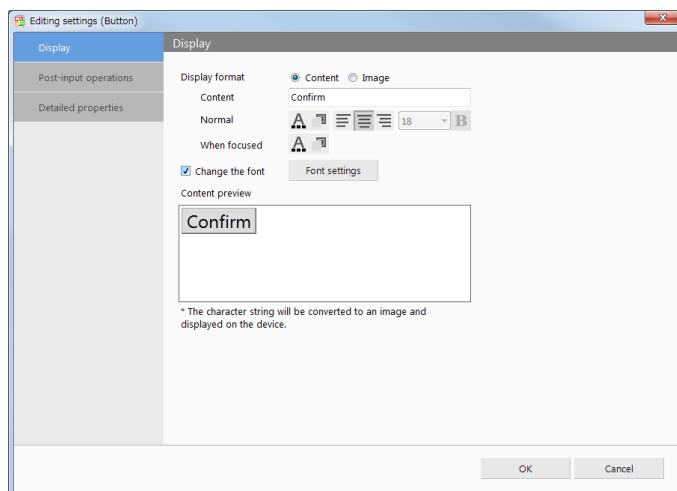

Font settings


Click "Font settings" to display the following dialog box. You can configure settings such as the font type, style, size, and effects.

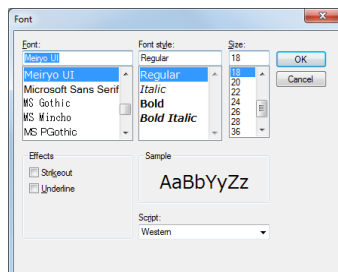

Content preview

You can use this to check the preview of the content's font set with "Font settings."

■ **Display (image display format)**

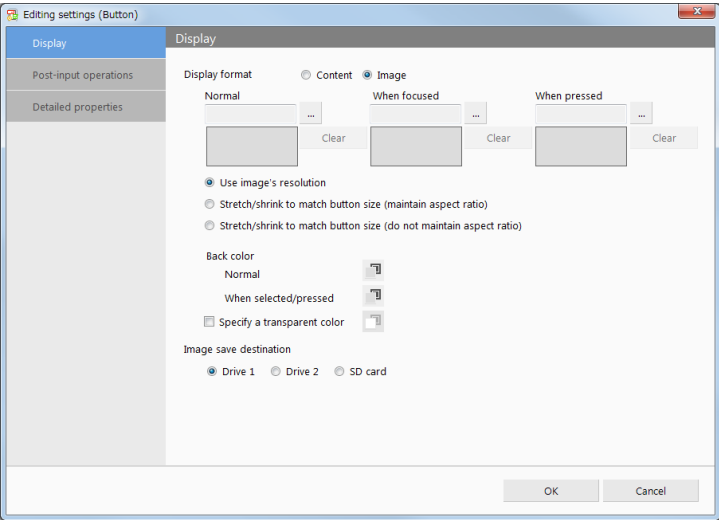

Display format

Set the image to display on the button. Select an image for three different states: "Normal," "When focused," and "When pressed."

You can select the image size from the options shown below.

- [Options] Use image's resolution
 Stretch/shrink to button match size (maintain aspect ratio)
 Stretch/shrink to button match size (do not maintain aspect ratio)

•**Back color**

Set the button's Back color for two different states: "Normal" and "When selected/pressed."

•**Specify a transparent color**

Specify the color to set as the transparent color.

* The color set as the transparent color will be replaced with the part's Back color.


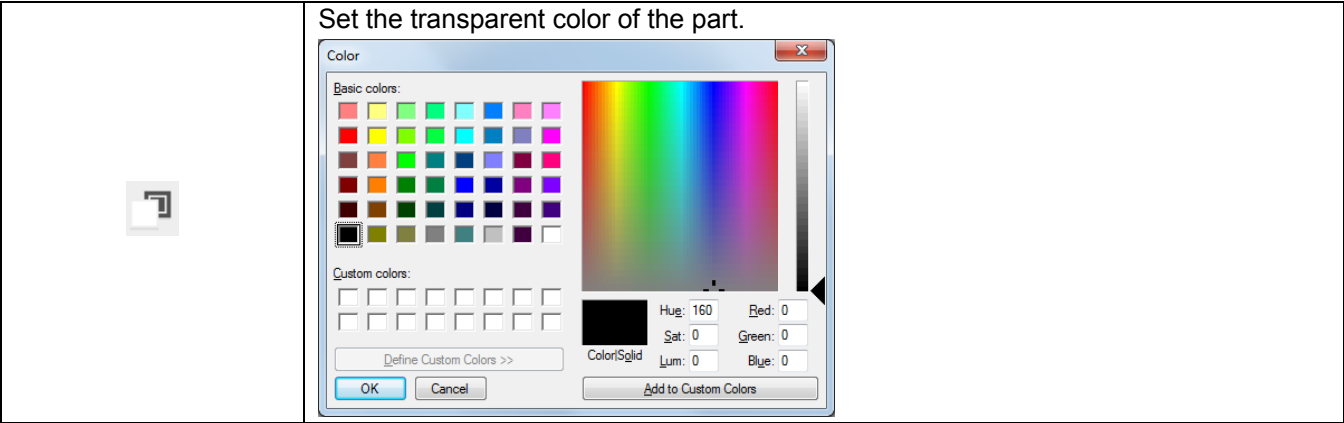


Image file save destination

Select the drive on BT-W Series where the image files are saved.

- [Options] Drive 1 | Drive 2 | SD card

■ Post-input operations

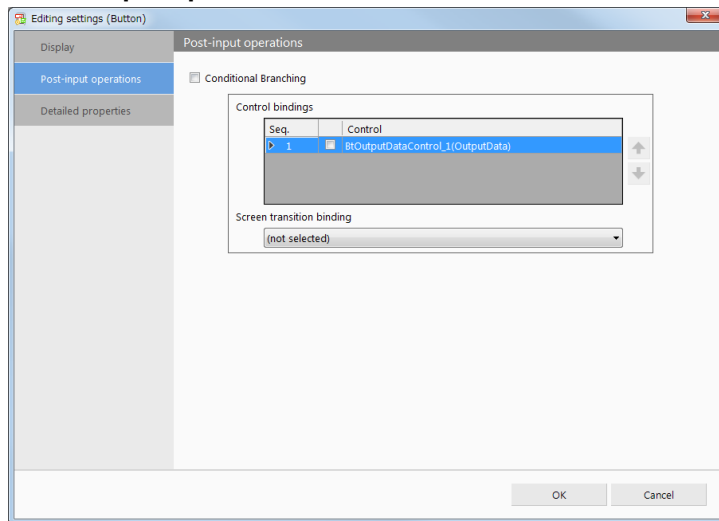

Control bindings


Controls that can currently be used are displayed here. Select the check box corresponding to the control to execute when input is complete. You can execute multiple controls at the same time and use the arrow buttons to change the execution order

Screen transition binding


If you want to transition to a screen after completion of input, select the screen, you can transition to this screen at the same time as you execute the controls. In this situation, the controls will be executed first.

Conditional branching

If you check this box, the following screen will be displayed. In addition to setting screen transition bindings, you can add, delete, and edit the conditional statements for executing these operations. Click "Edit" to display a dialog box for setting conditional branching.

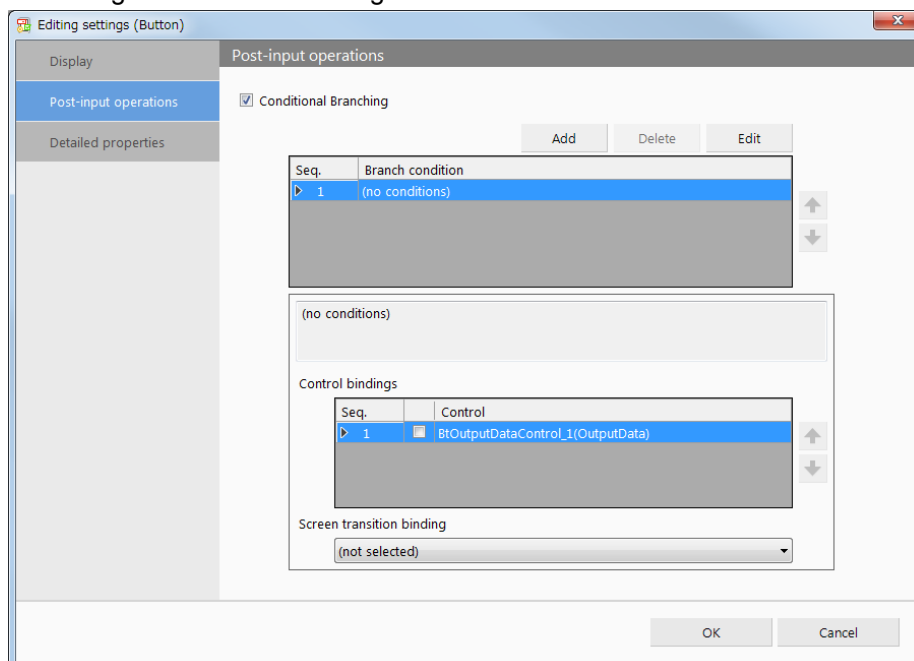

Click "Add" to set a condition.

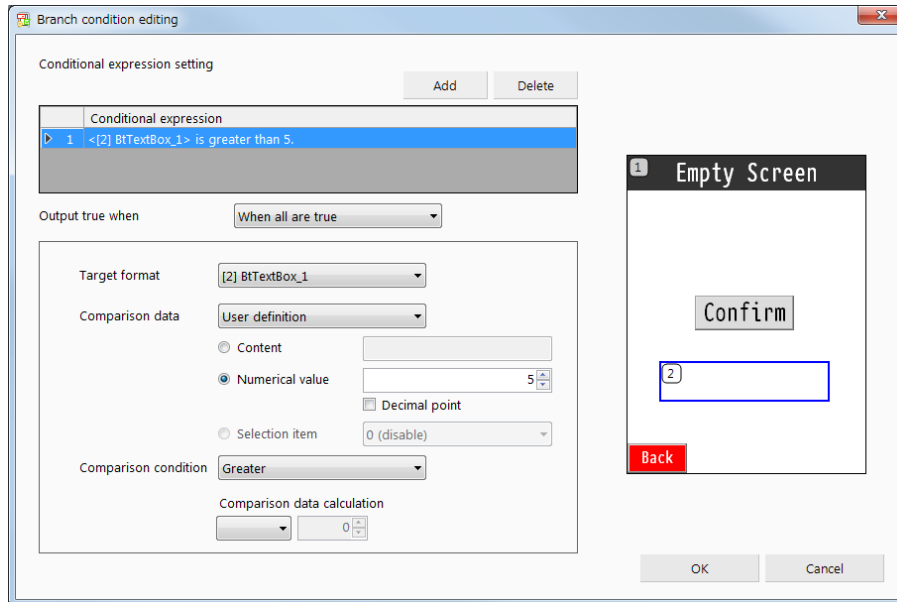

Conditional expression setting

The list of conditional expressions is displayed here. You can combine conditions by adding them together. When combining conditions, select "When all are true" (an "AND" condition) or "When either is true" (an "OR" condition).

Target format

Select the part that will be the target for the comparison of the conditional expression.

Note

* The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen.

Comparison data

Select the part that will be the comparison data for the conditional expression. If you select "User definition," select "Character string," "Numerical value," or "Selection item," and then set the data.

Note

* "Selection item" is enabled when you select an option (radio) box or check box for the comparison target.

* The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen.

Comparison condition

Set the comparison condition. If you have selected a numerical value for the comparison data, the "Compare data calculation" setting will be enabled.

• When comparing content

[Options] Match (character string) | No match (character string) | Contains

• When comparing numerical values

[Options] Equal (numerical value) | Not equal (numerical value) | Grater | Less | Or greater |Or less

• When "Selection item" is selected for the comparison data

[Options] Equal (numerical value) | Not equal (numerical value)

[Example]

Consider the case of applying conditional branching to the value entered into the text box so that the form is completed using "OutputData" when the value is 1, the CSV data is sent using "SendDataFile" when the value is 2, and the application returns to the "Menu" screen when the value is 3.

1. Add three branch conditions.

Conditional Branching

Seq.	Branch condition
1	(no conditions)
2	(no conditions)
3	(no conditions)

(no conditions)

Control bindings

Seq.	Control
1	BtOutputDataControl_1(OutputData)
2	BtSendDataFileControl_1(SendDataFile)

Screen transition binding

(not selected)

2. Set the branching conditions as shown below. In the following example, the value is "1," so set "Numerical value" in the comparison data to "2" and "3" for the other branch conditions where the value is "2" and "3," respectively.

Branch condition editing

Conditional expression setting

Conditional expression

1 <[2] BtTextBox_1> is equivalent to 1.

Output true when

When all are true

Target format

[2] BtTextBox_1

Comparison data

User definition

☐ Content

☒ Numerical value

☐ Decimal point

☐ Selection item

0 (disable)

Comparison condition

Equal (numerical value)

Comparison data calculation

0

Empty Screen

Confirm

2

Back

OK Cancel

3. Set the interlock operations for each branching condition as shown below.

Conditional Branching

AddDeleteEdit

Seq.	Branch condition
1	<BtTextBox_1> is equivalent to 1.
2	<BtTextBox_1> is equivalent to 2.
3	<BtTextBox_1> is equivalent to 3.

<BtTextBox_1> is equivalent to 1.

Control bindings

Seq.	Control
1	☒ BtOutputDataControl_1(OutputData)
2	☐ BtSendDataFileControl_1(SendDataFile)

Screen transition binding
(not selected)

Conditional Branching

AddDeleteEdit

Seq.	Branch condition
1	<BtTextBox_1> is equivalent to 1.
2	<BtTextBox_1> is equivalent to 2.
3	<BtTextBox_1> is equivalent to 3.

<BtTextBox_1> is equivalent to 2.

Control bindings

Seq.	Control
1	☐ BtOutputDataControl_1(OutputData)
2	☒ BtSendDataFileControl_1(SendDataFile)

Screen transition binding
(not selected)

Conditional Branching

AddDeleteEdit

Seq.	Branch condition
1	<BtTextBox_1> is equivalent to 1.
2	<BtTextBox_1> is equivalent to 2.
3	<BtTextBox_1> is equivalent to 3.

<BtTextBox_1> is equivalent to 3.

Control bindings

Seq.	Control
1	☐ BtOutputDataControl_1(OutputData)
2	☐ BtSendDataFileControl_1(SendDataFile)

Screen transition binding
TopMenu

Detailed properties

Editing settings (Button)

Display

Post-input operations

Detailed properties

Detailed properties

Name	BtButton_1
Position	68, 141
Size	100, 35
Frame Style	Three dimensional
Display focus frame	True

Name
This name is used to identify the part. Specify a unique name.

OKCancel

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Display focus frame	Select whether to show or hide the frame when the part is selected. [Options] True False


5.3.2. Stop Watches

You can measure time by tapping the "Start/Stop" button. The start time, stop time, and elapsed time will be output. For details on the settings of the internal parts, see ["5.1.1. Label"](#) and ["5.3.1. Button."](#)

■ Part icon



■ GUI display

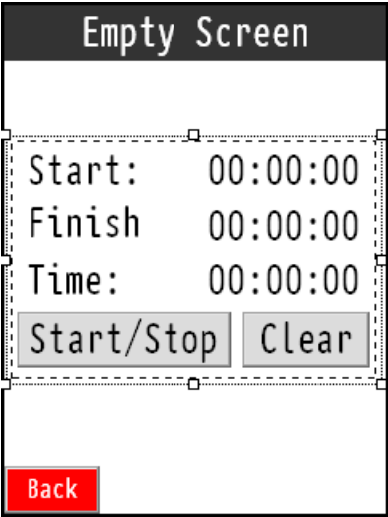


■ Part properties

Name	BtStopWatch_1
▷ Position	4, 85
▷ Size	230, 150

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640

Double-click on a part to display the following dialog box.

■ **Display**

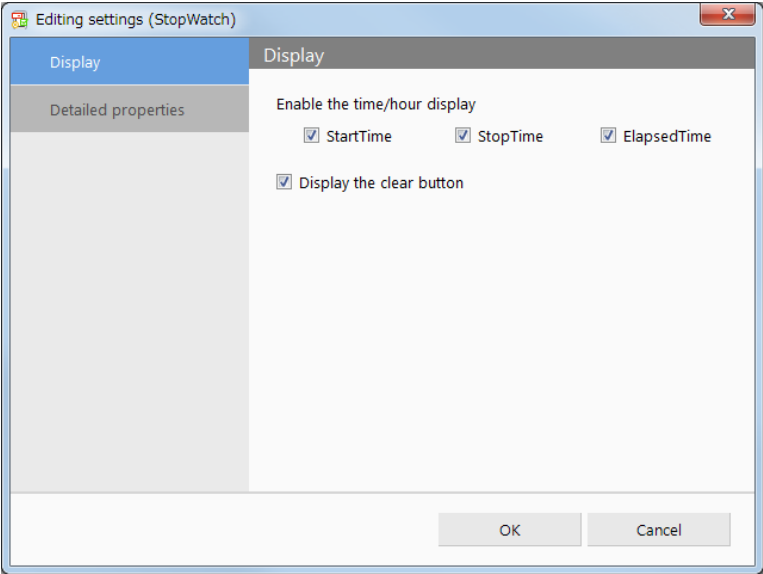


Enable the time/hour display

You can enable/disable the display of the start time, stop time, and elapsed time.

Display the clear button

Check this box to display the "Clear" button. This button can be used to reset the time/hour display to "00:00:00."

■ **Detailed properties**

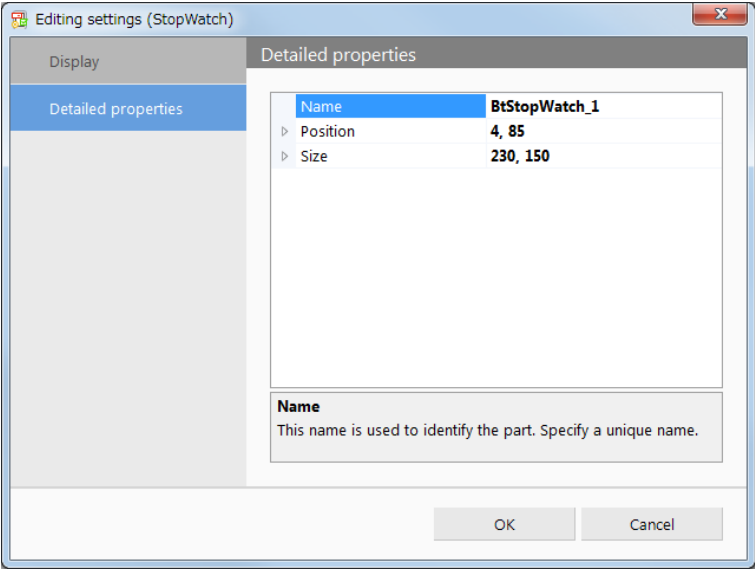


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640


5.3.3. External Application Execution Buttons

You can launch another application saved on the BT-W Series. To return to the previous application, hold down the Fn key for 2 seconds. (The device will restart.)

■ Part icon

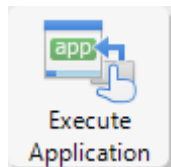





■ GUI display

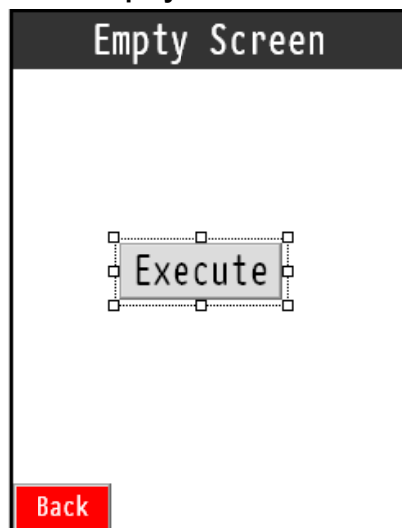

■ Part properties


Name	BtExecuteApplicationButton
▷ Position	65, 142
▷ Size	100, 35
Frame Style	Three dimensional
Content	Execute
Content Alignment	Center
Font Size	18
Bold	False
Fore Color	Black
Back Color	Gainsboro
Selection Fore Color	Black
Selection Back Color	Gainsboro

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Content	Set the character string to display.
Content Alignment	Set the alignment of text in the part. [Options] Align left Center Align right
Font size	Set the font size. [Setting range] 6 to 144 pt

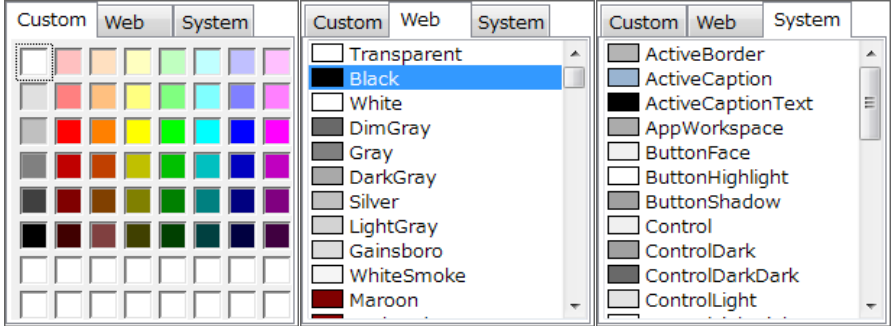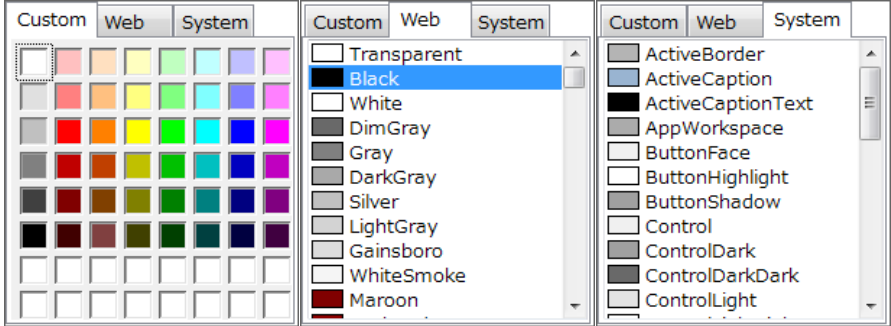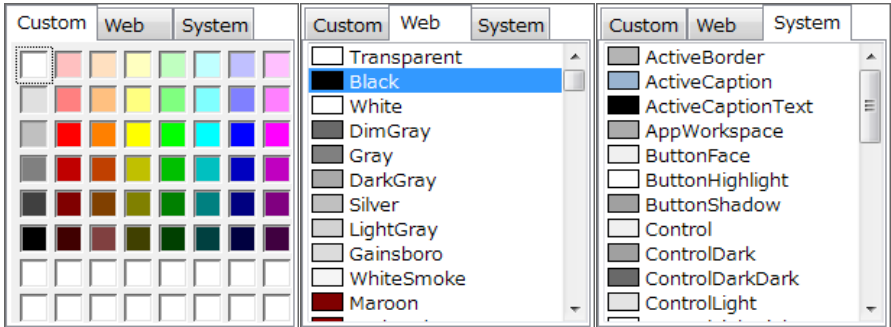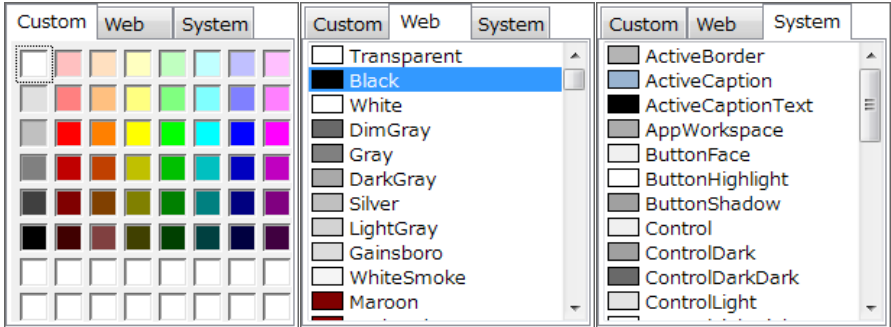Bold	Set the font style to bold. [Options] False True
Fore Color	Set the color of the text. 
Back color	Set the color of the part's background. 
Selection Fore Color	Set the color of characters when the part is selected. Use the following dialog box to set the color. 
Selection Back Color	Set the background color of a part when it is selected. 

Double-click on a part to display the following dialog box.

■ **Display (Content display format)**

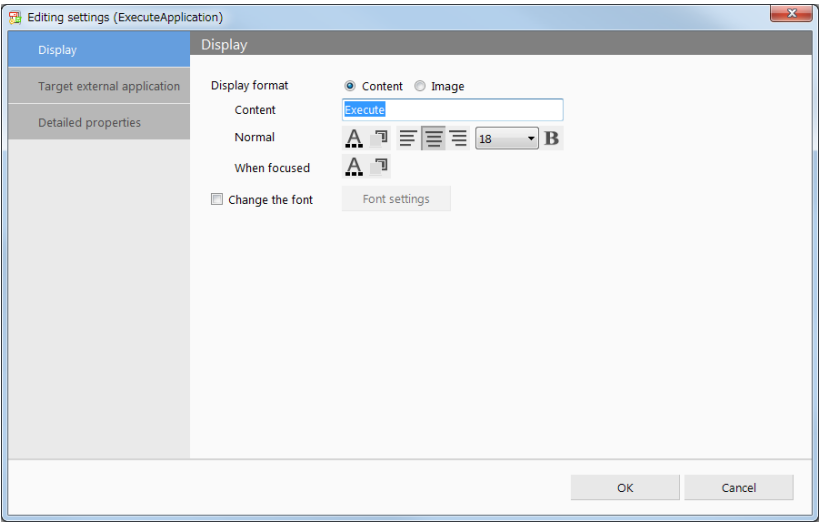



Display format

- **Content**
Set the character string to display on the button.
- **Normal**
Configure settings such as the color and font size to use when the part is not selected.

	Set the color of the text.
	Set the color of the part's background.
	Set the content alignment to be left-aligned.
	Set the content alignment to be center-aligned.
	Set the content alignment to be right-aligned.
	Set the font size. [Setting range] 6 to 144 pt
	Set the font style to bold.


- **When focused**

Configure settings such as the color and font size to use when the part is selected.

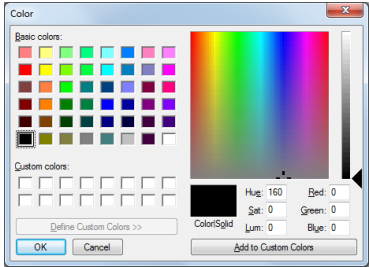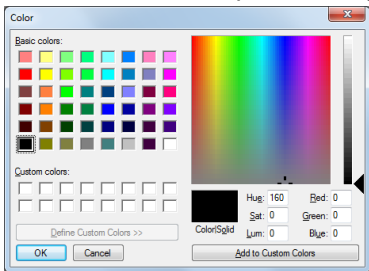	Set the color of text content. 
	Set the color of the part's background. 


Change the font

By using the fonts installed on the development PC and converting to an image, any font may be used for label content.

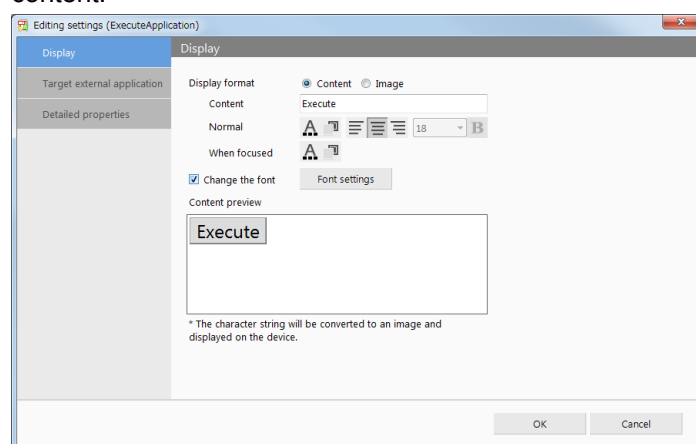

Font settings


Click "Font settings" to display the following dialog box. You can configure settings such as the font type, style, size, and effects.

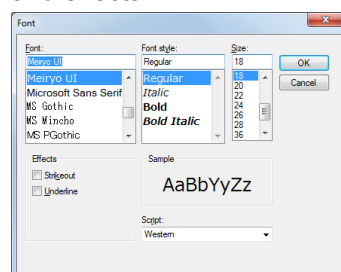

Content preview

You can use this to check the preview of the content's font set with "Font settings."

■ **Display (Image display format)**

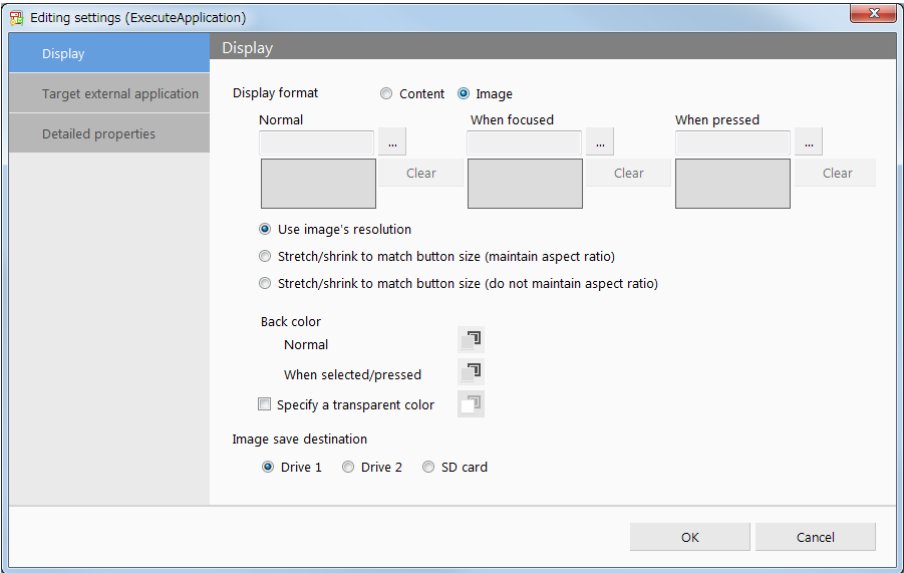

Display format

Set the image to display on the button. Select an image for three different states: "Normal," "When focused," and "When pressed."

You can select the image size from the options shown below.

- [Options] Use image's resolution
 Stretch/shrink to button match size (maintain aspect ratio)
 Stretch/shrink to button match size (do not maintain aspect ratio)

• **Back color**

Set the button's Back color for two different states: "Normal" and "When selected/pressed."

• **Specify a transparent color**

Specify the color to set as the transparent color.

* The color set as the transparent color will be replaced with the part's Back color.


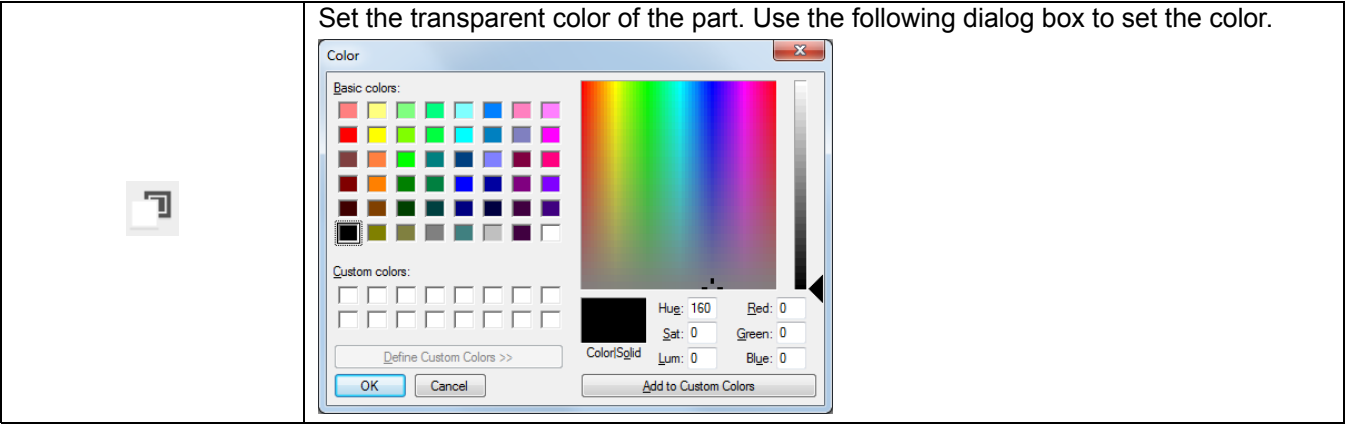


Image save destination

Select the drive on BT-W Series where the image files are saved.

- [Options] Drive 1 | Drive 2 | SD card

■ Target external application

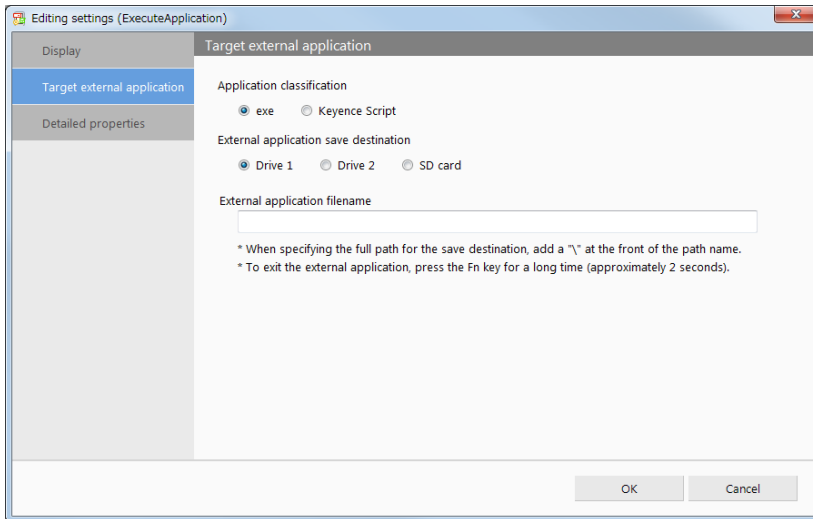


Application classification

Select the classification of the application to call.

[Options] exe | Keyence Script

■ When you select "exe" for "Application classification"

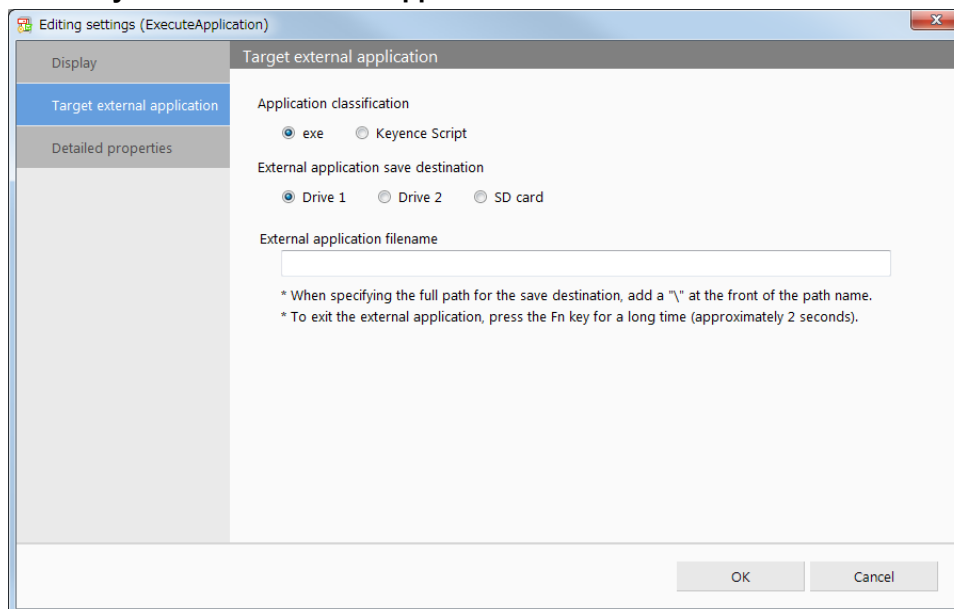

External application save destination


Select the drive BT-W Series where the application to be called is saved.

[Options] Drive 1 | Drive 2 | SD card

External application filename

Specify the filename of the application to be called. You can also specify the file by its full filepath. In this situation, add a backslash ("\") at the start of the path name.

■ When you select "Keyence Script" for "Application classification"

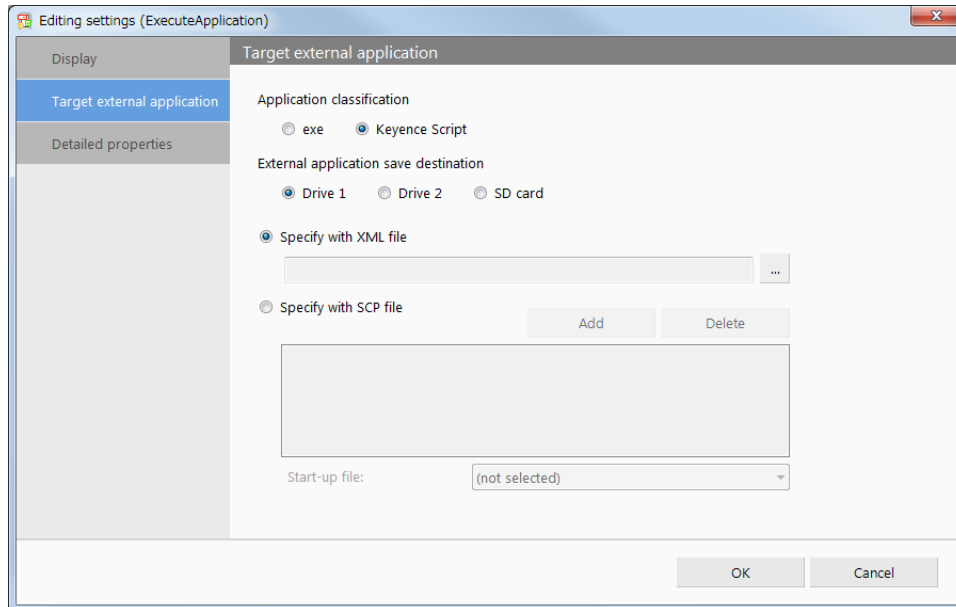

External application file save destination

Select the drive on which the application to call is saved.

[Options] Drive 1 | Drive 2 | SD card

Specify with XML file

Specify a project file (extension: xml) that has been developed with BT Application Builder, which is included with the BT-H10W.

* You have to use BT Application Builder to generate the source in advance.

Specify with SCP file

Specify the script files. You do not have to specify the included files.

* When you are using script files generated with BT Application Builder, you do not require the script files inside the "Lib" and "RES" folders.

Start-up file

Specify which script file to start initially from among the script files specified with "Specify with SCP file."

* When you are using script files generated with BT Application Builder, this script is "App.scp."

■ How to return to the calling application


When you select "exe" for "Application classification" with the BT-W70/W80/W100 Series

Hold down the [Fn] key for 2 seconds. (The BT-W device will reboot.)

When you select "Keyence Script" for "Application classification" with the BT-W70/W80/W100 Series

When you press the [Fn] key, a message box appears. Click "Yes."

■ Detailed properties

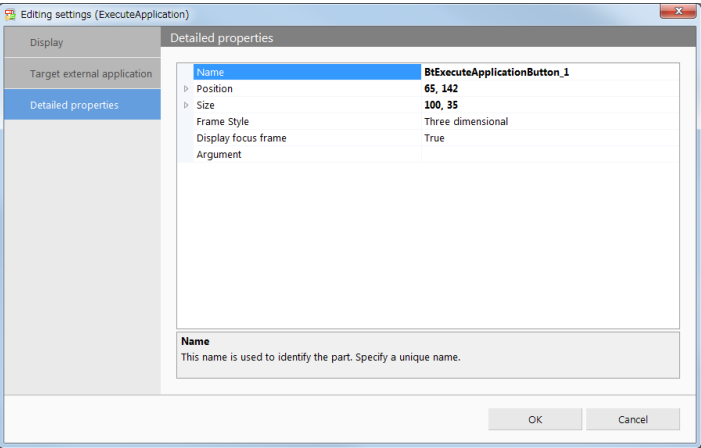


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Argument	Specify the argument of the application to call.

5.4. Views


5.4.1. Picture View

Display an image on the screen.

■ Part icon

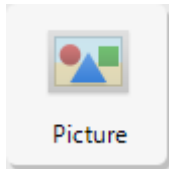


■ GUI display

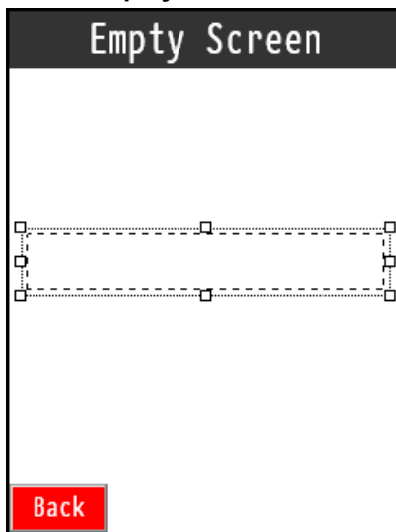

■ Part properties

Name	BtPictureView_1
▷ Position	10, 136
▷ Size	220, 35
Background color	☐ White

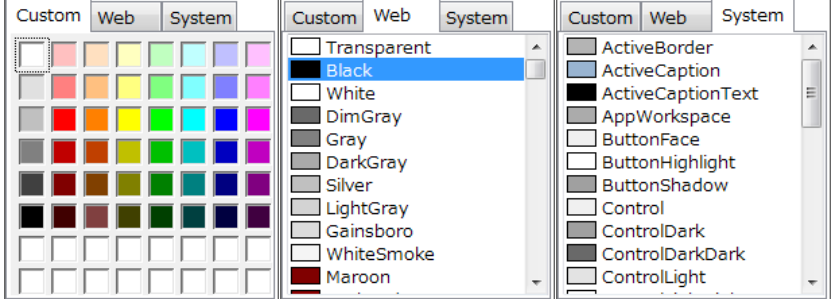Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Back color	Set the color of the part's background. 

Double-click on a part to display the following dialog box.

■ Image file selection

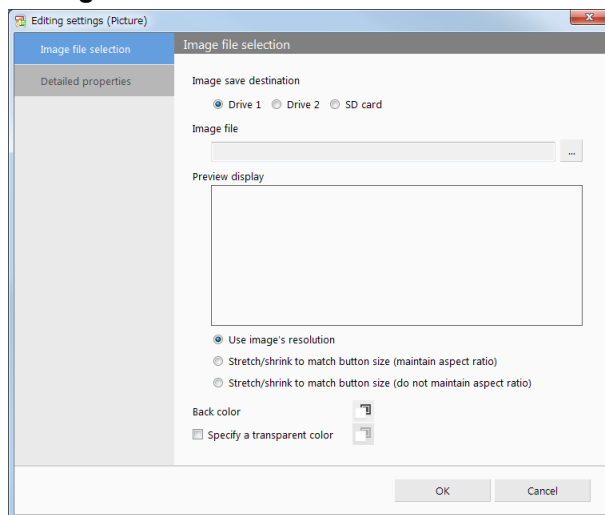


Image save destination

Select the drive on BT-W Series where the image files are saved.

[Options] Drive 1 | Drive 2 | SD card

Image file

Import an image file into the project.

Preview display

A preview of the image is displayed here. You can select the image size from the options shown below.

- [Options]
- Use image's resolution
- Stretch/shrink to button match size (maintain aspect ratio)
- Stretch/shrink to button match size (do not maintain aspect ratio)


Back color

Set the Back color of the part.


Specify a transparent color

Specify the color that you want to set as the transparent color.

* The color set as the transparent color will be replaced with the part's back color.

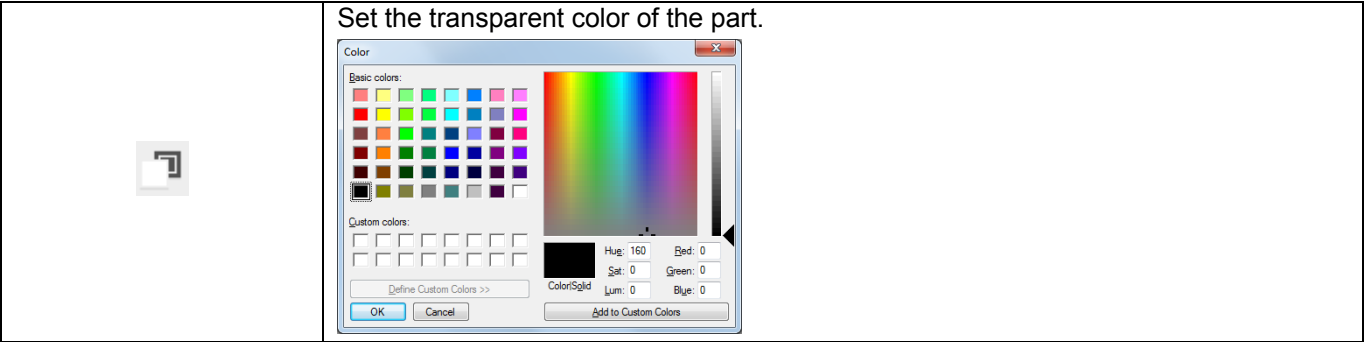

■ Detailed properties

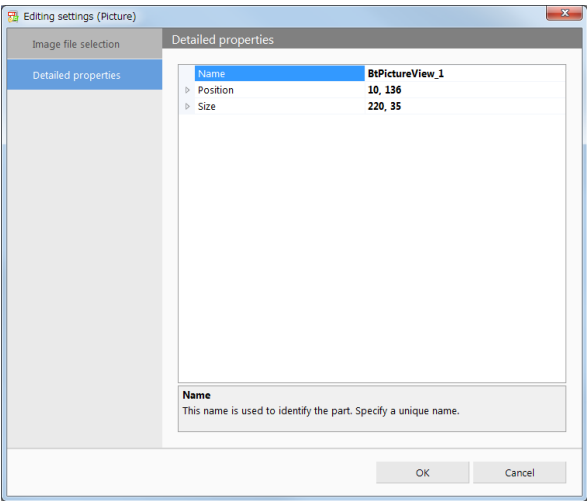

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640


5.4.2. Table View

Display a table on the screen. You can check a list of master files and data files.

■ Part icon



■ GUI display

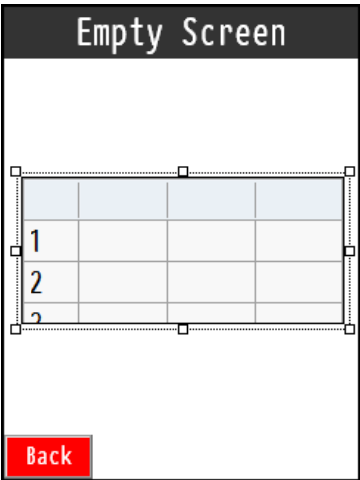

■ Part properties

Name	BtTableView_1
▷ Position	11, 115
▷ Size	220, 100
Font size	14

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Font size	Set the font size. [Setting range] 6 to 144 pt

Double-click on a part to display the following dialog box.

■ Display settings

Editing settings (Table)

Display settings

Display data selection

Detailed properties

Display format

Displayed column count: 3

☒ Display column name

☒ Display row number

Font size: 14

Header color scheme pattern

Column name/width settings

	Row number	Column 1	Column 2	Column 3
Column name				
Column width	40	60	60	60

Current table width: 220

If the total width of all the columns exceeds the width of the table, you can scroll through the table using the cross-cursor key.

OK Cancel

Display format

• Displayed column count

Select the number of columns to display in the table.

[Options] 1 to 8

• Display column name

Check this box to display the column names in the first row.

• Display row number

Check this box to display the row numbers in the first column.

• Font size

Set the font size of the contents.

[Options] 6 to 144 pt

• Header color scheme pattern

Select the table's color scheme pattern.


[Options]

Column name/width settings

Set the names and widths of the columns. Set the column widths so that their total equals the "Current table width."

If the total width exceeds this value, you can scroll through the table using the cross-cursor key.


■ Display data selection

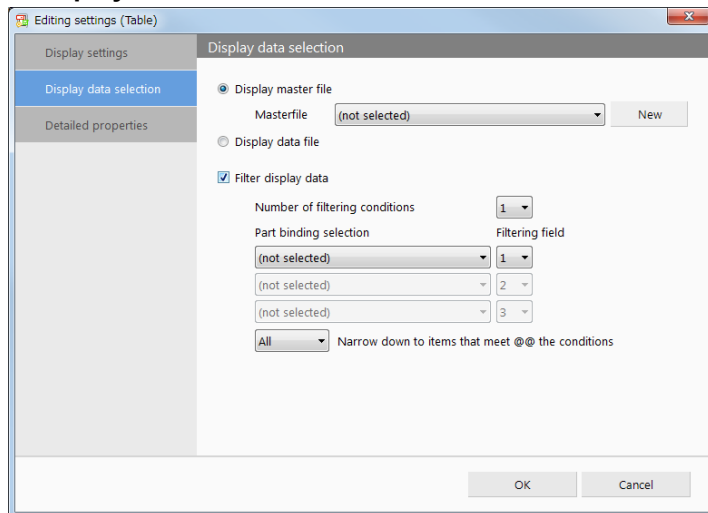

Display master file

You can select list populating data from master files that've already been created. Click "New" to display the following dialog box for creating the master file.

* When you have selected a master file that has already been created, the "New" button changes to the "Edit" button. Click "Edit" to display the following dialog box for editing the master file.

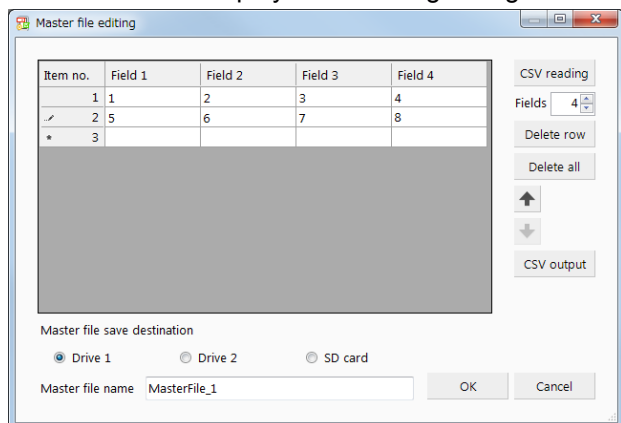

Enter data directly in the cells to create the master file to display.

- **Import CSV**

Read a CSV file to create the master file. The CSV file contains comma-separated data entries.

- **Fields**

You can set the number of data fields in the master file.

* Do not use this with drop-down list boxes.

- **"Delete row"**

Delete the selected row.

- **"Delete all"**

Delete all the data in the master file.

- **"↑" and "↓" buttons**

Move the selected row up or down, respectively.

- **"CSV output"**

Save the created master file to a CSV file.

- **Master file save destination**

Select the drive on the BT-W Series which to save the master file when deploying the application.

[Options] Drive 1 | Drive 2/SD card

- **Master file name**

Set the name of the master file.

Display data file

The data file will be displayed. Use this option when you are referencing the history of the output data.

Filter display data

You can use the input data to search the master file and display a narrowed-down set of data.


• Number of filtering conditions

Select the number of narrowing down conditions. [Options] 1 to 3

• Part binding selection

Select the part for which to enter the narrowing down data and the column number to target for narrowing down.
The column numbers that you can select vary depending on the "Filtering field" setting.

■ Detailed properties

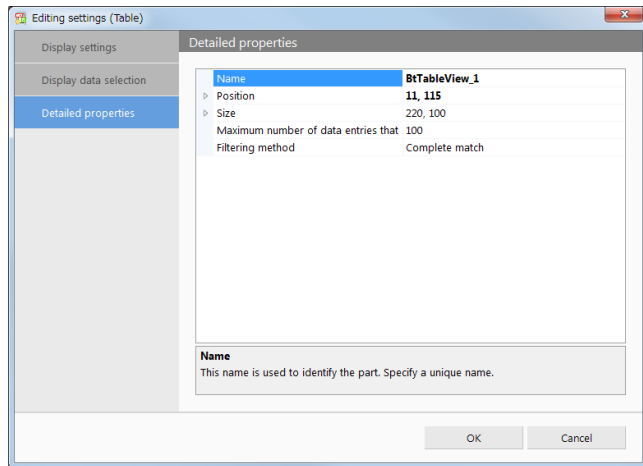


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate: 0 to 479, Y coordinate: 0 to 639
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal: 1 to 480, Vertical: 1 to 640
Maximum number of data entries that can be secured	Set the maximum number of data entries (rows) to display in the table view. [Setting range] 1 to 1024 entries
Filtering method	Select the method to use when narrowing down the display data. [Options] Complete match Forward match Backward match Partial match

5.5. Controls


5.5.1. Input Item Count Control

This part can be used to set complicated operations related to quantity input. Quantities, for example, can be set to automatically increment during input when the same barcode data is read repeatedly. The InputItem Count control requires atleast 2 inputs for entering the item code and for the quantity count in advance.

■ Control icon

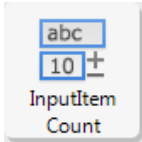


■ Controls List display

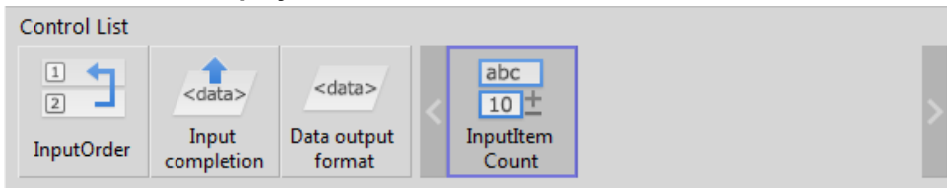

Double-click on a part to display the following dialog box.

■ Input item count

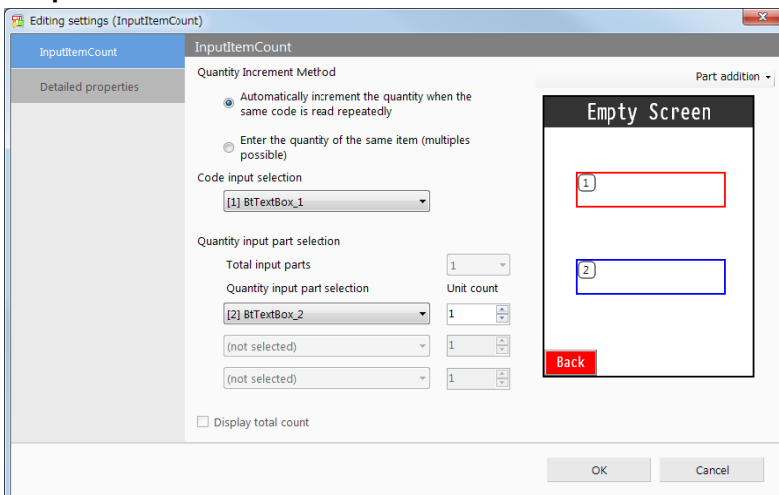

Quantity Increment method

• Automatically increment the quantity when the same code is read consecutively

During quantity input, the quantity will be automatically incremented when the same barcode data is read repeatedly and in a consecutive order. The quantity input will be skipped when barcode data that differs from that read previously is read. The quantity is output with the data displayed in the text box.

• Enter the quantity of the same item (multiples possible)

You can multiply the entered quantity by a unit count or bind together multiple inputs to total them and display the results.

Code input selection

Select the text box that will be used to read the barcode data.

* The value inside the brackets ([]) of the selected item corresponds to the part's number in the preview on the right side of the screen.

Quantity input put selection

• Total input parts

Select the number of text boxes to use for entering quantities.

[Setting range] 1 to 3

* This is enabled when you select "Enter the quantity of the same item (multiples possible)."

• Quantity input part selection

Select the text box to use for entering the quantity and set the unit count (1 to 65535) to multiply the entered quantity by.

The number of enabled settings is depending on the "Total input parts."


* The value inside the brackets ([]) of the selected item corresponds to the part's number in the preview on the right side of the screen.

Display total count

Check this box to display the total (multiplied by the unit count) of the multiple quantity inputs that you have set above.

* This is enabled when you select "Enter the quantity of the same item (multiples possible)."

■ Detailed properties

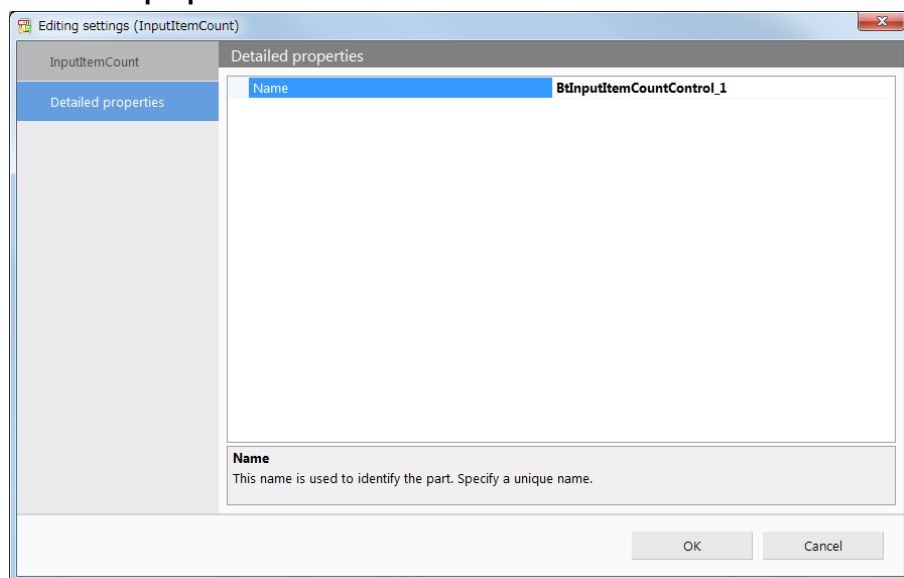


Name	Set the control's name.
------	-------------------------


5.5.2. DataMatch Control

Compare the values of two or more parts. The DataMatch Control requires at least 2 contents, such as a label and text box, in advance.

■ Control icon

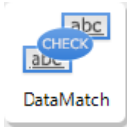


■ Control List display

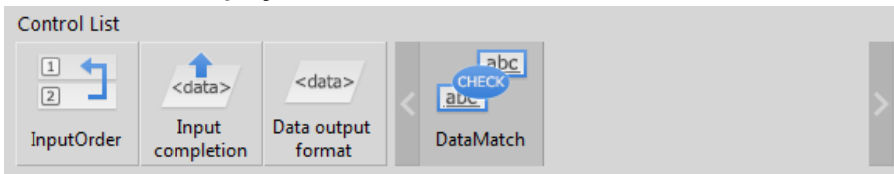

Double-click on a part to display the following dialog box.

■ DataMatch condition settings

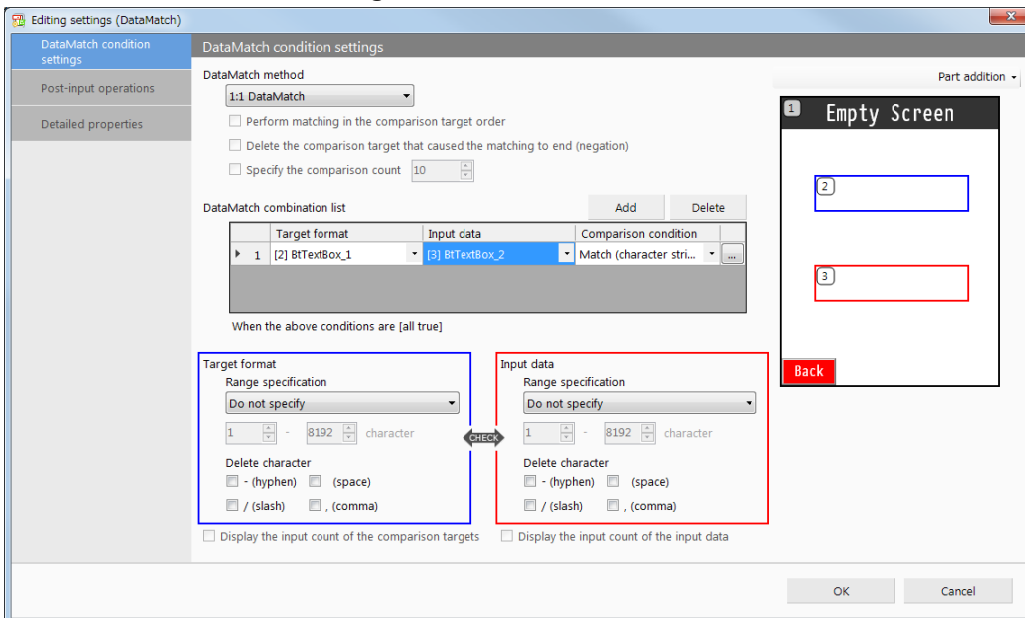

DataMatch method

Select the DataMatch method.

[Options] 1:1 DataMatch | 1:N DataMatch | N:N DataMatch

- 1:1 DataMatch ... A single input is compared to a single target.
- 1:N DataMatch ... Multiple inputs are compared to a single target.
- N:N DataMatch ... Multiple inputs are compared to multiple targets via table containment.

- **Perform matching in the comparison target order**

Check this box to compare the input to the target list in order othe targets were added

* Check the "Delete the comparison target that caused the matching to end (negation)" check box.

* This is enabled when you select "N:N DataMatch."

- **Delete the comparison target that caused the matching to end (negation)**

Check this box to exclude the comparison targets when compared at once.

* This is enabled when you select "N:N DataMatch."

- **Specify the comparison count**

Set the number of times to enter the input data.

[Comparison count] 1 to 65535

* This is enabled when you select "1:N DataMatch " or "N:N DataMatch."

DataMatch combination list

Select the comparison target and the input data parts, and then set the matching condition.

* The value inside the brackets ([]) of the selected partitem corresponds to the part's number in the preview on the right side of the screen.

[Options] Match (character string) | No match (character string) | Equal (numerical value) | Not equal (numerical value) | Contains | Greater | Less | Or greater | Or less

- **"Add" button**

You can add up to 8 target/input pairs for matching. If all comparison conditions are met, the result will pass (OK)


- **"Delete" button**

Delete the selected target/input pair.

- **button**

You may add an additional calculation to the match process here. The calculation is applied to the target before the comparison is evaluated. You can select addition, subtraction, multiplication, or division when the input data is a numerical value. You can select addition or subtraction when the input data is a date.

[Setting range] 0 to 65535

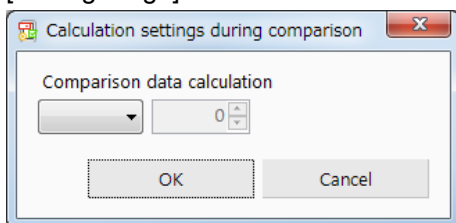

Target format

• Range specification


Set a digit range to use when evaluating the target data.

[Specify the range]

Specify the index value for the start and end of the data in the target. Data outside this digit range will not be used in evaluation.

[Use Application Identifier (AI)]


Specify the AI to extract the data. Click "Edit" to display the following dialog box for adding an AI.

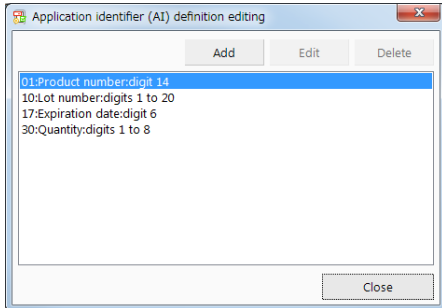

"Add" button ... Add a condition for extracting data with an AI. A dialog box is displayed.

"Edit" button ... Edit the added conditions. A dialog box is displayed.

"Delete" button ... Delete the added conditions.

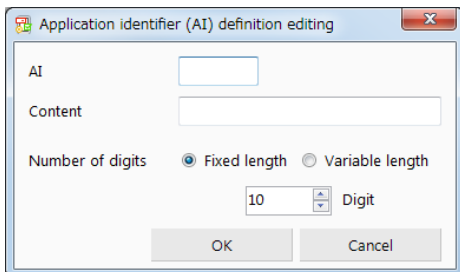

AI ... Set the AI.

Content ... Set the content to be displayed during configuration.

Number of digits ... Select fixed length or variable length and set the number of digits (1 to 8192) when you select fixed length.

• Delete character

The characters whose box is checked will be deleted from the comparison target data.

[Options] - (hyphen) | _ (space) | / (slash) | , (comma)

Input data

• Range specification


Set a digit range to use when evaluating the target data.

[Specify the range]

Specify the index value for the start and end of the data in the target. Data outside this digit range will not be used in evaluation.

[Use Application Identifier (AI)]


Specify the AI to extract the data. Click "Edit" to display the following dialog box for adding an AI.

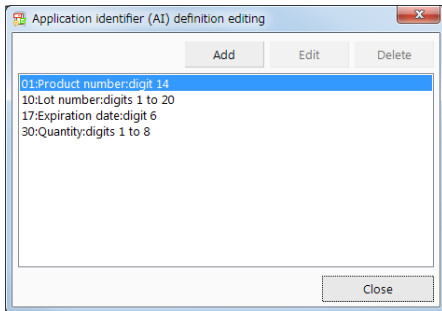

"Add" button ... Add a condition for extracting data with an AI. A dialog box is displayed.

"Edit" button ... Edit the added conditions. A dialog box is displayed.

"Delete" button ... Delete the added conditions.

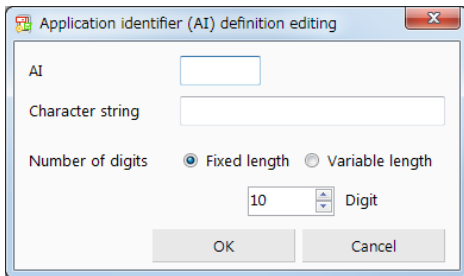

AI ... Set the AI.

Character string ... Set the character string to be displayed during configuration.


Number of digits ... Select fixed length or variable length and set the number of digits (1 to 8192) when you select fixed length.

•Delete character

The characters whose box is checked will be deleted from the comparison target data.

[Options] - (hyphen) | (space) | / (slash) | , (comma)

■ Post-input operations

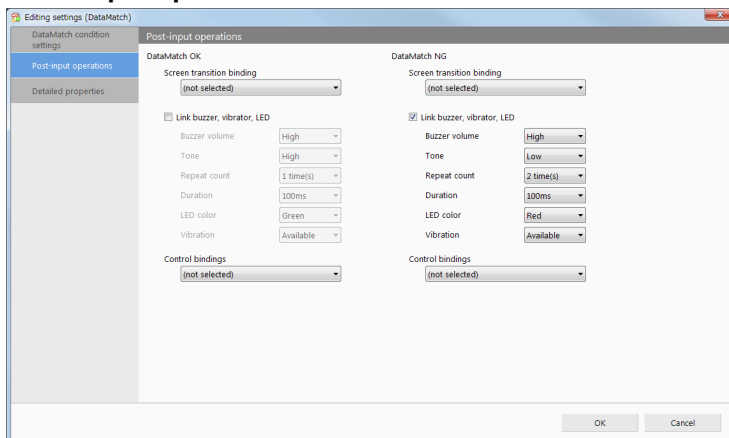

Set the post-input operation to perform when the comparison passes (OK) or fails (NG).

Screen transition binding

Select the screen to transition to.

Link buzzer, vibrator, LED

When this box is checked, the buzzer, vibrator, and LED operate with the following settings.

- **Buzzer volume**

[Options] Off | Low | Medium | High

- **Tone**

[Options] Low | Medium | High

- **Repeat count**

[Setting range] 1 time to 10 times

- **Duration**

[Options] 100ms | 200ms | 500ms | 1000ms


- **LED color**

[Options] Off | Green | Red

- **Vibration**

[Options] Unavailable | Available

■ Detailed properties

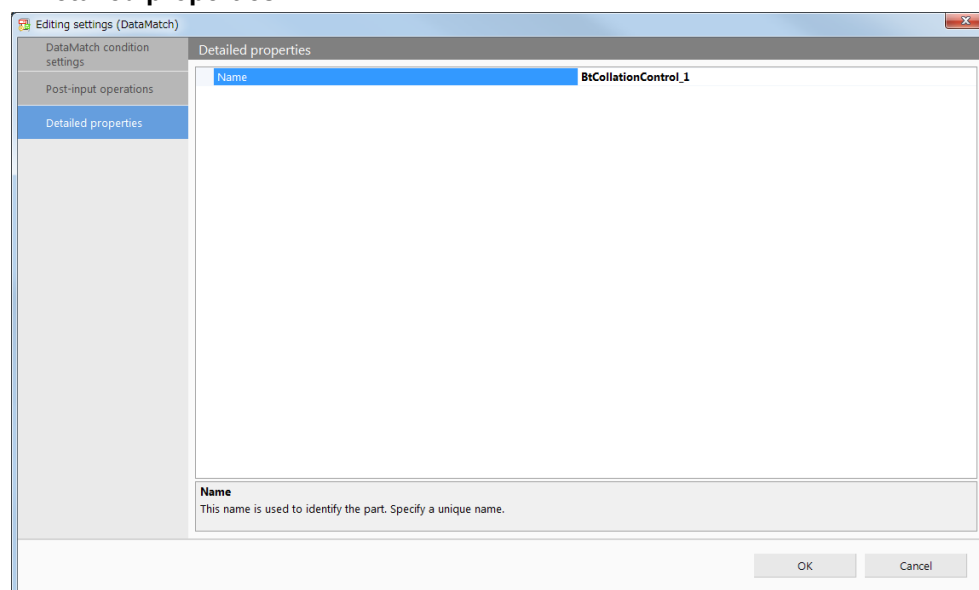

Name	Set the control's name.
------	-------------------------


5.5.3. Search/View Control

Use the data entered in a text box to search the master file and display the replaced data. You can also extract and display the input data. The search/view control requires atleast 2 inputs first, for entering the item code and for the displaying the result. The function is similar to that explained in "[5.2.6. Lookup Boxes](#)," but you can use the search/view control to search in multiple input data entries and replace and display multiple data entries.

■ **Cotrol icon**




■ **Control List display**

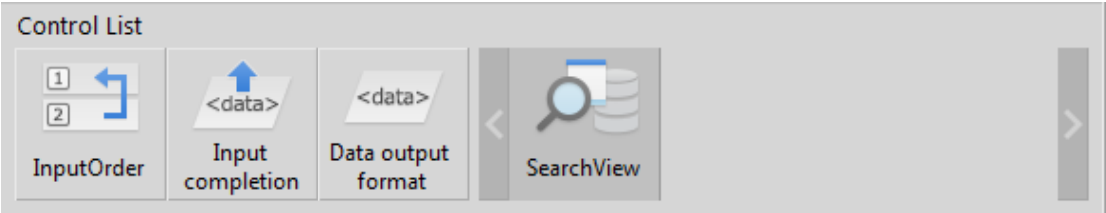

Double-click on a part to display the following dialog box.

■ **Search/extraction selection**

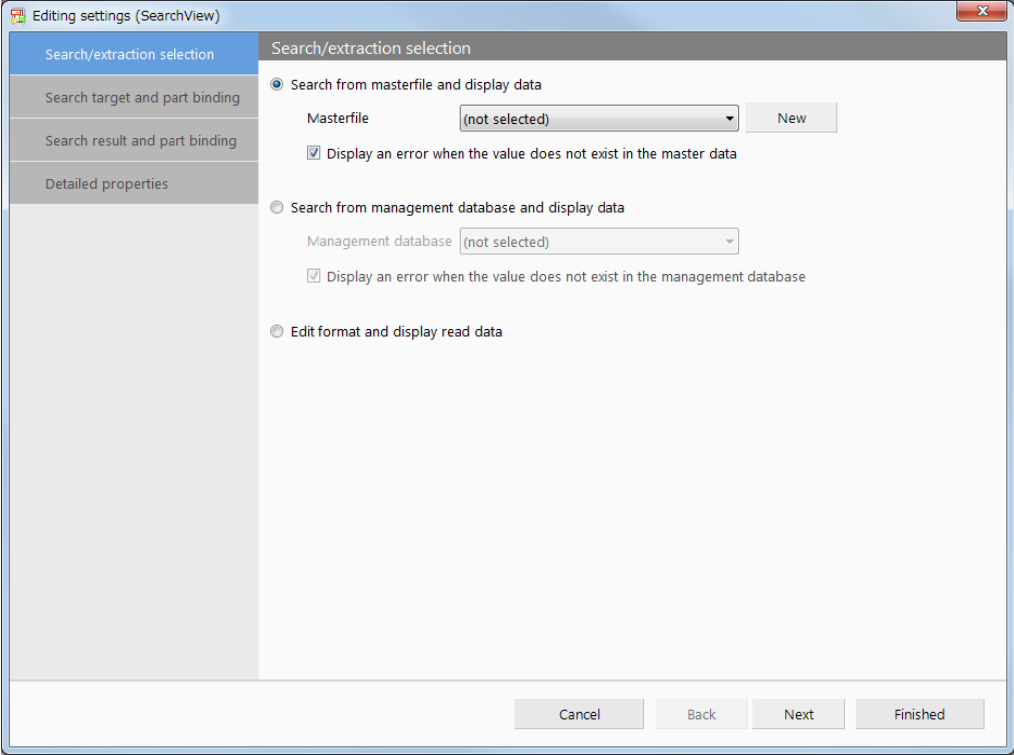

Search from master data and display result

• Master file

You can select list populating data from master files that've already been created. Click "New" to display the following dialog box for creating the master file.

* When you have selected a master file that has already been created, the "New" button changes to the "Edit" button. Click "Edit" to display the following dialog box for editing the master file.

Item no.	Column 1	Column 2
1	111	BT-W100
2	222	BT-W80
3	333	BT-W70
4		

Enter data directly in the cells to create the master file.

• Import CSV

Read a CSV file to create the master file. The CSV file contains comma-separated data entries.

• Fields

You can set the number of data fields in the master file.

* Do not use this with drop-down list boxes.

• "Delete row"

Delete the selected row.

• "Delete all"

Delete all the data in the master file.

• "↑" and "↓" buttons

Move the selected row up or down, respectively.

• "CSV output"

Save the created master file to a CSV file.

• Master file save destination

Select the drive on the BT-W Series which to save the master file when deploying the application . When you select "PC Application," the master file placed in the send folder of the PC application is referenced. You can create the master file with "Device master file creation" in ["7.3. Operation Communication Software."](#)

[Options] Drive 1 | Drive 2 | SD card | PC Application

• Master file name

Set the name of the master file.

• Display an error when the value does not exist in the master data

An error will be displayed if the entered data does not match any data in the master file.

Search from management database and display data

• Management database

You can select a management database created in ["4.2.6 Operation Settings"](#) as the reference.


• Display an error when the value does not exist in the management database

An error will be displayed if the entered data does not exist in the management database.

Cut and display read data

Extract and display the input data.

■ Search target and part binding (when "Search from master data and display result" is selected)

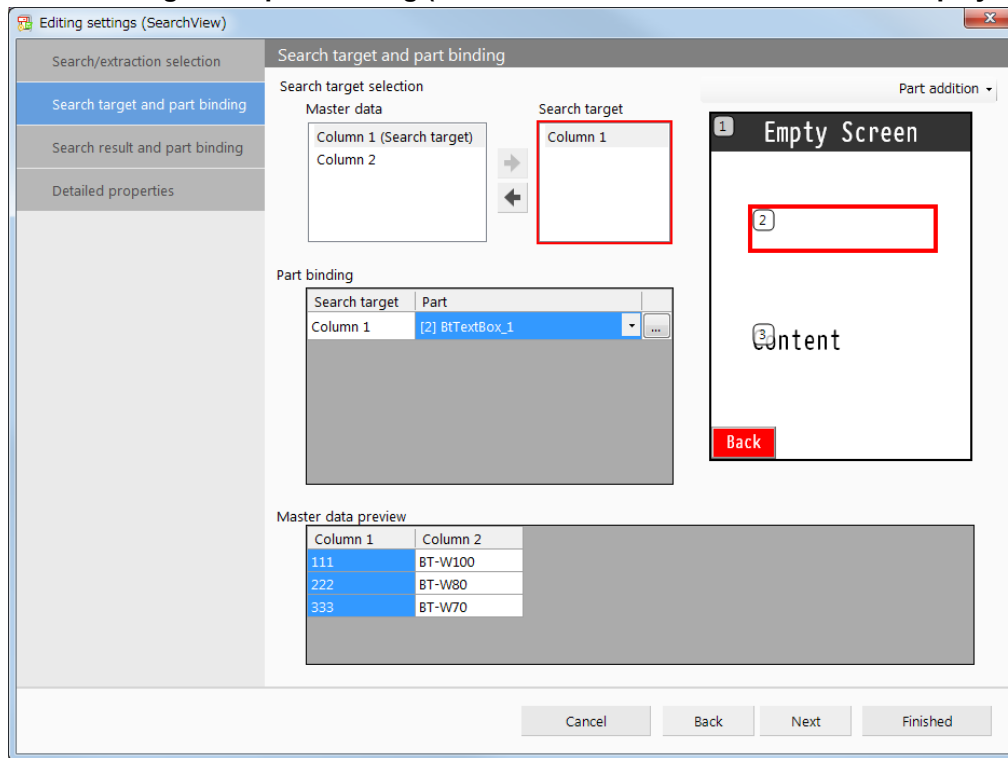

Search target selection

Select which columns to search in the master data. To add a column to the search target, select the column, and then click "→."

To delete a column from the search target, select the column, and then click "←."


Part binding

Select which part values to use for searching the targeted columns.

* The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen.

-  **button**

Click this button to display the following dialog box for setting details.

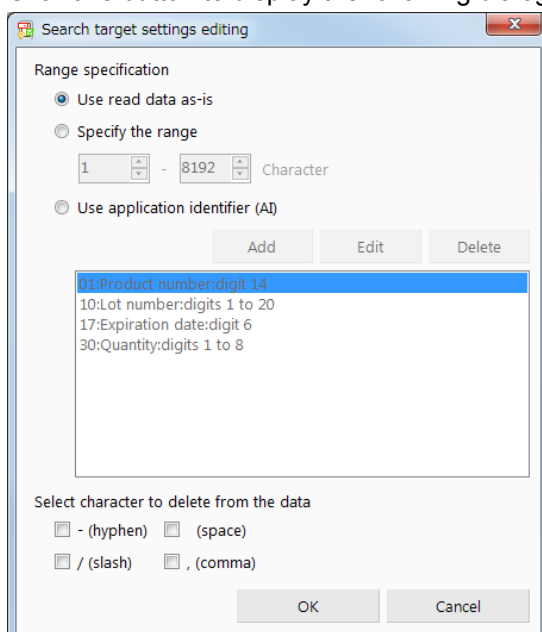

- **Range specification**

Set a digit range to use when evaluating the target data.

[Use read data as-is]

Use the data without specifying a range.

[Specify the range]

Specify the index value for the start and end of the data in the target. Data outside this digit range will not be used in evaluation.


[Use application identifier (AI)]

Specify the AI to extract the data.

"Add" button ... Add a condition for extracting data with an AI. A dialog box is displayed.

"Edit" button ... Edit the added conditions. A dialog box is displayed.

"Delete" button ... Delete the added conditions.

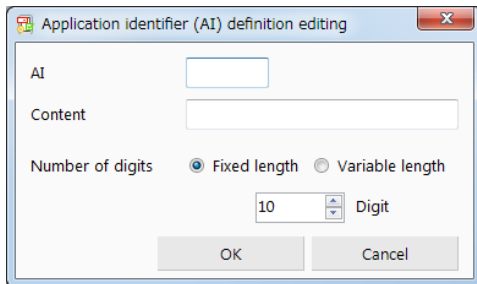

AI ... Set the AI.

Content ... Set the content to be displayed during configuration.

Number of digits ... Select fixed length or variable length and set the number of digits (1 to 8192) when you select fixed length.

- **Delete character**


The characters whose box is checked will be deleted from the comparison target data.

[Options] - (hyphen) | (space) | / (slash) | , (comma)

Master data preview

Preview the master data.

■ Search result and part binding (when "Search from master data and display result" is selected)

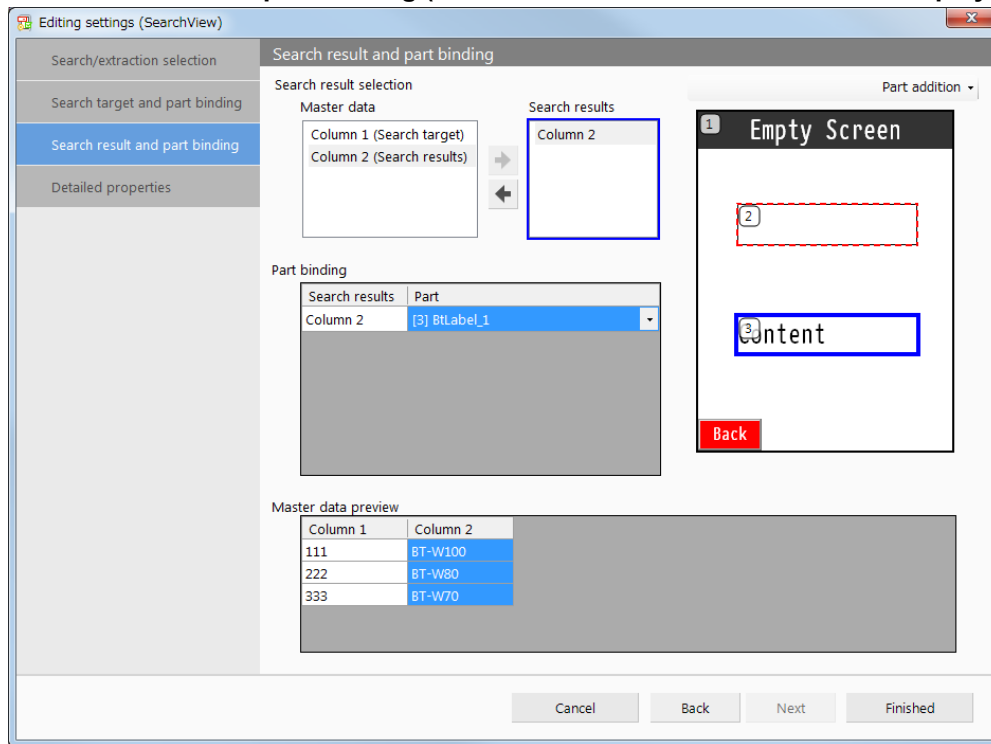

Search result selection Select which columns to display from the master data. To add a column to the search results, select the column, and then click "→."

To delete a column from the search results, select the column, and then click "←."

Part binding


Select which parts to use for displaying the searched result columns.

* The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen.

Master data preview

Preview the master data.


■ Read input and part binding (when "Cut and display read data" is selected)

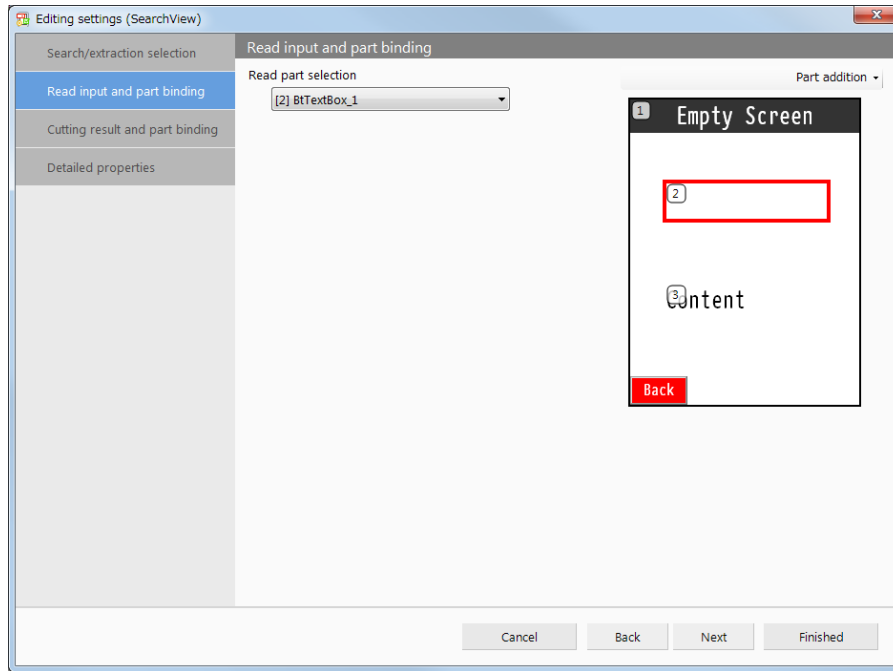

Read part selection

Select the part which contains the input data.


■ Cutting result and part binding (when "Cut and display read data" is selected)

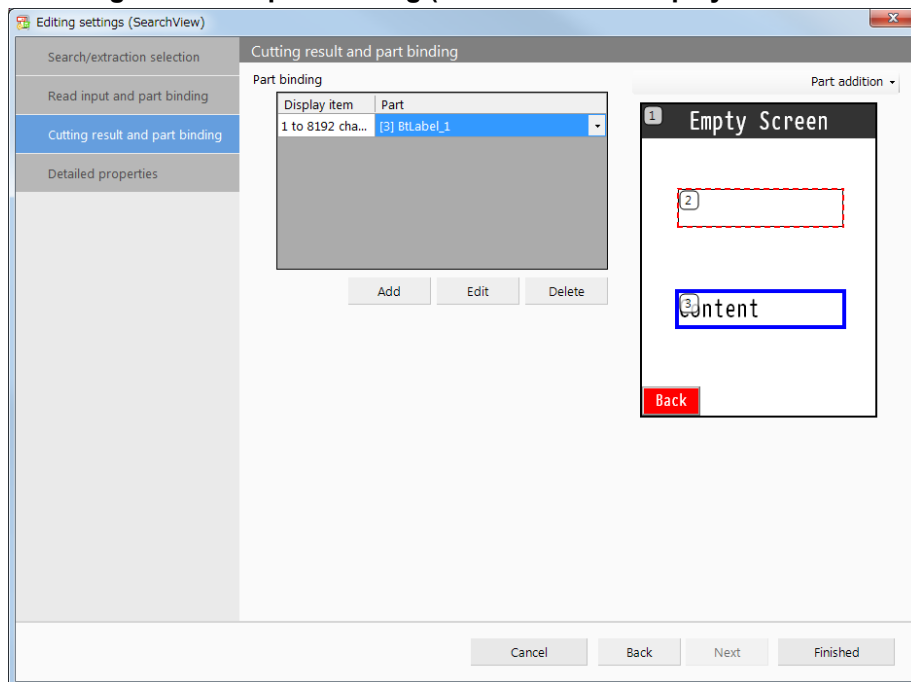

Part binding

Select the part to re-display edited data.

- "Add" button ... Use the dialog box to set the extraction method.
- "Edit" button ... Use the dialog box to edit the extraction method.
- "Delete" button ... Delete the selected extraction setting.

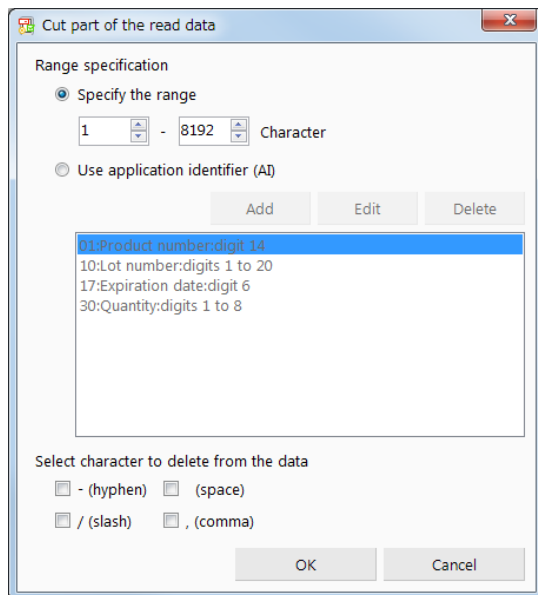

• Range specification

Set a digit range to use when evaluating the target data.

[Specify the range]

Specify the index value for the start and end of the data in the target. Data outside this digit range will not be used in evaluation.


[Use Application Identifier (AI)]

Specify the AI to extract the data. Click "Edit" to display the following dialog box for adding an AI.

"Add" button ... Add a condition for extracting data with an AI. A dialog box is displayed.

"Edit" button ... Edit the added conditions. A dialog box is displayed.

"Delete" button ... Delete the added conditions.

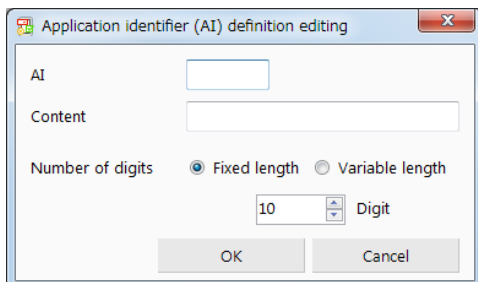

AI ... Set the AI.

Content ... Set the content to be displayed during configuration.


Number of digits ... Select fixed length or variable length and set the number of digits (1 to 8192) when you select fixed length.

• Delete character

The characters whose box is checked will be deleted from the comparison target data.

[Options] - (hyphen) | (space) | / (slash) | , (comma)

■ Detailed properties

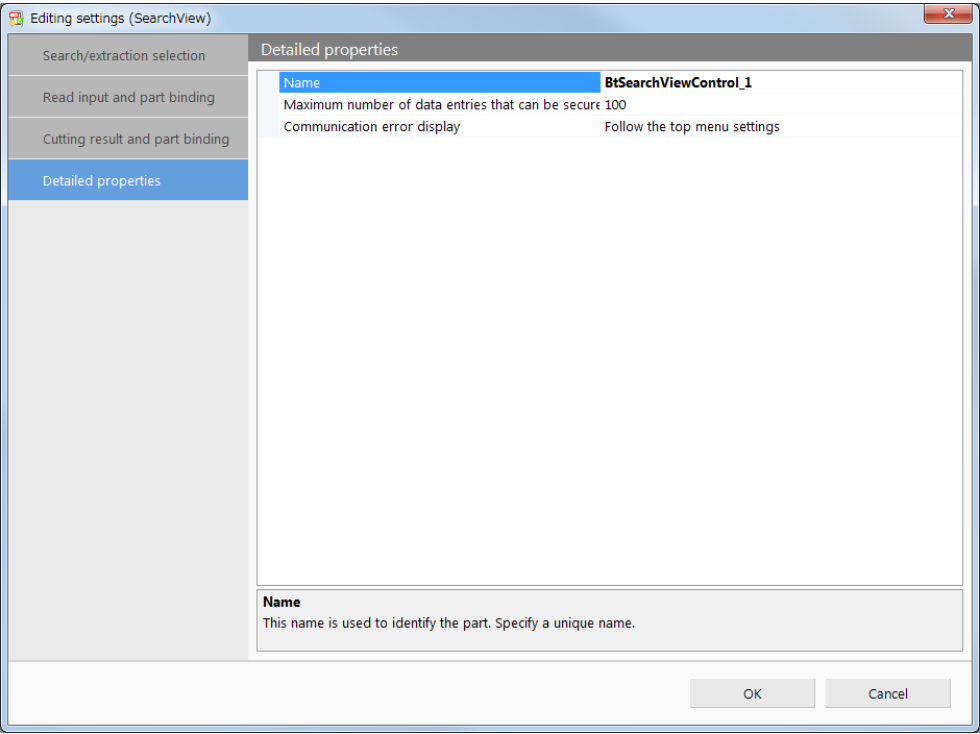


Name	Set the control's name.
Maximum number of data entries that can be secured	Set the number of data entries to secure when there are multiple search matches. This will have an effect on situations when the result is displayed in the table view.
Communication error display	Set whether to display the communication error screen when a communication error occurs. If you select "Display (excluding operation when out of range)," the communication error screen will not be displayed when operations are performed outside of the range of the wireless network as this is judged to be offline work. The data is stored on the BT-W device. [Options] Follow the top menu settings Display Display (excluding operation when out of range) Do not display


5.5.4. Master Check Control

Use the input data to search, compare, and delete with the master file. The MasterCheck control requires at least 3 contents such as labels and text boxes in advance.

■ Control icon

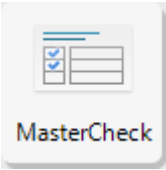


■ Control List display

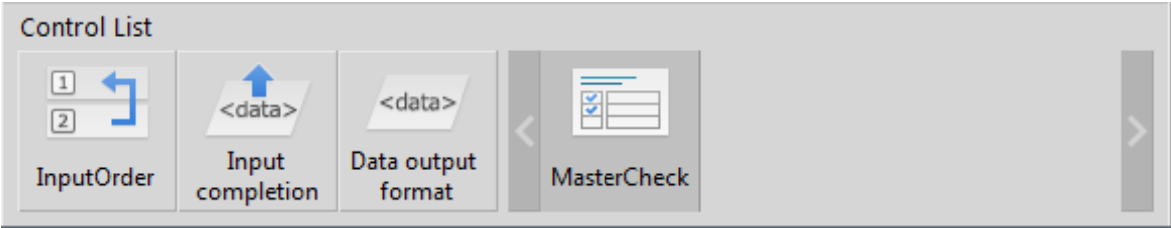

Double-click on a part to display the following dialog box.

■ Work data selection

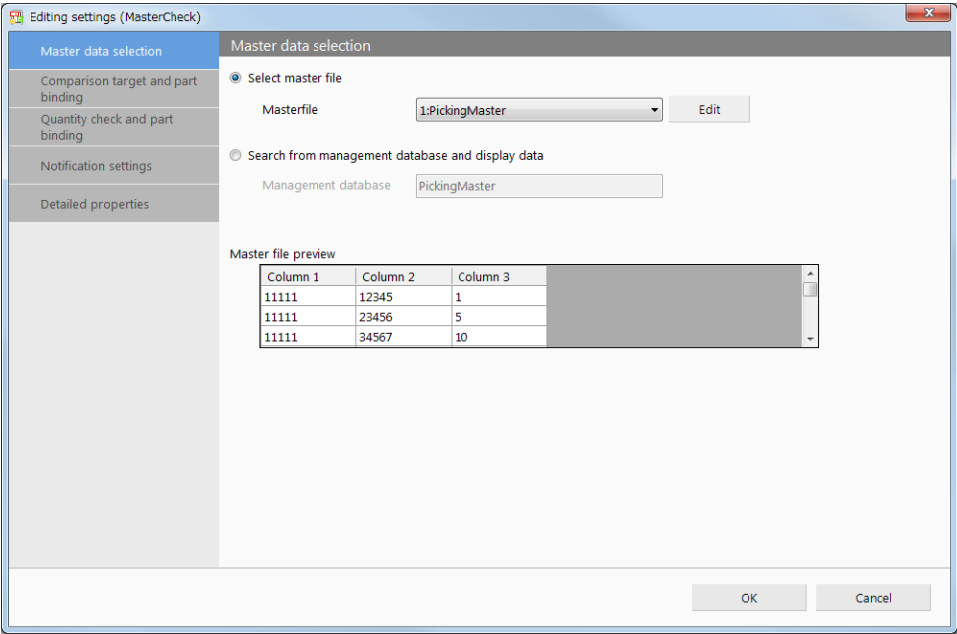


Select Master file

- **Master file**

You can select list populating data from master files that've already been created. Click "New" to display the following dialog box for creating the master file.

* When you have selected a master file that has already been created, the "New" button changes to the "Edit" button. Click "Edit" to display the following dialog box for editing the master file.

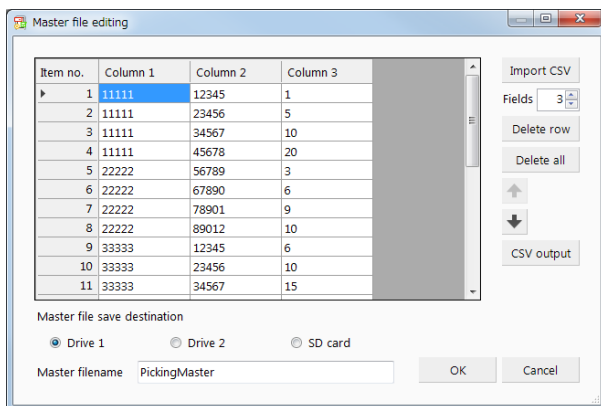

Enter data directly in the cells to create the master file.

- **Import CSV**

Read a CSV file to create the master file. The CSV file contains comma-separated data entries.

- **Fields**

You can set the number of data fields in the master file.

* Do not use this with drop-down list boxes.

- **"Delete row"**

Delete the selected row.

- **"Delete all"**

Delete all the data in the master file.

- **"↑" and "↓" buttons**

Move the selected row up or down, respectively.

- **"CSV output"**

Save the created master file to a CSV file.

- **Master file save destination**

Select the drive on the BT-W Series which to save the master file when deploying the application.

[Options] Drive 1 | Drive 2 | SD card

- **Master filename**

Set the name of the master file.

Search from management database and display data

- **Management database**

Select a management database created in "[4.2.6 Operation Settings](#)."

Master file preview

Preview the master file.

■ Comparison target and part binding

Editing settings (MasterCheck)

Comparison target and part binding

Work No. and Item No. selection

Master data

Column No.	Column Name
Column 1	Work No.
Column 2	Item No.

Part binding

Column No.	Part
Column 1 (Work No.)	[3] BtTextBox_SlipNumber
Column 2 (Item No.)	[5] BtTextBox_Item

Master file preview

Column 1	Column 2	Column 3
11111	12345	1
11111	23456	5
11111	34567	10

Picking

1 Work No. 3

2 Item No. 5

3 Req Qty 7

4 Progress 0/00

5 Back Hist List

OK Cancel

Work No. and Item No. selection

Select which columns in the master data for searching. To add a column in the Master data list box to the items to search, select the column, and then click "→." To delete a column from the search target, select the column, and then click "←." After you add the items to search, select their roles.

[Options] Work No. | Item No. | Req Qty

Work No. ...This is the first item that is searched within the master data.

Item No. ...This is the second item that is searched within the master data.

The search is performed on the records for which the search for the operation number was successful.

Req Qty ...This item is used when searching within the master data with three or more columns.

Binding part selection

Select which part values to use for searching with the columns selected under "Work No. and Item No. selection."

* The value inside the brackets ([]) of the selected item corresponds to the numbers of the parts in the preview on the right side of the screen.

Master file preview

Preview the master file.

■ Quantity check and part binding

Editing settings (MasterCheck)

Quantity check and part binding

Quantity check

Master data selection: Column 3

Part binding: [7] BtTextBox_Quantity

Operation settings

☐ Enable the repeat check

Progress display

☒ Display remaining count

☒ Display completed count

Master file preview

Column 1	Column 2	Column 3
11111	12345	1
11111	23456	5
11111	34567	10

OK Cancel

Quantity check

Check the entered quantity against the ordered quantity within the master data, and then negate the record if the entered value is greater than or equal to the ordered quantity.

- **Master data selection**

Select which column in the master data to set as the order count.

- **Part binding**

Select the part whose value will be used as the quantity input.

* **When you select "Search from management database and display data"**

The setting screen shown below is displayed.

Quantity check and part binding

Quantity check

Order count (column): Column 3

Input count (column): Column 4

Part binding: [7] BtTextBox_Quantity

- **Order count (column)**

Select which column in the management database to set as the order count.

- **Input count (column)**

Select which column in the management database to add the entered quantity to.

- **Part binding**

Select the part whose value will be used as the quantity input.

Operation settings

- **Enable the repeat collation**

Check this box to perform the check without negating records.

Progress display

- **Display the remaining count**

Check this box to display the number of records within the master data for which the operation has not yet completed.

- **Display the number of completed items**

Check this box to display the number of records within the master data for which the operation has completed.

Master file preview

Preview the master file.

■ Notification settings

Editing settings (MasterCheck)

Notification settings

Message display

- ☒ Display message when each of the work list has been completed.
Work has been completed.
- ☒ Display message when all the work list has been completed.
All of the work has been completed.

Input error display

- ☒ To error if not in the list the work number has been input
- ☒ To error if not in the list the item number has been input
- ☐ To error if the order listed with different items number has been input
- ☒ To error if the greater quantity than the number of orders has been input

Post-input operation setting

Post-input operation setting

Post-input operation setting

Post-input operation setting

OK Cancel

Message display

- **Display message when each of the work list has been completed.**

Check this box to display a message when the operation of the record extracted with the operation number completes. Also, set the message to display at that time.

- **Display message when the all work lists have been completed.**

Check this box to display a message when the operations of all the records in the master data complete. Also, set the message to display at that time.

Input error display

- **To error if not in the list the work number has been input**

Check this box to treat the entry of operation numbers not in the list as an error.

- **To error if not in the list the item number has been input**

Check this box to treat the entry of item numbers not in the list as an error.

- **To error if the order listed with different items number has been input**


Check this box to treat the entry of item numbers in a different order than the list as an error.

- **To error if the greater quantity than the number of orders has been input**

Check this box to treat the entry of quantities greater than or equal to the order count to operate as an error.

- **"Post-input operation setting" button**

Click this button to display the following dialog box.

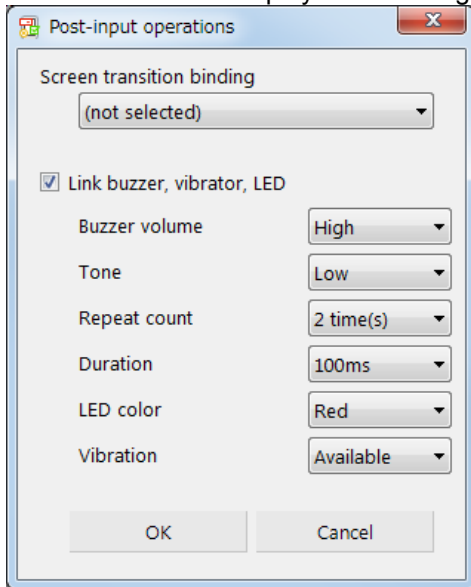

Screen transition binding

Select the screen to transition to when an error occurs.

Link buzzer, vibrator, LED

When this check box is selected, the buzzer, vibrator, and LED operate when an error occurs.

- **Buzzer volume**

[Options] Off | Low | Medium | High

- **Tone**

[Options] Low | Medium | High

- **Repeat count**

[Setting range] 1 time to 10 times

- **Duration**

[Options] 100ms | 200ms | 500ms | 1000ms

- **LED color**

[Options] Off | Green | Red

- **Vibration**

[Options] Unavailable | Available

■ Detailed properties

Editing settings (MasterCheck)

Detailed properties

Name	BtMasterCheckControl_1
Remove checked data item	True
Continuation confirmation at work start	Do not check (always continued)
Continuation confirmation message	There is a work list in the input. Do you want to continue the
Communication error display	Follow the top menu settings

Name
This name is used to identify the part. Specify a unique name.


OK Cancel

Name	Set the control's name.
Remove checked data item	Set whether to negate items for which checking is complete. If you select "False," the master data record will not be negated even if you enter a value that is greater than or equal to the ordered quantity. [Options] True False
Continuation confirmation at the time of work start	Select whether to continue the previous input status at the start of the operation in situations such as when a screen transition is performed from the menu. Also select what to delete when the previous input status is discontinued. [Options] Do not check (always continued) After confirmation, to delete the data in the input (item) After confirmation, to delete the data in the input (work list) After confirmation, to delete the data in the input (all work list)
Continuation confirmation message	Set the message to display when checking whether to continue the previous input status.
Communication error display	Set whether to display the communication error screen when a communication error occurs. If you select "Display (excluding operation when out of range)," the communication error screen will not be displayed when operations are performed outside of the range of the wireless network as this is judged to be offline work. The data is stored on the BT device. [Options] Follow the top menu settings Display Display (excluding operation when out of range) Do not display


5.5.5. Send Data File Control

Use this control to set the file to output data from the BT-W Series to a PC or an SD card. Place a SendDataFile control, and then use "Post-input operations" explained in sections such as "[4.5.2Input Completion](#)", "[5.3.1. Button](#)" and "[4.5.4. Function Keys](#)" to select the sending of the data file.

■ **Control icon**

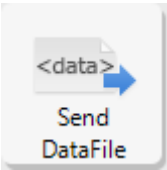


■ **Control List display**

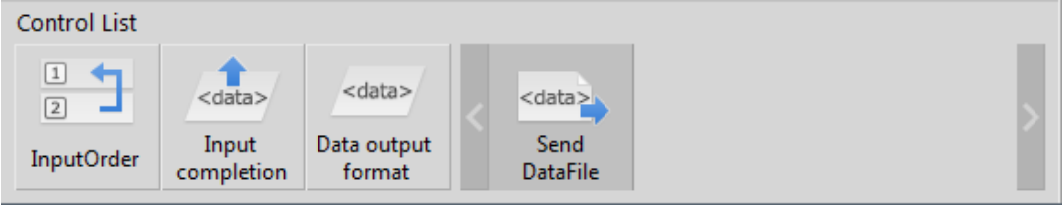

Double-click on a part to display the following dialog box.

■ **Communication settings**

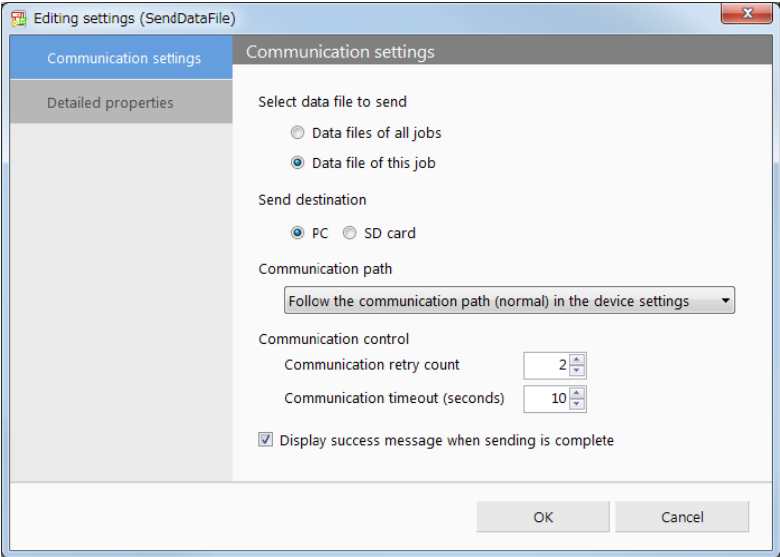

Select data file to send

Select the type of data file to send.

[Options] Data files of all jobs | Data file of this job

Send destination

Select the destination to send the data file to.

[Options] PC | SD card

Note

* When you select "SD card"

Data is output to the SD card in CSV format. After outputting the data to the SD card, remove the SD card from the BT-W Series, and then manually import the data to the operation PC.

Communication path

Select the communication path to use in sending the data file.

[Options] Follow the communication path (normal) in the device settings/USB Communication Cradle | LAN Communication Cradle | Wireless LAN

Communication control

• **Communication retry count**

Set the number of reconnect attempts when communication fails.

[Setting range] 0 to 9 times

• **Communication timeout (seconds)**


Set the length of time until communication fails.

[Setting range] 1 to 50 seconds

Display success message when sending is complete

When you check this box, a success message will be displayed when sending is complete.

■ **Detailed properties**

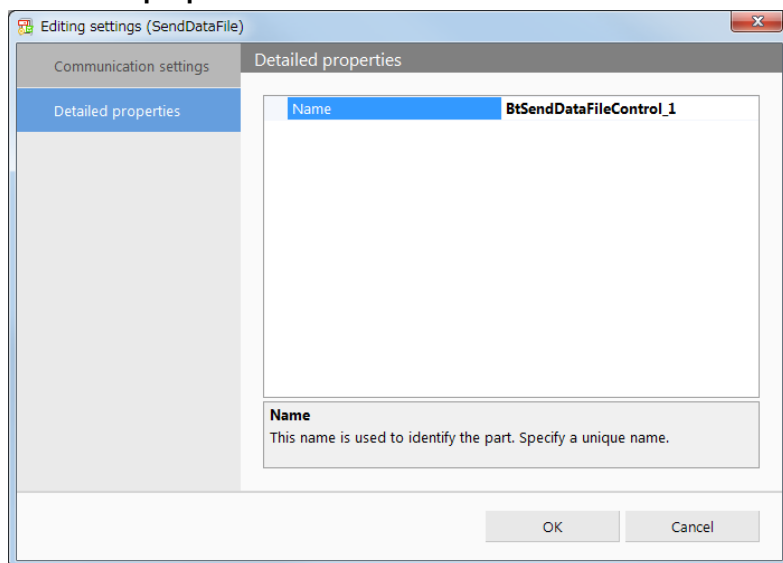

Name	Set the control's name.
------	-------------------------


5.5.6. Receive Master File Control

Use this control to receive the file on the BT-W Series from PC. Place a receive master file control, and then use "Post-input operations" explained in sections such as ["4.5.2Input Completion"](#), ["5.3.1. Button"](#) and ["4.5.4. Function Keys"](#) to select the receiving of the master file.

■ **Control icon**




■ **Control List display**

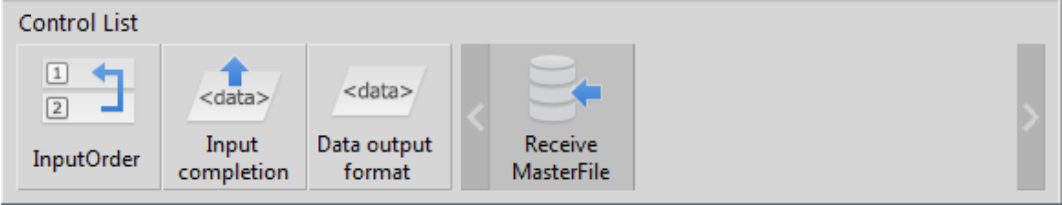

Double-click on a part to display the following dialog box.

■ **Communication settings**

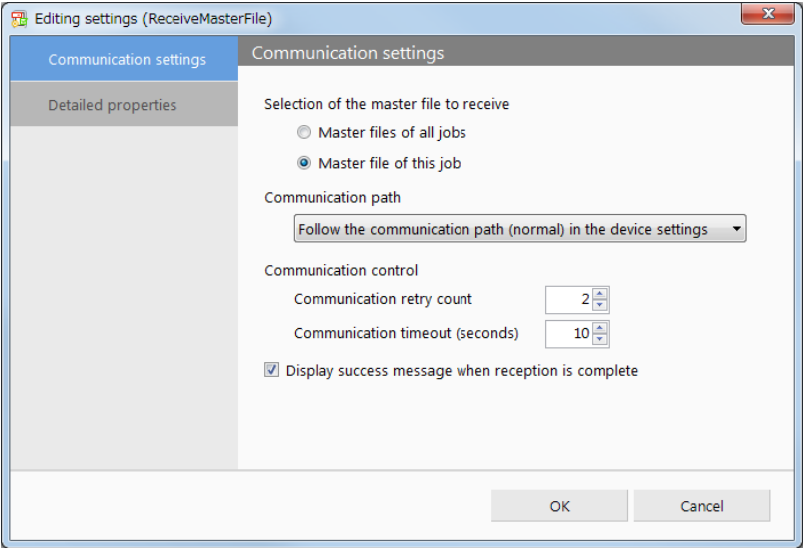

Selection of the master file to receive

Select the type of master file to receive.

[Options] Master files of all jobs | Master file of this job

Communication path

Select the communication path to use in receiving the master file.

[Options] Follow the communication path (normal) in the device settings | USB communication cradle | LAN communication cradle | Wireless LAN

Communication control

- **Communication retry count**

Set the number of retries when a communication error occurs.

[Setting range] 0 to 9 times

- **Communication timeout (seconds)**


Set the length of time until a communication error occurs.

[Setting range] 1 to 50 seconds

Display success message when reception is complete

When you check this box, a success message will be displayed when reception is complete.

■ Detailed properties

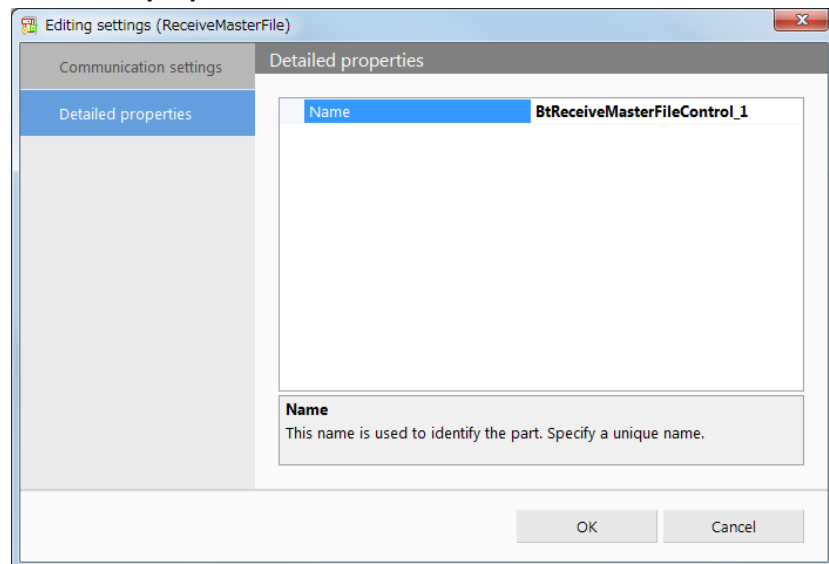


Name	Set the control's name.
------	-------------------------


5.5.7. Feedback Control

Use this control to implement buzzer, vibrator, or LED feedback. After setting this control, use "Post-input operations" explained in sections such as "[4.5.2 Input Completion](#)", "[5.3.1. Button](#)" and "[4.5.4. Function Keys](#)" to select the Feedback control.

■ Control icon

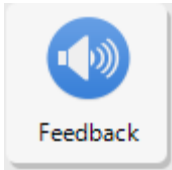


■ Control List display

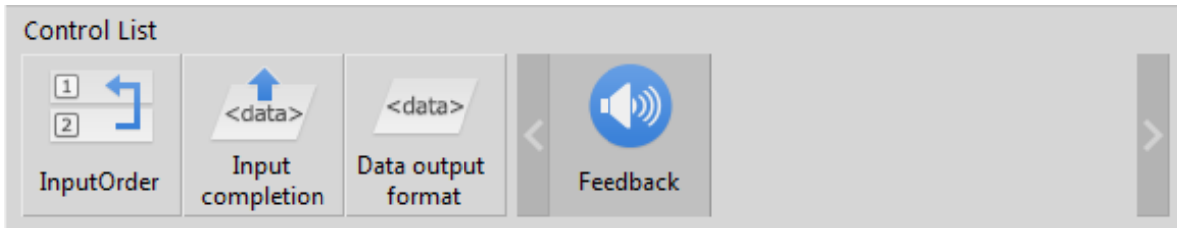

Double-click on a part to display the following dialog box.

■ Feedback control selection

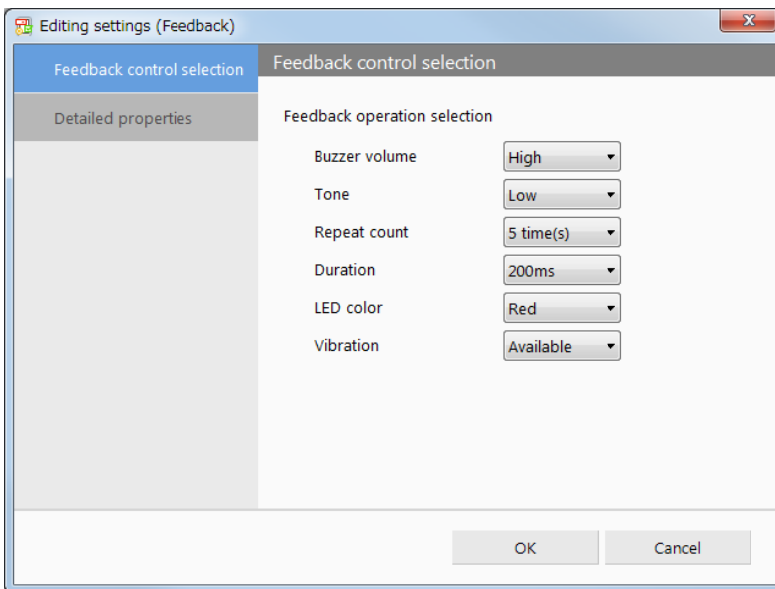

Feedback operation selection

Set the buzzer, vibration, and LED operations.

• Buzzer volume

[Options] Off | High | Medium | Low

• Tone

[Options] High | Medium | Low

• Repeat count

[Setting range] 1 time to 10 times

• Duration

[Options] 100ms | 200ms | 500ms | 1000ms


• LED color

[Options] Off | Green | Red

• Vibration

[Options] Unavailable/Available

■ Detailed properties

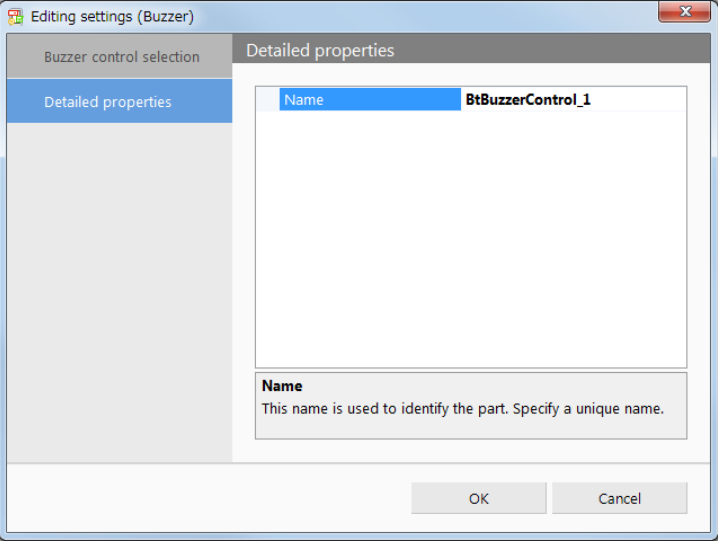


Name	Set the control's name.
------	-------------------------

5.5.8. UserDefined

Use this control to create controls freely by programming them in Microsoft Visual Basic .NET. Place a UserDefined control, and then use "Post-input operations" explained in sections such as "[4.5.2Input Completion](#)", "[5.3.1. Button](#)" and "[4.5.4. Function Keys](#)" to select the UserDefined control.

■ Part icon

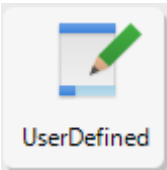


■ GUI display



Double-click the placed part to display the following dialog box.

■ Settings of the operation to execute

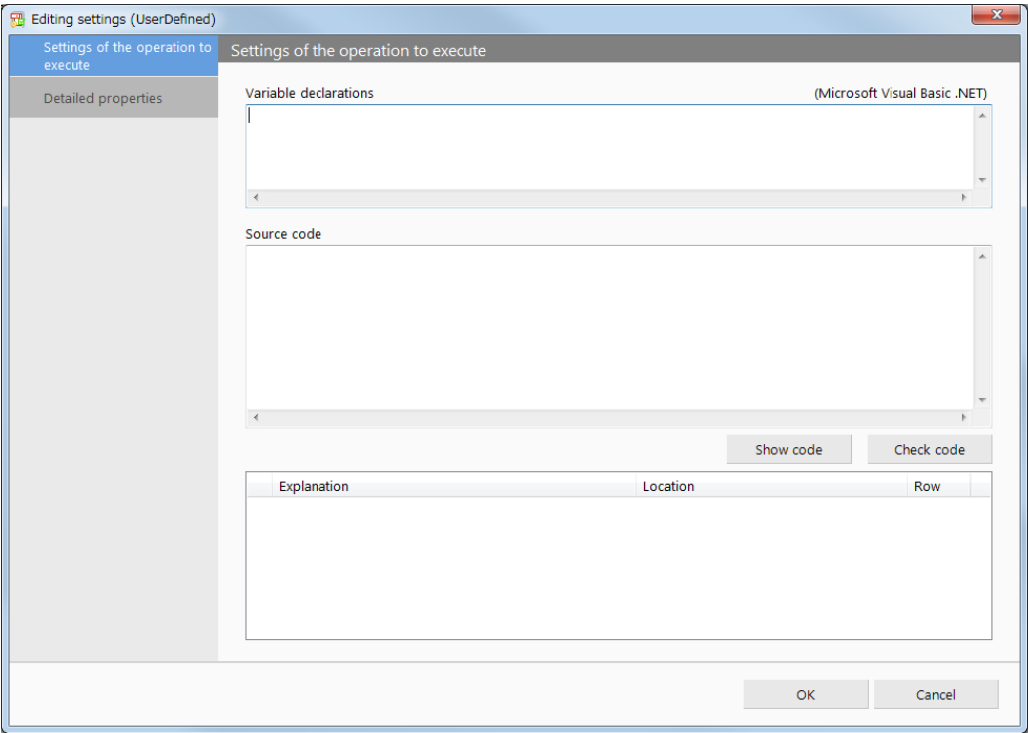

Variable declarations

Use this area to define the variables.

Source code

Use this area to write the program's source code.

Show code


Display the program whose source code you have written in the "Variable declarations" and "Source code" fields. The preceding and subsequent programs (the details of the "Post-input operations" from sections such as "[4.5.2Input Completion](#)", "[5.3.1. Button](#)" and "[4.5.4. Function Keys](#)") are also displayed. Code that has not been selected with "Post-input operations" cannot be displayed.

Check code

Compile the program whose code has been written and check the details of the program. If an error occurs, the details of the error are displayed in the field under this button.

*** About the development language**

You can check the currently selected programming language in the area shown in the following figure.

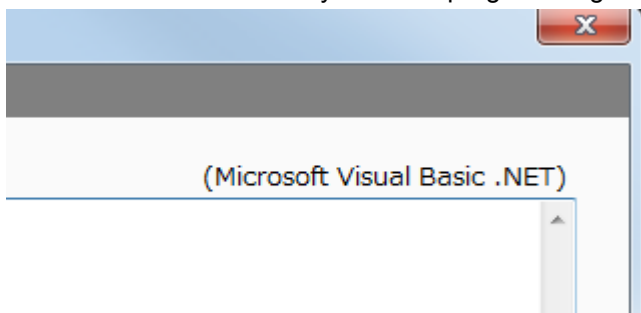

*** About simulations**

Only the UserDefined controls do not operate during simulation. Use an actual device to check the operation.

*** About program development**

For information on how to write code in Microsoft Visual Basic .NET, see sources such as general publications and the web.

■ Detailed properties

Editing settings (UserDefined)

Settings of the operation to execute

Detailed properties

Detailed properties

Name

CustomControl_1

Name

This name is used to identify the part. Specify a unique name.

OK

Cancel

Name	Set the control's name.
------	-------------------------


5.6. Windows

You can use the Screen list ("[4.3.2. New Screen](#)") to add windows to the application.


5.6.1. New Window

You can select "EmptyScreen" on the Screen list ("[4.3.2. New Screen](#)") to add a new window. Use this when you want to create a new window.


■ Item to add from the screen list




■ New window

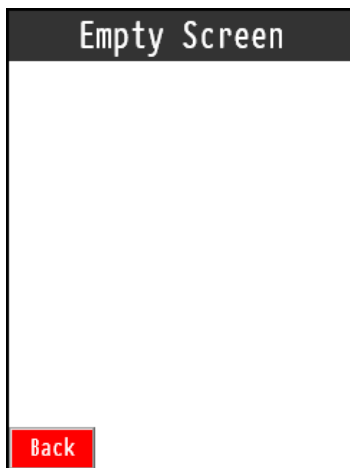

Double-click in the added screen to display the following dialog box.

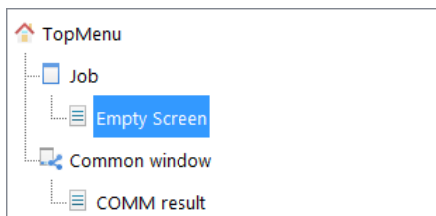

■ Display

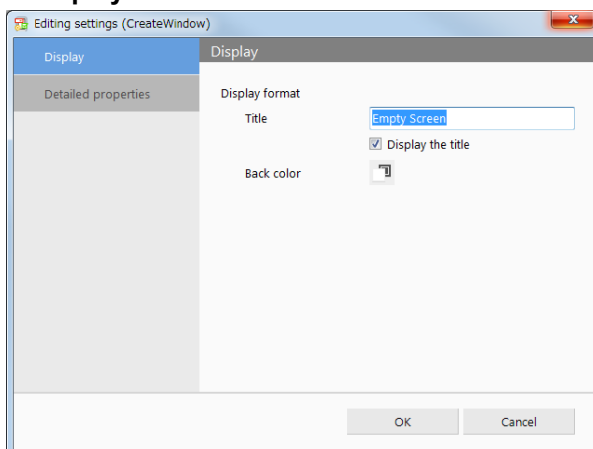


Display format

• **Title**


Set the name of the screen. If you select the "Display the title" check box, a title label will be placed at the top of the screen.

• **Back color**

Set the back color of the screen.

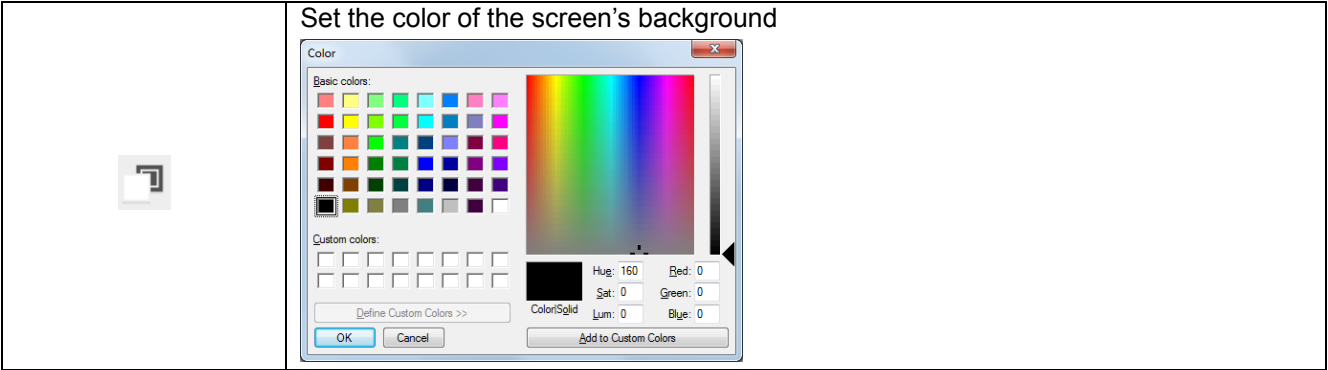

■ **Detailed properties**

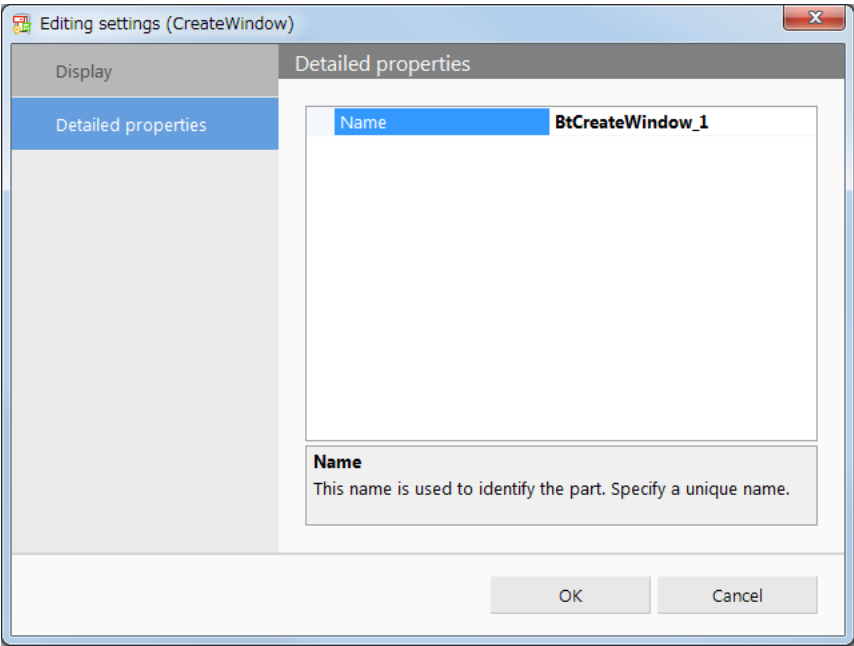


Name	Set the screen's name.
------	------------------------


5.6.2. Send Data File Window

You can select "SendDataFile" on the Screen list ("[4.3.2. New Screen](#)") to add a window. This window is only for sending data files.

■ Item to add from the screen list




■ Send data file window

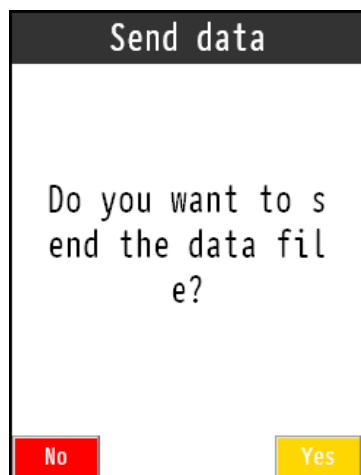


Usage method

Tap "Yes" to send the data file along the communication path that you have set with "Communication settings" in "[4.2.3 Device Settings](#)."

Double-click on the added screen to display the following dialog box.

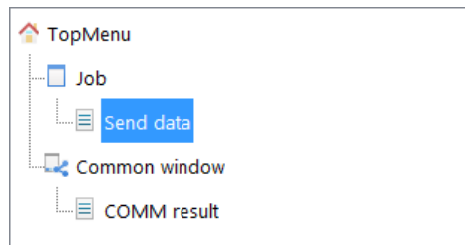

■ Display

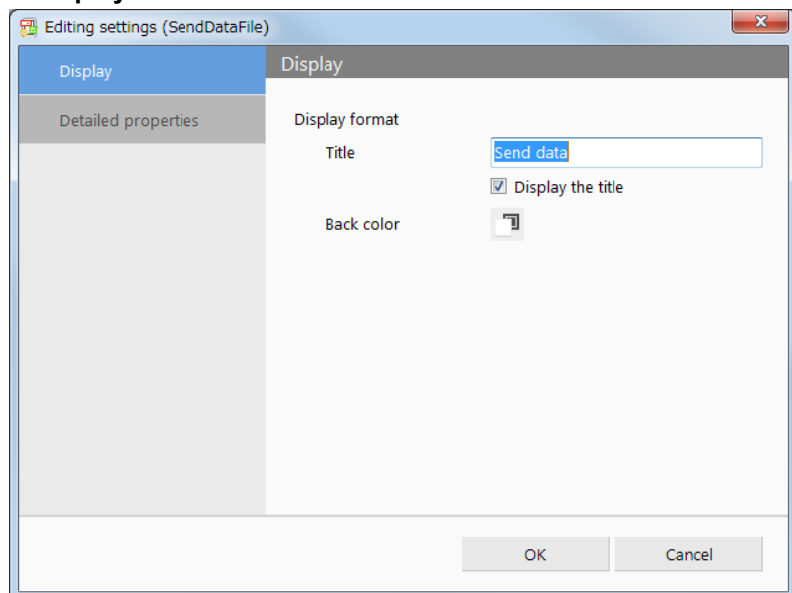


Display format

• **Title**


Set the name of the screen. If you select the "Display the title" check box, a title label will be placed at the top of the screen.

• **Back color**

Set the back color of the screen.

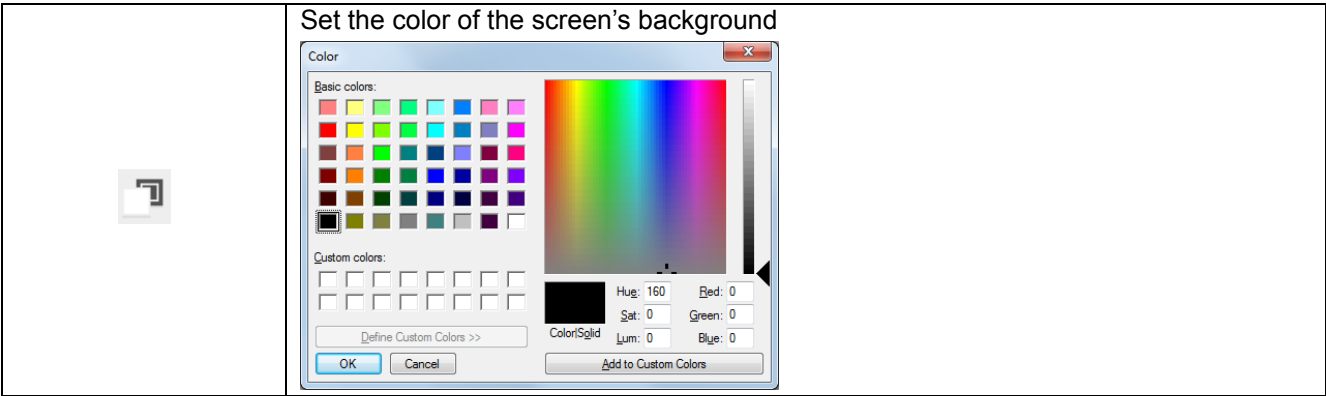

■ **Detailed properties**

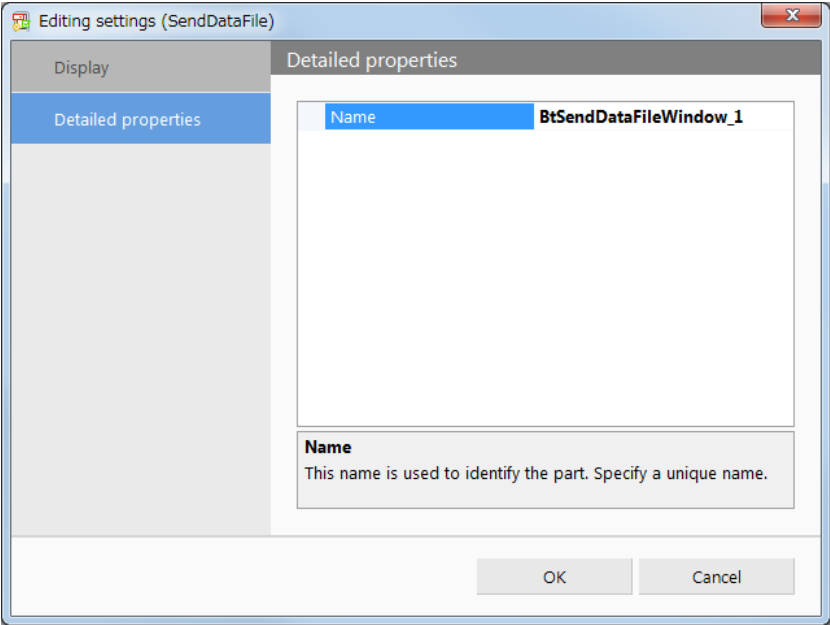


Name	Set the screen's name.
------	------------------------


5.6.3. Receive Master File Window

You can select "ReceiveMasterFile" on the Screen list (["4.3.2. New Screen"](#)) to add a window. This window is only for receiving master files.

■ Item to add from the screen list



■ Receive master file window

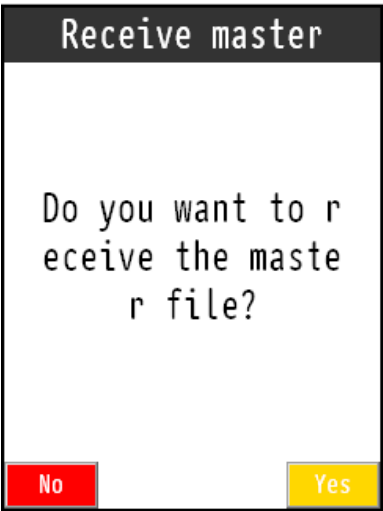


Usage method


Tap "Yes" to receive the master file along the communication path that you have set with "Communication settings" in ["4.2.3 Device Settings."](#) The target is the master file that is used in ["5.2.3. Drop-down List Boxes"](#), ["5.2.6. Lookup Boxes"](#), ["5.4.2. Table View"](#) and ["5.5.3. Search/View Control."](#)

* ["5.5.4Master Check Control"](#) uses ["5.6.6Receive Work List Window."](#)

Double-click in the added screen to display the following dialog box.

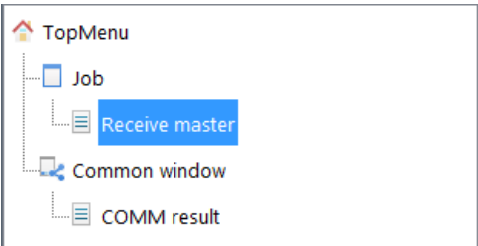

■ Display

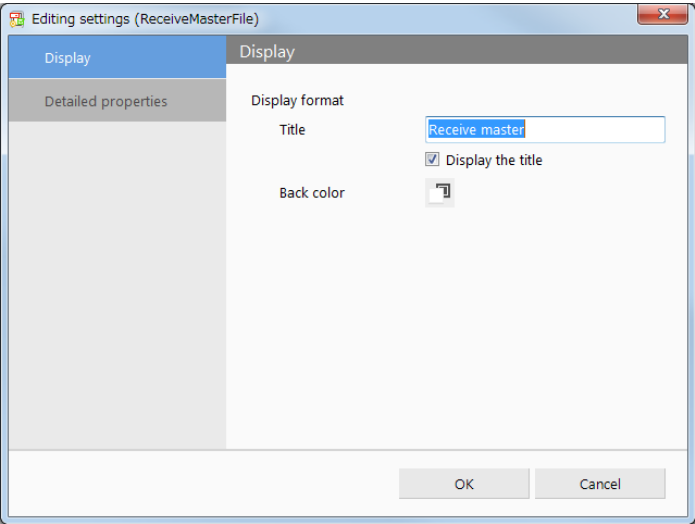


Display format


- **Title**
Set the name of the screen. If you select the "Display the title" check box, a title label will be placed at the top of the screen.
- **Back color**
Set the back color of the screen.



Set the color of the screen's background.

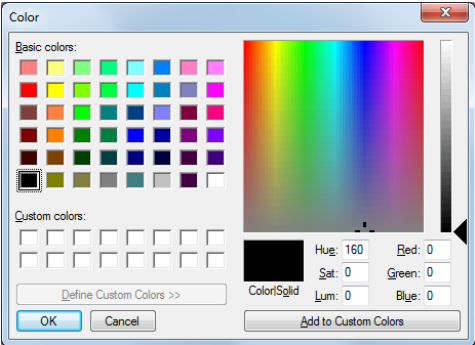

■ Detailed properties

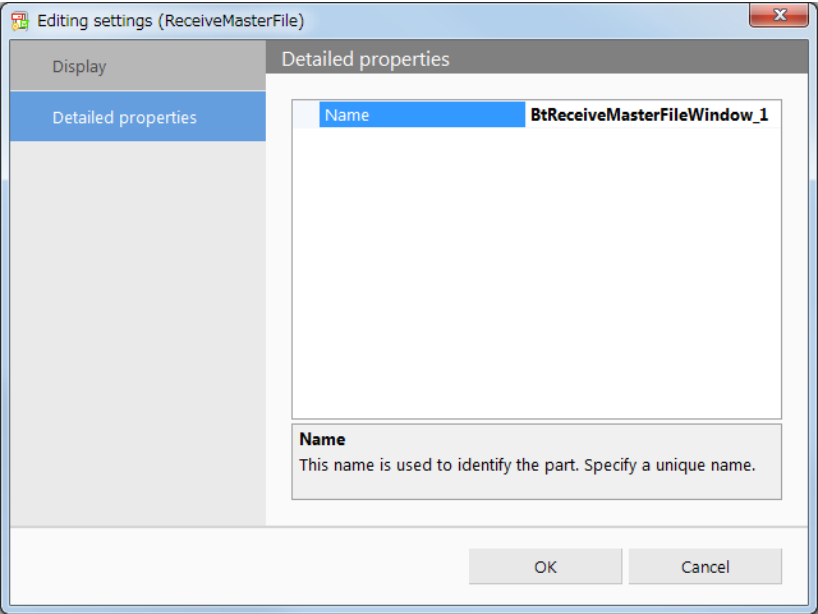


Name	Set the screen's name of the part.
------	------------------------------------


5.6.4. History Data View Window

You can select "HistoryDataView" on the Screen list (["4.3.2. New Screen"](#)) to add a window. This windows is only for displaying the history data.

■ Item to add from the screen list




■ History data view window

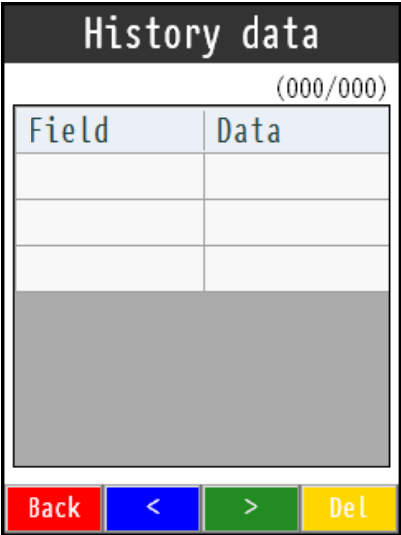


Usage method

Tap "<" or press the [F2] key to move toward the newer history data one entry at a time. Tap ">" or press the [F3] key to move toward the older history data one entry at a time. Tap "Del" or press the [F4] key to delete the currently displayed history data entry. To edit history data, select the list in the center of the screen, and then press the [ENT] key.

Double-click in the added screen to display the following dialog box.

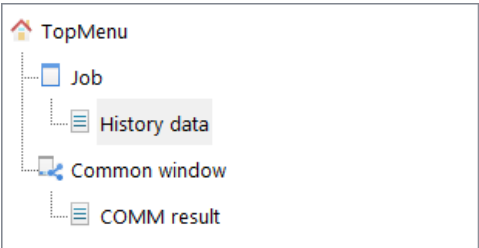

■ Display

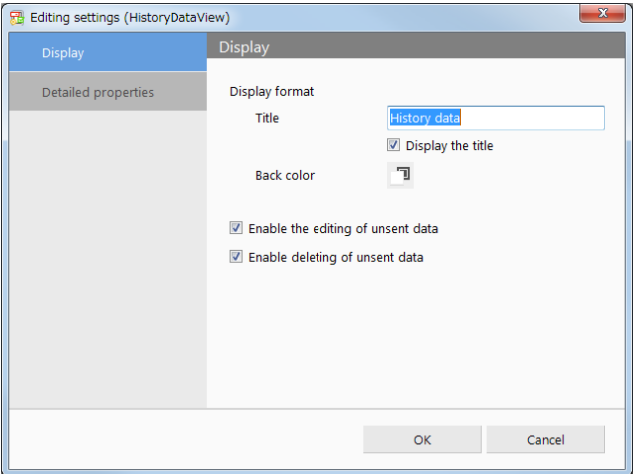


Display format

• Title

Set the name of the screen. If you select the "Display the title" check box, a title label will be placed at the top of the screen.

• Back color

Set the back color of the screen.

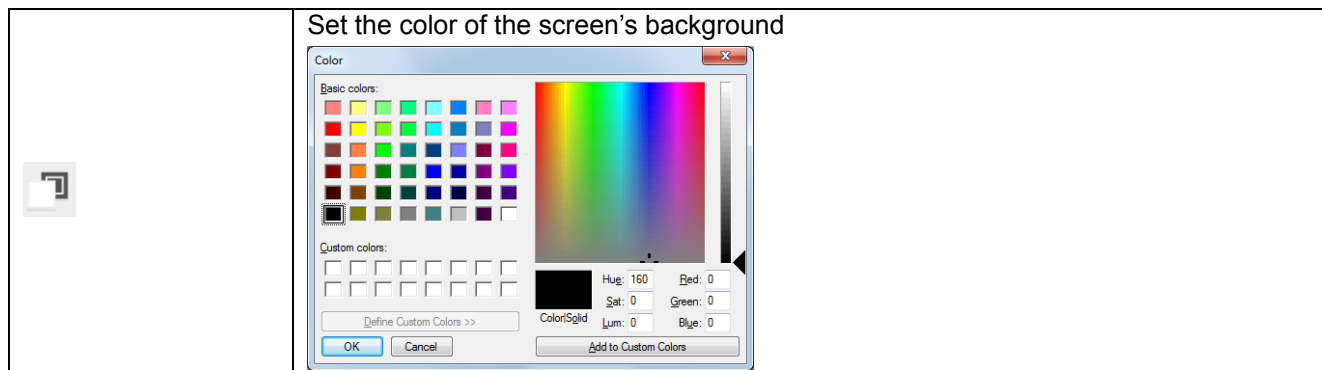


Enable the editing of unsent data

Check this box to enable the editing of the history data on the BT-W Device.

Enable deleting of unsent data

Check this box to enable the deleting of the history data on the BT-W Device.

■ Detailed properties

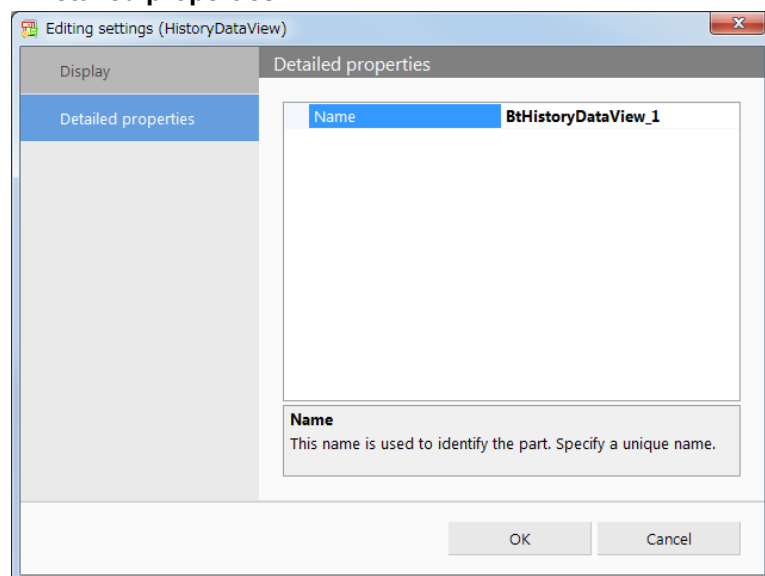


Name	Set the screen's name.
------	------------------------


5.6.5. Item List View Window

You can select "ItemListView" on the Screen list ("[4.3.2. New Screen](#)") to add a window. This window is only for receiving a list of the master data which is set in the MasterCheck control.

■ Item to add from the screen list




■ List View window

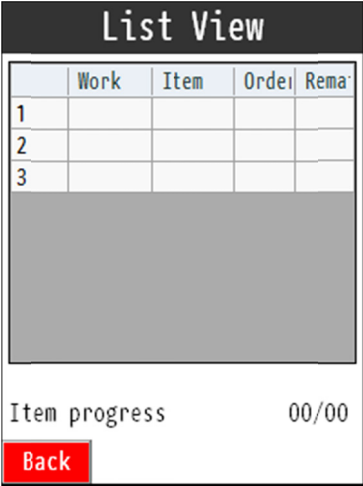


Usage method

You can only view the master data set with the master collation part.

Double-click on the added screen to display the following dialog box.

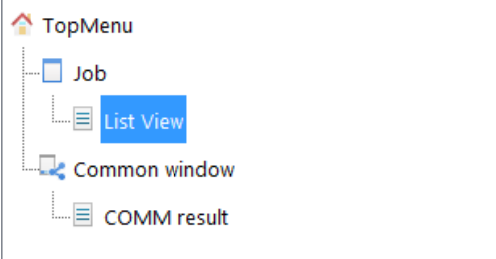

■ Display

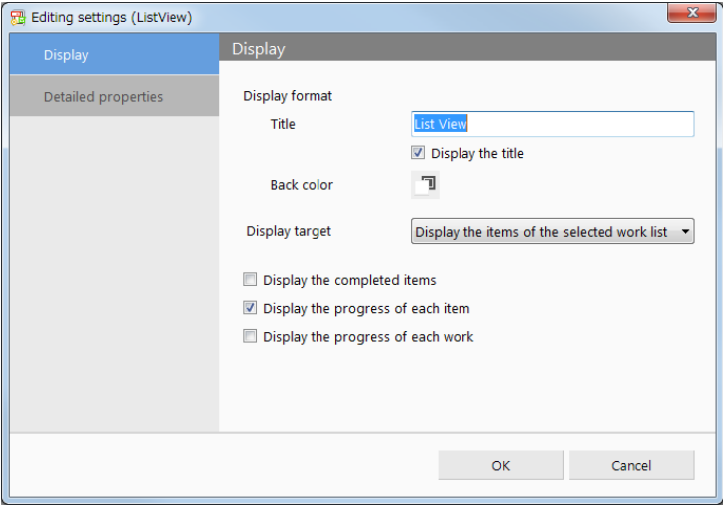


Display format

• Title

Set the name of the screen. If you select the "Display the title" check box, a title label will be placed at the top of the screen.

• Back color

Set the Back color of the screen.

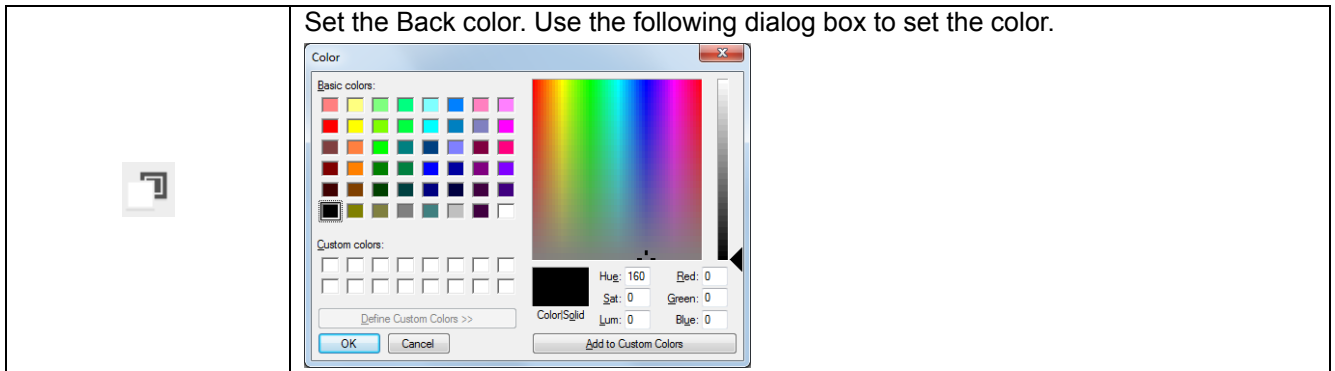

Display target

Select the target to display as a list.

[Options] Display the items of the selected work list | Display the items of all of the work list

Display the completed items

Check this box to display the items whose work is complete.

Display the progress of each item

Check this box to display the number of all items in the work lists and the number of items whose work is complete.


Work progress 00/00

Display the progress of each work

Check this box to display the number of all ordered work lists and the number of work lists whose work is complete.

Item progress 00/00

■ Detailed properties

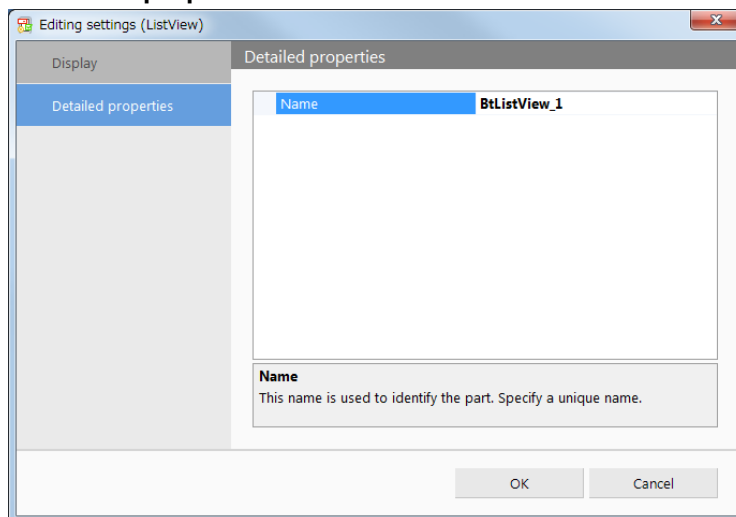


Name	Set the screen's name.
------	------------------------

5.6.6. Receive Work List Window

You can select "ReceiveWorkList" on the Screen list (["4.3.2. New Screen"](#)) to add a window. This window is only for receiving a list of the master data which is set in the MasterCheck control.

■ Item to add from the screen list



■ Receive List window

Receive List

Work No.

	Work No.
1	
2	
3	

Back


Recv

Clear


Usage method

Tap "Recv" or press the [F2] key to receive the master file along the path that you have set with the communication settings. The target is the master file that is used in ["5.5.4. Master Check Control."](#) If, before receiving the master file, you scan or manually input the work number that is planned to be worked, the master collation will only be performed against that list. If you do not enter the work number, the master collation will be performed against all the work lists.

Double-click on the added screen to display the following dialog box.

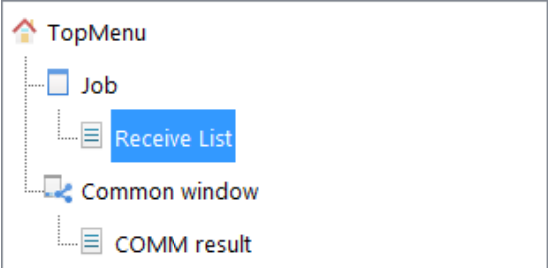

■ Display

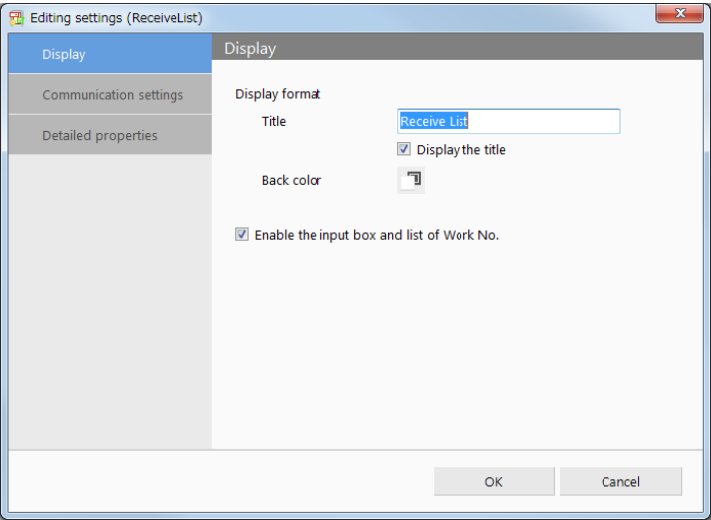


Display format

• Title

Set the name of the screen. If you select the "Display the title" check box, a title label will be placed at the top of the screen.


• Back color

Set the back color of the screen.

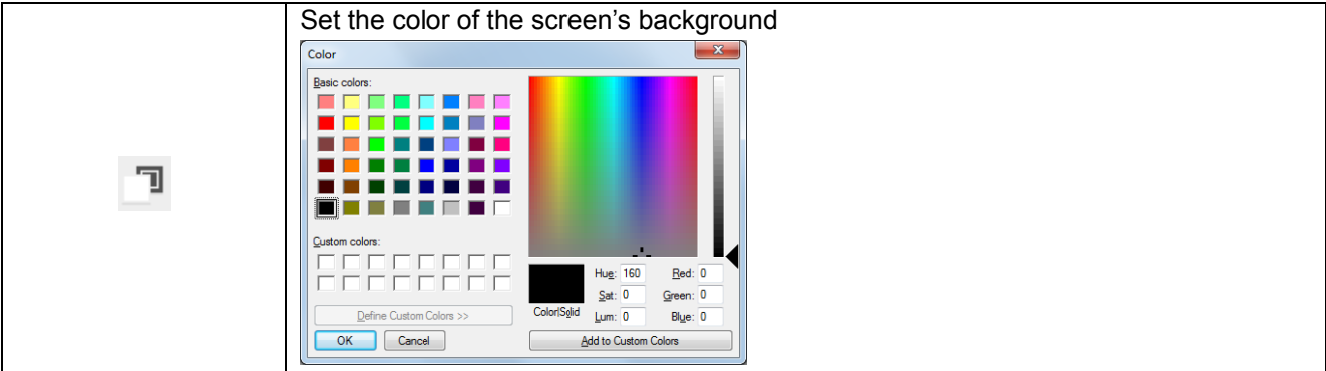


• Enable the input box and list of work No.

Check this box to display the work number input box and list. If you clear this check box, the following screen will be displayed.

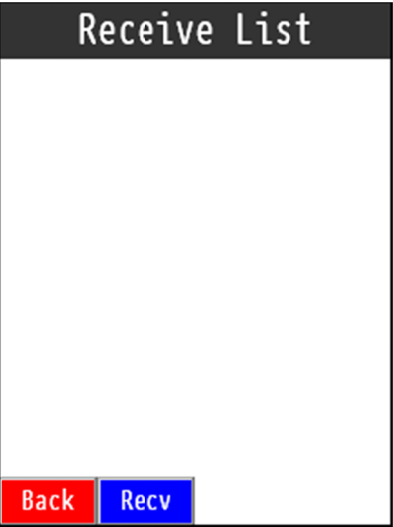

■ Communication settings

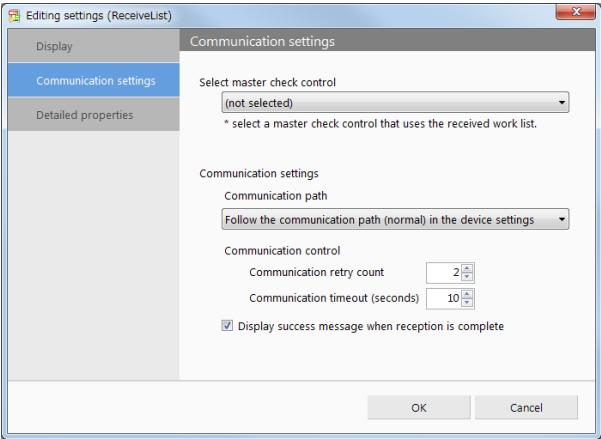

Select master check control

Select the master collation control that will use the received work list.

Communication settings

• **Communication path**

Select the communication path to use in receiving the work list.

[Options] Follow the communication path (normal) in the device settings | USB communication unit/LAN communication unit/Wireless LAN

• **Communication control**

Communication retry count

Set the number of retries when a communication error occurs.

[Setting range] 0 to 9 times

Communication timeout (seconds)


Set the length of time until a communication error occurs.

[Setting range] 1 to 50 seconds

• **Display success message when reception is complete**

When you check this box, a success message will be displayed when reception is complete.

■ Detailed properties

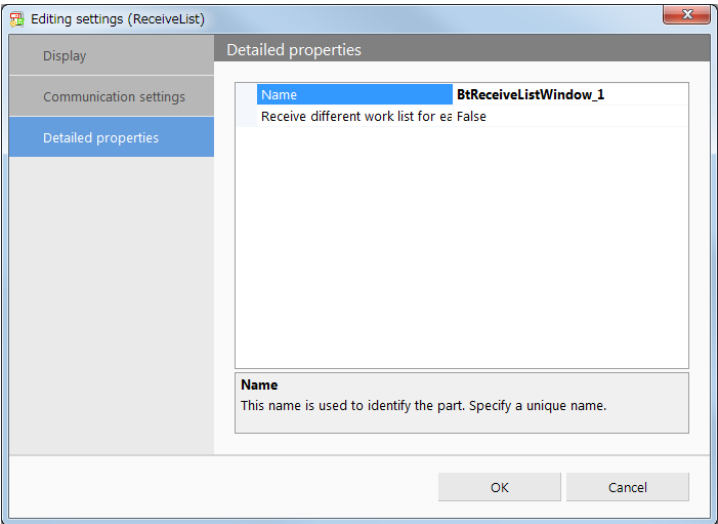


Name	Set the name of the part.
Receive different work list for each device	Enable this setting to receive master files having the device ID added at the start of their filenames. [Options] True False

5.6.7. DataMatch NG Window

You can select "DataMatch NG" on the Screen list ("[4.3.2. New Screen](#)") to add a window. This window is only for displaying DataMatch errors.

■ Item to add from the screen list




■ DataMatch error window




Usage method

This window is only for displaying DataMatch errors. Use this window together with "[5.5.2. DataMatch Control](#)." Tap "OK" to return to the original screen.

Double-click on the added screen to display the following dialog box.

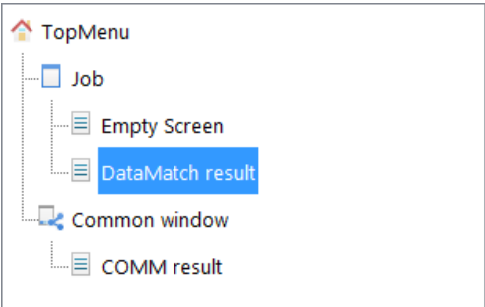

■ Display/error processing

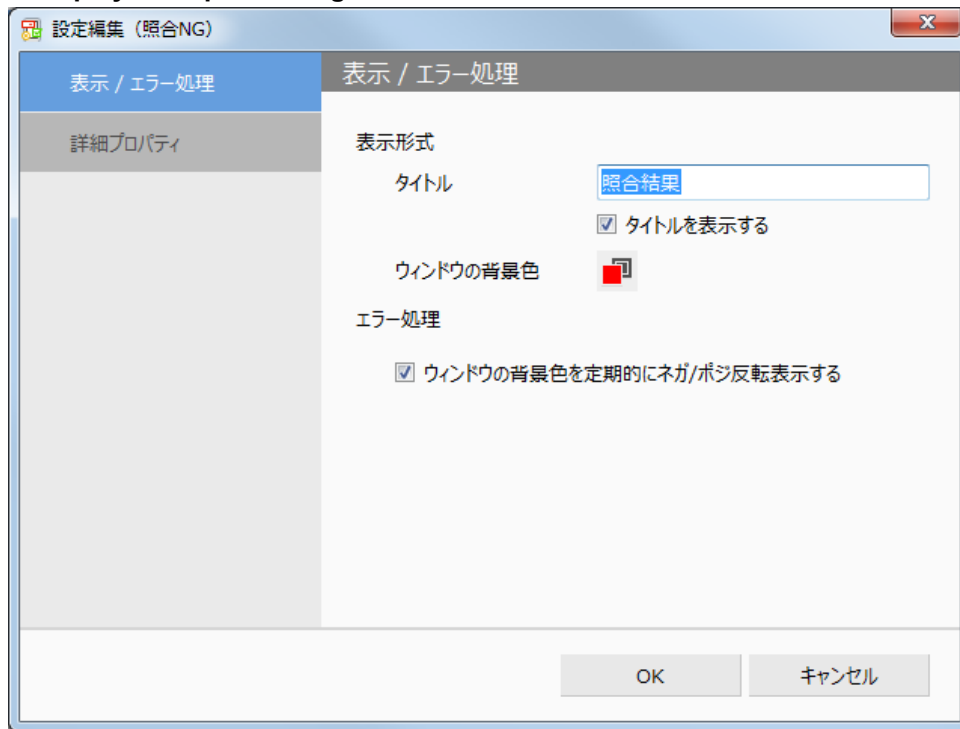


Display format

• Title

Set the name of the screen. If you select the "Display the title" check box, a title label will be placed at the top of the screen.

• Back color

Set the back color of the screen.

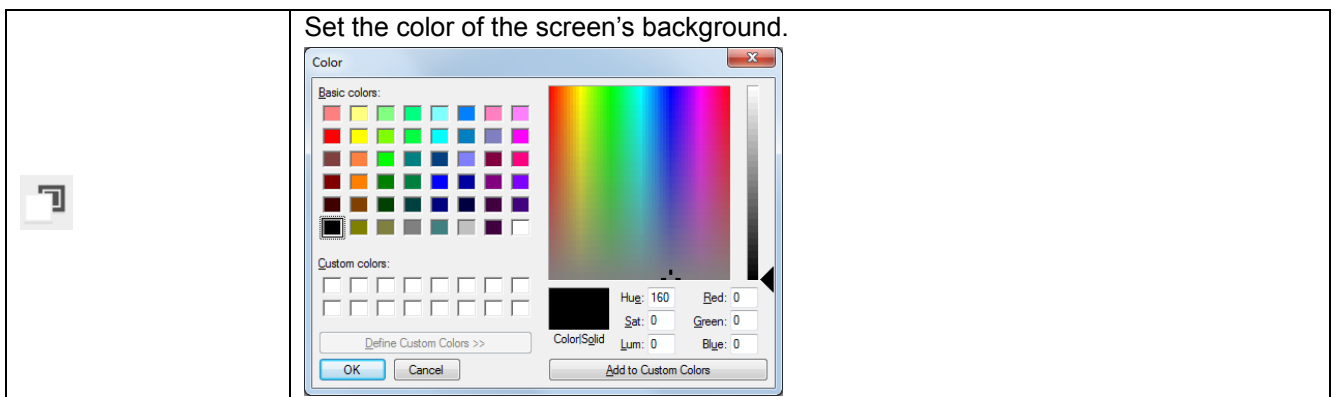


Error processing

• Periodically display the window background color inverted between negative and positive

If this box is checked, the screen color will repeatedly be inverted when a comparison error occurs.

■ Detailed properties

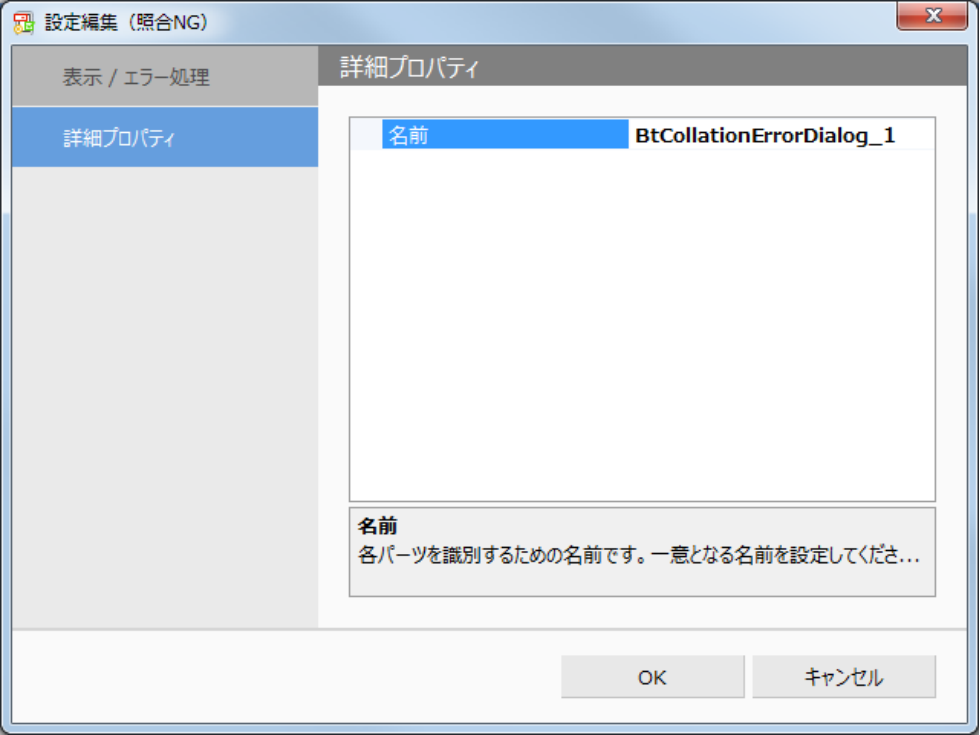


Name	Set the screen's name of the part.
------	------------------------------------


5.6.8. Top Menu Window

There must be one top menu in each project. You cannot add additional copies of this window or delete it.


■ Top menu window

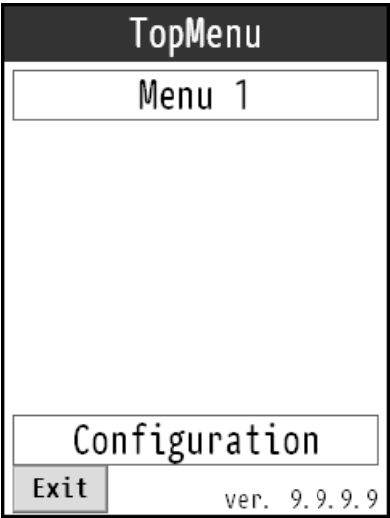

Double-click on the menu item to display the following dialog box.

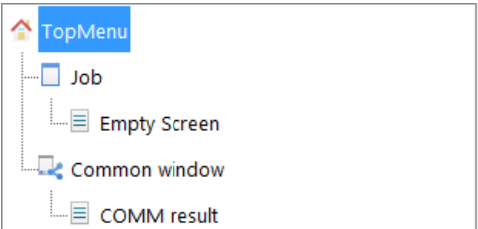

■ TopMenu settings

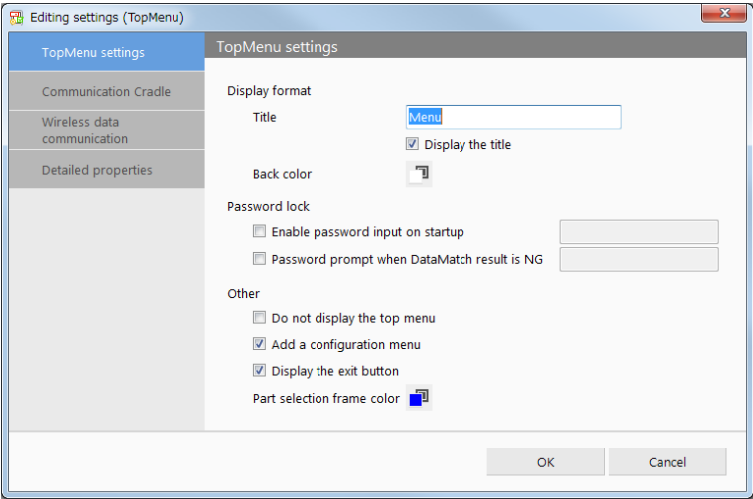


Display format

- **Title**

Set the name of the top menu. If you select the "Display the title" check box, a title label will be placed at the top of the screen.

- **Back color**

Set the back color of the screen.

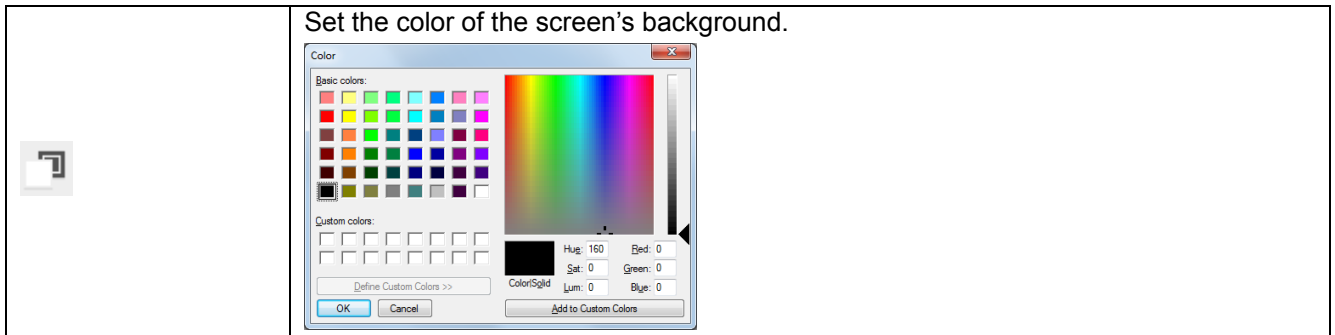

Password lock

- **Enable password input on startup**

When you check this box, the entry of the user's password will be required when the application starts. You can set the password to an arbitrary value.

- **Enable password input when DataMatch result is NG**

When you check this box, the entry of the user's password will be required when comparison is NG (when it fails). You can set the password to an arbitrary value.

Note

* You have to configure the settings in "[5.5.2. DataMatch Control](#)."

* The password can be from 2 to 40 single-byte characters in length.

Other

- **Do not display the top menu**

When you check this box, the top menu screen will not be displayed. The top-most job will be executed by default.

- **Add a configuration menu**


Check this box to add a menu for changing the device system settings.

- **Display the exit button**


Check this box to add a button for exiting the application.

- **Part selection frame color**

Set the color of the frame displayed when the parts within the menu are selected.

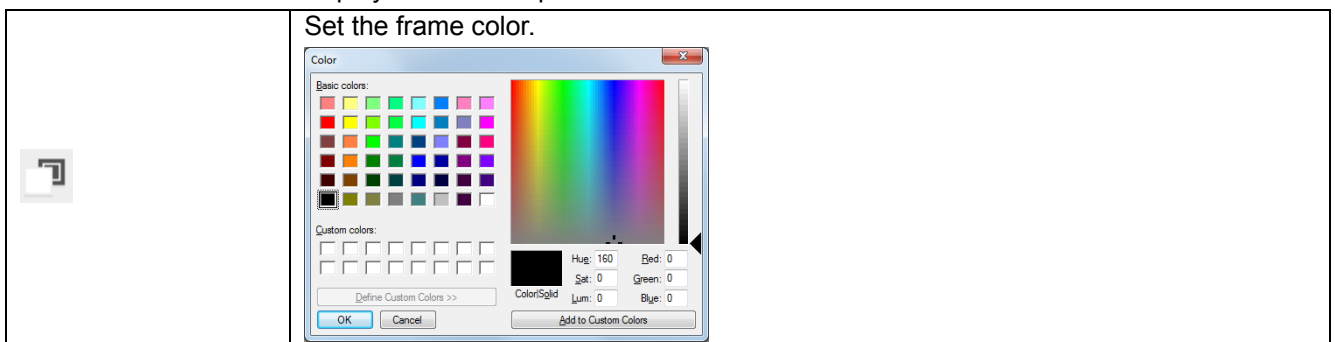

■ Communication Cradle

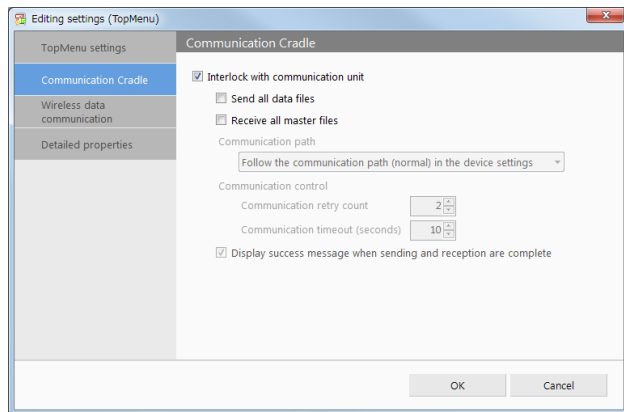

Interlock with communication cradle

Check this box to enable the following settings.

- **Send all data files**

When you check this box, all the data files will be sent when the BT-W Series is inserted into a Communication Cradle.

- **Receive all master files**

When you check this box, all the master files will be received when the BT-W Series is inserted into a Communication Cradle.

- **Communication path**

Select the communication path.

[Options] Follow the communication path (normal) in the device settings | USB Communication Cradle | LAN Communication Cradle | Wireless LAN

- **Communication retry count**

Set the number of retries when a communication error occurs.

[Setting range] 0 to 9 times

- **Communication timeout (seconds)**


Set the length of time until a communication error occurs.

[Setting range] 1 to 50 seconds

- **Display success message when sending and reception are complete**

When you check this box, a success message will be displayed when sending or reception is complete.

■ Wireless data communication

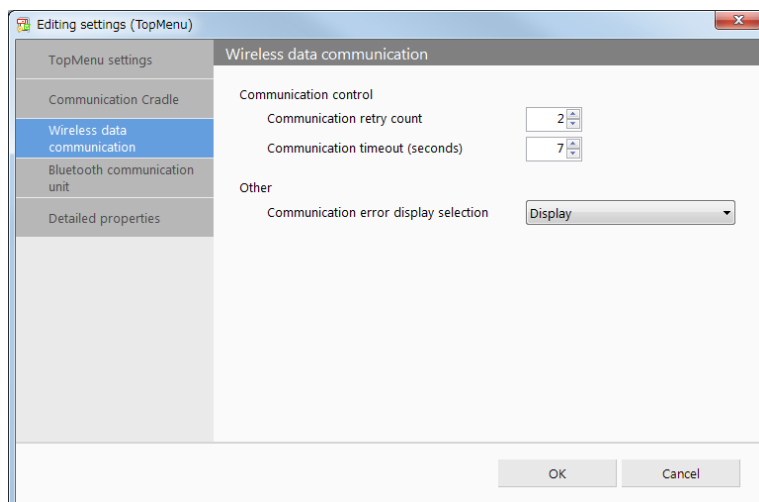


Communication control

- **Communication retry count:** Set the number of times to retry when communication fails.
- **Communication timeout (seconds):** Set how many seconds to wait when establishing a communication connection before considering the connection to have failed.

Other

- **Communication error display selection**
Set whether to display the communication error screen when a communication error occurs. If you select "Display (excluding operation when out of range)," the communication error screen will not be displayed when operations are performed outside of the range of the wireless network as this is judged to be offline work. The data is stored on the BT device.
[Options] Display | Display (excluding operation when out of range) | Do not display

Detailed properties

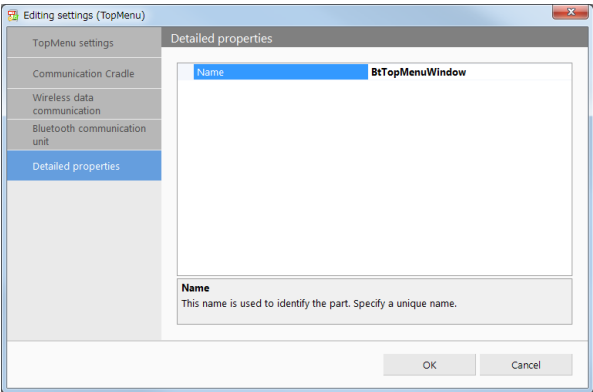

Name	Set the window's name.
------	------------------------


5.6.9. Communication Error Result Window

At least one communication error result window is required in each project. You cannot add additional copies of this window or delete it.


■ Communication error result window



Double-click on the menu item to display the following dialog box.

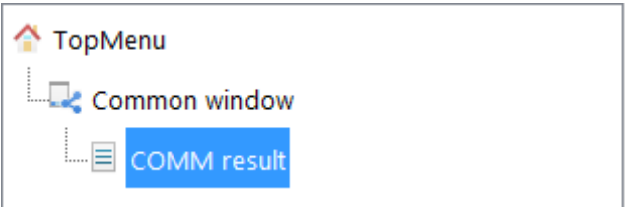

■ Display

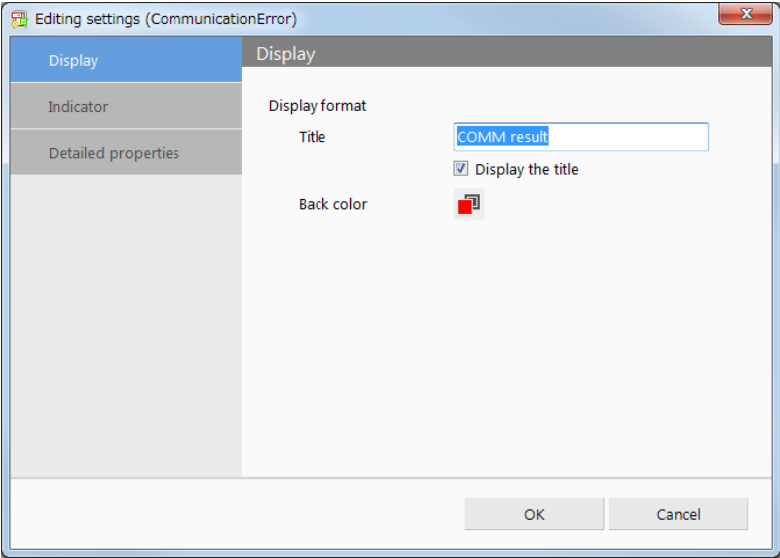


Display format

- **Title**


Set the name of the screen. If you select the "Display the title" check box, a title label will be placed at the top of the screen.

- **Back color**

Set the back color of the screen.

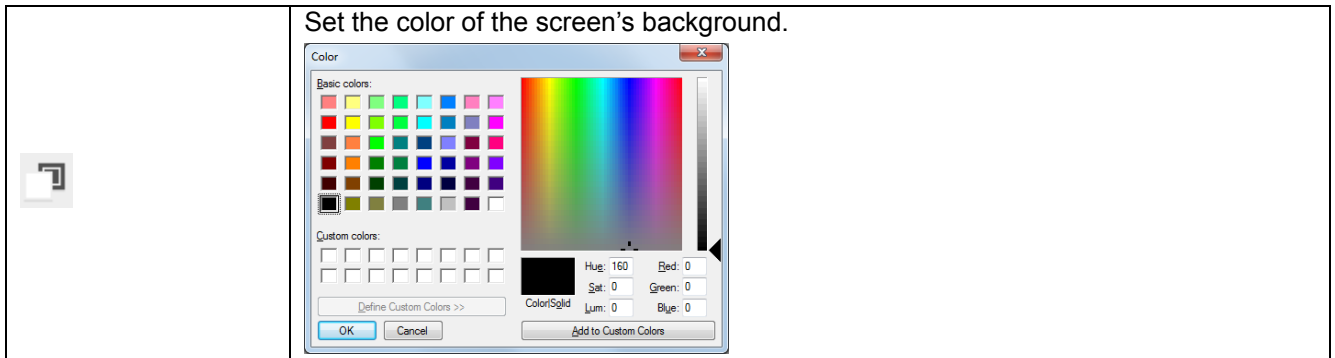

■ Indicator

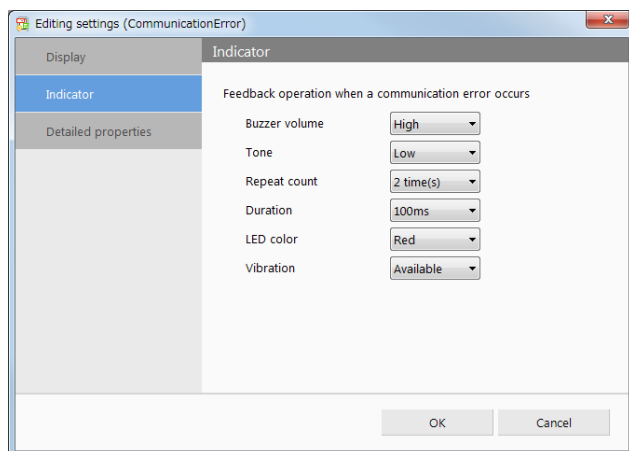

Buzzer, vibration, LED operation when a communication error occurs

Set the buzzer, vibration, and LED operations when a communication error occurs.

- **Buzzer volume**

[Options] Off | Low | Medium | High

- **Tone**

[Options] Low | Medium | High

- **Repeat count**

[Setting range] 1 time to 10 times

- **Duration**

[Options] 100ms | 200ms | 500ms | 1000ms


- **LED color**

[Options] Off | Green | Red

- **Vibration**

[Options] Unavailable | Available

■ Detailed properties

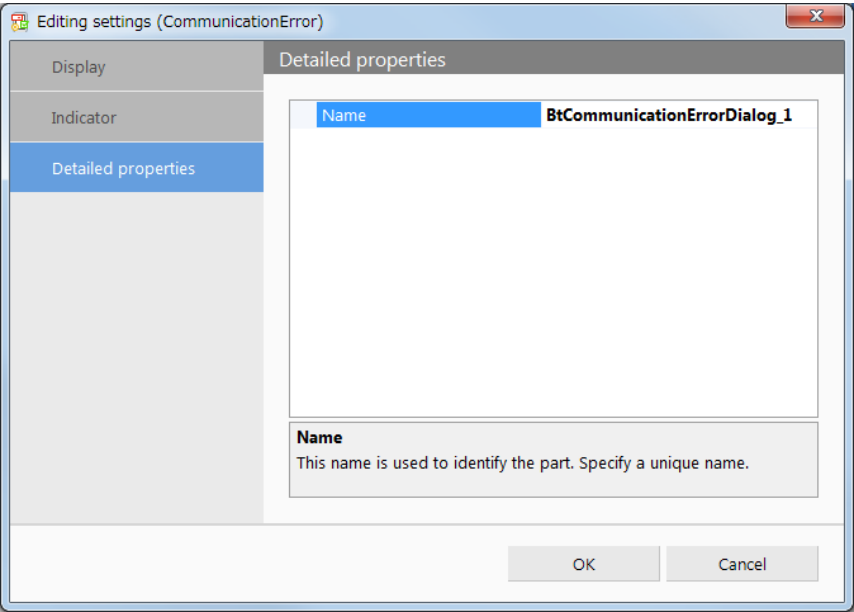

Name	Set the screen's name.
------	------------------------

6. PC Application Parts, Controls, and Windows

Develop PC applications by dragging parts from the library. This chapter explains how to use the GUI parts. Read this chapter together with ["4.2.7 Editing PC Applications"](#) and ["4.10 Library \(PC Application\)"](#).

6.1. Labels


6.1.1. Label

Use Labels to display text strings in the PC application.

■ Part icon




■ GUI display

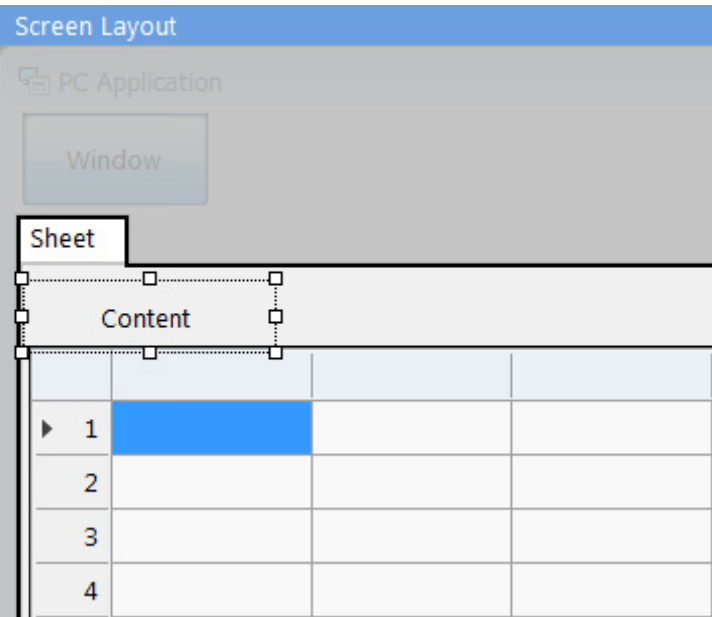

■ Part properties


Name	BtLabel_1
▷ Position	3, 10
▷ Size	120, 30
Frame Style	None
Content	Content
Content Alignment	Middle center
Font	Segoe UI, 9.75pt
Fore Color	 ControlText
Back color	 Control

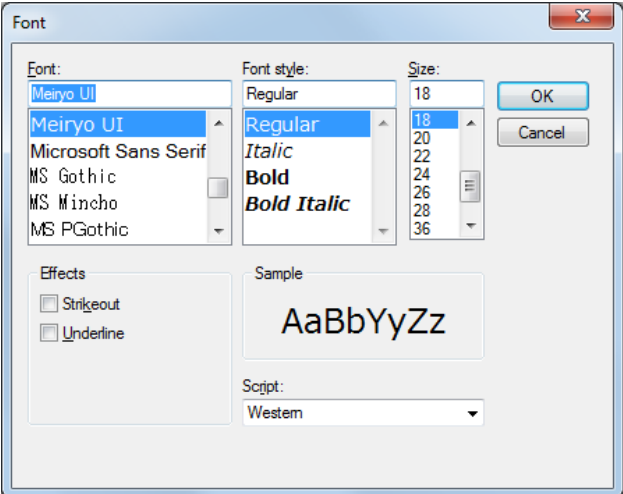Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Content	Set the content to display.
Content Alignment	Set the alignment of text in the part.  [Options] Align top left Top center Align top right Align middle left Middle center Align middle right Align bottom left Bottom center Align bottom right
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

Fore Color	Set the color of the text. Custom Web System Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight
Back Color	Set the color of the part's background. Custom Web System Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight

Double-click on a part to display the following dialog box.

■ Display




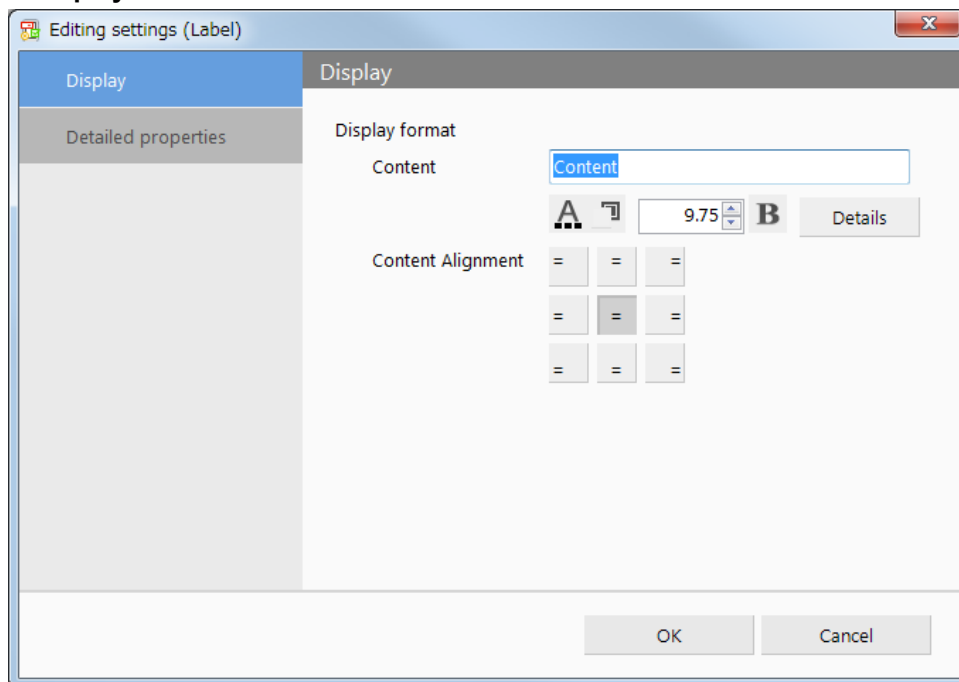


The dialog box is titled "Editing settings (Label)". It has a sidebar on the left with two tabs: "Display" (selected) and "Detailed properties". The main area is titled "Display" and contains the following settings:

- Display format:** A text field containing "Content".
- Content:** A text field containing "Content".
- Content Alignment:** A 3x3 grid of alignment buttons. The center button (middle row, middle column) is highlighted with a gray background.
- Font Size:** A text field containing "9.75".
- Font Style:** A button labeled "B" (Bold).
- Details:** A button labeled "Details".
- Buttons:** "OK" and "Cancel" buttons at the bottom.

Display format

Configure settings such as the content to display, its color, and its font size.

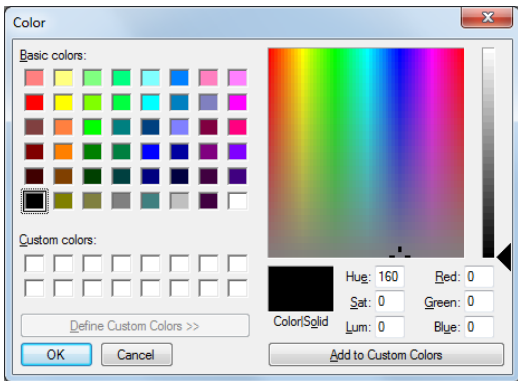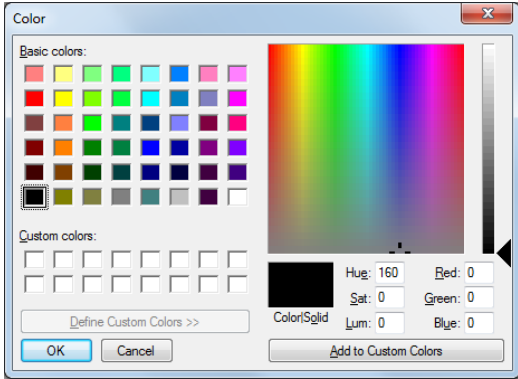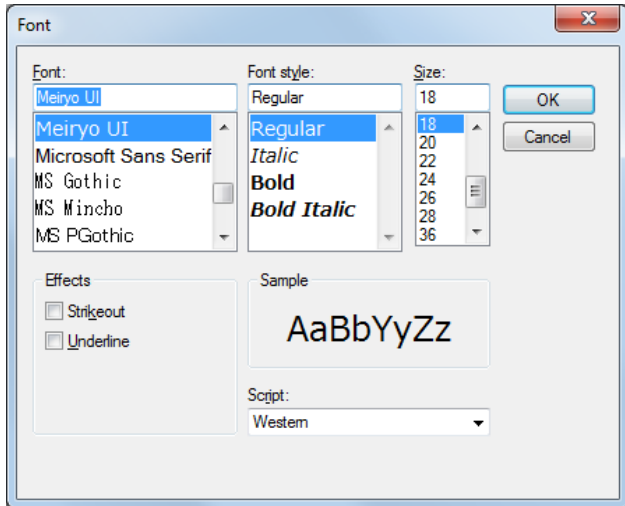
	Set the color of the text. 
	Set the color of the part's background. 
9.75	Set the font size.
B	Set the font style to bold.
	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

• Content Alignment

Set the alignment of text in the part.

	Align top left		Top center		Align top right
	Align middle left		Middle center		Middle right
	Align bottom left		Bottom center		Align bottom right

■Detailed properties

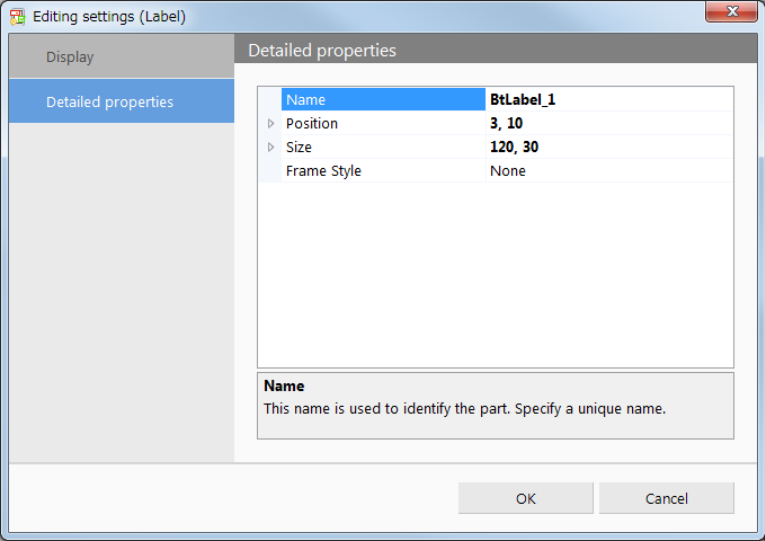


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional

6.1.2. Calculation label


Use this label to calculate and display the total, average, or numerical value quantity of a specified column in the table. You can also add a prefix and a suffix to the calculated result.

Example) Total inventory value: \$<result>

■ Part icon

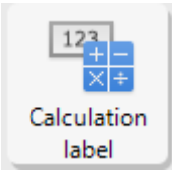



■ GUI display

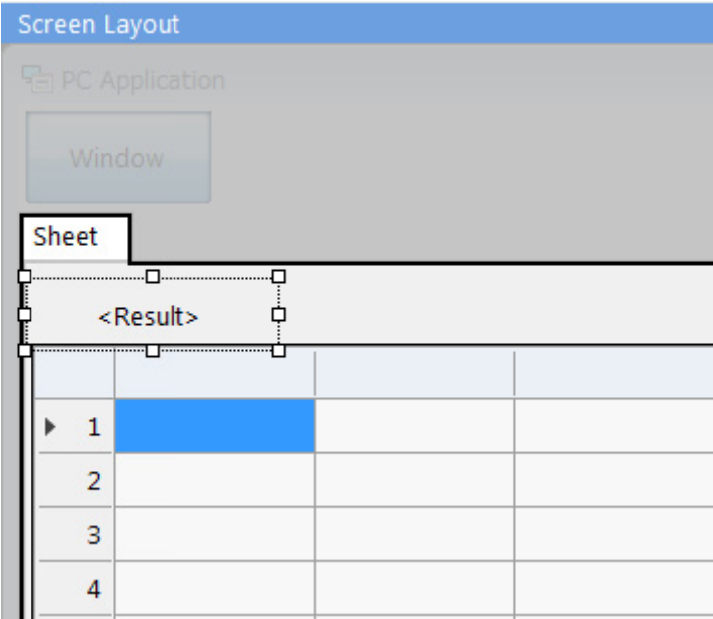

■ Part properties


Name	BtCalculationLabel_1
▶ Position	3, 10
▶ Size	120, 30
Frame Style	None
Content Alignment	Middle center
Font	Segoe UI, 9.75pt
Fore Color	 ControlText
Back color	 Control

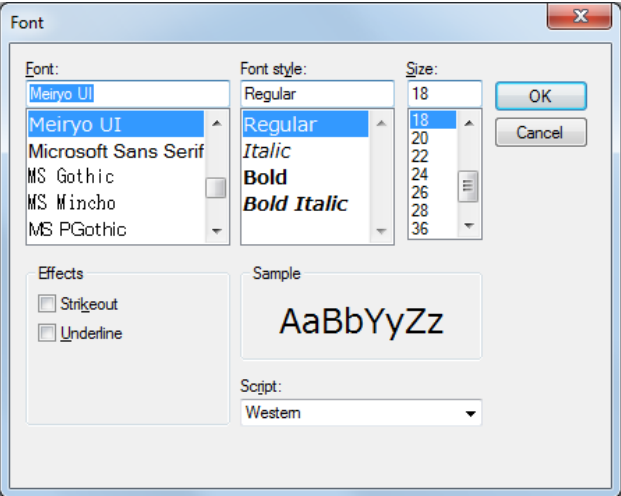Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Content Alignment	Set the alignment of text in the part.  [Options] Align top left Top center Align top right Align middle left Middle center Align middle right Align bottom left Bottom center Align bottom right
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

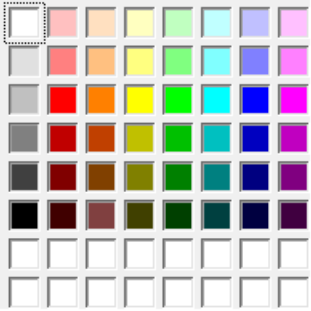Fore Color	Set the color of the text. Custom Web System  Custom Web System Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon Custom Web System ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight
Back Color	Set the color of the part's background. Custom Web System  Custom Web System Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon Custom Web System ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight

Double-click on a part to display the following dialog box.

■ Display

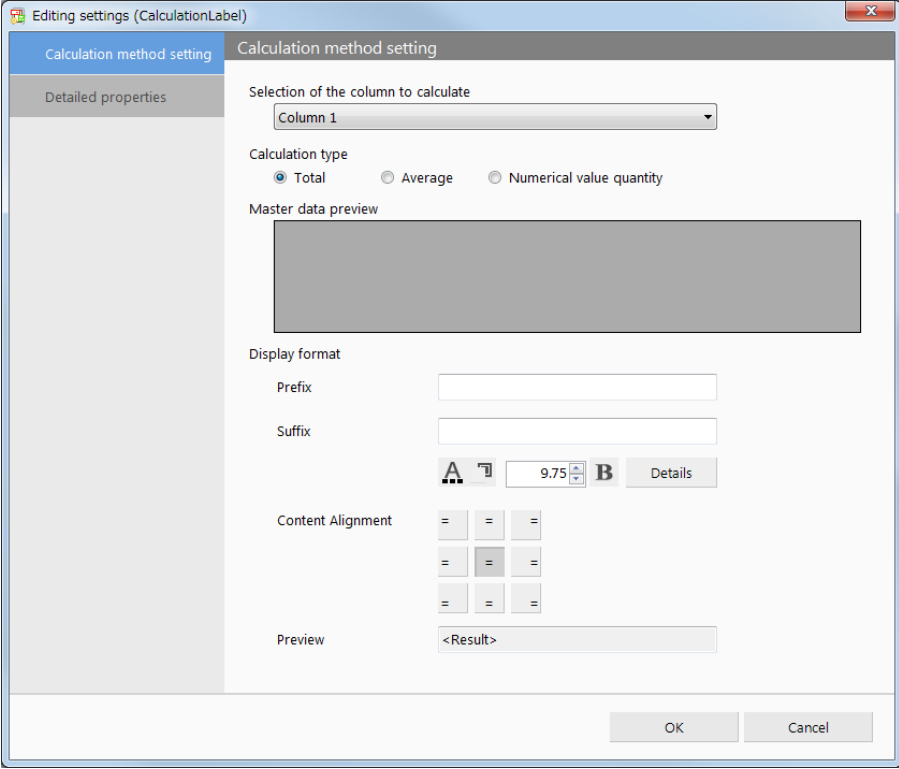

Editing settings (CalculationLabel)

Calculation method setting

Detailed properties

Selection of the column to calculate

Column 1

Calculation type

☒ Total ☐ Average ☐ Numerical value quantity

Master data preview

Display format

Prefix

Suffix

Content Alignment

Preview

<Result>

OK Cancel

Selection of the column to calculate

Select the column to calculate.

[Options] Column 1 to Column 32 | Calculation column 1 to Calculation column 8

Calculation type

Select the calculation type.






[Options] Total | Average | Numerical value quantity

Master data preview

Preview the master data.

Display format

Configure settings such as the prefix and suffix to attach to the calculated result as well as the color and font size.

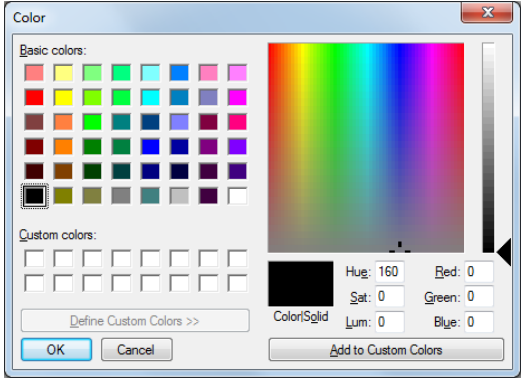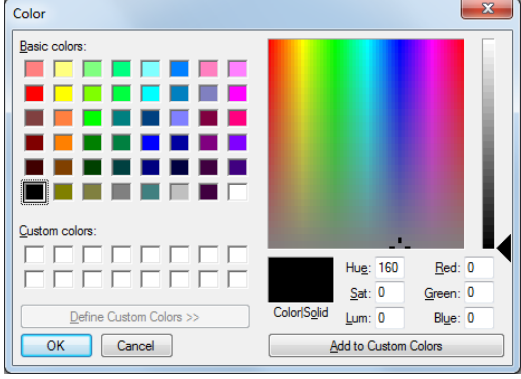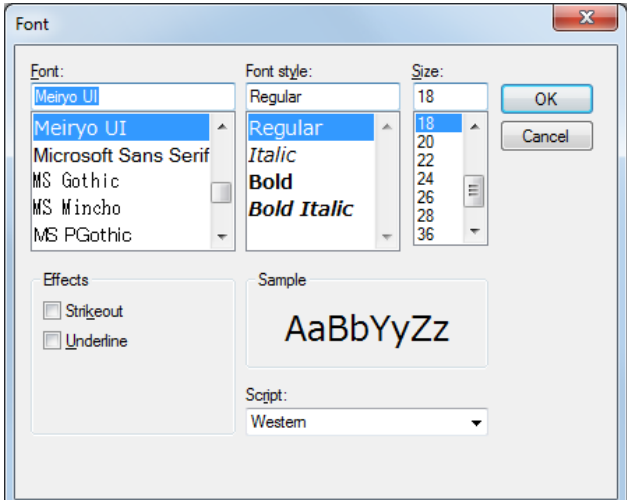	Set the color of the text. 
	Set the color of the part's background. 
	Set the font size.
	Set the font style to bold.
	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

• Content Alignment


Set the alignment of text in the part.

	Align top left		Top center		Align top right
	Align middle left		Middle center		Middle right
	Align bottom left		Bottom center		Align bottom right

• Preview

You can check a preview in which the prefix and suffix are attached.

■ Detailed properties

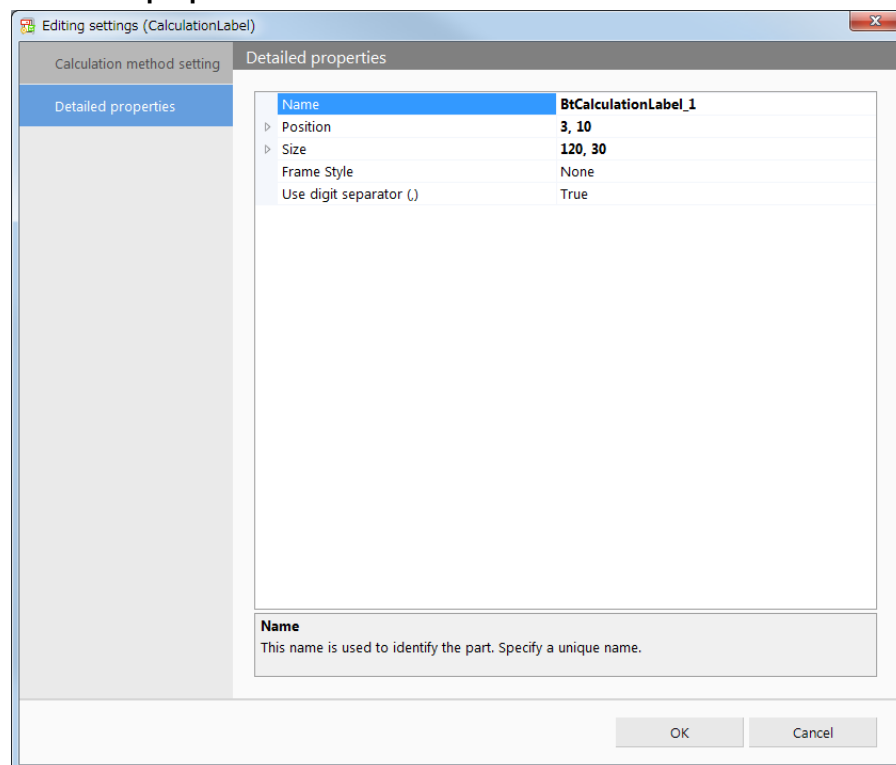


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Use digit separator (,)	Separate digits using a comma as in "1,000,000." [Options] False True

6.2. Boxes


6.2.1. Search input boxes

This part is used to search a column in the table for the specified value with the specified conditions. Multiple drop-down list boxes and filter buttons can be placed on this part. You can set the default conditions and the search method.

■ Part icon

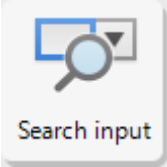


■ GUI display

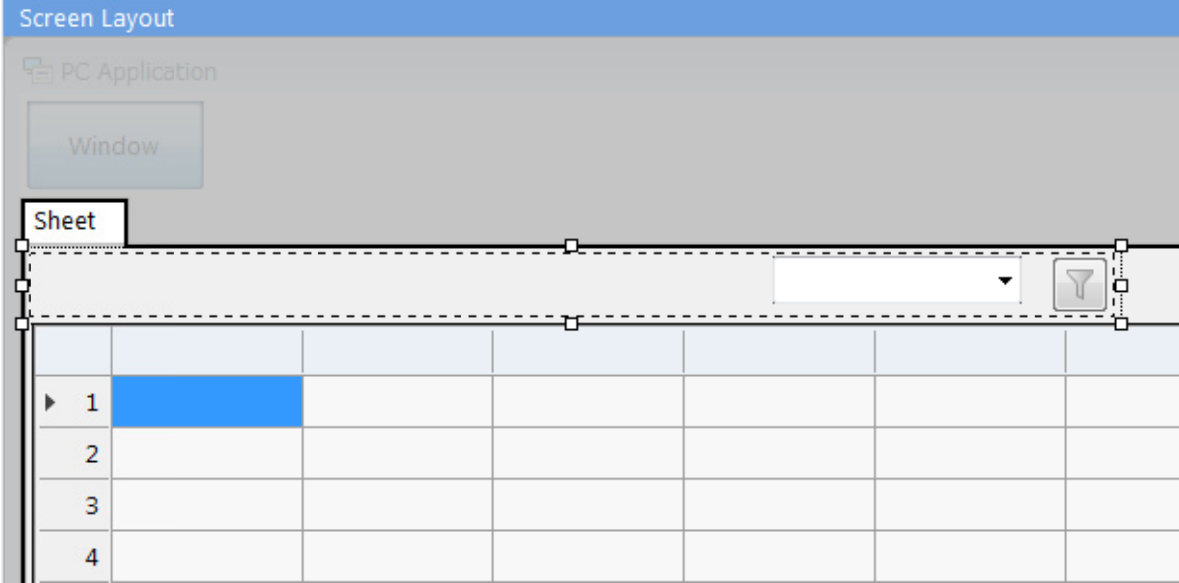


■ Part properties

Name	BtSearchBox_1
▷ Position	1, 3
▷ Size	569, 34
Frame Style	None
Back color	☐ Control

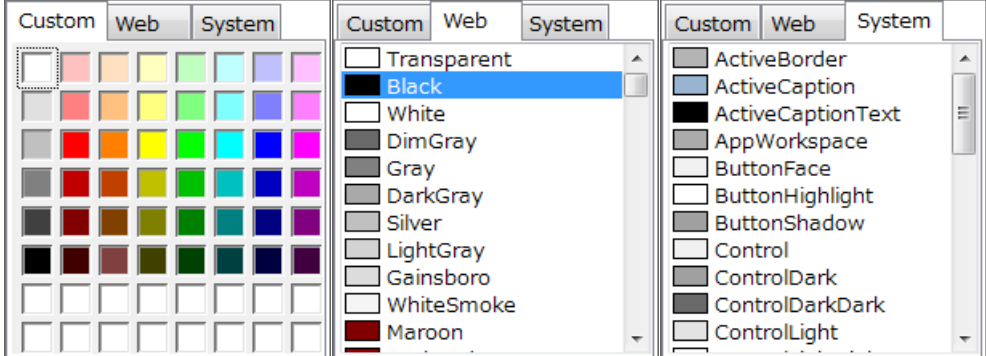Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Back Color	Set the color of the part's background. 

Double-click on a part to display the following dialog box.

■ Display

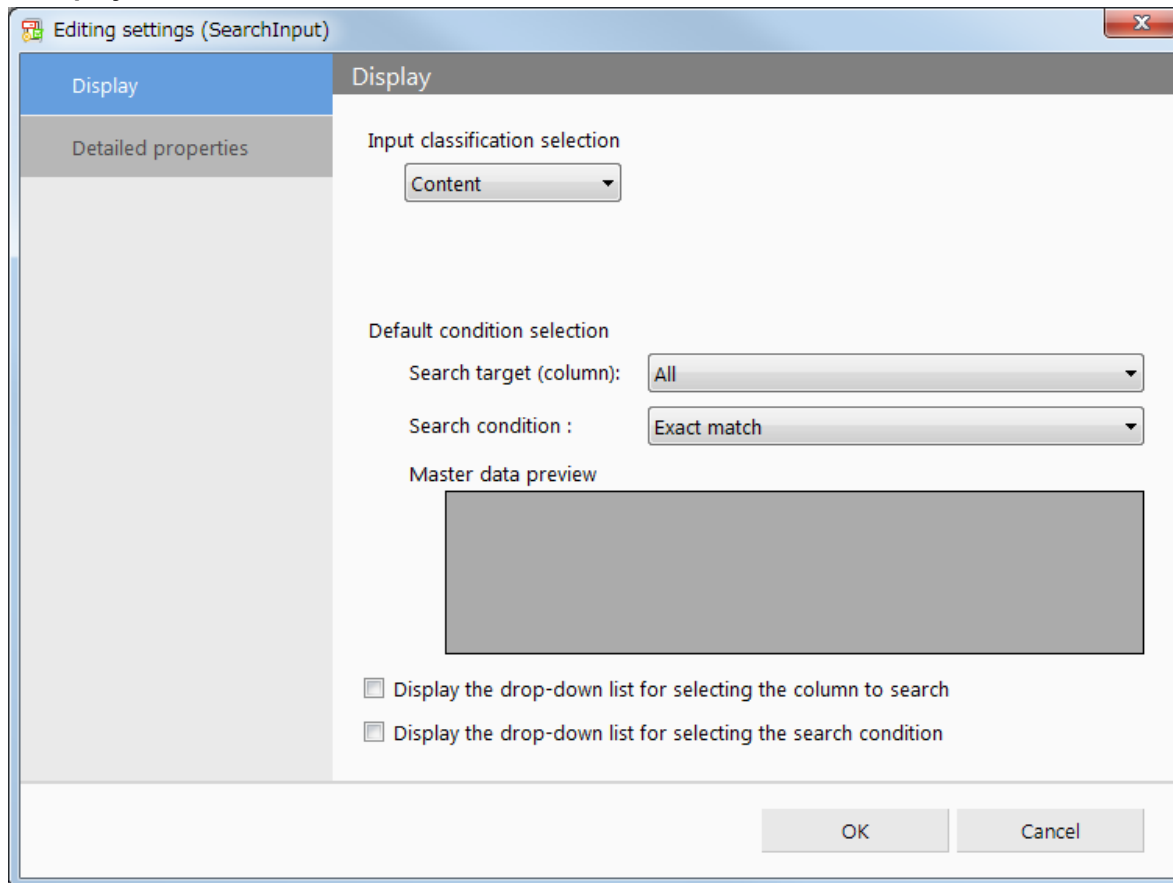

Input classification selection

Set the type of value to search for.

[Options] Content | Numeric value | Date

- When "Numeric value" is selected

The following setting is enabled. Set the number of digits after the decimal point.

After decimal digit length

- When "Date" is selected

The following selections are enabled. Set the date pattern to input.

Pattern	YYYYMMDD
Delimiter	Slash
Preview display	2016/01/15

Default condition selection

Select the default value of the column to search and the search condition.

- **Search target (column)**

Select the default value of the column to search. This is displayed as the default value in the drop-down list box.

[Options] All | Column 1 to Column 32

- **Search condition**

Select the default value of the search condition. This is displayed as the default value in the drop-down list box.

[Options] The options vary depending on what you have selected for "Input classification selection."

"Content" Exact match | Forward match | Backward match | Contains | Does not contain

"Numeric value" Equal | Not equal | Greater | Less | Or greater | Or less

"Date" From ~ to ~ | From ~ | To ~

- **Master data preview**

Preview the master data.


Display the drop-down list for selecting the column to search


Check this box to display the drop-down list box for selecting the column to search.

Display the drop-down list for selecting the search condition

Check this box to display the drop-down list box for selecting the search condition.

■ Detailed properties

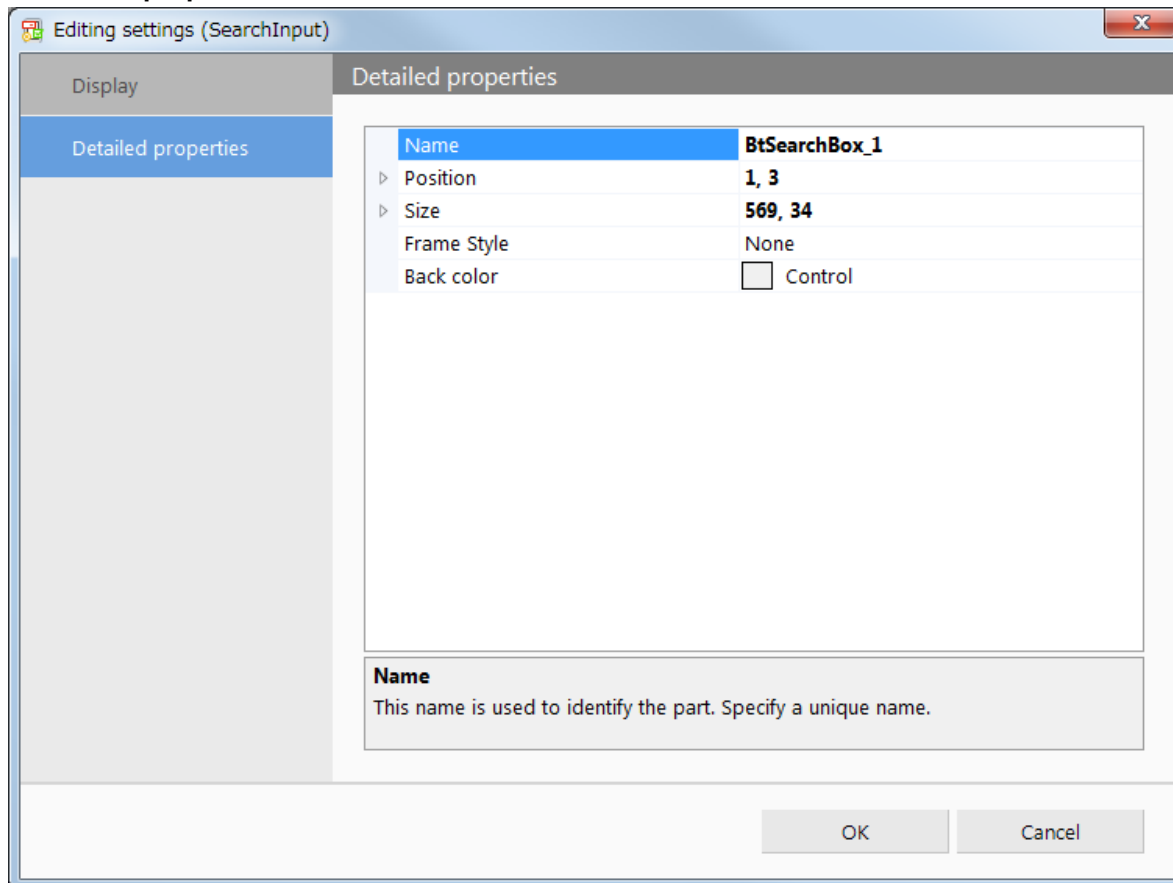

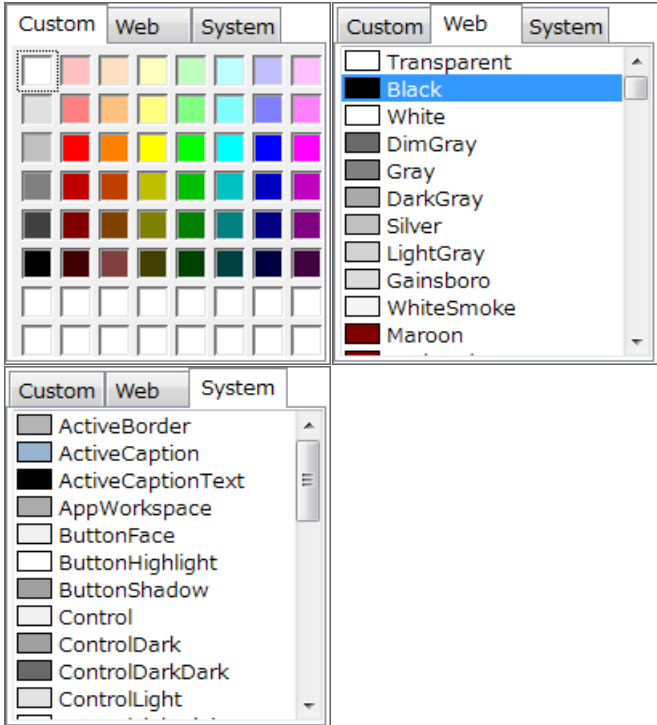Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Back Color	Set the color of the part's background. 



About drop-down list boxes (internal parts)


■ GUI display



■ Part properties


Name	BtTargetDropDownBox_1
Position	5, 2
Width	120
Font	Segoe UI, 9.75pt
Fore Color	ControlText
Back color	Window

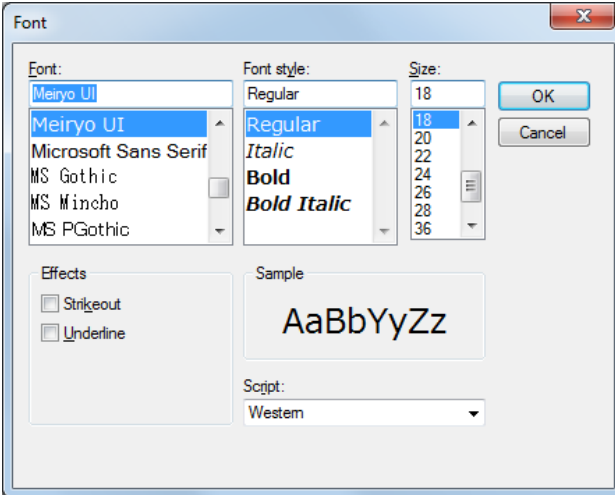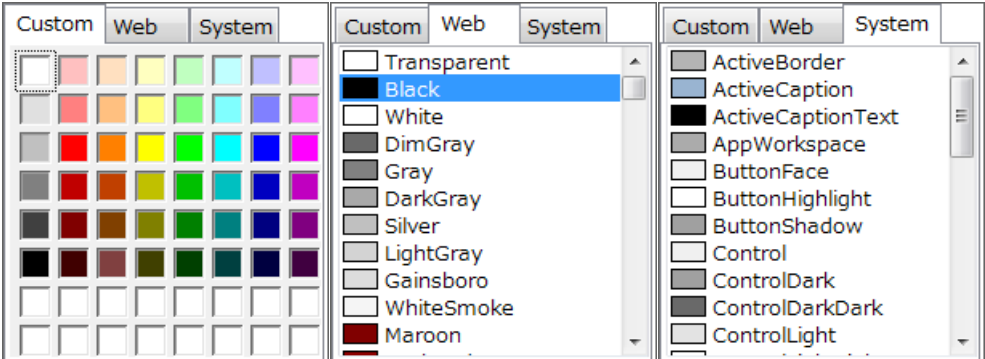Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Width	Set the width of the part. [Setting range] 1 to 1920
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 
Fore Color	Set the color of the text. 

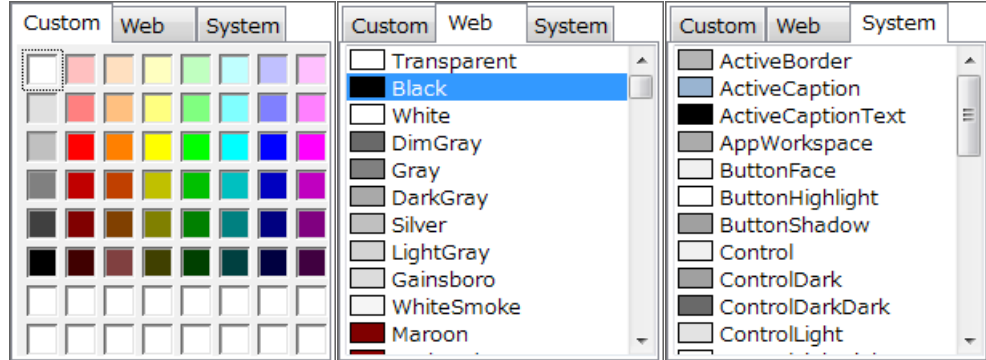Back Color	Set the color of the part's background. 
------------	---


Double-click on a part to display the following dialog box.


■ **Display**

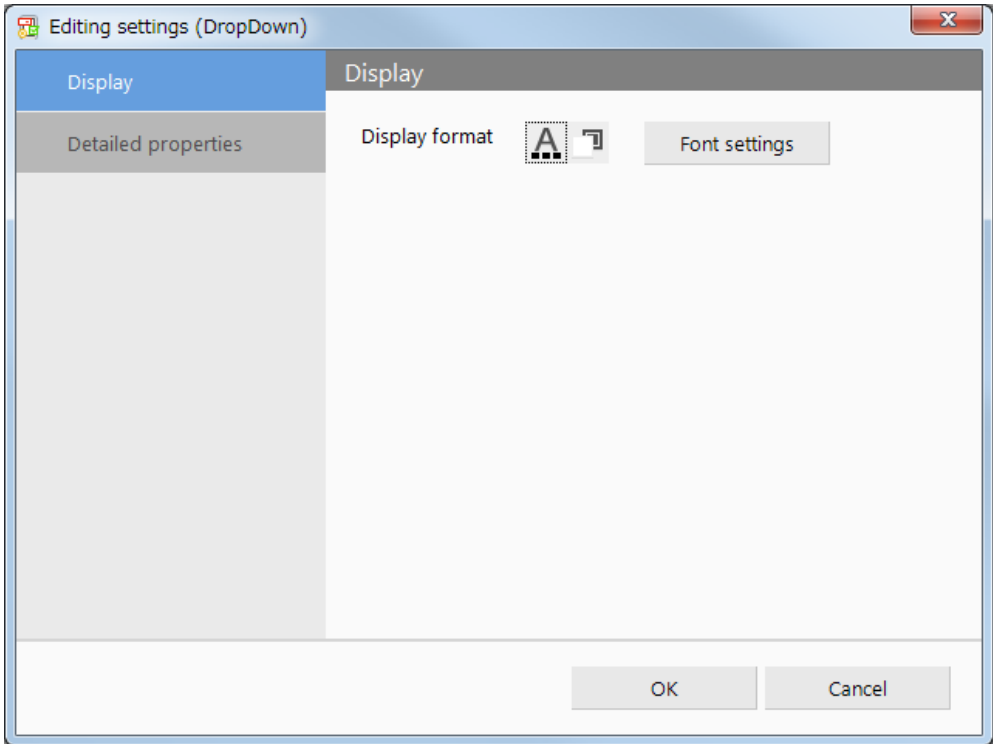


Display format

Configure settings such as the content to display, its color, and its font size.

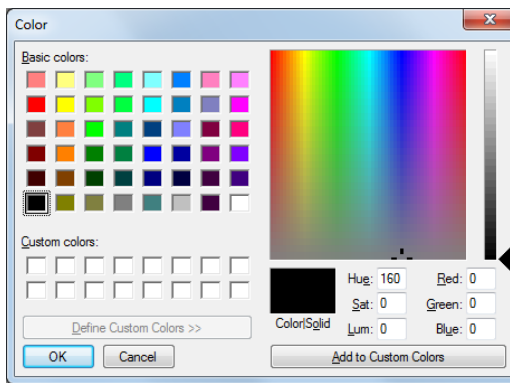	Set the color of the text. 
	Set the color of the part's background.

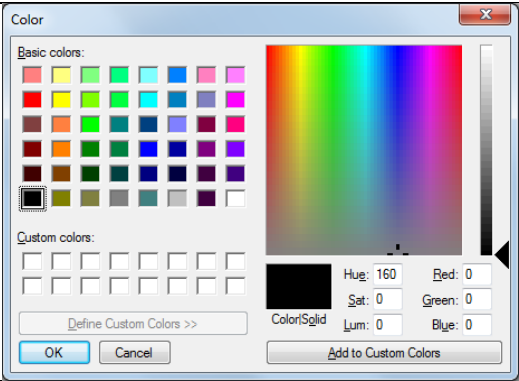


Configure settings such as the font type and size. Use the following dialog box to configure the settings.

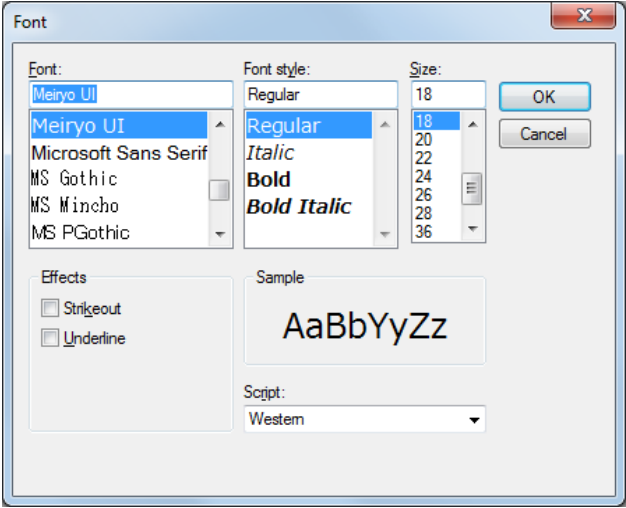

Details

■ Detailed properties

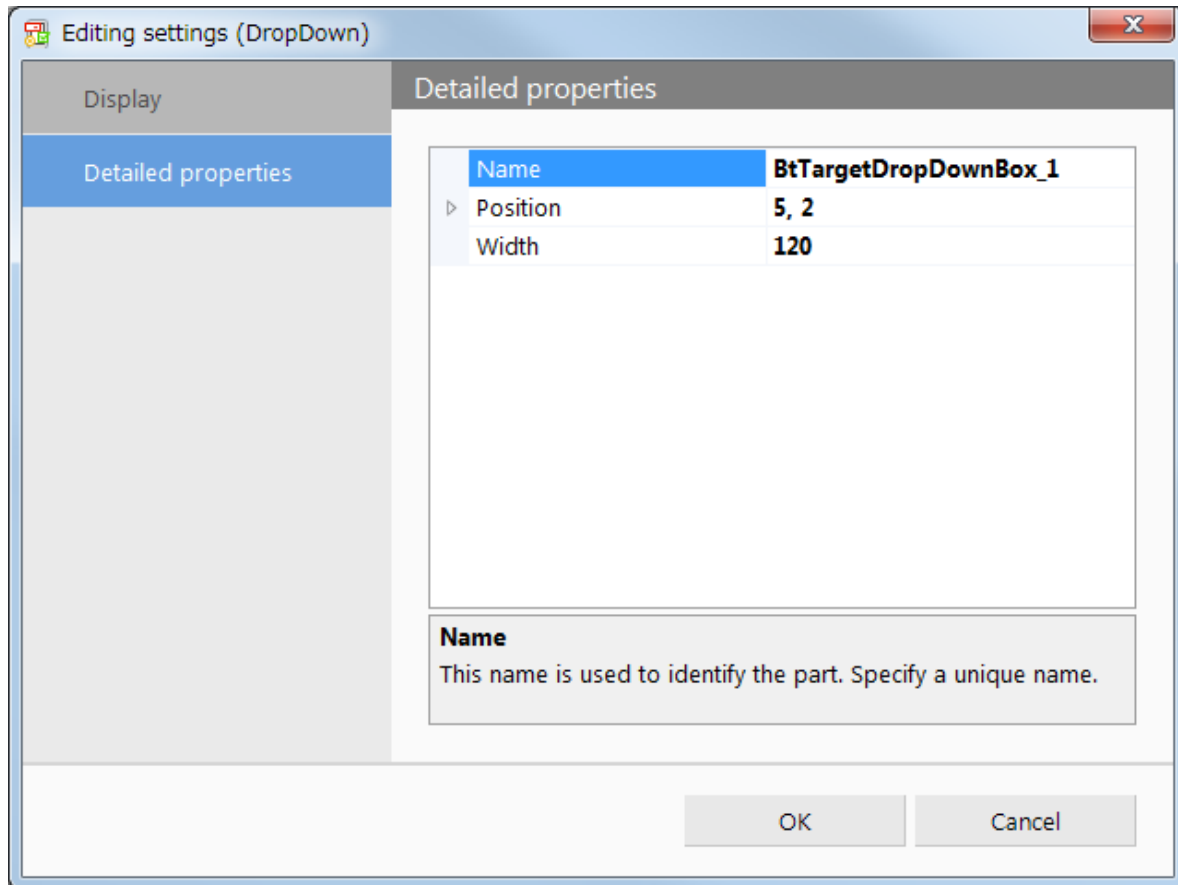

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Width	Set the width of the part. [Setting range] 1 to 1920

About buttons (internal parts)

■ GUI display




■ Part properties

Name	BtSearchBoxButton_1
▷ Position	536, 2
▷ Size	30, 30

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080

Double-click on a part to display the following dialog box.

■ Detailed properties

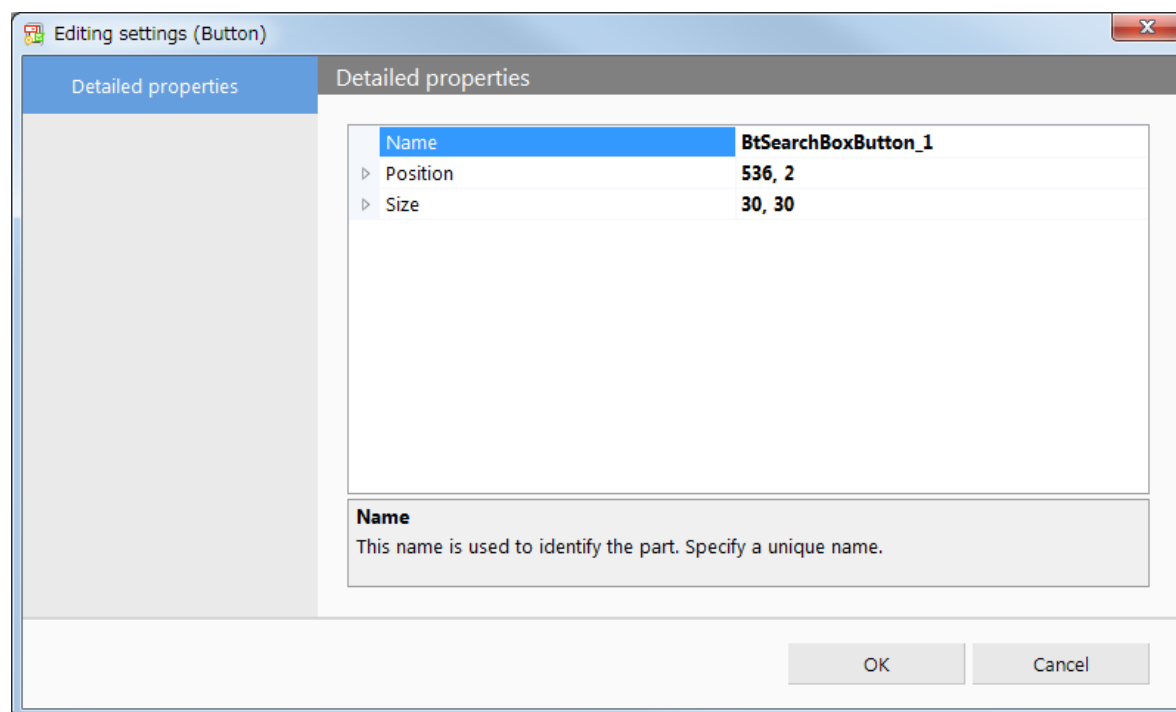

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080

6.3. Button

6.3.1. Adjust inventory button

This part is mainly used in inventory applications. The inventory result data column is applied to the theoretical quantity data column, and the difference is recorded in the management database. After you adjust the inventory, the inventory result data column is reset to 0.


Before adjusting the inventory

Adjust inventory							
	Theoretical Qty	Inventory result 1	(Difference)	Inventory result 2	(Difference)	Inventory result 3	(Difference)
	10						
	15						
	1						
	5						
	3						


After adjusting the inventory

Adjust inventory								
	Theoretical Qty	Actual Qty	2016/10/11	(Difference)	Inventory result2	(Difference)	Inventory result3	(Difference)
	10	0	10	0				
	5	0	5	-10				
	3	0	3	2				
	5	0	5	0				
	5	0	5	2				

■ Part icon


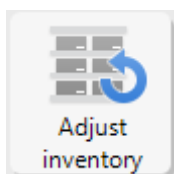


■ GUI display

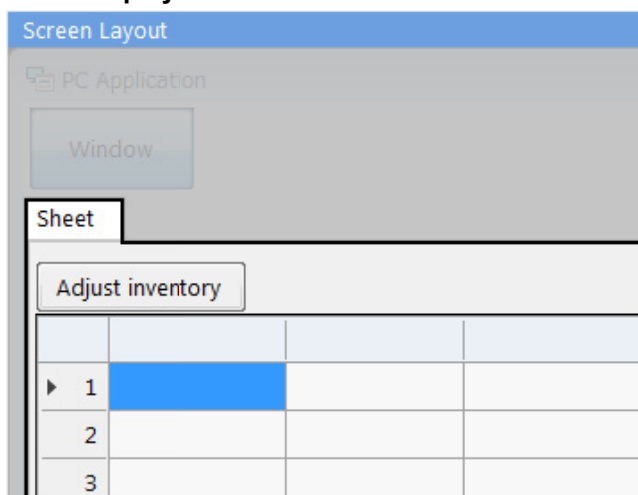

■ Part properties


Name	BtAdjustInventoryButton_1
▶ Position	3, 10
▶ Size	120, 30
Content	Adjust inventory
Content Alignment	Middle center
Font	Segoe UI, 9.75pt
Fore Color	 ControlText
Back color	 Control

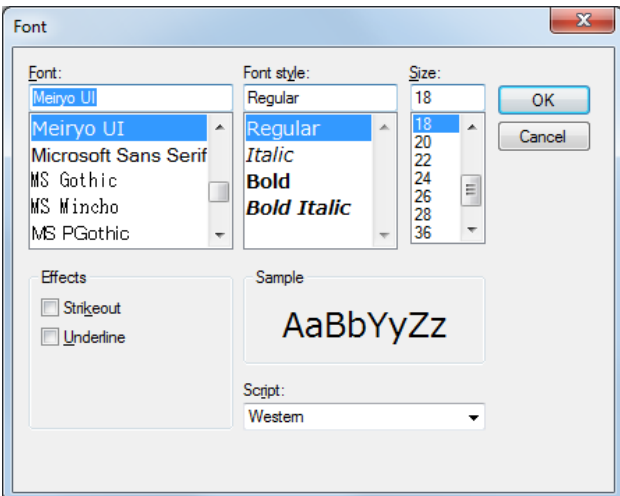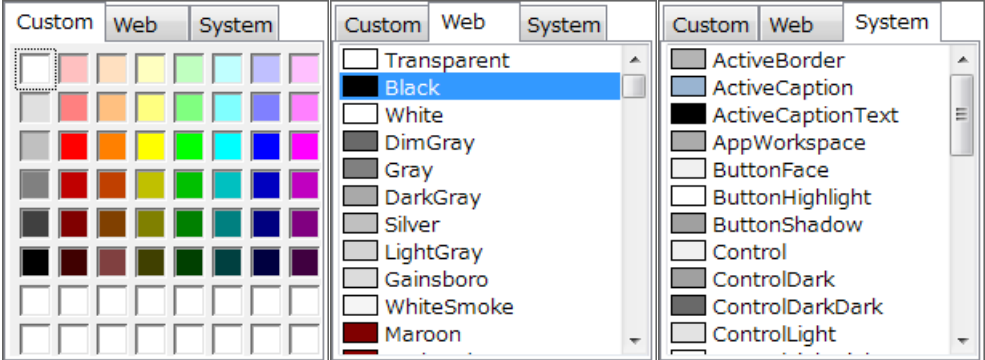Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Content	Set the content to display.
Content Alignment	Set the alignment of text in the part.  [Options] Align top left Top center Align top right Align middle left Middle center Align middle right Align bottom left Bottom center Align bottom right
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 
Fore Color	Set the color of the text. 

Back Color	Set the color of the part's background.		
	Custom Web System 	Custom Web System - Transparent Black - White - DimGray - Gray - DarkGray - Silver - LightGray - Gainsboro - WhiteSmoke - Maroon	Custom Web System - ActiveBorder - ActiveCaption ActiveCaptionText - AppWorkspace - ButtonFace - ButtonHighlight - ButtonShadow - Control - ControlDark - ControlDarkDark - ControlLight

Double-click on a part to display the following dialog box.

■ Display

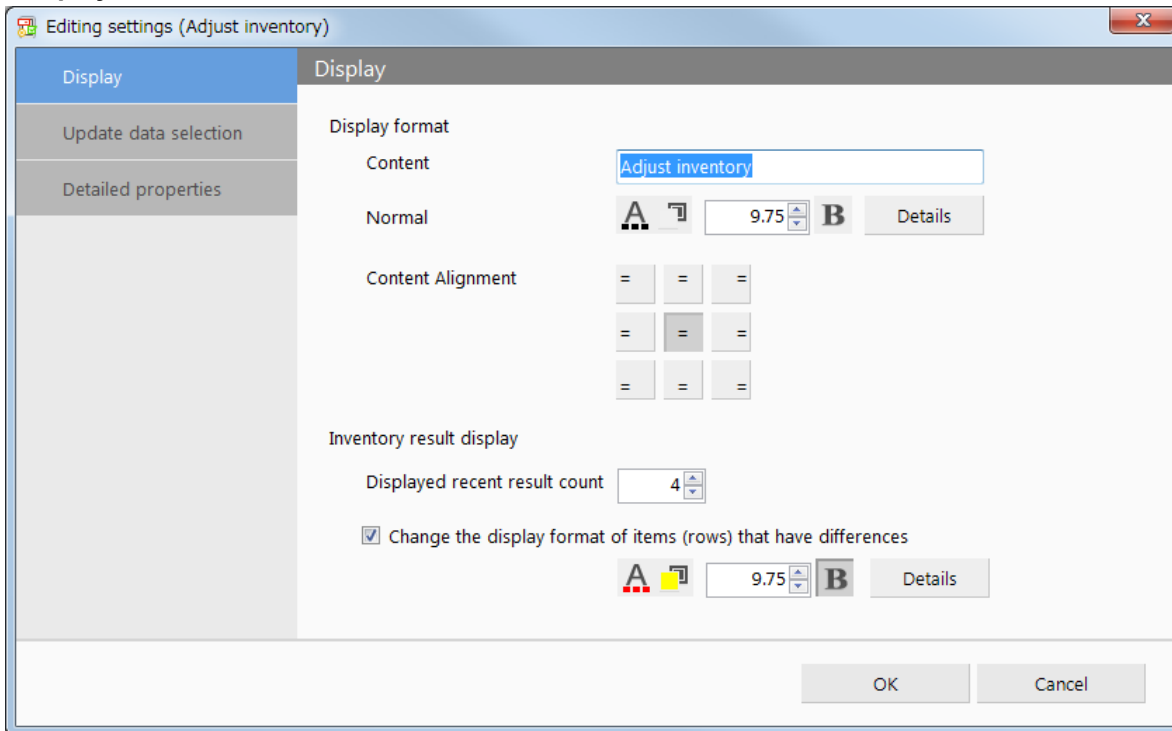

Editing settings (Adjust inventory)

Display

Update data selection

Detailed properties

Display

Display format

Content:

Normal: **A**  9.75 **B**

Content Alignment:

Inventory result display




Displayed recent result count:

☒ Change the display format of items (rows) that have differences

A  9.75 **B**

Display format

Configure settings such as the content to display, its color, and its font size.

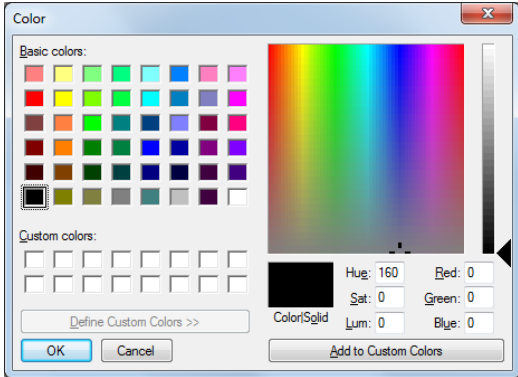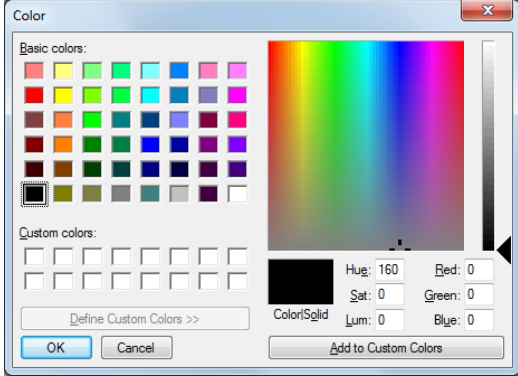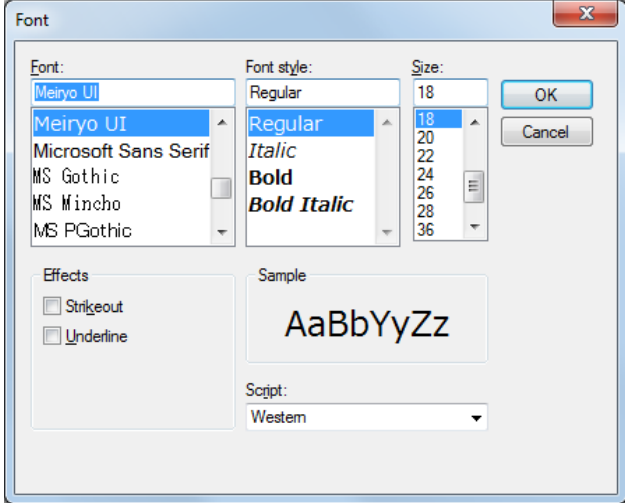	Set the color of the text. 
	Set the color of the part's background. 
9.75	Set the font size.
B	Set the font style to bold.
Details	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

• Content Alignment

Set the alignment of text in the part.

=	Align top left	=	Top center	=	Align top right
=	Align middle left	=	Middle center	=	Middle right
=	Align bottom left	=	Bottom center	=	Align bottom right

Inventory result display

- Displayed recent result count



Use this field to add columns on the right side of the management database. These columns are used to display the inventory results. Set the number of past inventory results to display.

[Setting range] 0 to 4

Adjust inventory								
Theoretical Qty	Actual Qty	2016/10/11	(Difference)	Inventory result2	(Difference)	Inventory result3	(Difference)	
10	0	10	0					
5	0	5	-10					
3	0	3	2					
5	0	5	0					
5	0	5	2					

- Change the display format of items (rows) that have differences

Change the display format of the rows having non-zero data in the column of the most recent inventory result.

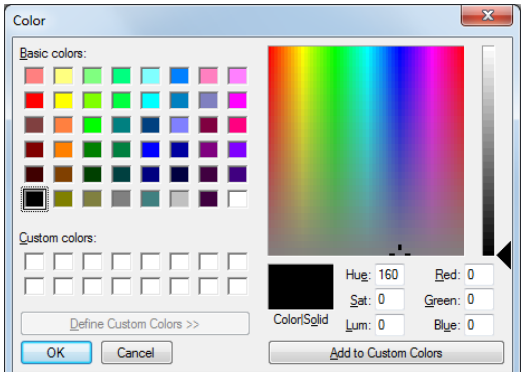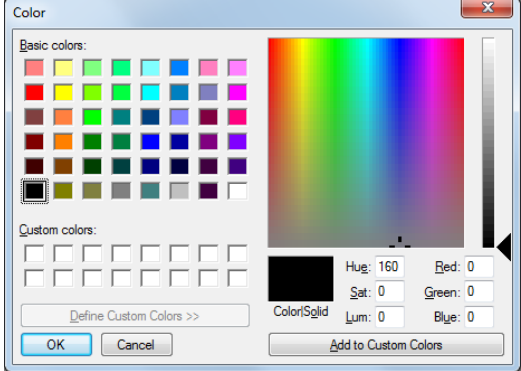	Set the color of the text. 
	Set the color of the part's background. 
9.75	Set the font size.
B	Set the font style to bold.

■ Update data selection

The screenshot shows a dialog box titled "Editing settings (Adjust inventory)" with a close button (X) in the top right corner. On the left is a sidebar with three tabs: "Display", "Update data selection" (which is selected and highlighted in blue), and "Detailed properties". The main area of the dialog is titled "Update data selection". It contains three sections: "Inventory data (column) selection" with a dropdown menu showing "Column 1"; "Theoretical stock data (column) selection" with a dropdown menu also showing "Column 1"; and "Master data preview" which is a large, empty rectangular box. At the bottom right of the dialog are "OK" and "Cancel" buttons.

Inventory data (column) selection

Select the column in which the inventory result data is saved.

Theoretical stock data (column) selection

Select the column in which the theoretical stock data is saved.

Master data preview

Preview the master data.

■ Detailed properties

Editing settings (Adjust inventory)

Display

Update data selection

Detailed properties

Detailed properties

Name	BtAdjustInventoryButton_1
▷ Position	3, 10
▷ Size	120, 30

Name
This name is used to identify the part. Specify a unique name.


OK Cancel

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080


6.3.2. Output file Buttons

These buttons output the data in the table in CSV format. With the narrowed-down display in "[6.2.1 Search input](#)" and "[6.3.5 Filter Buttons](#)," the narrowed-down results are output. The CSV file is output to the Export folder in the PC Application Execution folder.

■ Part icon



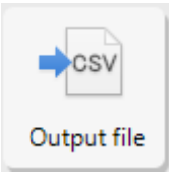


■ GUI display

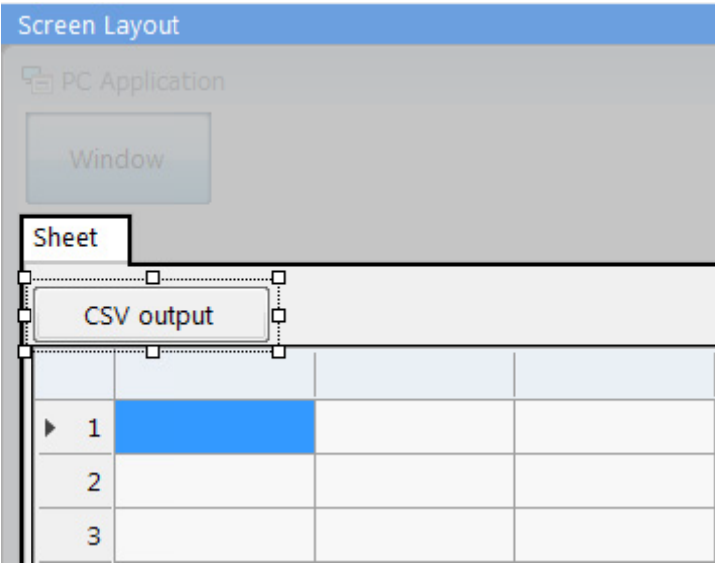


■ Part properties

Name	BtFileOutputButton_1	
▷ Position	3, 10	
▷ Size	120, 30	
Content	CSV output	
Content Alignment	Middle center	
Font	Segoe UI, 9.75pt	
Fore Color		ControlText
Back color		Control

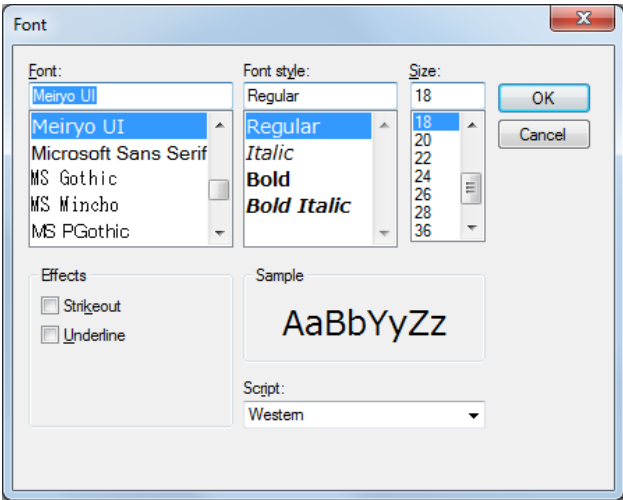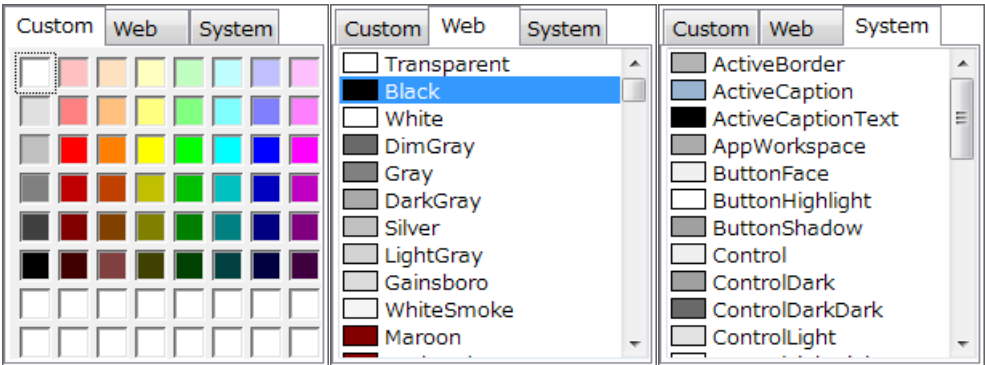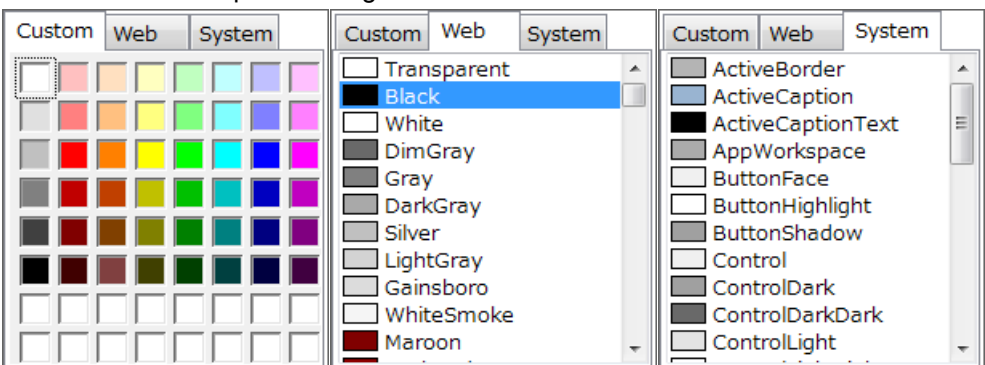Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Content	Set the content to display.
Content Alignment	Set the alignment of text in the part.  [Options] Align top left Top center Align top right Align middle left Middle center Align middle right Align bottom left Bottom center Align bottom right
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 
Fore Color	Set the color of the text. 
Back Color	Set the color of the part's background. 

Double-click on a part to display the following dialog box.


■ **Display**

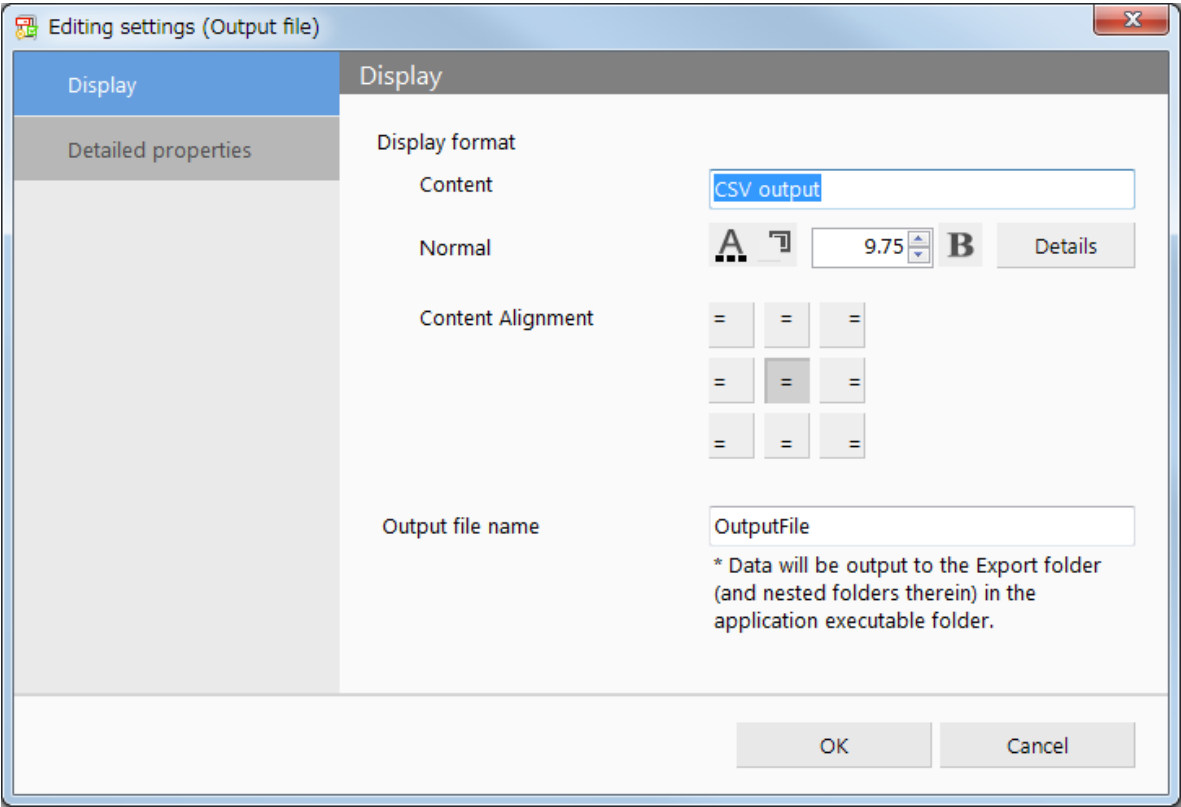

Display format

Configure settings such as the content to display, its color, and its font size.

	Set the color of the text.
	Set the color of the part's background.

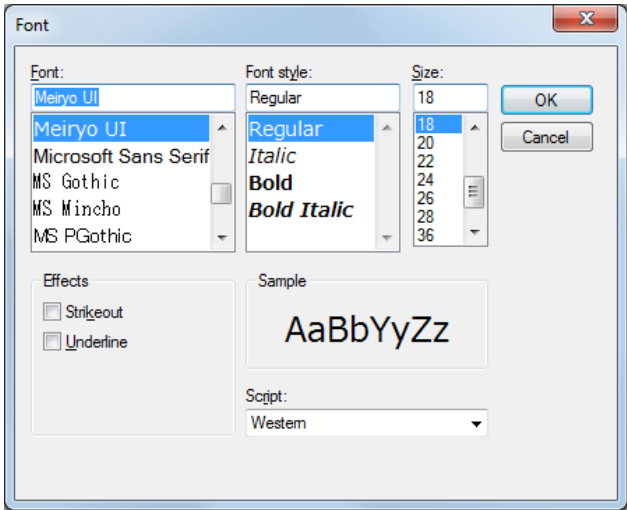9.75	Set the font size.
B	Set the font style to bold.
Details	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

• Content Alignment

Set the alignment of text in the part.

=	Align top left	=	Top center	=	Align top right
=	Align middle left	=	Middle center	=	Middle right
=	Align bottom left	=	Bottom center	=	Align bottom right

Output file name

Set the name of the CSV file to output. The actual file name that is output will also include the date and the filename extension.


For example, if you set the name to "OutputFile" and click the "Output file" button at 09:28:20 on August 31, 2016, the actual name of the file that is output will be "OutputFile_20160831092820.csv."

The CSV file is output to the Export folder in the PC Application Execution folder.

* You can also specify the absolute path in the file name.

For example, to save a file with the name "OutputFile" in the BT-H1A folder on the C drive, set the file name to "C:\BT-H1A\OutputFile."

■ Detailed properties

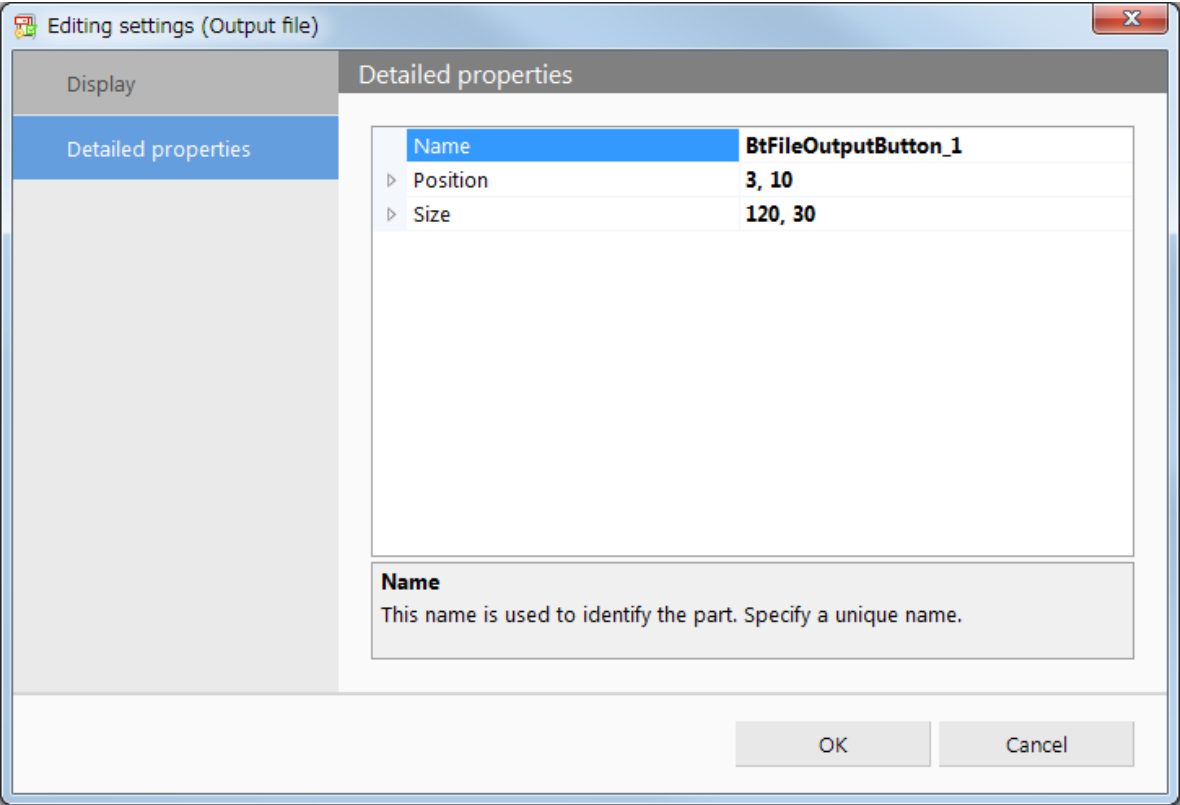

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080


6.3.3. Report printing Buttons

These buttons print a report of the data in the table on the sheet. Set the format and details of the report that is printed.

■ Part icon






■ GUI display

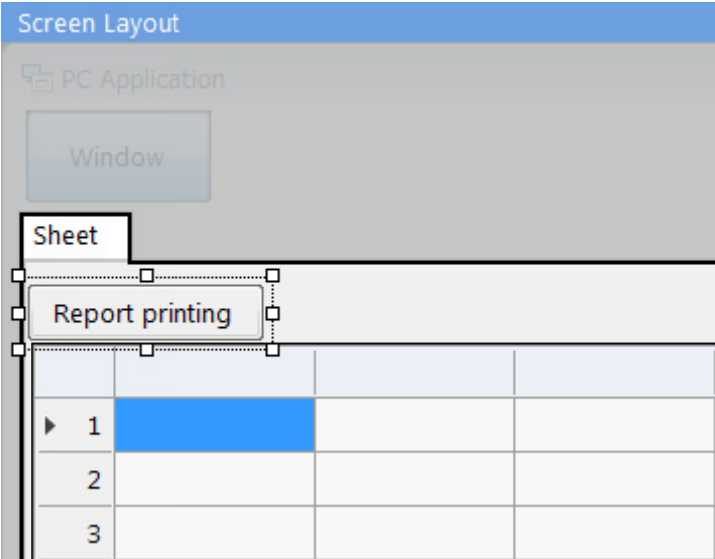


■ Part properties

Name	BtReportPrintButton_1
▷ Position	0, 10
▷ Size	120, 30
Content	Report printing
Content Alignment	Middle center
Font	Segoe UI, 9.75pt
Fore Color	■ ControlText
Back color	■ Control

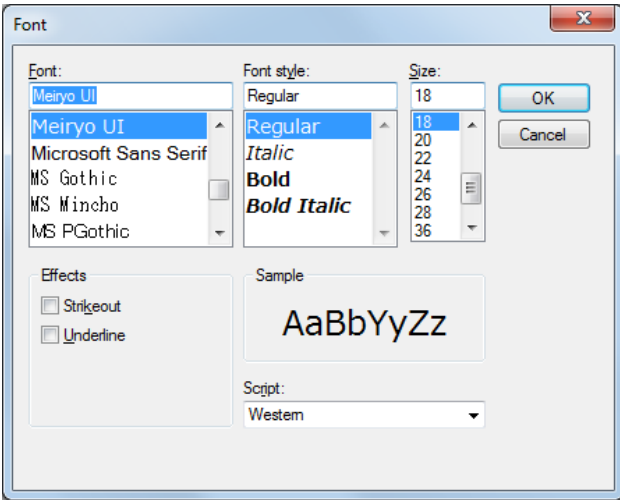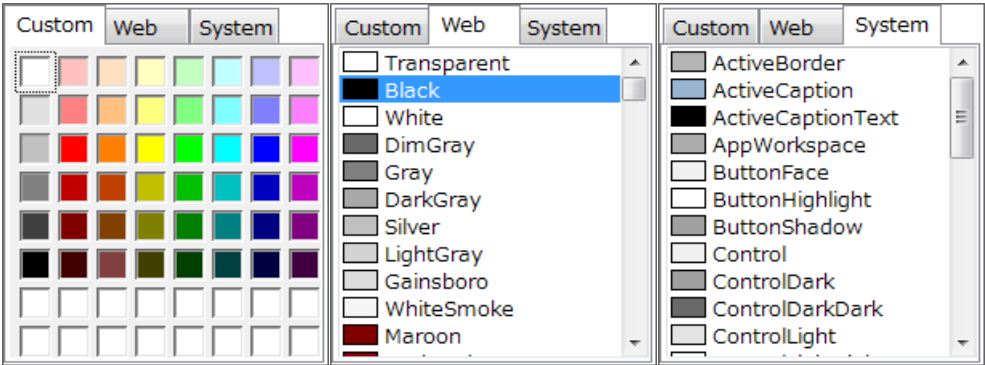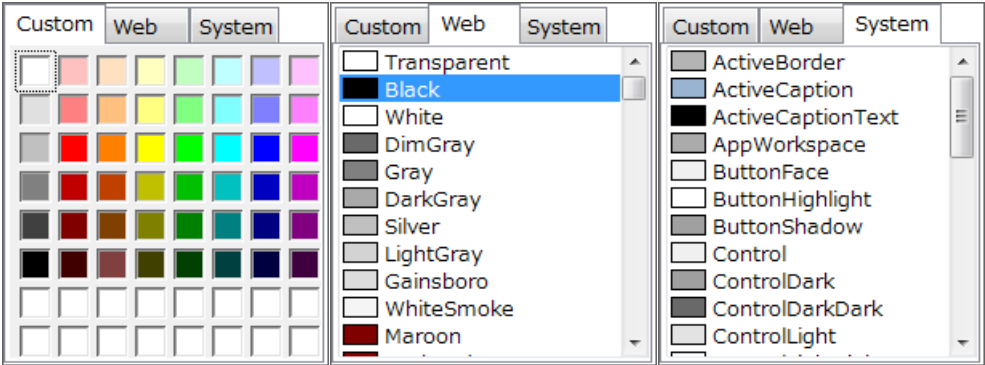Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Content	Set the content to display.
Content Alignment	Set the alignment of text in the part.  [Options] Align top left Top center Align top right Align middle left Middle center Align middle right Align bottom left Bottom center Align bottom right
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 
Fore Color	Set the color of the text. 
Back Color	Set the color of the part's background. 

Double-click on a part to display the following dialog box


■ **Display**

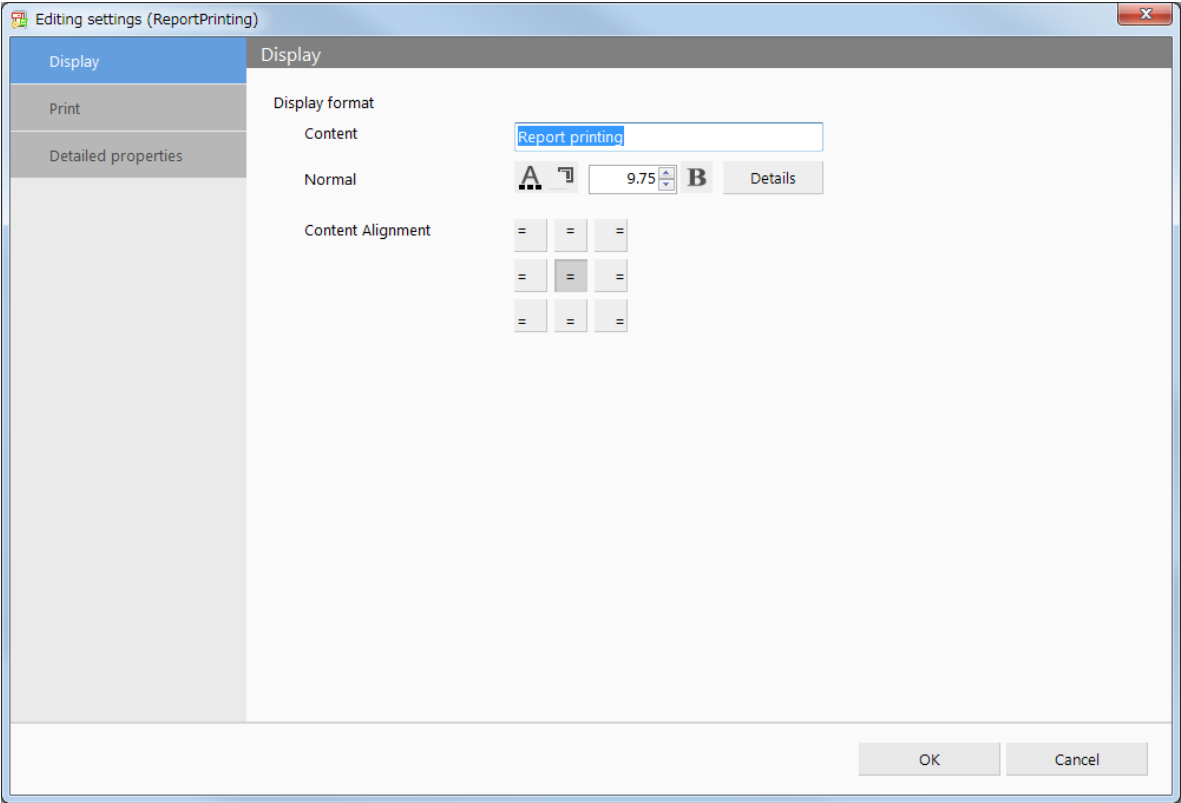

Display format

Configure settings such as the content to display, its color, and its font size.

	Set the color of the text.
	Set the color of the part's background.

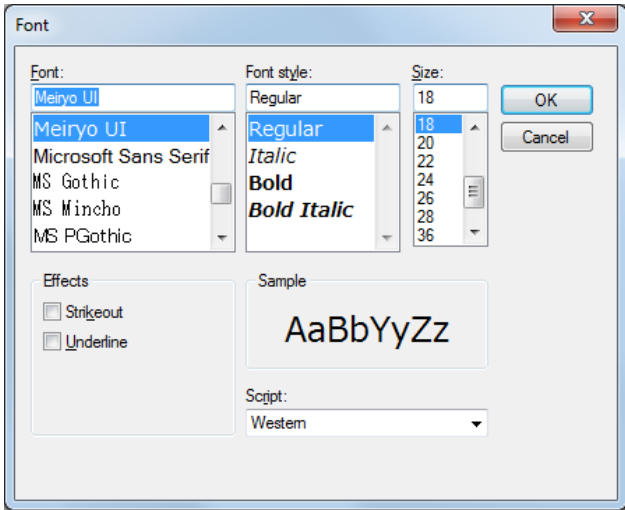9.75	Set the font size.
B	Set the font style to bold.
Details	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

• Content Alignment

Set the alignment of text in the part.

=	Align top left	=	Top center	=	Align top right
=	Align middle left	=	Middle center	=	Middle right
=	Align bottom left	=	Bottom center	=	Align bottom right

■ Print

Editing settings (ReportPrinting)

Print

Print in chit format

Title Slip

Display item selection

Column 5 [hidden]
Column 6 [hidden]
Column 7 [hidden]
Column 8 [hidden]
Column 9 [hidden]

Selected item

Column 1 (Chit number)
Column 2 (Item number)
Column 3 (Order count)
Column 4 (Input count)
Calculation column 1 (Remainir)

Order No. (column) selection Column 1 (Chit number)

Selected item	Column Name	Display position	Barcode
Column 1 (Chit n...	Slip number	Header only	Enable
Column 2 (Item n...	Item number	List only	Enable
Column 3 (Order ...	Order count	List only	Disable

Master data preview

Column 1 (C...	Column 2 (It...	Column 3 (O...	Column 4 (In...
11111	12345	1	0
11111	23456	5	0
11111	34567	10	0

Print preview

Page 1

Slip

OK Cancel

Print format selection

Select the format of the report to print from the printer. If you select "Print in table format," the data in the currently displayed table will be printed as-is in list format. If you select "Print in chit format," the report will be printed according to the set details (such as the header definitions, the selected display columns, and whether barcodes are displayed).

[Options] Print in table format | Print in chit format

• Example of a report printed in table format

Page.1

Chit number	Item number	Order count	Input count	Remaining count
11111	12345	1	0	1
11111	23456	5	0	5
11111	34567	10	0	10
11111	45678	20	0	20
22222	56789	3	0	3
22222	67890	6	0	6
22222	78901	9	0	9
22222	89012	10	0	10
33333	12345	6	0	6
33333	23456	10	0	10

• Example of a report printed in chit format

Page.1

Slip



Slip number : 11111

Item number	Order count	Input count	Remaining count
 12345	1	0	1
 23456	5	0	5
 34567	10	0	10
 45678	20	0	20

Title

This setting is enabled when you select "Print in chit format." Set the title of the report.

Display item selection

This setting is enabled when you select "Print in chit format." Select the columns from the table to display in the chit as headers and list entries.

• Order No. (column) selection

In order to print a work list for each order number, specify the column that corresponds to the order number. Specify the column from those selected under "Display item selection." For the items selected under "Display item selection," use the table to set the column name, display position, and whether the barcode is displayed.

Master data preview

Preview the master data.

■ Detailed properties

Detailed properties	
Name	BtReportPrintButton_1
▷ Position	614, 2
▷ Size	75, 73
Barcode type	CODE128

Name
This name is used to identify the part. Specify a unique name.


OK Cancel

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080


6.3.4. Clear Buttons

These buttons clear the specified column in the table. Clearing a column resets its data to 0.

■ Part icon



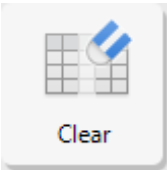


■ GUI display

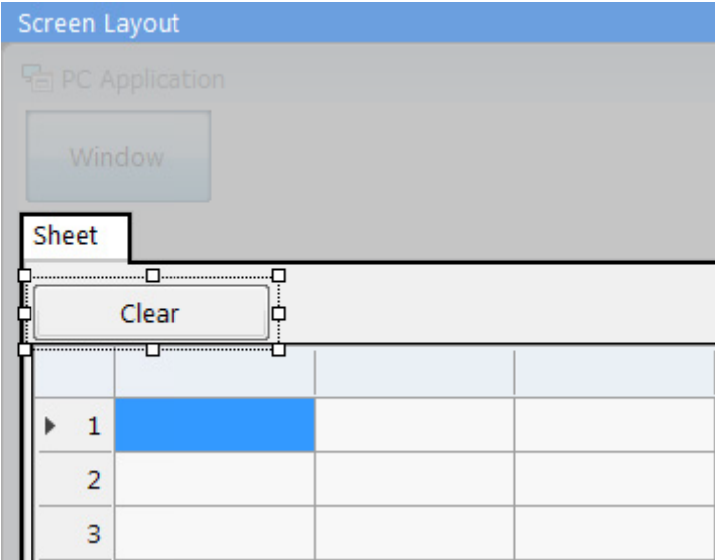

■ Part properties

Name	BtClearButton_1
▷ Position	3, 10
▷ Size	120, 30
Content	Clear
Content Alignment	Middle center
Font	Segoe UI, 9.75pt
Fore Color	■ ControlText
Back color	□ Control

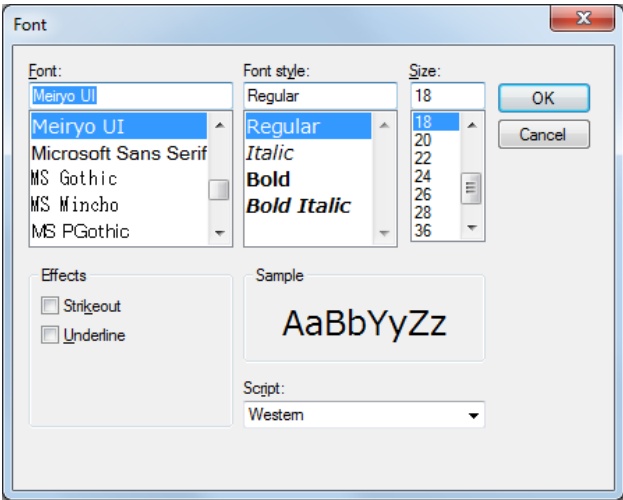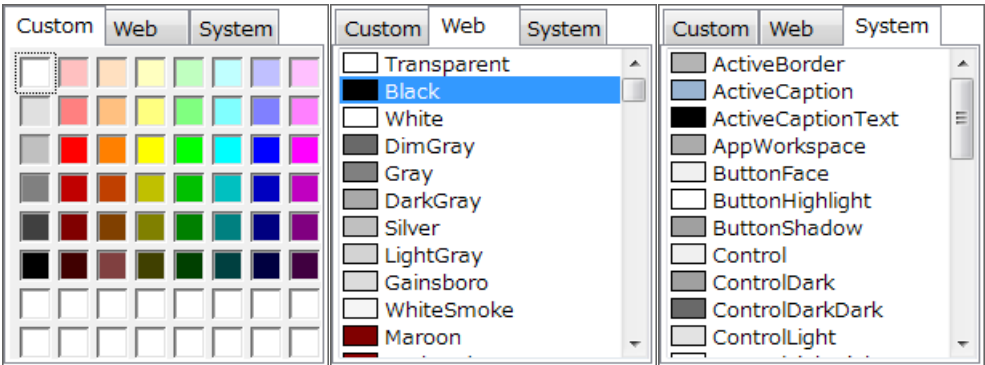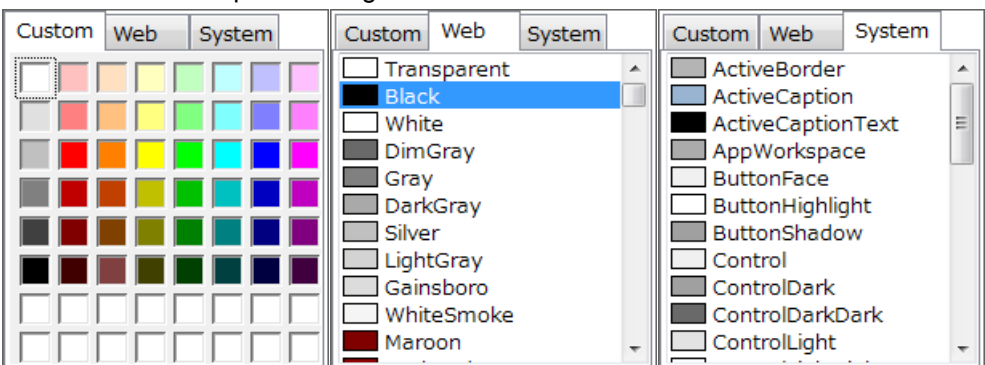Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Content	Set the content to display.
Content Alignment	Set the alignment of text in the part.  [Options] Align top left Top center Align top right Align middle left Middle center Align middle right Align bottom left Bottom center Align bottom right
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 
Fore Color	Set the color of the text. 
Back Color	Set the color of the part's background. 

Double-click on a part to display the following dialog box.

■ Display

The dialog box is titled "Editing settings (Clear)" and has a close button (X) in the top right corner. It features a sidebar on the left with two tabs: "Display" (selected) and "Detailed properties".




The main content area is titled "Display" and contains the following sections:

- Display format**
 - Content**: A text input field containing the word "Clear".
 - Normal**: A set of formatting controls including a bold icon (A), a font size input field (9.75), and a bold icon (B). A "Details" button is located to the right.
 - Content Alignment**: A 3x3 grid of alignment buttons. The center button (center alignment) is currently selected.
- Selection of the column to clear**
 - A checkbox labeled "Delete all rows" is currently unchecked.
 - A list box on the left contains the following items: "Database", "Column 1" (highlighted in blue), "Column 2", "Column 3", and "Column 4".
 - Two arrow buttons (right-pointing and left-pointing) are positioned between the list box and the "Column to clear" field.
 - A text input field on the right is labeled "Column to clear".
- Master data preview**: A large, empty rectangular area at the bottom of the main content section.

At the bottom right of the dialog box, there are two buttons: "OK" and "Cancel".

Display format

Configure settings such as the content to display, its color, and its font size.

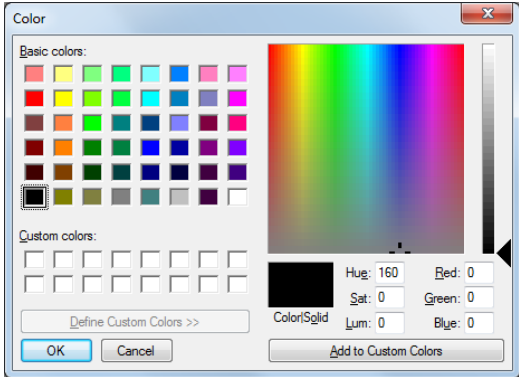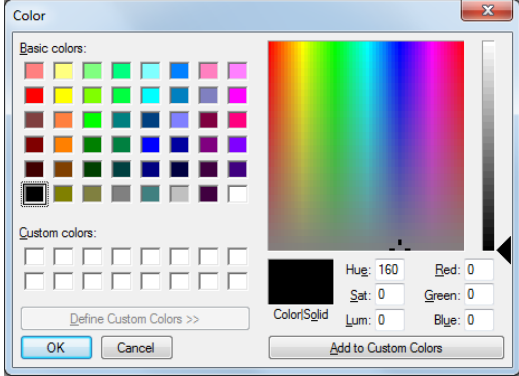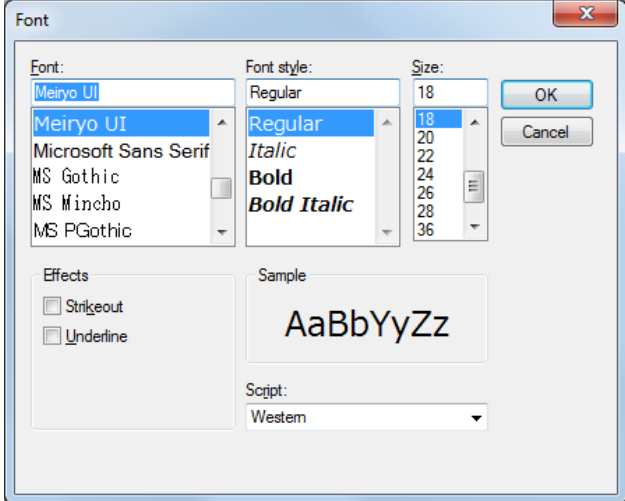	Set the color of the text. 
	Set the color of the part's background. 
9.75	Set the font size.
B	Set the font style to bold.
Details	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

• Content Alignment

Set the alignment of text in the part.

=	Align top left	=	Top center	=	Align top right
=	Align middle left	=	Middle center	=	Middle right
=	Align bottom left	=	Bottom center	=	Align bottom right

Selection of the column to clear

Select the column whose data will be reset to 0. Select the "Delete all rows" check box to delete all the records in the table.

Master data preview

Preview the master data.

■ Detailed properties

Editing settings (Clear)

Display

Detailed properties

Name	BtClearButton_1
▷ Position	3, 10
▷ Size	120, 30

Name
This name is used to identify the part. Specify a unique name.

OK Cancel

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080


6.3.5. Filter Buttons

These parts narrow-down the data in the table according to the values and conditions that are set in advance. Set the filter conditions.

■ Part icon





■ GUI display

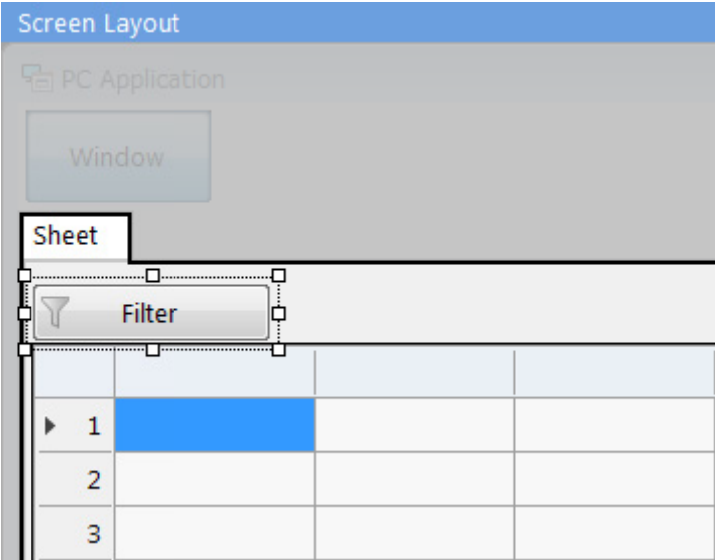


■ Part properties

Name	BtFilterButton_1
▷ Position	3, 10
▷ Size	120, 30
Content	Filter
Content Alignment	Middle center
Font	Segoe UI, 9.75pt
Fore Color	■ ControlText

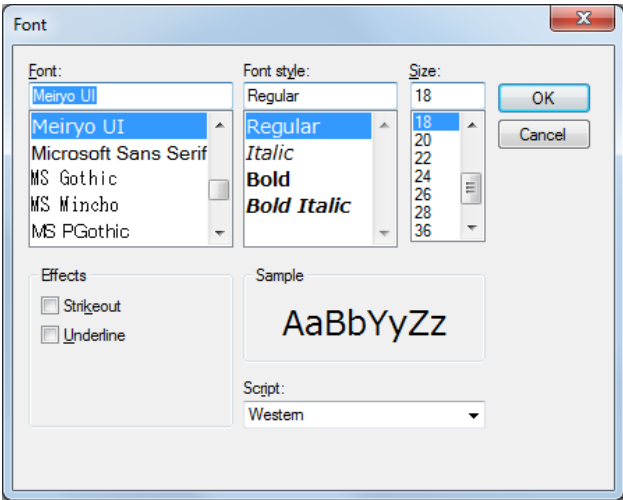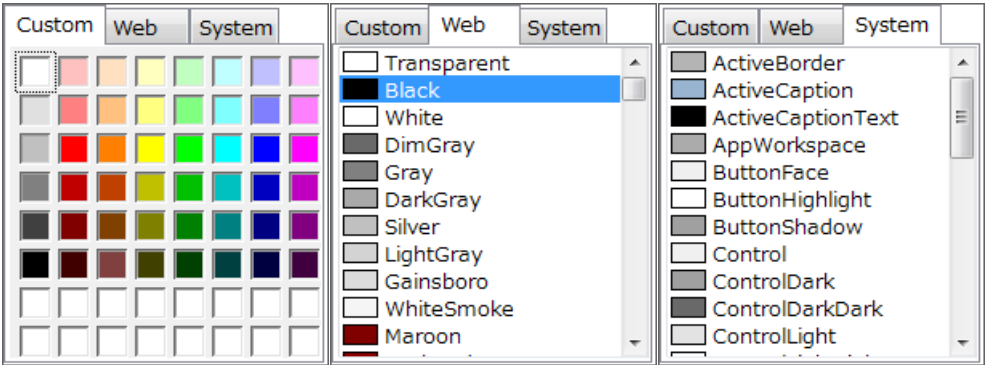Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Content	Set the content to display.
Content Alignment	Set the alignment of text in the part.  [Options] Align top left Top center Align top right Align middle left Middle center Align middle right Align bottom left Bottom center Align bottom right
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 
Fore Color	Set the color of the text. 


Double-click on a part to display the following dialog box.

■ **Display**

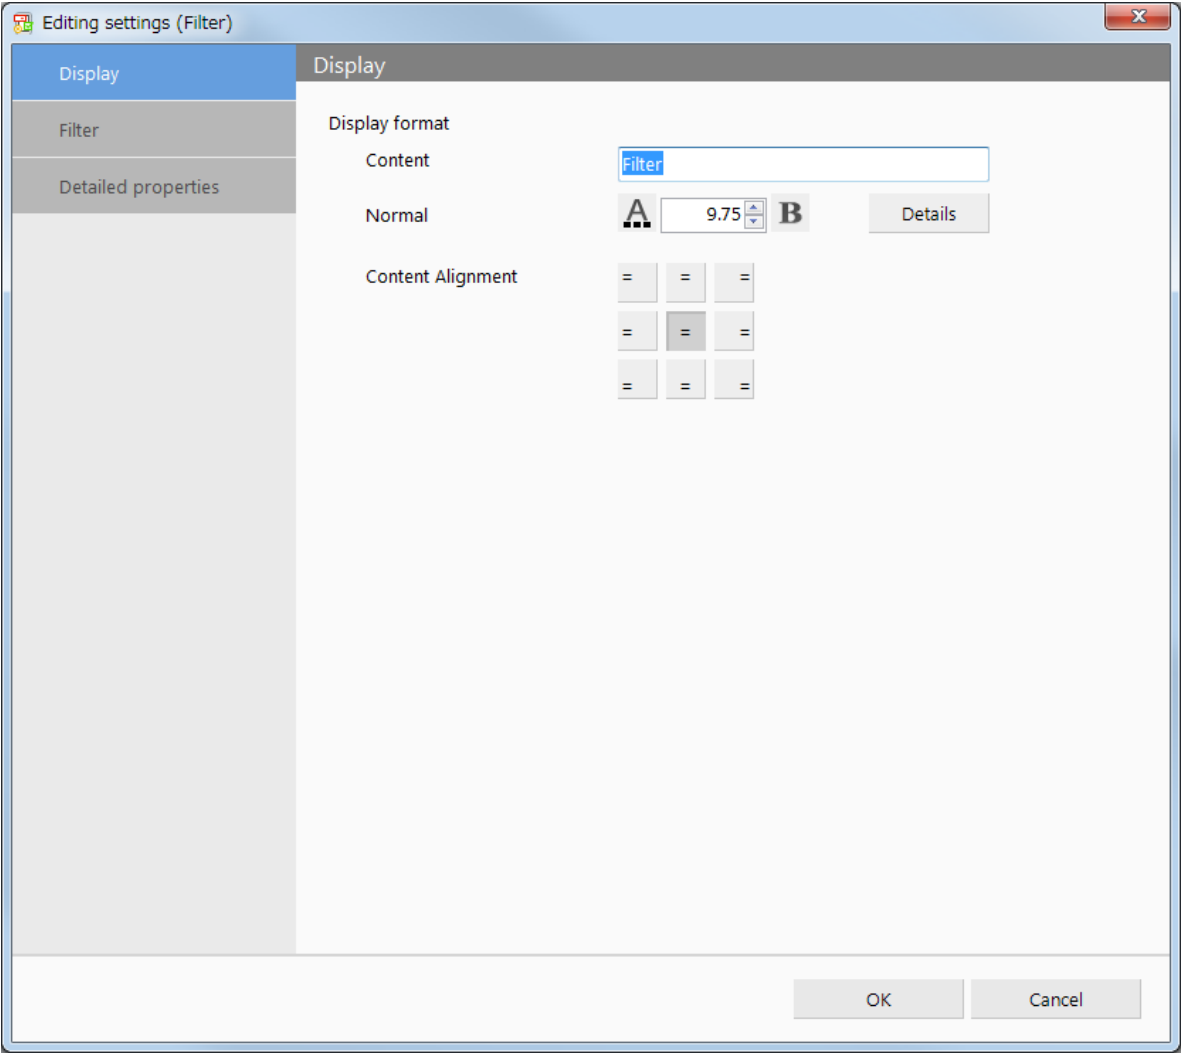


Display format

Configure settings such as the content to display, its color, and its font size.

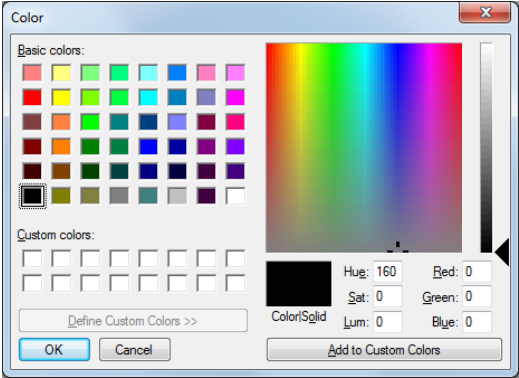	Set the color of the text. 
	Set the font size.
	Set the font style to bold.

Details

Configure settings such as the font type and size. Use the following dialog box to configure the settings.

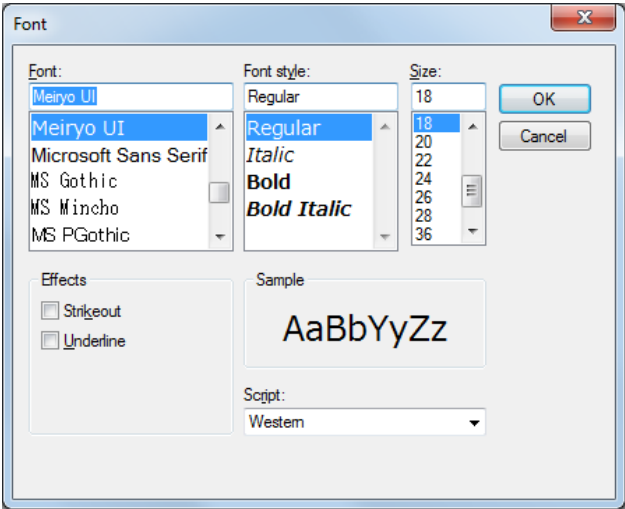

• Content Alignment

Set the alignment of text in the part.

	Align top left		Top center		Align top right
	Align middle left		Middle center		Middle right
	Align bottom left		Bottom center		Align bottom right

■ Filter

Editing settings (Filter)

Display

Filter

Detailed properties

Filter

Filter condition settings

Conditional expression

Output true when

When all are true

Data format

Content

Numerical value

Date

Target format

Input data

0.000

☐ Set the digits after the decimal point

Comparison condition

Comparison data calculation

0

Year

Master data preview

OK

Cancel

Filter condition settings

The list of added conditional expressions is displayed here. You can combine conditions by adding together multiple conditions. When combining conditions, select "When all are true" or "When either is true."

- **Data format**

Select the format of the data to compare.

[Options] Content | Numerical value | Date

- **Target format**

Select the column to be the comparison target from the master data.

- **Input data**

Select the data to compare from the columns of the master data. Alternatively, set a value.

- **Comparison condition**

Set the comparison condition. The options vary depending on the "Data format" setting.

Content

[Options] Exact match with | Forward match with | Backward match with | Contained in | Not contained in

Numerical value

[Options] Equal to | Not equal to | Greater | Less | Or greater | Or less

Date

[Options] Same as | Different from | After | Before | On and after | On or before

- **Comparison data calculation**

After you set a calculation for "Target format," the comparison is performed against the "Input data." Set the operator and the calculation value.

Data format: Numerical value


Data format: Date

Equal to Comparison data calculation + 0	Same as Comparison data calculation + 0 Day
---	--

Master data preview

Preview the master data.

■ Detailed properties

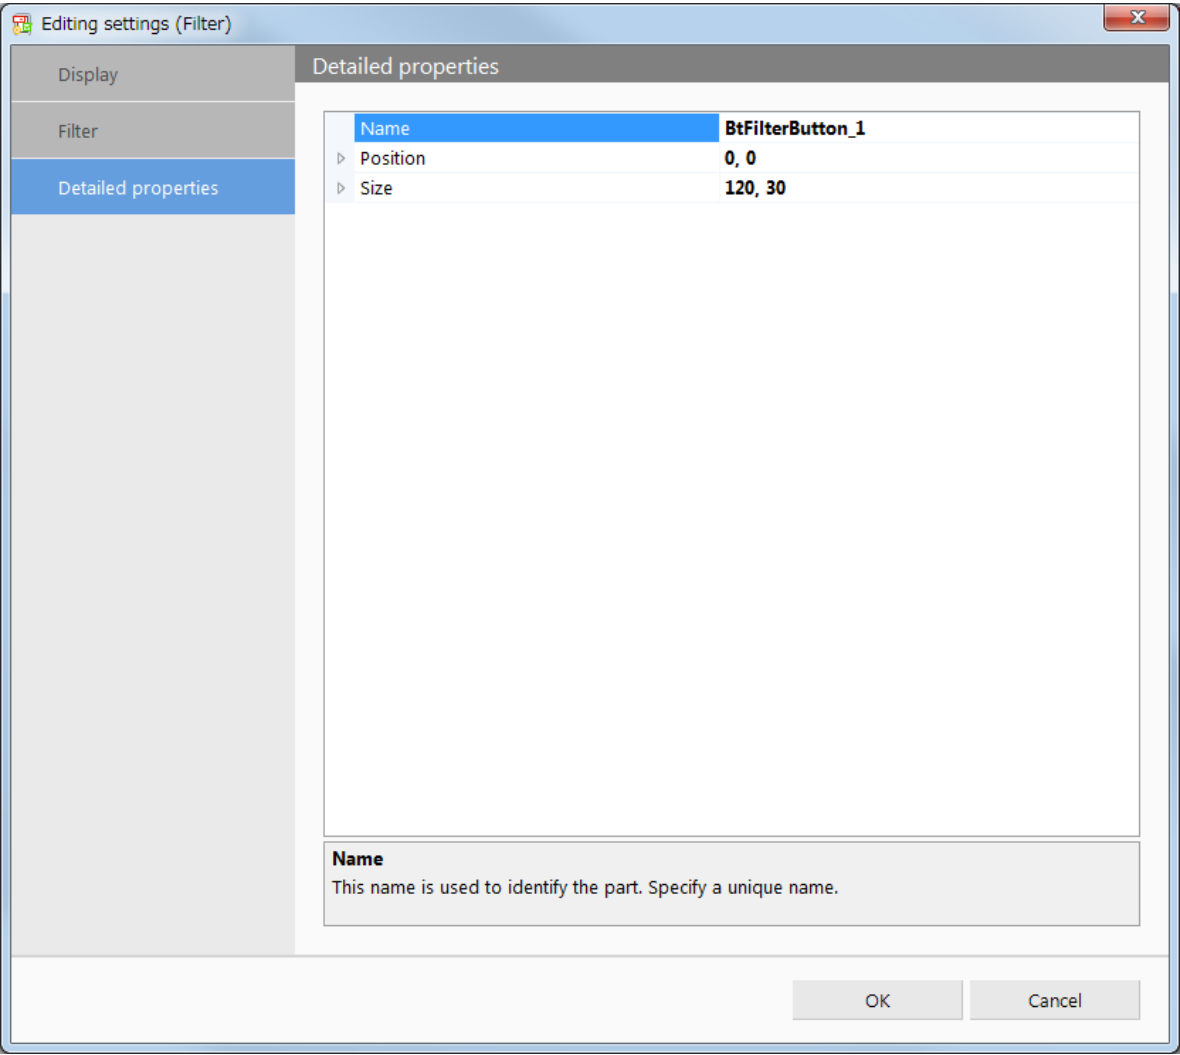


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080

6.4. Views


6.4.1. Picture Views

These parts display an image in the PC application.

■ Part icon

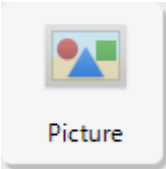


■ GUI display

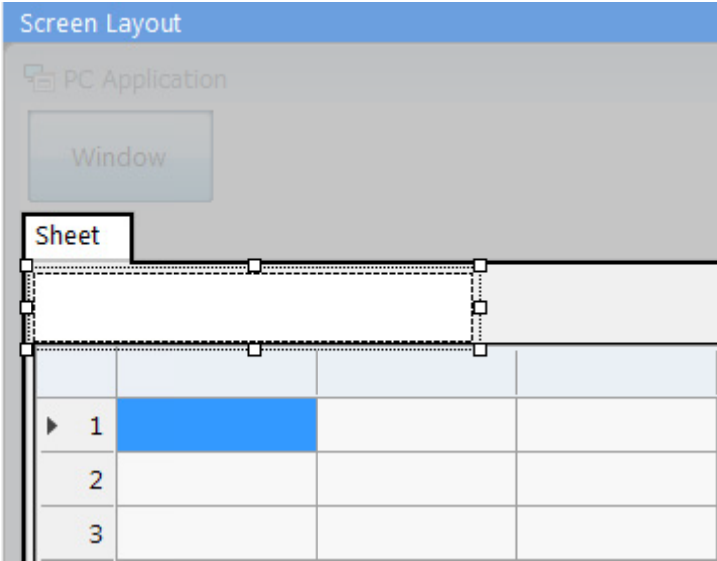

■ Part properties

Name	BtPicture_1
▶ Position	3, 5
▶ Size	220, 35
Back color	☐ White

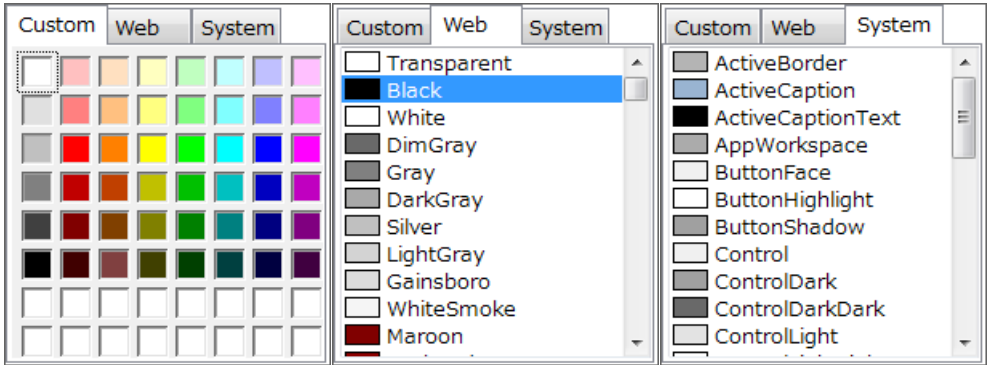Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Back Color	Set the color of the part's background. 

Double-click on a part to display the following dialog box.

■ Display

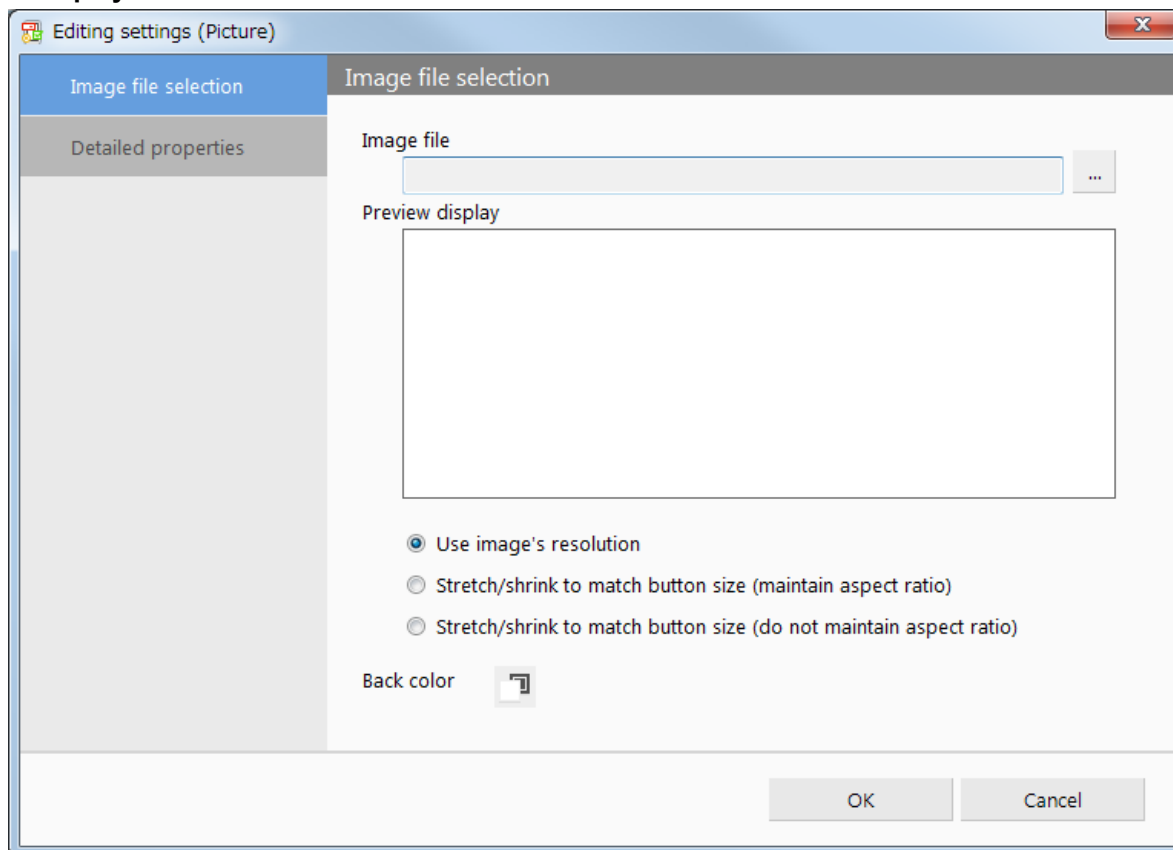


Image file

Import an image file into the project.

Preview display

A preview of the image is displayed here. You can select the image size from the options shown below.


- [Options]
- Use image's resolution
- Stretch/shrink to match button size (maintain aspect ratio)
- Stretch/shrink to match button size (do not maintain aspect ratio)

Back color

Set the back color of the part.



Set the color of the part's background.

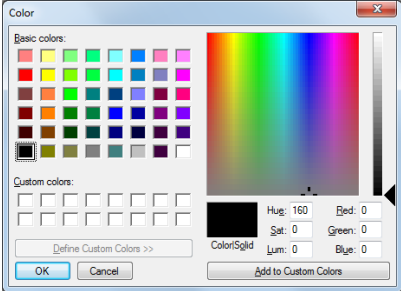

■ Detailed properties

Editing settings (Picture)

Image file selection

Detailed properties

Name	BtPicture_1
▷ Position	3, 5
▷ Size	220, 35

Name

This name is used to identify the part. Specify a unique name.

OK


Cancel

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080


6.4.2. Progress table Views

When you are using a "MasterCheck" control in a BT device application (such as in picking), you can use this part to display a list of the work progress statuses.

■ Part icon

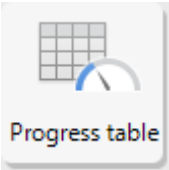


■ GUI display

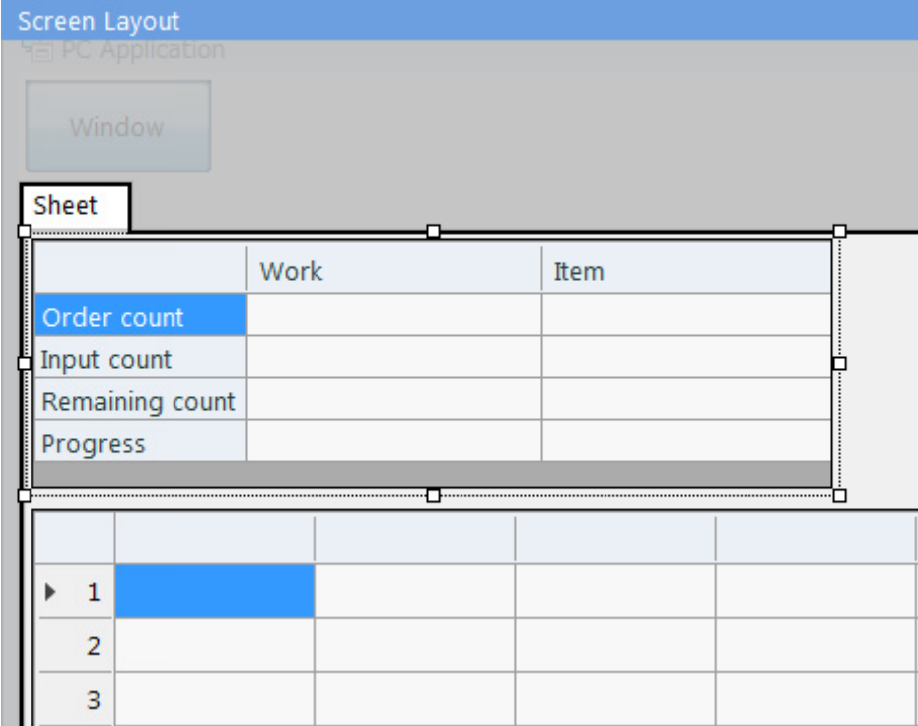


■ Part properties

Name	BtProgressTable_1
▷ Position	3, 3
▷ Size	400, 125
Font	Segoe UI, 9.75pt

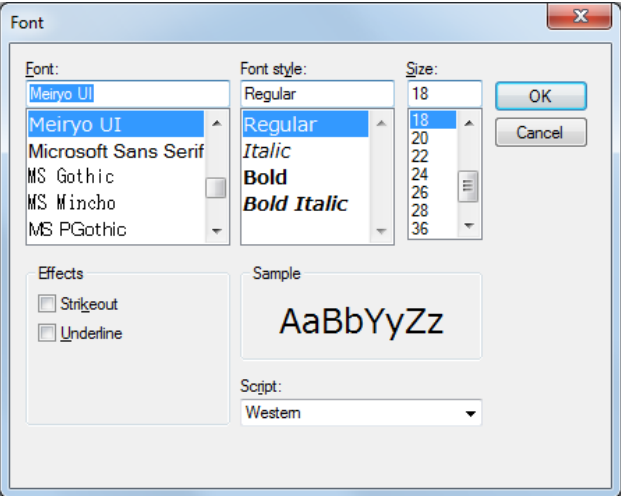Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 


Double-click on a part to display the following dialog box.

■ Display

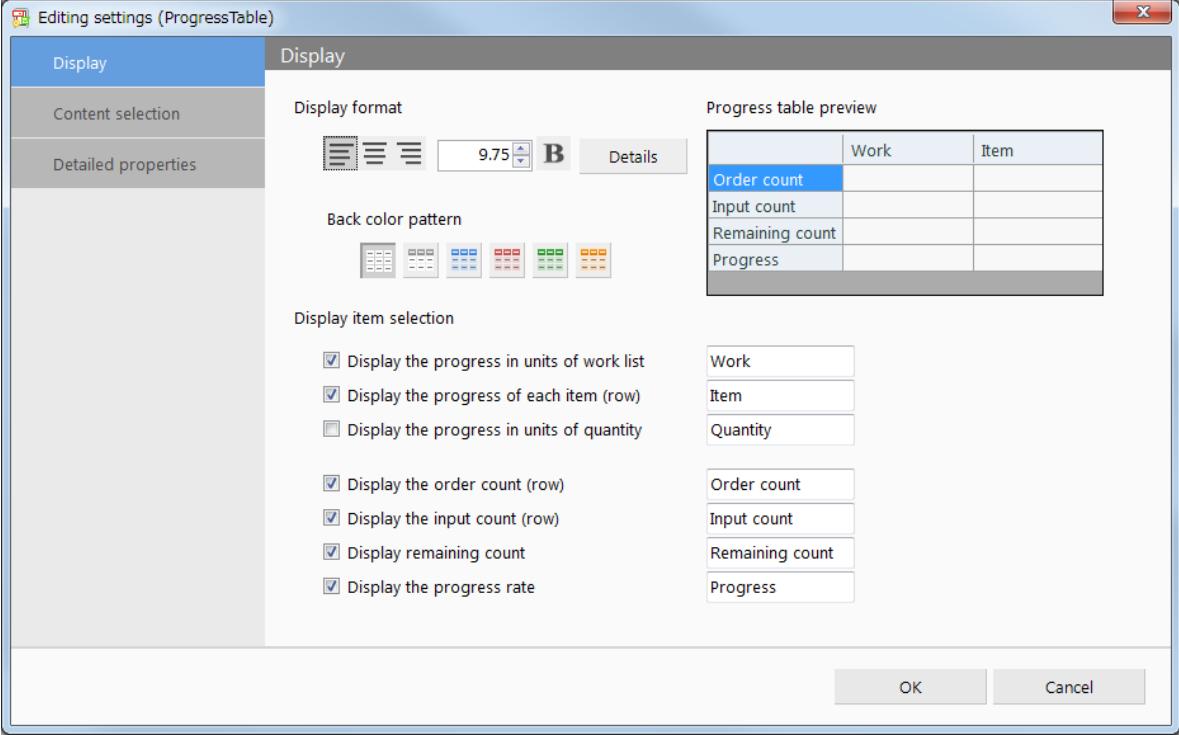

Display format

	Set the alignment within the part to left-aligned.
	Set the alignment within the part to center-aligned.
	Set the alignment within the part to right-aligned.
	Set the font size.

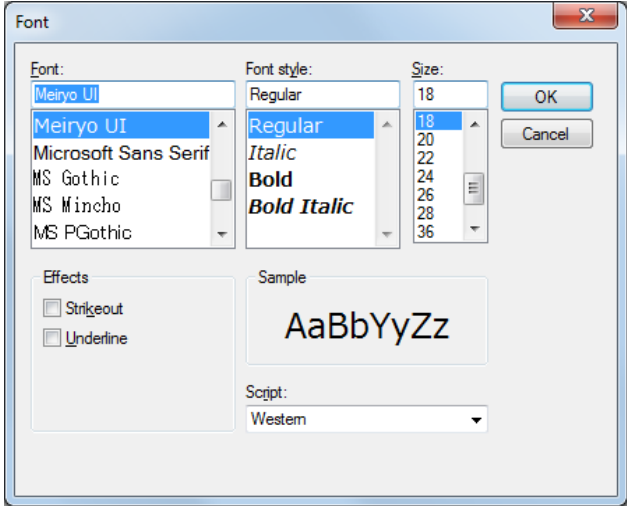B	Set the font style to bold.
Details	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

• **Back color pattern**

Select the table's color scheme pattern.

[Options] 

Display item selection

• **Display the progress in units of work list**

Check this box to display the work list progress in the table. You can also set the name of the column in the table.

• **Display the progress of each item (row)**

Check this box to display the item progress in the table. You can also set the name of the column in the table.

• **Display the progress in units of quantity**

Check this box to display the quantity progress in the table. You can also set the name of the column in the table.

• **Display the order count (row)**

Check this box to display the order count row in the table. You can also set the name of the row in the table.

• **Display the input count (row)**

Check this box to display the input count row in the table. You can also set the name of the row in the table.

• **Display remaining count**

Check this box to display the remaining count row in the table. You can also set the name of the row in the table.

• **Display the progress rate**

Check this box to display the progress rate row in the table. You can also set the name of the row in the table.

Progress table preview

Preview the progress table that you have set.

■ Content selection

Editing settings (ProgressTable)

Content selection

Content selection

Work No. (column) selection: Column 1 (Chit number)

Order count (column) selection: Column 3 (Order count)

Input count (column) selection: Column 4 (Input count)

Master data preview

Column 1 (C...	Column 2 (Ite...	Column 3 (O...	Column 4 (In...
11111	12345	1	0
11111	23456	5	0
11111	34567	10	0
11111	45678	20	0

OK Cancel

Content selection

- **Work No. (column) selection**

Select from the master data the target (work number) column to display in the progress table.

- **Order count (column) selection**

Select from the master data the target (order count) column to display in the progress table.


- **Input count (column) selection**

Select from the master data the target (input count) column to display in the progress table.

Master data preview

Preview the master data.

■ Detailed properties

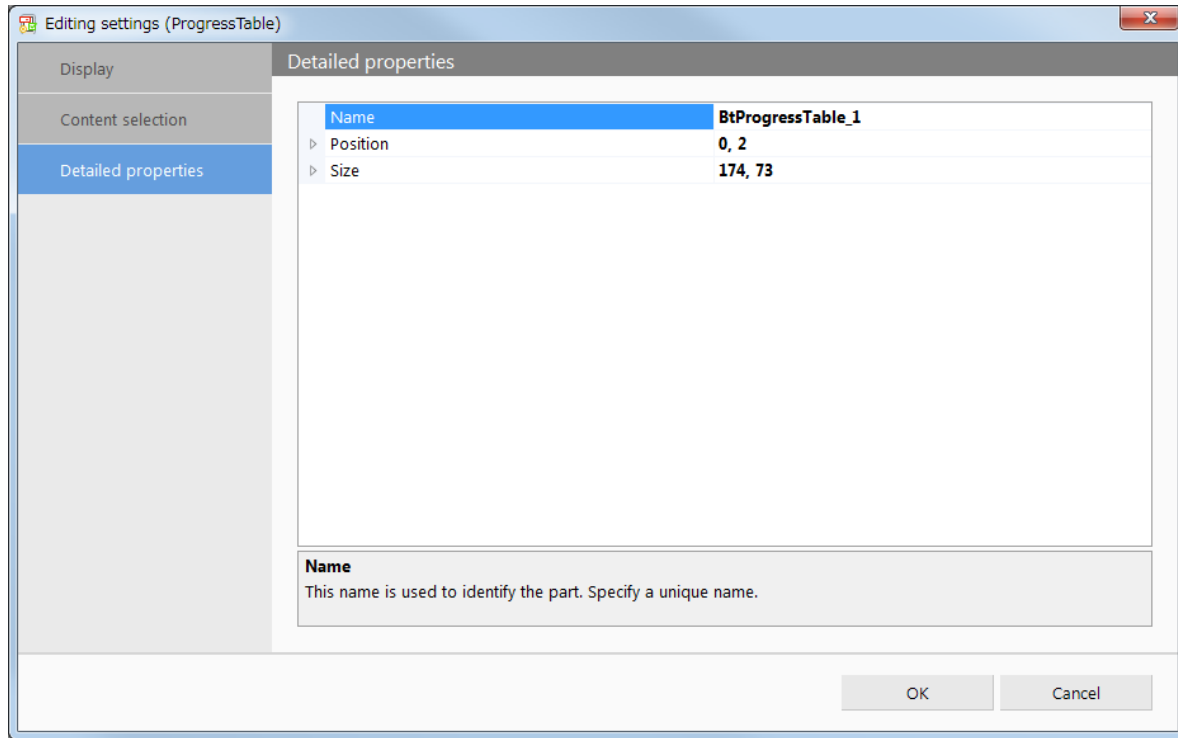


Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080


6.4.3. Progress graph

When you are using a "MasterCheck" control in a BT device application (such as in picking), you can use this part to display a graph of the work progress status.

■ Part icon

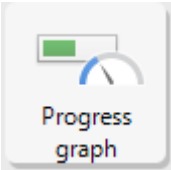

■ GUI display

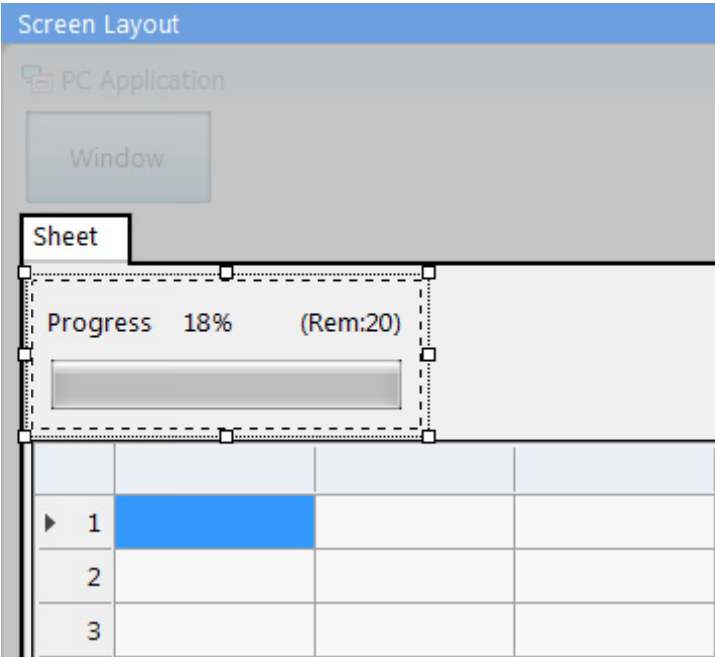


■ Part properties

Properties	
Name	BtProgressGraph_1
▶ Position	3, 8
▶ Size	195, 75

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080

Double-click on a part to display the following dialog box.

■ Display

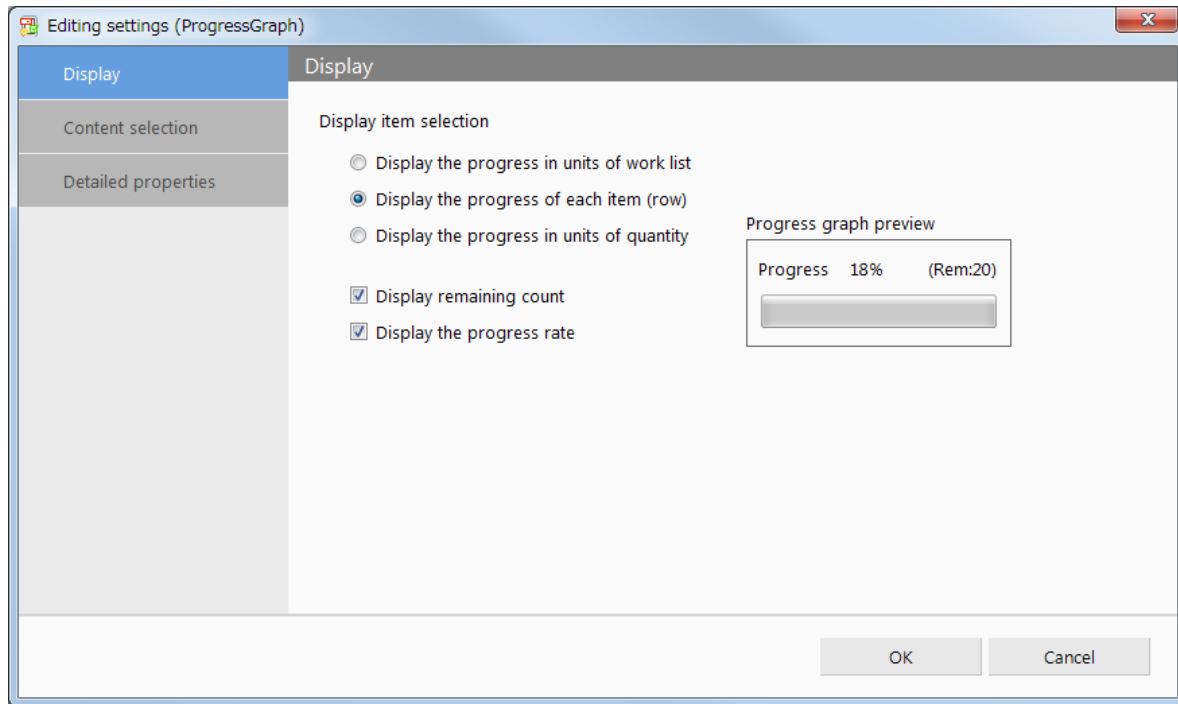

Display item selection

Select the target to display as a progress graph.

[Options] Display the progress in units of work list | Display the progress of each item (row) | Display the progress in units of quantity

• Display remaining count

Check this box to display the remaining count at the top of the progress graph.

• Display the progress rate

Check this box to display the progress rate at the top of the progress graph.

Progress graph preview

Preview the progress graph that you have set.

■ Content selection

Editing settings (ProgressGraph)

Display

Content selection

Detailed properties

Content selection

Work No. (column) selection

Column 1

Order count (column) selection

Column 2

Input count (column) selection

Column 3

Master data preview

OK

Cancel

Content selection

- **Work No. (column) selection**

Select from the master data the target (work number) column to display in the progress graph.

- **Order count (column) selection**

Select from the master data the target (order count) column to display in the progress graph.


- **Input count (column) selection**

Select from the master data the target (input count) column to display in the progress graph.

Master data preview

Preview the master data.


■ Detailed properties

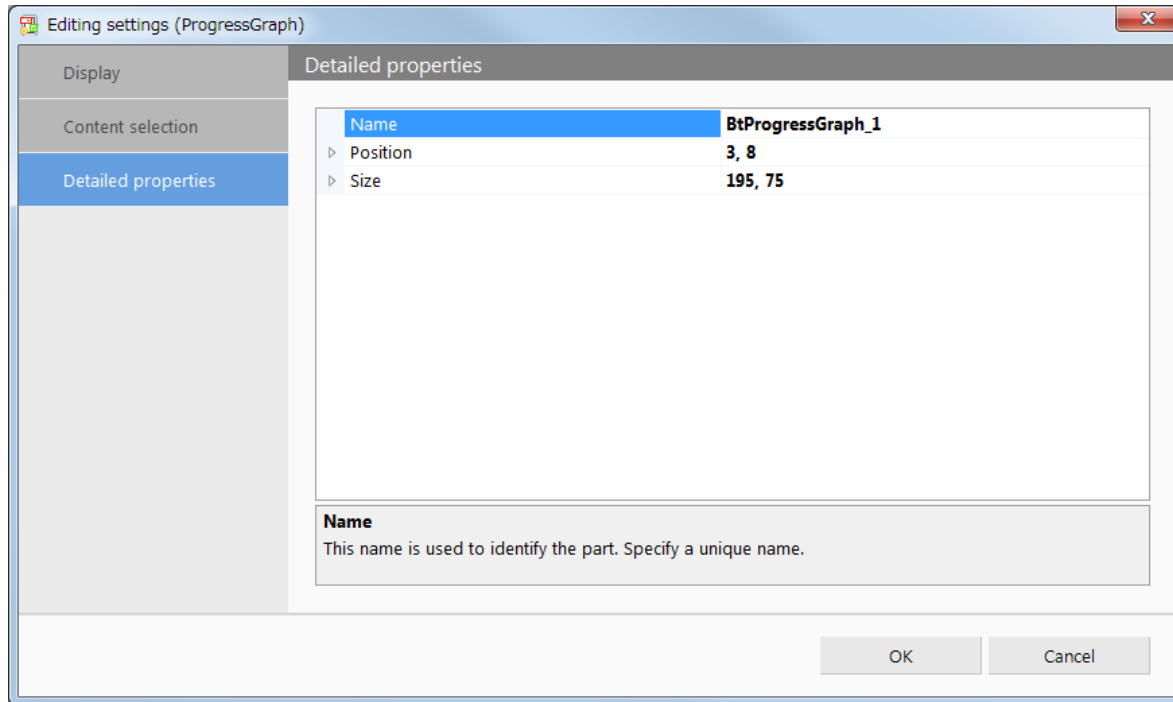

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080


About labels (internal parts)

■ GUI display



■ Part properties

Name	BtProgressionLabel_1
▶ Position	5, 5
▶ Size	60, 30
Frame Style	None
Content	Progress
Content Alignment	Align middle left
Font	Segoe UI, 9.75pt
Fore Color	ControlText
Back color	Control

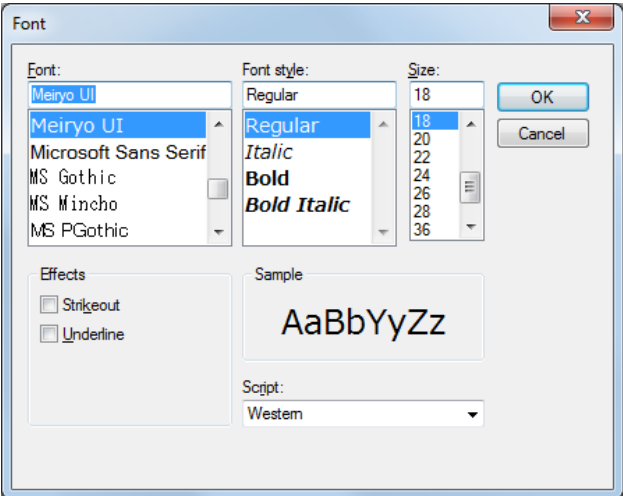Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920 Vertical:1 to 1080
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional
Content	Set the content to display.
Content Alignment	Set the alignment of text in the part.  [Options] Align top left Top center Align top right Align middle left Middle center Align middle right Align bottom left Bottom center Align bottom right
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

Fore Color	Set the color of the text. Custom Web System Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight
Back Color	Set the color of the part's background. Custom Web System Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight

Double-click on a part to display the following dialog box.

■ Display

Editing settings (Label)

Display

Detailed properties

Display format

Content

Progress

A

9.75

B

Details

Content Alignment

=

=

=

=

=




=

OK

Cancel

Display format

Configure settings such as the content to display, its color, and its font size.

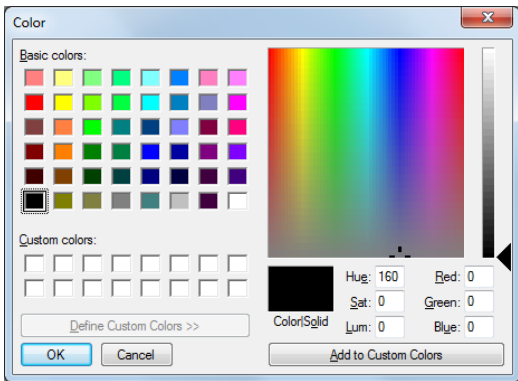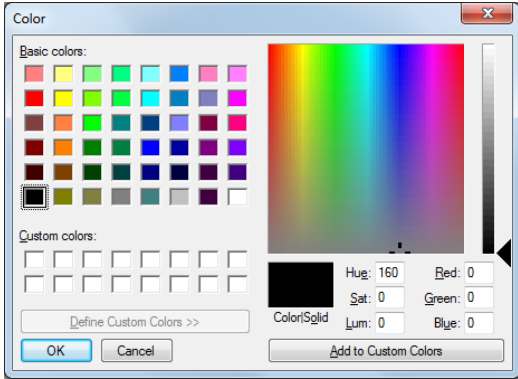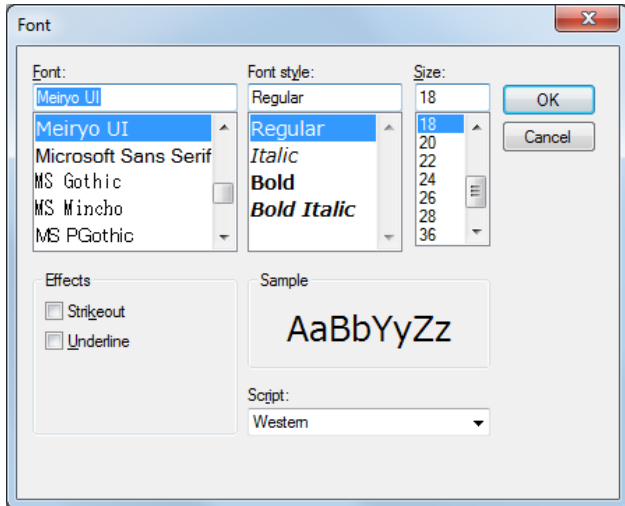
	Set the color of the text. 
	Set the color of the part's background. 
9.75	Set the font size.
B	Set the font style to bold.
Details	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

• Content Alignment

Set the alignment of text in the part.

=	Align top left	=	Top center	=	Align top right
=	Align middle left	=	Middle center	=	Middle right
=	Align bottom left	=	Bottom center	=	Align bottom right

■ Detailed properties

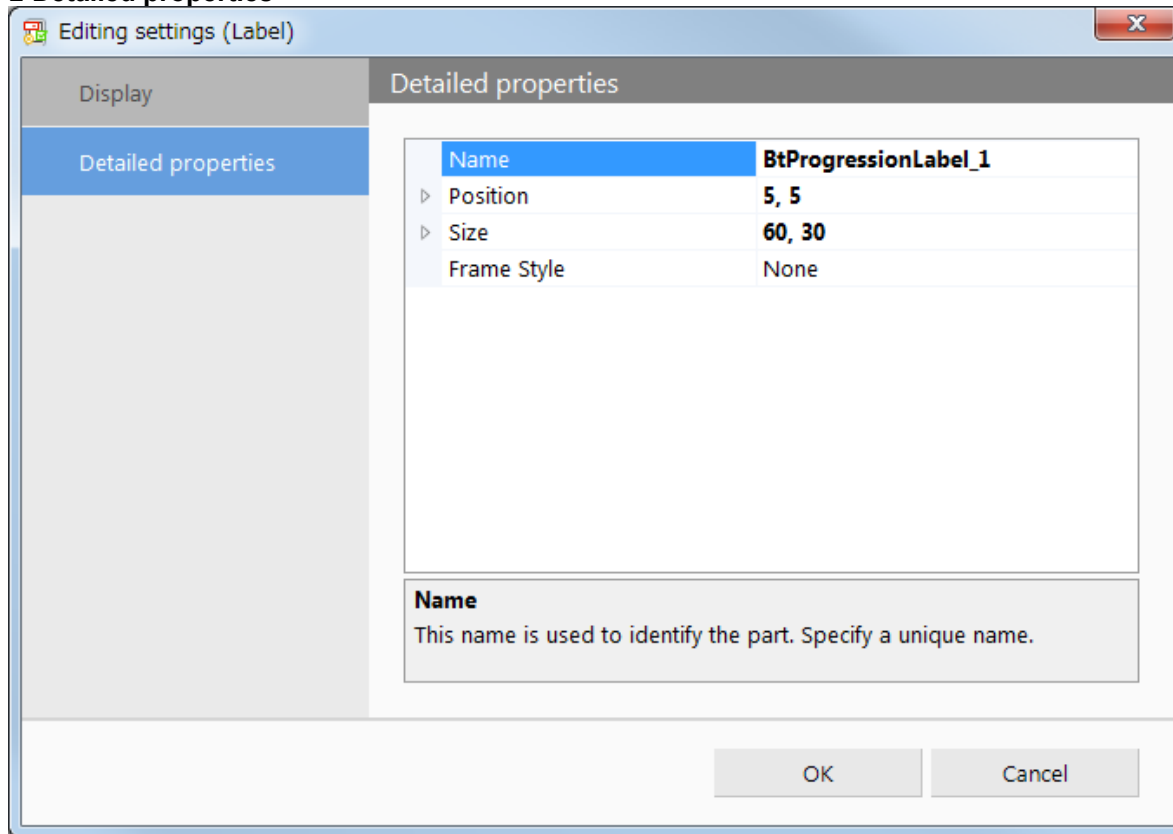

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080
Frame Style	Set the frame style of the part. [Options] None Line Three dimensional

About the progress bar (internal part)

■ GUI display




■ Part properties

Name	BtProgressBar_1
▷ Position	10, 40
▷ Size	175, 25

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080

Double-click on a part to display the following dialog box.

■ Detailed properties

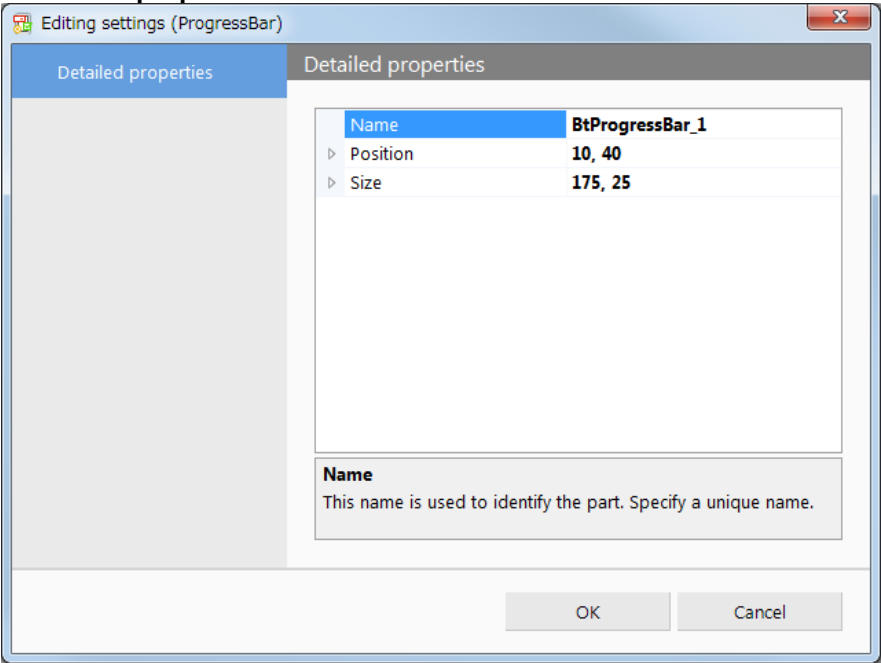

Name	Set the part's name.
Position	Set the upper-left position of the part. (X coordinate, Y coordinate) [Setting range] X coordinate:0 to 1920, Y coordinate:0 to 1080
Size	Set the size of the part. (Horizontal, Vertical) [Setting range] Horizontal:1 to 1920, Vertical:1 to 1080

6.5. Screen Components

This section explains the PC application components that you can add from the Screen Outline (["4.8. Screen Outline \(PC Application\)"](#)).


6.5.1. Window

You can add this component by clicking "Screen" and selecting "Window" under Screen Outline (["4.8. Screen Outline \(PC Application\)"](#)). Use this when you want to create a new PC application.


■ Part icon




■ Window

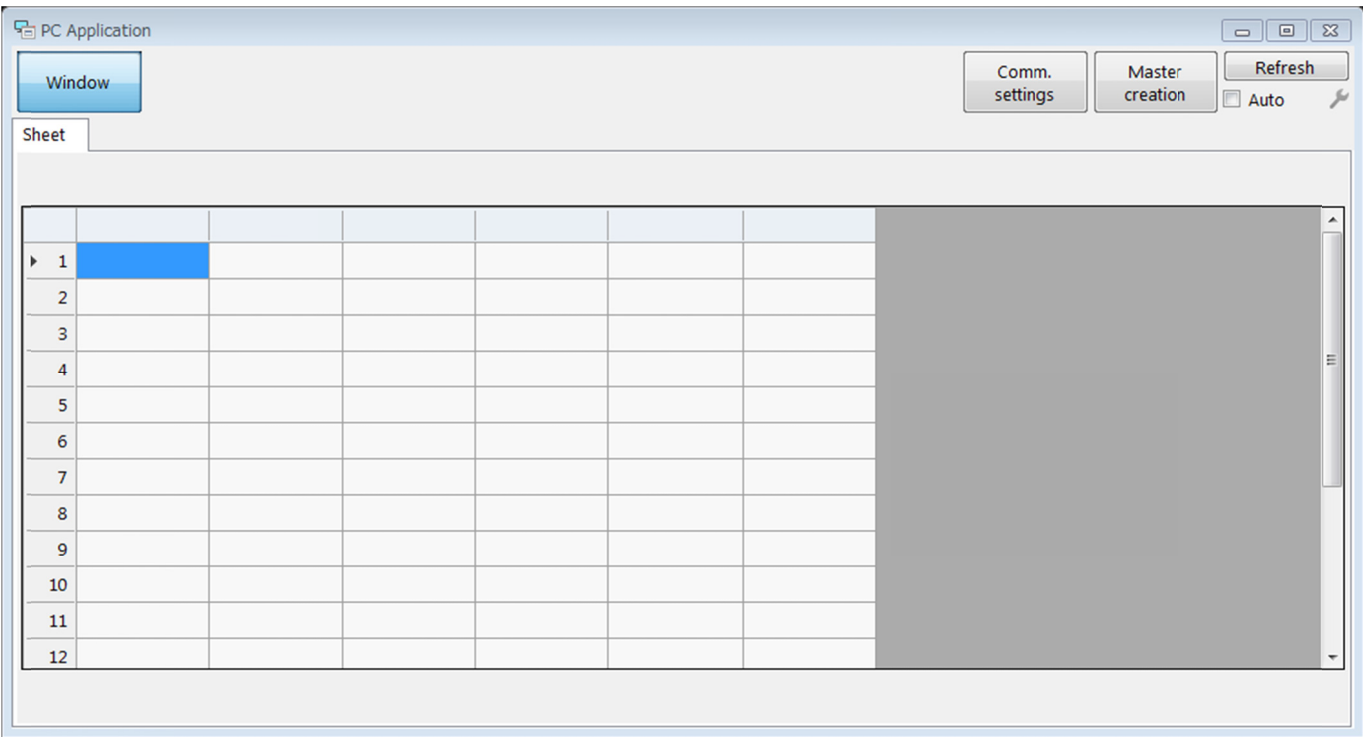

Double-click "Window" under Screen Outline to display the following dialog box.

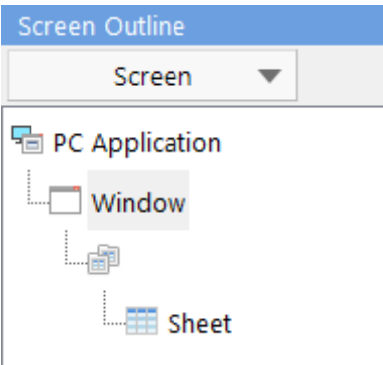


■ Display

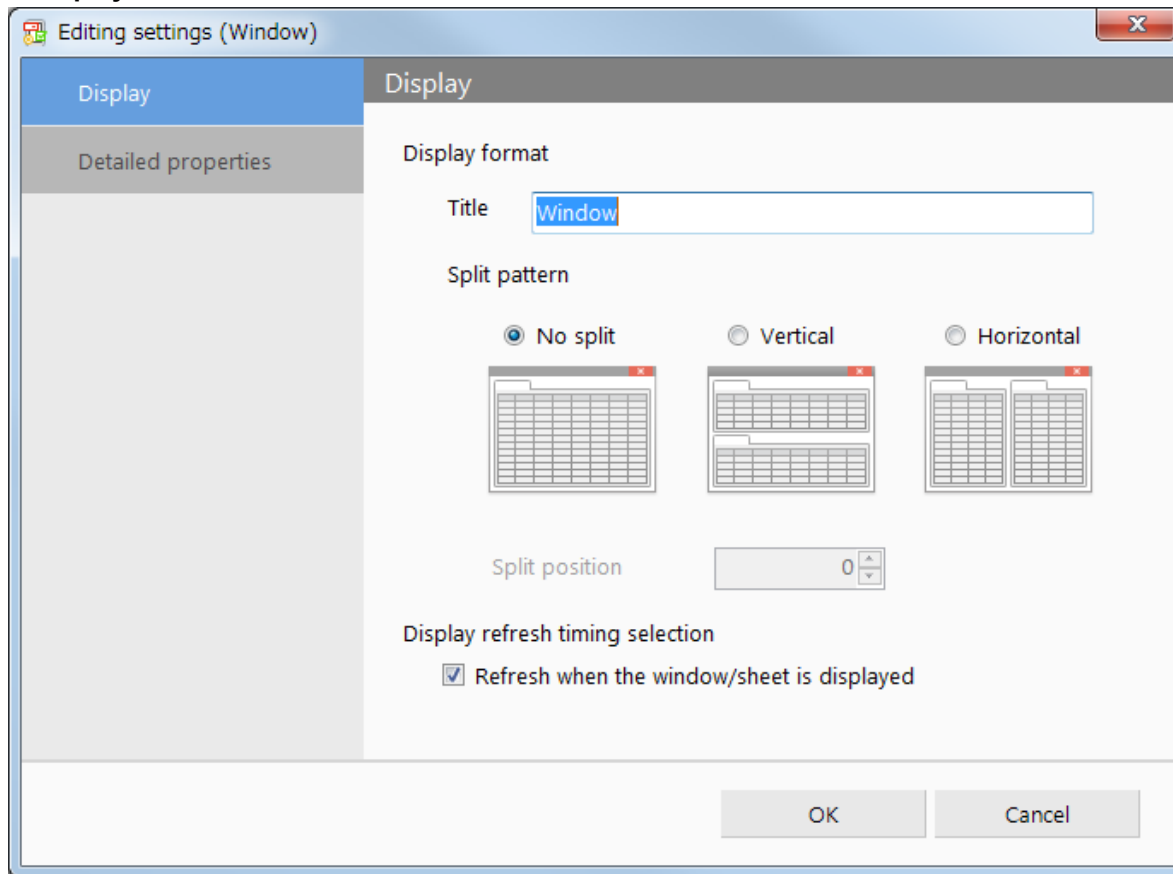

Display format

• Title

Set the title of the window. The title is also applied to the button at the top of the PC application.

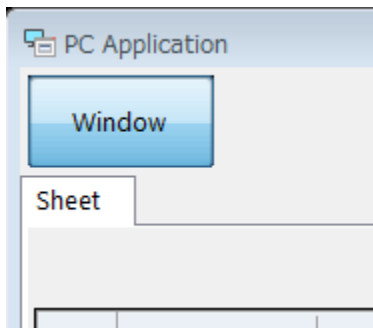

• Split pattern

Select the pattern to use in placing the groups on the window.

* For details on groups, see "[4.9 Editing PC Applications \(PC Application\)](#)."

[Options] No split | Vertical | Horizontal

• Split position

When you select "Vertical" or "Horizontal" for "Split pattern," set the position of the split.

Display refresh timing selection

- **Refresh when the window/sheet is displayed**

Check this box to update the display of the table when the PC application window or sheet is displayed.

■ Detailed properties

The screenshot shows a dialog box titled 'Editing settings (Window)' with a close button in the top right corner. It has two tabs: 'Display' and 'Detailed properties'. The 'Detailed properties' tab is selected. Inside this tab, there is a large text input field with the text 'BtWindow_1'. Below this field, there is a section titled 'Name' with the instruction 'This name is used to identify the part. Specify a unique name.' At the bottom of the dialog, there are 'OK' and 'Cancel' buttons.

Name	Set the window's name.
------	------------------------


6.5.2. Sheet

You can add this component by clicking "Screen" and selecting "Sheet" under Screen Outline ("[4.8. Screen Outline \(PC Application\)](#)"). Use this when you want to create a new sheet in a window ("[6.5.1 Window](#)"). For details on the role of sheets, see "[4.9 Editing PC Applications \(PC Application\)](#)".


■ Part icon




■ Sheet

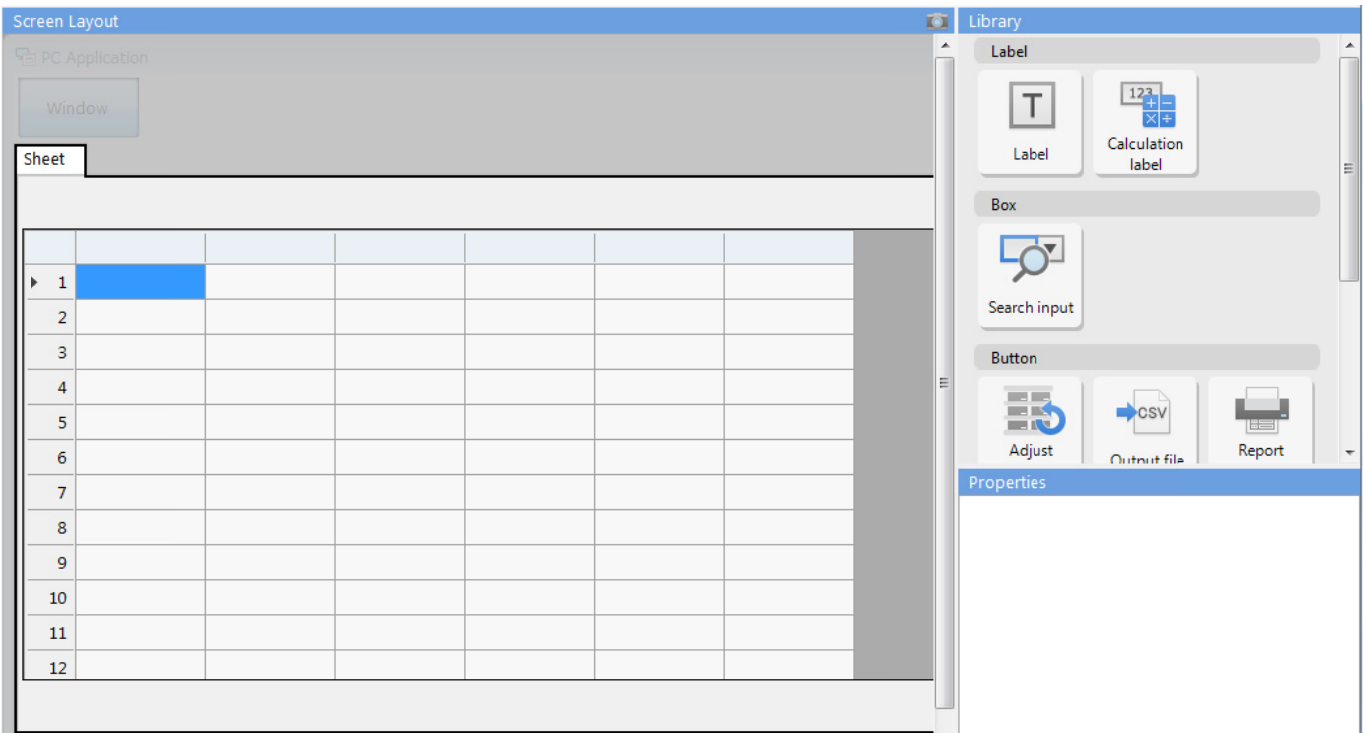

Double-click "Window" under Screen Outline to display the following dialog box.

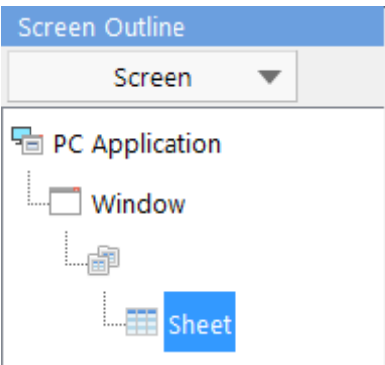


■ Display

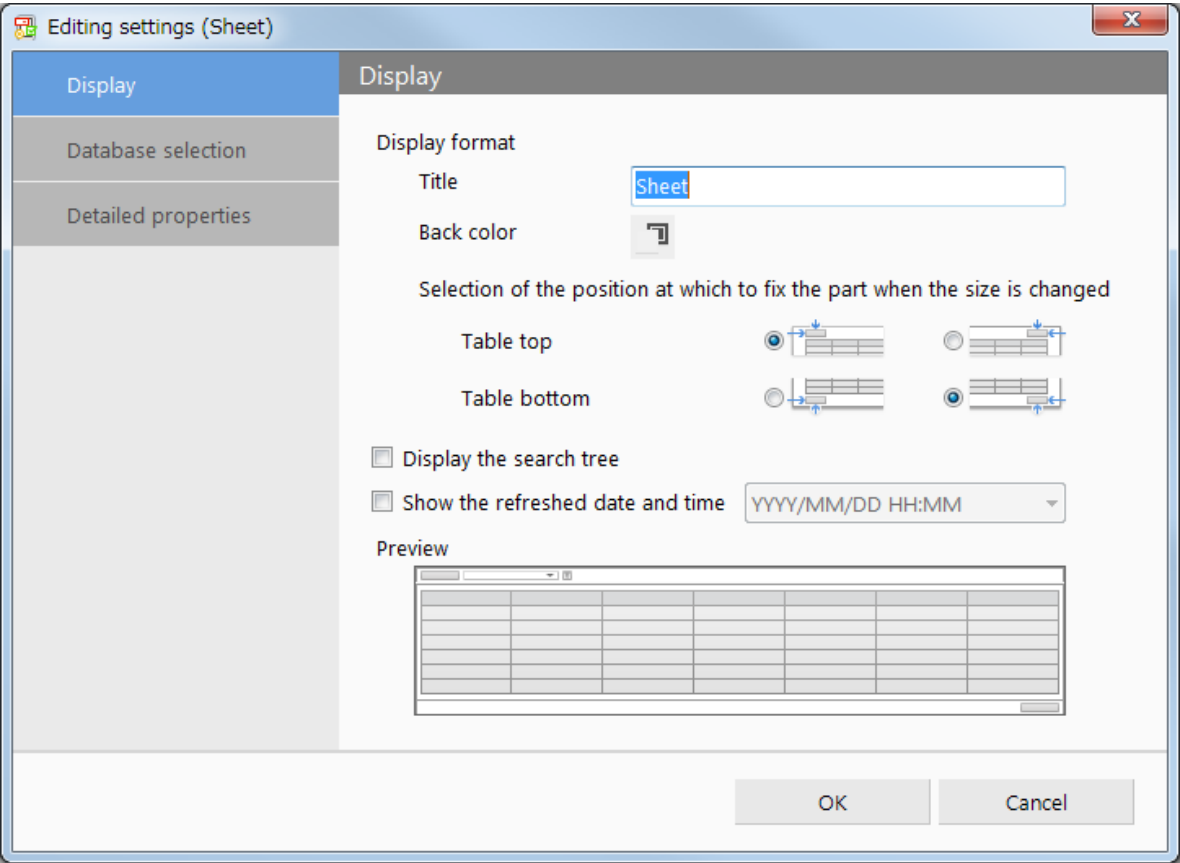

Display format


• Title

Set the title of the sheet. The title is also applied to the sheet's tab.

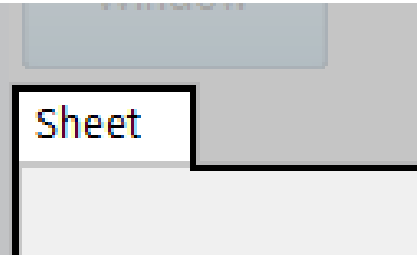

• Back color

Set the back color of the part.

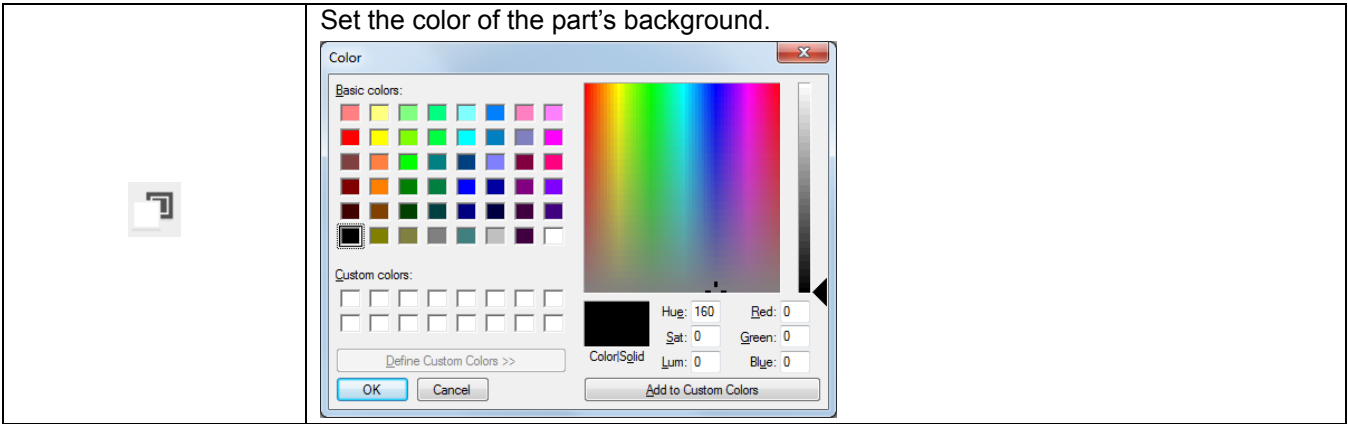


- **Selection of the position at which to fix the part when the size is changed**

Select the position at which to fix the part in place on the sheet when the PC application's size is changed with, for example, mouse operations.

Display the search tree

Check this box to display the search tree view on the sheet.

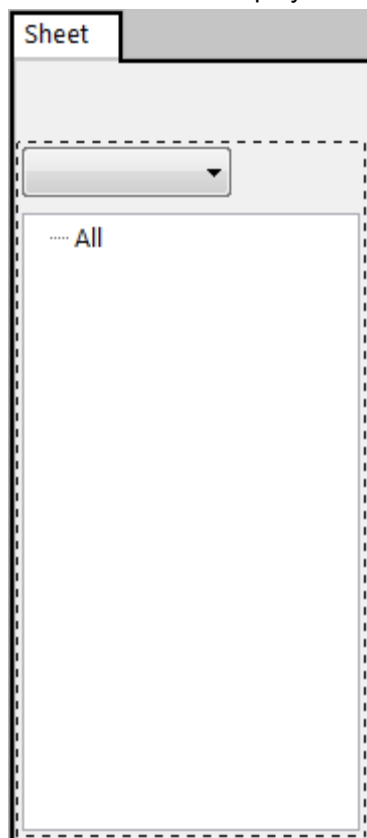

Show the refreshed date and time

Check this box to display the last date and time when the PC application display was updated. You can also set the display format.

[Options] YYYY/MM/DD HH:MM | YY/MM/DD HH:MM | MM/DD/YYYY HH:MM | MM/DD/YY HH:MM | DD/MM/YYYY HH:MM | DD/MM/YY HH:MM

Preview

Preview the sheet with these settings.

■ Database selection

Editing settings (Sheet)

Display

Database selection

Detailed properties

Database selection

Display data selection

☐ Management database ☒ Log database

DataFile_1.csv (Job)

Master file preview

OK Cancel


Display data selection

Select the database to display in the table on the sheet. You can set the format and data of databases. For details on management databases, see "[4.2.6 Operation Settings](#)." For details on log databases, see "[4.5.3. Data Format](#)."
[Options] Management database | Log database

Master file preview

Preview the master file.


■ Detailed properties

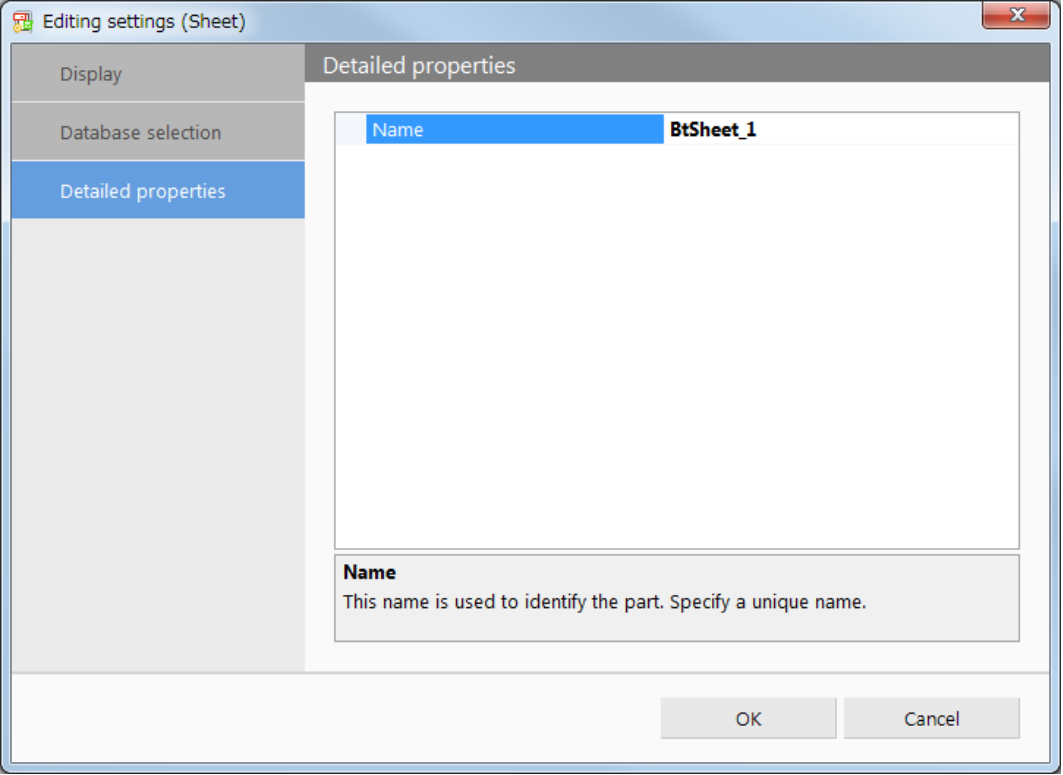

Name	Set the sheet's name.
------	-----------------------


About the search tree (internal part)

■ GUI display

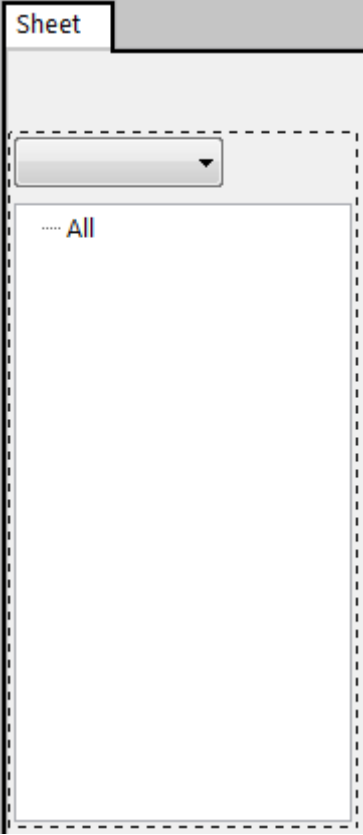

■ Part properties

Name	BtSearchTree
Back color	 Control

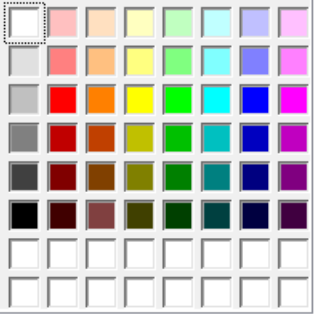Name	Set the part's name.
Back Color	Set the color of the part's background. CustomWebSystem  CustomWebSystem Transparent Black White DimGray Gray DarkGray Silver LightGray Gainsboro WhiteSmoke Maroon CustomWebSystem ActiveBorder ActiveCaption ActiveCaptionText AppWorkspace ButtonFace ButtonHighlight ButtonShadow Control ControlDark ControlDarkDark ControlLight

Double-click on a part to display the following dialog box.

■ Display

Editing settings (SearchTree)

Display

Search condition setting

Detailed properties

Display

Search target (column) selection

Column 1
Column 2
Column 3
Column 4
Column 5
Column 6
Column 7 [hidden]
Column 8 [hidden]
Column 9 [hidden]
Column 10 [hidden]
Column 11 [hidden]
Column 12 [hidden]
Column 13 [hidden]
Column 14 [hidden]
Column 15 [hidden]

➔

➔

Master data preview

OKCancel


Search target (column) selection

Select the search target columns that can be selected from the drop-down list box.

Master data preview

Preview the master data.

■ Search condition setting

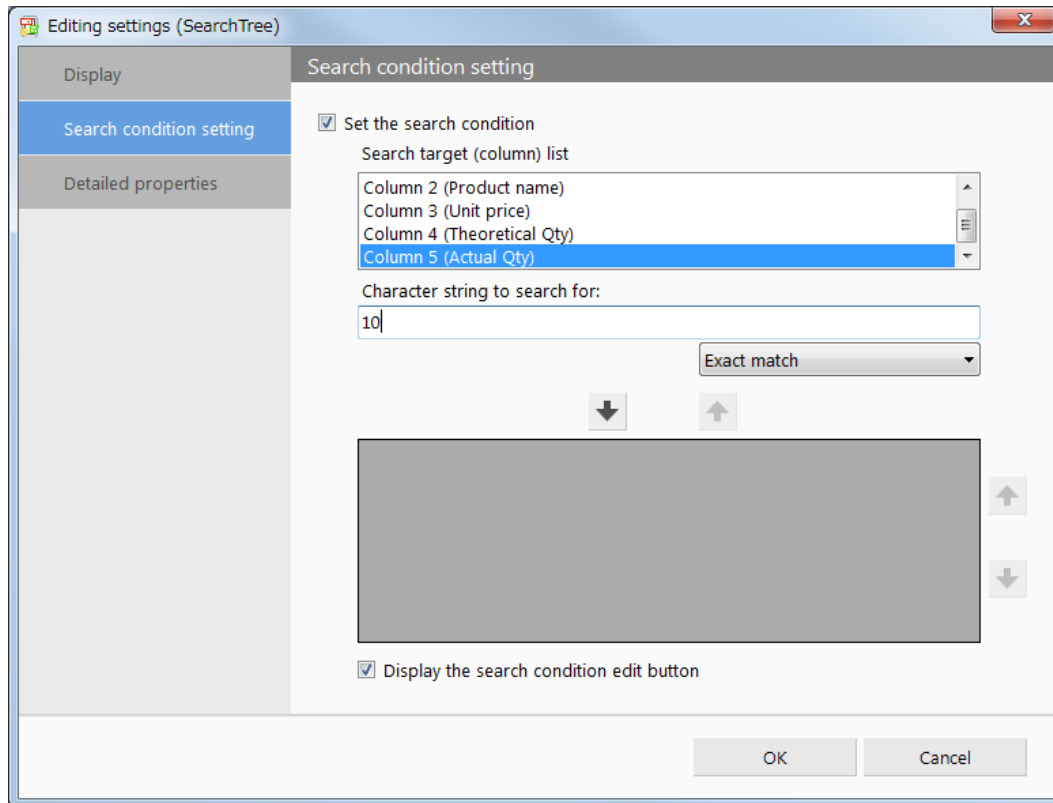

Set the search condition

Check this box to set the search condition.

• Search target (column) list

Select the column to search.

• Character string to search for

Set the character string to search for and the condition.


[Options] Exact match | Forward match | Backward match | Contains | Does not contain

• Adding and deleting search conditions

Click "↓" to add the condition that you have set as shown above. Click "↑" to delete the condition.

• Display the search condition edit button

Check this box to display a button for editing the conditions set as shown above while the PC application is running.



Editing settings (SearchTree)

Display

Search condition setting

Detailed properties

Detailed properties

Name	Control
Back color	

Name

This name is used to identify the part. Specify a unique name.


OK Cancel

[illegible]

6.5.3. Table



You can place one table in a sheet ("[6.5.2 Sheet](#)") and use this table to view the data in the database.

■ Table

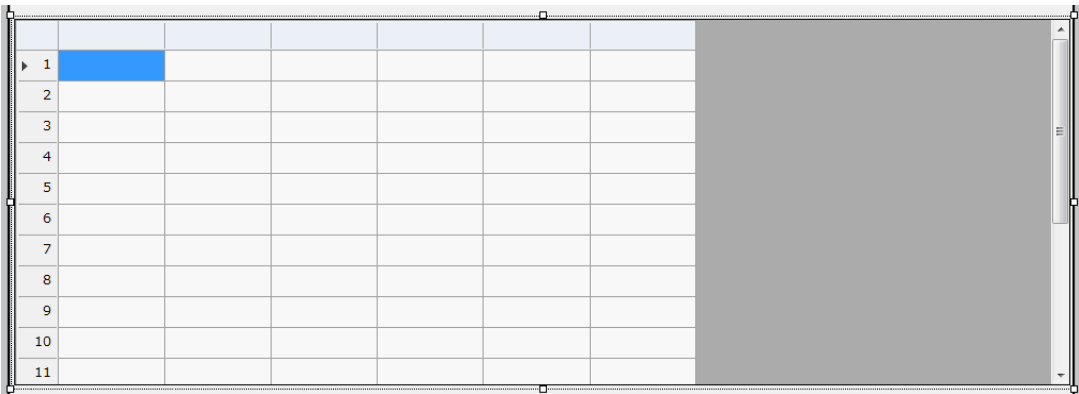


■ Part properties

Name	BtTableGrid
Font	Segoe UI, 9.75pt
Fore Color	 ControlText

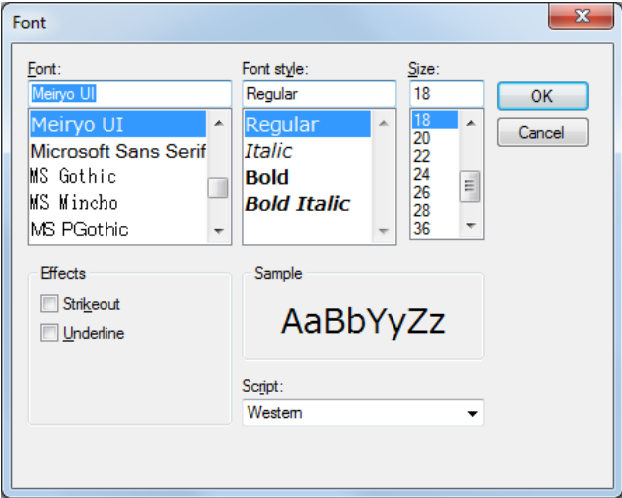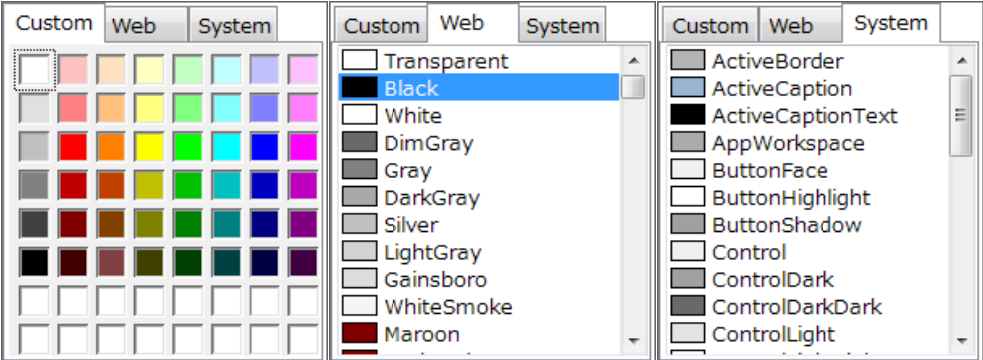Name	Set the part's name.
Font	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 
Fore Color	Set the color of the text. 



Double-click on a “Table” to display the following dialog box.

■ Display

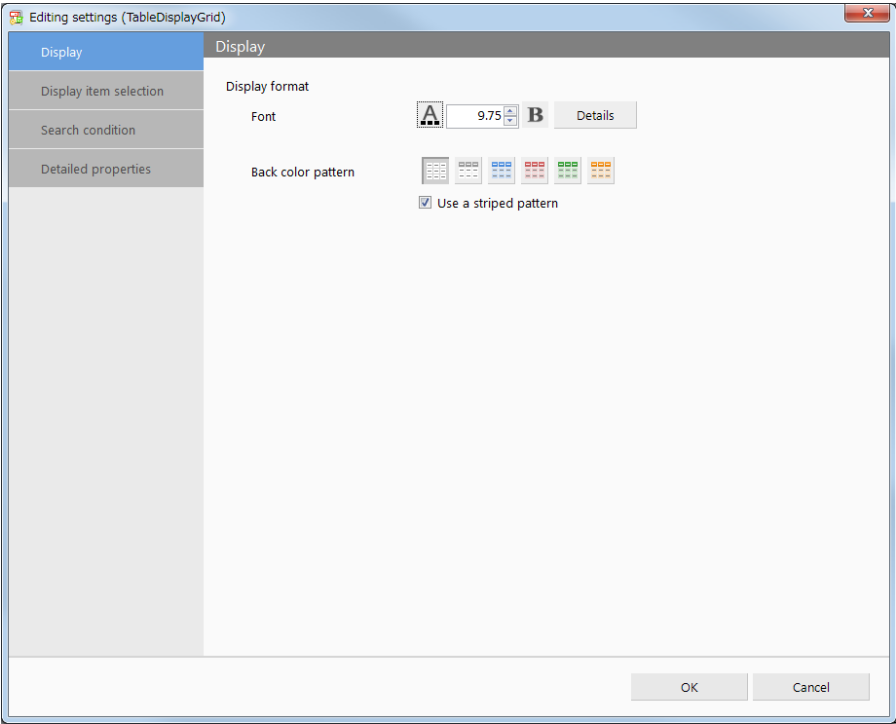


Display format

• Font

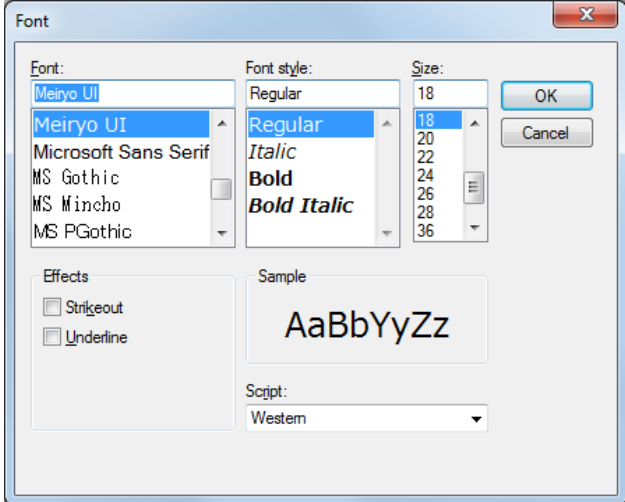	Set the color of the text.
	Set the font size.
	Set the font style to bold.
	Configure settings such as the font type and size. Use the following dialog box to configure the settings.
	

• Back color pattern

Select the table's color scheme pattern.

[Options] 

• Use a striped pattern

Check this box to display the odd-numbered rows in the table with the color scheme selected above.

■ Display item selection

Editing settings (TableDisplayGrid)

Display

Display item selection

Search condition

Detailed properties

Display item selection

☒ Display column name

A

≡

≡

≡

9.75

B

Details

☒ Display row number

A

9.75

B

Details

Display column selection

Conditional format:

Delete

Edit

Calculation column:

Add

Delete

Edit

	Column 1	Column 2	Column 3	Column 4	Column 5
Column Name					
Column width	100	100	100	100	100
Display settings	Display	Display	Display	Display	Display
Conditional format	(None)	(None)	(None)	(None)	(None)
Calculation formula					

Table preview

1					
2					
3					
4					
5					

OK


Cancel

Display header

• Display column name



Check this box to display the column names at the top of the table.

A	Set the color of the text.
≡	Set the alignment within the part to left-aligned.
≡	Set the alignment within the part to center-aligned.
≡	Set the alignment within the part to right-aligned.
9.75	Set the font size.

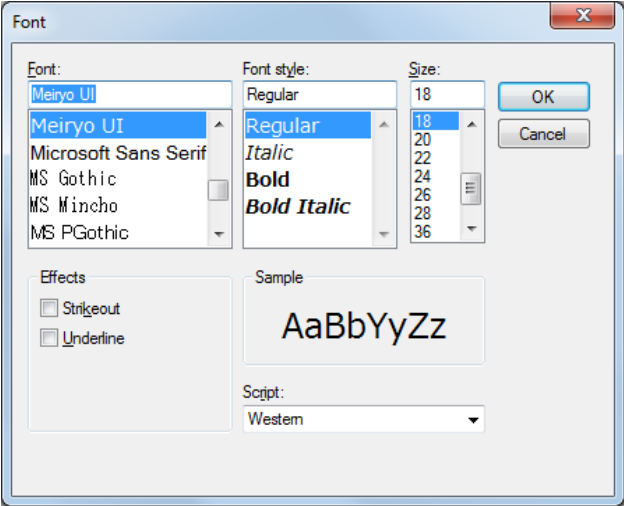B	Set the font style to bold.
Details	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

• Display row number

Check this box to display the row numbers on the left side of the table.

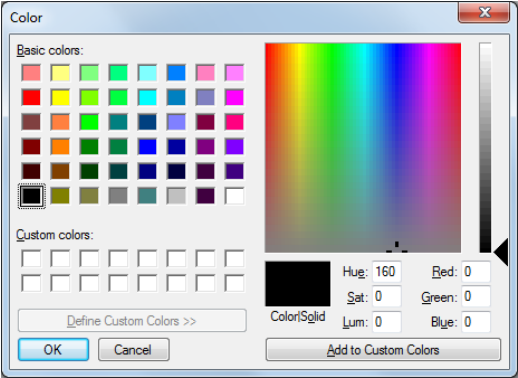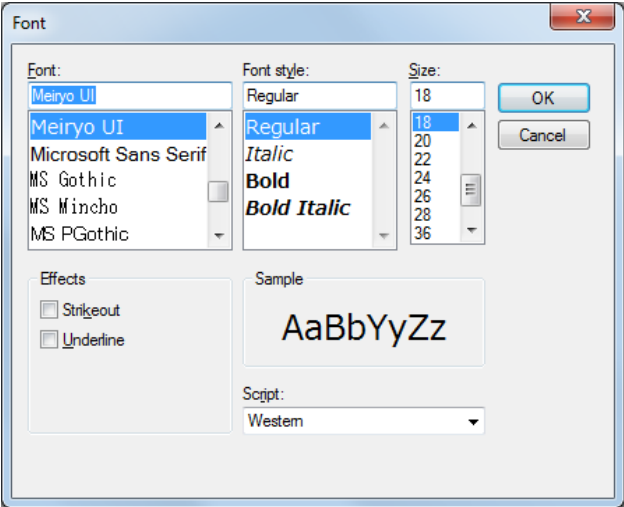
A	Set the color of the text. 
9.75	Set the font size.
B	Set the font style to bold.
Details	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

Display column selection


Select the columns from the database to display in the table. You can also check the column widths, conditional format, and calculation settings. When the "Display column name" check box is selected, you can set the column names.



• Conditional format

Select a column and click "Edit" to display a dialog box for setting the conditions and the format. Click "Delete" to delete the conditional format that you are setting.

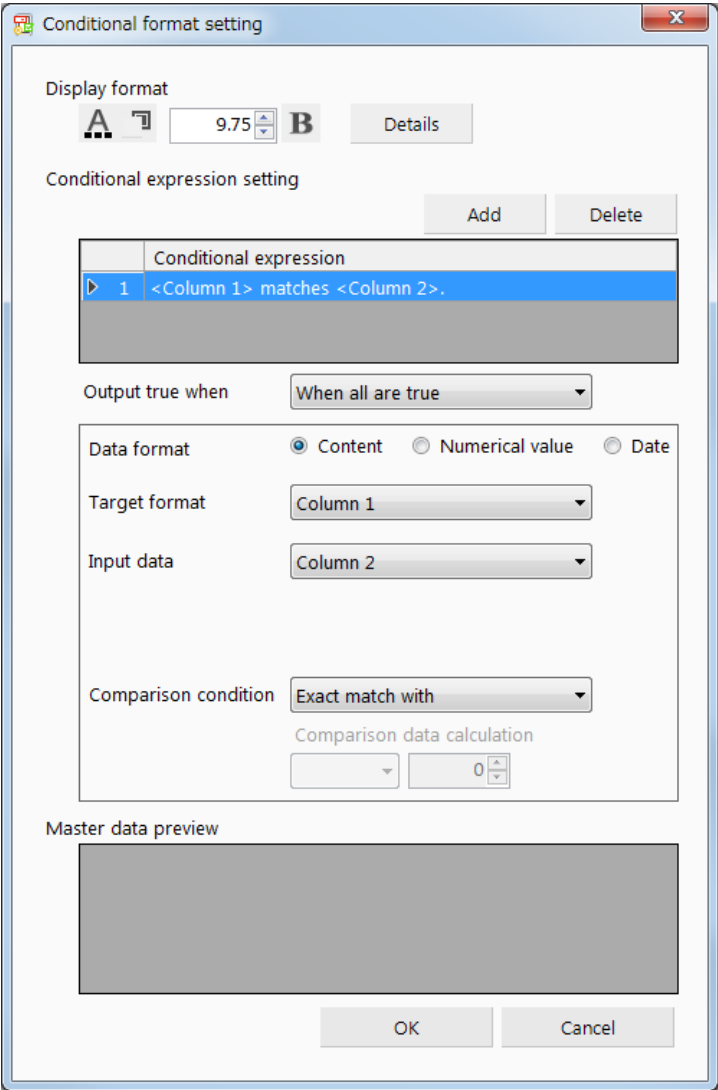

Display format

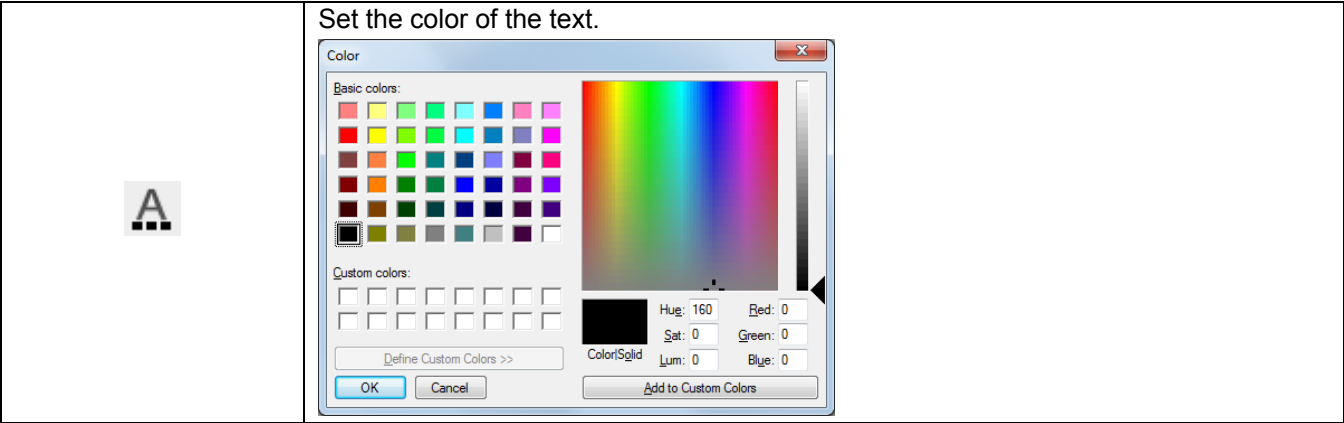

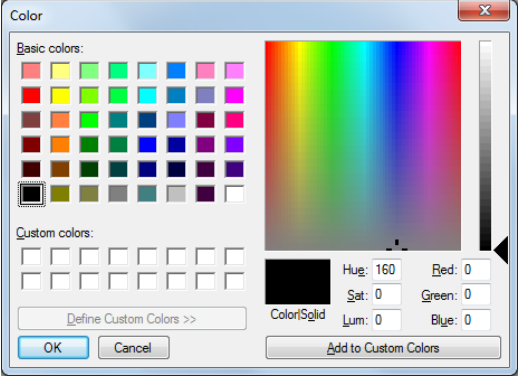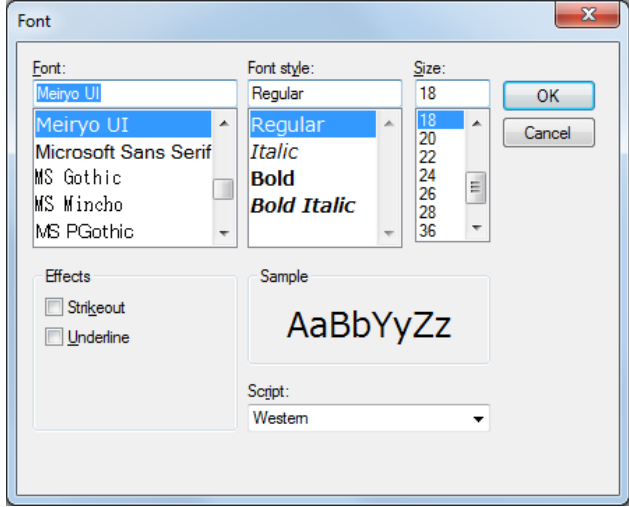	Set the color of the part's background. 
9.75	Set the font size.
B	Set the font style to bold.
Details	Configure settings such as the font type and size. Use the following dialog box to configure the settings. 

Conditional expression setting

The list of added conditional expressions is displayed here. You can combine conditions by adding together multiple conditions. When combining conditions, select "When all are true" or "When either is true."

- **Data format**

Select the format of the data to compare.

[Options] Content | Numerical value | Date

- **Target format**

Select the column to be the comparison target from the master data.

- **Input data**

Select the data to compare from the columns of the master data. Alternatively, set a value.

- **Comparison condition**

Set the comparison condition. The options vary depending on the "Data format" setting.

- Content**

[Options] Exact match with | Forward match with | Backward match with | Contained in | Not contained in

- Numerical value**

[Options] Equal to | Not equal to | Greater | Less | Or greater | Or less

- Date**

[Options] Same as | Different from | After | Before | On and after | On or before

- **Comparison data calculation**

After you set a calculation for "Target format," the comparison is performed against the "Input data." Set the operator and the calculation value.

Data format: Numerical value

Equal to

Comparison data calculation

+ 0

Data format: Date

Same as

Comparison data calculation

+ 0 Day

- Master data preview**

Preview the master data.

- **Calculation column**

Display the result (column) of the set calculation in the table. Click "Delete" or "Edit" to, respectively, delete or edit the calculation that you are setting.

Calculation formula setting (column)

Calculation details

Numerical value 0 + Numerical value 0

☐ Display percentages

☐ Display the decimal point 1

Master data preview

OK Cancel

Calculation details

Perform the four arithmetic operations on two columns, on a column and a value, or on two values.

Display percentages

Check this box to display the calculation results as percentages.

Display the decimal point

Check this box to set the number of digits after the decimal point in the calculation results.

Master data preview

Preview the master data.

■ Search condition

Set the details (the search conditions for narrowing down the data) to display in the table.

Editing settings (TableDisplayGrid)

Search condition

Conditional expression setting

Add Delete

	Conditional expression
1	<Column 1> matches <Column 2>.

Output true when: When all are true

Data format: ☒ Content ☐ Numerical value ☐ Date

Target format: Column 1

Input data: Column 2

Comparison condition: Exact match with

Comparison data calculation: 0

Master data preview

OK Cancel

Conditional expression setting

The list of added conditional expressions is displayed here. You can combine conditions by adding together multiple conditions. When combining conditions, select "When all are true" or "When either is true."

- **Data format**

Select the format of the data to compare.

[Options] Content | Numerical value | Date

- **Target format**

Select the column to be the comparison target from the master data.

- **Input data**

Select the data to compare from the columns of the master data. Alternatively, set a value.

- **Comparison condition**

Set the comparison condition. The options vary depending on the "Data format" setting.

Content

[Options] Exact match with | Forward match with | Backward match with | Contained in | Not contained in

Numerical value

[Options] Equal to | Not equal to | Greater | Less | Or greater | Or less

Date

[Options] Same as | Different from | After | Before | On and after | On or before

- **Comparison data calculation**

After you set a calculation for "Target format," the comparison is performed against the "Input data." Set the operator and the calculation value.

Data format: Numerical value

The interface for Numerical value format shows a dropdown menu set to "Equal to". Below it, the text "Comparison data calculation" is followed by a "+" button, a text input field containing "0", and a small up/down arrow button.

Data format: Date

The interface for Date format shows a dropdown menu set to "Same as". Below it, the text "Comparison data calculation" is followed by a "+" button, a text input field containing "0", and a dropdown menu set to "Day".

Master data preview

Preview the master data.

■ Detailed properties

Editing settings (TableDisplayGrid)

Display

Display item selection

Search condition

Detailed properties

Detailed properties

Name

BtTableGrid

Name

This name is used to identify the part. Specify a unique name.

OK


Cancel

Name	Set the part's name.
------	----------------------


6.5.4. PC Application

There must be one PC application in each project. You cannot add additional copies of this window or delete it.


■ PC Application

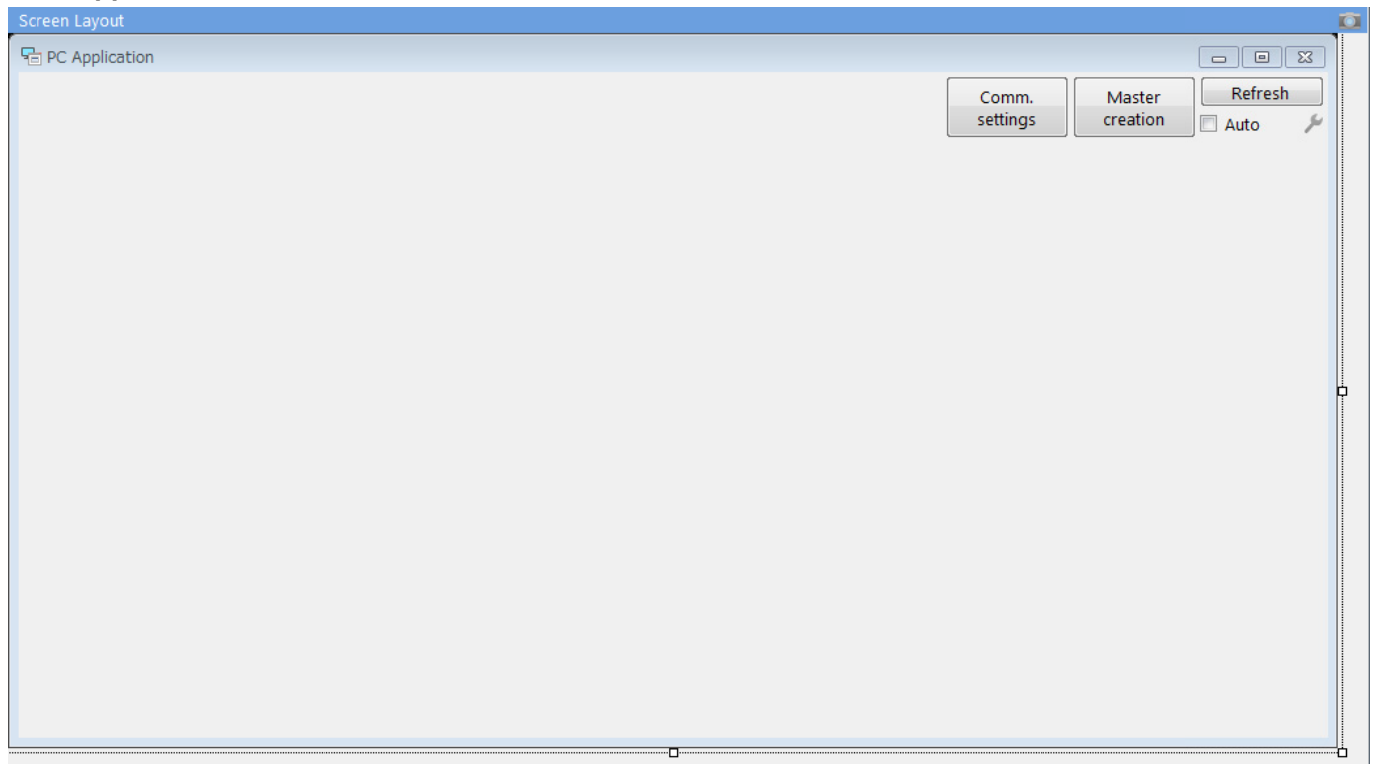

Double-click "PC Application" under Screen Outline to display the following dialog box.

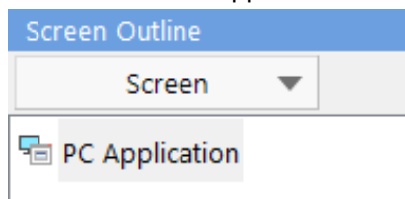


■ Display

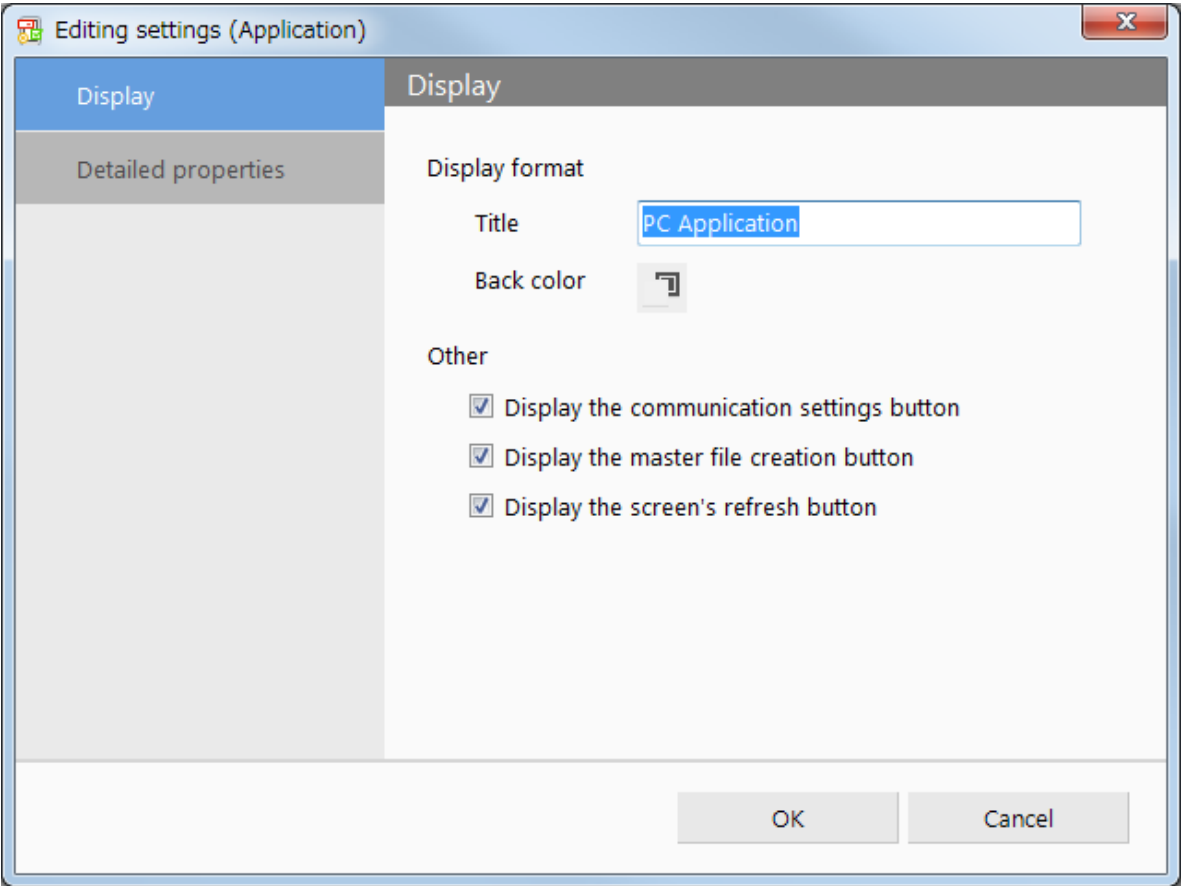

Display format


• Title

Set the title of the PC application. The title is also applied to the top of the screen.

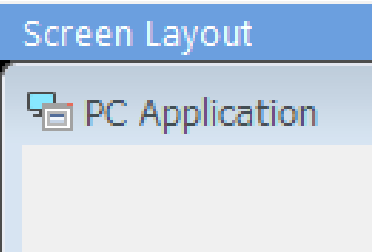

• Back color

Set the back color of the screen.

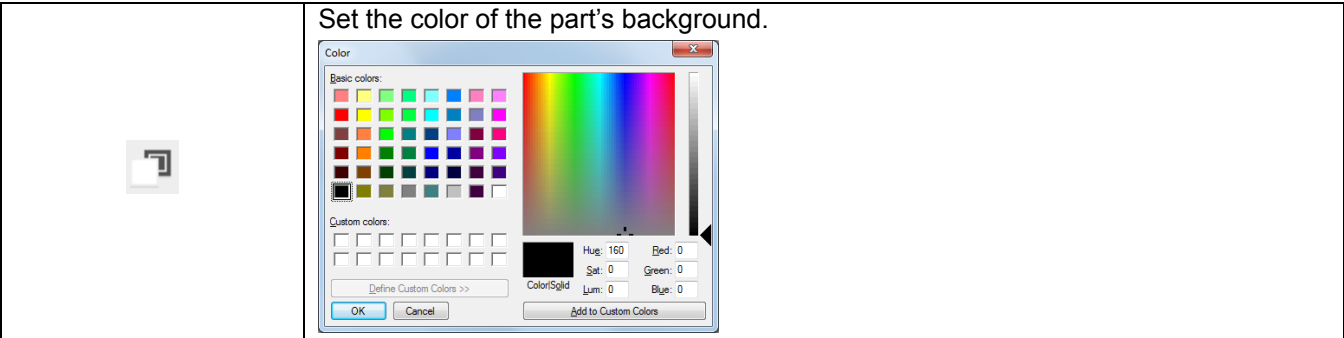


Other

• Display the communication settings button


Check this box to display the "Comm. settings" button. Click this button to set the communication between the BT device and the PC. The communication software starts.

* See "[7.3. Operation Communication Software](#)."




• Display the master file creation button

Check this box to display the "Master creation" button. Click this button to create the master file. The function is the same as the "Device master file creation" button in "[7.3. Operation Communication Software](#)."




• Display the screen's refresh button

Check this box to display the "Refresh" button. Click this button to update the display of items such as the table in the PC application. Select the "Auto" check box to update the display at the set interval (30 to 600 seconds). You can also apply a CSV file to the table by placing a CSV file having the same name as the management database in the following folder: "PC Application Start Folder" > "PC" "Import." This updates the management database.



■ Detailed properties

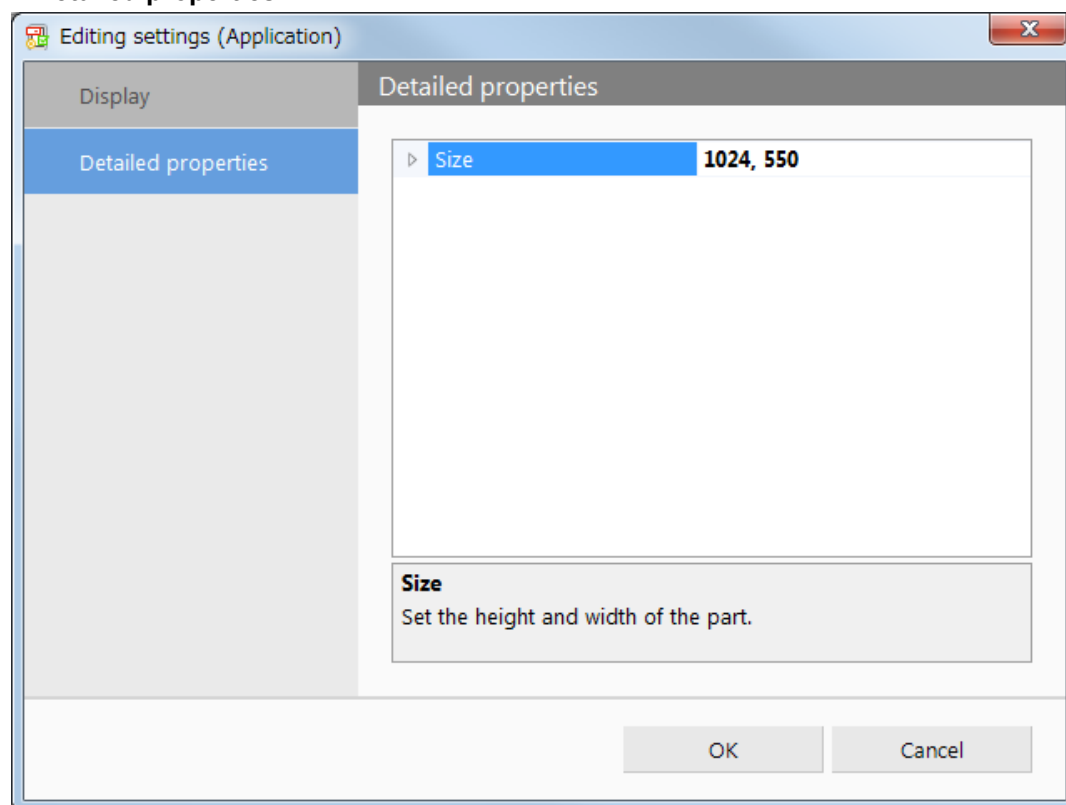

Name	Set the screen's name.
------	------------------------

7. Application Usage Methods

This chapter explains how to use the BT-W Series with device and PC applications created with the BT Application Design Tool.

7.1. Device Application

■ Deployment

There are two ways to deploy these applications.


Transmit applications from BT Application Design Tool to each BT-W Series, one at a time.

For details on this transmission method, see "[4.2.5. Deploy Applications.](#)"

Use the clone function between the BT-W devices to transmit applications.

You can copy all the data and settings from one main unit to multiple expansion units. The procedure is shown below.


1. Launch the "BT System Menu".
2. On the BT System Menu's "332.Export Clone File", click "Read Out" or "Output file."
* "Read Out" is not supported by GA model.

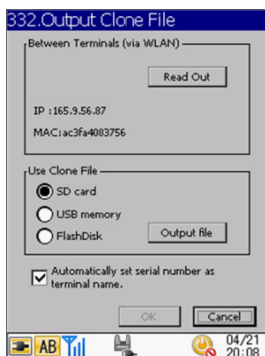

3. Launch the BT System Menu on the expansion unit, click "Start" or "Read from file" on the "331.Import Clone File".

Note

* "Start" is not supported by GA model.

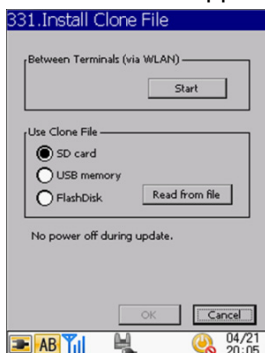

* If you are using the BT-W Series with a wireless LAN or a LAN communication cradle, change each IP address after cloning.

■ Execution


The method that is used to start applications varies depending on what you have selected for "Application start method" in "[3.1.3. Configure Device Settings](#)."

When "Start shortcut from the desktop screen" is selected

Launch "HTApplication" on the desktop screen.

Note

* The name set under "Device application" on the "File settings" screen explained in "[4.2.10. Options](#)" is displayed.

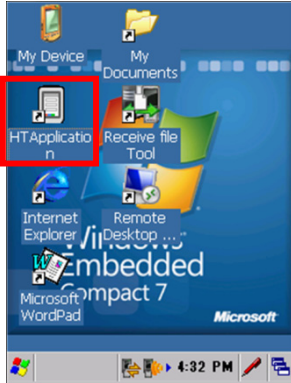

* If "HTApplication" is not shown on the desktop screen, "Restart the device after sending device settings/device application*1," which is explained in "[4.2.5. Deploy Applications](#)," may have been selected and the application may not have been sent.

*1 In the GA model, this message is displayed as "Send the package file including application and settings"

When "Kiosk mode" is selected


After some time from powering on, the application starts. The Windows screen will not be displayed.

Note

* For details on kiosk mode operations, see "[3.1.3. Configure Device Settings](#)."

■ Operation

For example, this section shows how to use a BT-W85 to operate an application

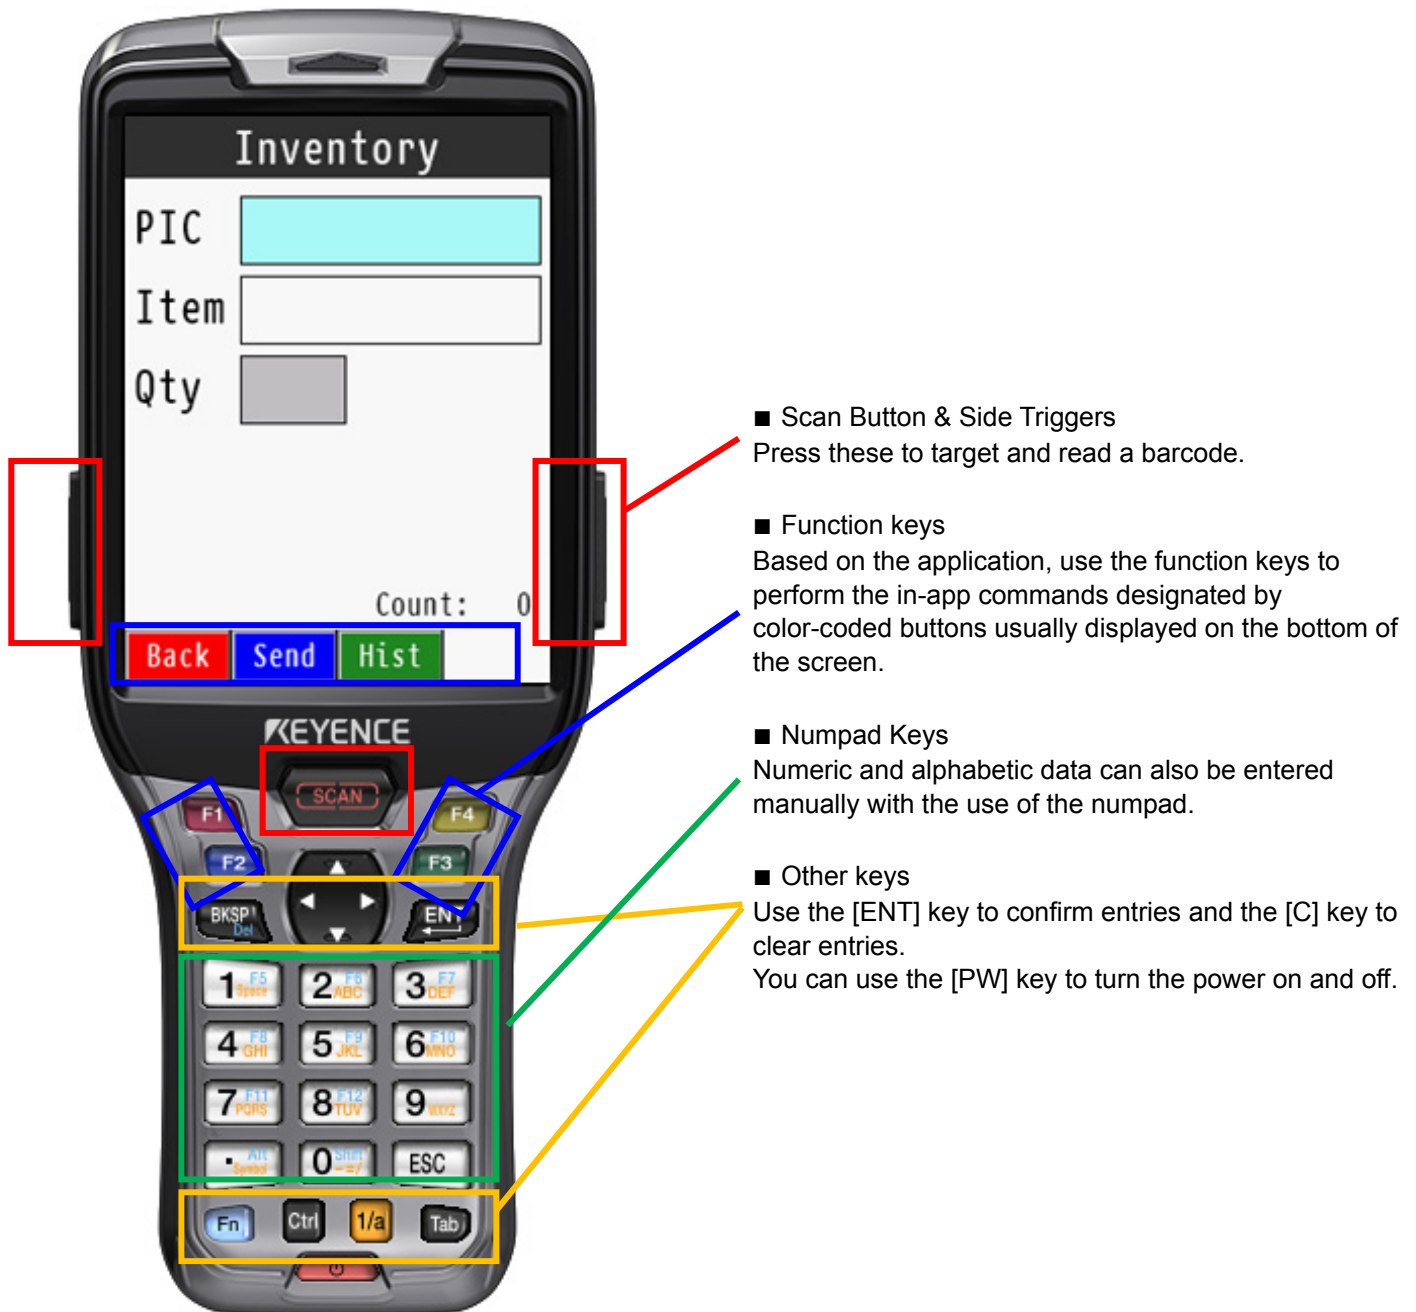

The above key descriptions usually vary depending on the settings configured in BT Application Design Tool. For details on the key operations of the templates, see ["8. Template Usage Method."](#)

7.2. PC Application Usage Method

■ Deployment

To deploy a PC application to the operation PC, use a USB memory device, network storage, or similar media distribution methods. For details on how to export PC applications from the BT Application Design Tool, refer to ["4.2.9. Deploying PC Applications."](#)

■ Execution

1. Unzip the output PC application ZIP file to folder on the operation PC.
2. Run "PCApplication.exe" inside the decompressed folder. The PC application that starts varies depending on the selection made in ["4.2.6. Operation Settings."](#)

When you have selected "Output CSV file to PC"


The communication software starts. For further details, see ["7.3. Operation Communication."](#)

When you have selected "Upload data to database (default template)" or "Upload data to database (customized)"

The PC application starts. See the next section, **"Operation."**

■ Operation

The PC application starts with the top menu displayed. The menu is created according to the templates added to the application. First, you have to configure the settings for communication between the BT-W Series and the PC. For details on how to configure the communication settings, see ["7.3. Operation Communication."](#)

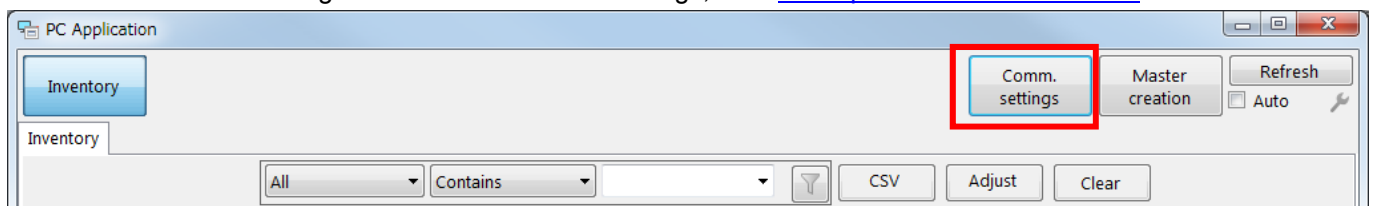

Note

- * If you use copy and paste a template to the Screen list, a job that does not function will be created on the top menu of the PC application. To add a property template, use the "Template" button on the Screen list.

Click one of the menu buttons to display a screen such as that shown below. (Example:Inventory template)

The screenshot shows a PC Application window with two main sections: 'Management database' and 'Log database'.

Management database: This section displays a table with columns: Item number, Product name, Unit price, Theoretical Qty, Actual Qty, 2016/10/11, (Difference), and Inventory result2. The table contains data for items BT-W1000, BT-W1550, BT-WUC10U, and BT-WUC10L. A sidebar on the left shows a list of item numbers: All, BT-1200, BT-1700, BT-3200, and BT-UC120U. Below the table, summary statistics are shown: Total count: 21 item(s), Total inventory value: 5,330,000, and Last refresh time: 2016/10/11 18:51.

Log database: This section displays a table with columns: Date, Time, Serial number, Person, Item number, Quantity, and Update r. The table contains log entries for the date 2016-10-11 at times 18:49:45, 18:49:56, and 18:49:59. The last refresh time is 2016/10/11 18:51.

Log database

This stores and displays all the data that has previously been received.

• Narrowed-down display

You can specify the column to search and the matching method in order to narrow down and display results according to a character string or date.

The screenshot shows the search filters for the Log database. It includes dropdown menus for 'All' and 'Contains', a search input field, and a 'Filter' button. Below these, there are dropdowns for 'All' and 'Period', and date pickers for '10/11/2016' and '10/11/2016', along with a 'Filter' button.

Management database

The data aggregated from the details of the log database is displayed according to the device application's definition set in ["4.2.6. Operation Settings."](#)

• Narrowed-down display

You can specify the column to search and the matching method in order to narrow down and display results according to a character string.

The screenshot shows the search filters for the Management database. It includes dropdown menus for 'All' and 'Partial match', a search input field, and buttons for 'AdjustInventory' and 'Clear'.

• Registering narrowed-down displays

You can register narrowed-down displays by specifying the column to search and the value to search for.

The screenshot shows a list of item numbers: All, BT-1200, BT-1700, BT-3200, and BT-UC120U. The 'All' item is selected.


Note

* PC applications vary depending on the template. For further details, see ["8. Template Usage Method."](#)

7.3. Operation Communication Software

This section explains how to configure and use the operation PC to receive data from a BT-W Series and to process with the PC application.

■ Operation settings

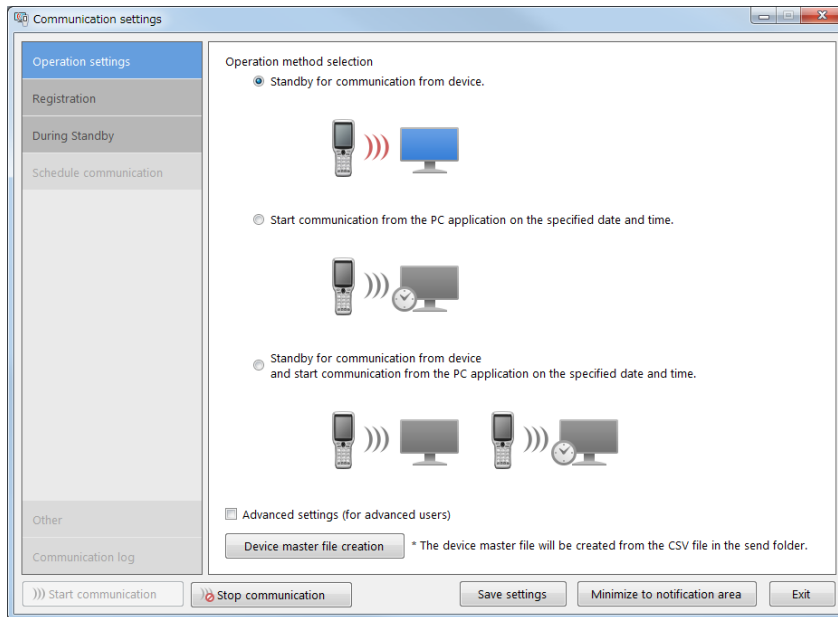

Operation method selection

- **Standby for communication from the device.**

In this mode, the operation PC is always on standby listening for communication initiated from BT-W Series. "Registration" and "During standby" are enabled on the left side of the screen.

- **Start communication from the PC application on the specified date and time.**

In this mode, the Operation PC is scheduled to listen and standby for communication from BT-W Series.

Select "Wakeup mode" for "Power Off Mode" in "[4.2.3. Device Settings.](#)"

"Registration" and "Schedule communication" are enabled on the left side of the screen.

- **Standby for communication from the device and start communication from the PC application on the specified date and time.**

In this mode, the communication of both modes explained above is performed.

"Registration," "During Standby", and "Schedule communication" are enabled on the left side of the screen.

Advanced settings (for advanced users)


Check this box to enable "Other" and "Communication log" on the left side of the screen.

"Device master file creation" button

Clicking this button will convert a CSV file in the 'send folder' to the masterfile for the device. After pressed, the masterfile is also created in the 'send folder'.


"Start communication" button

Pressing this button starts standby listening on the PC. The following is displayed in the notification area.

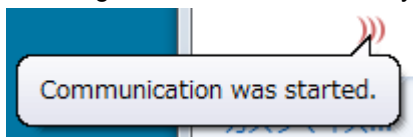

"Stop communication" button

Pressing the button stops standby listening on the PC. The following is displayed in the notification area.

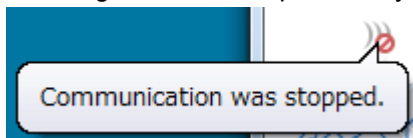

"Save settings" button

Save the communication setting details.


"Minimize to notification area" button

Save the communication setting details and minimize the communication software to the notification tray. Click the icon in the notification tray to display the communication software again. You can also exit the communication software by right-clicking this icon and selecting "Exit."

"Exit" button

If active, end communication and exit the communication software.

■ Registration

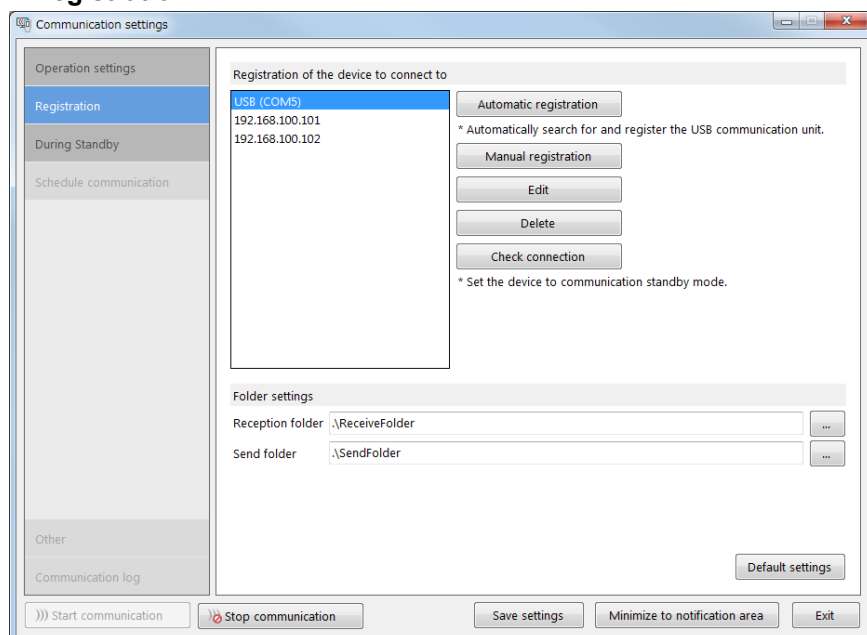

Registration of the device to connect to


Here devices are registered to communicate with the operation PC.

- **"Automatic registration" button**

Automatically search for and register the connected USB Communication Cradle.

- **"Manual registration" button**

Use the following dialog box to manually register a USB port or an IP address.

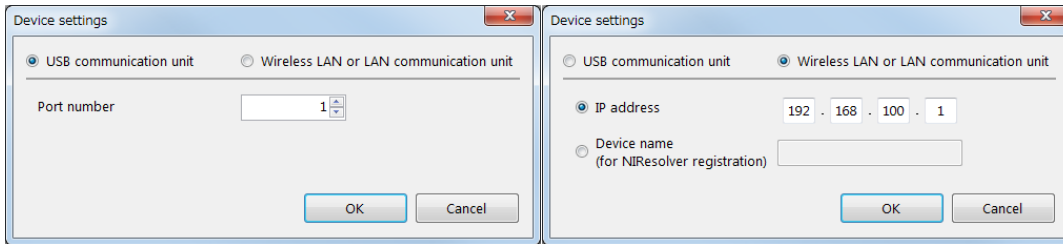

Note

- * Device name (for NIREsolver registration)

Register the device name that you have set on the "27.Comm Middleware" screen in the BT System Menu. If you are using a BT-W Series in a DHCP environment, you will have to install NIREsolver. For details, see ["4.2.9. Deploying PC Applications."](#)

- **"Edit" button**

The same dialog box as "Manual registration" is displayed. Use this dialog box to manually edit a USB port or an IP address of a registered device.

- **"Delete" button**

Delete the registered device.

- **"Check connection" button**

Check the connection to the selected device. For checking, BT-W Series need to be set to standby mode in the "6.File Transfer" in the BT System Menu or Receive File Tool.


Folder settings

Designiate a folder to contain files to be sent and those received from BT-W Series.

"Default settings" button

Resets the communication settings to their default values.

■ During Standby

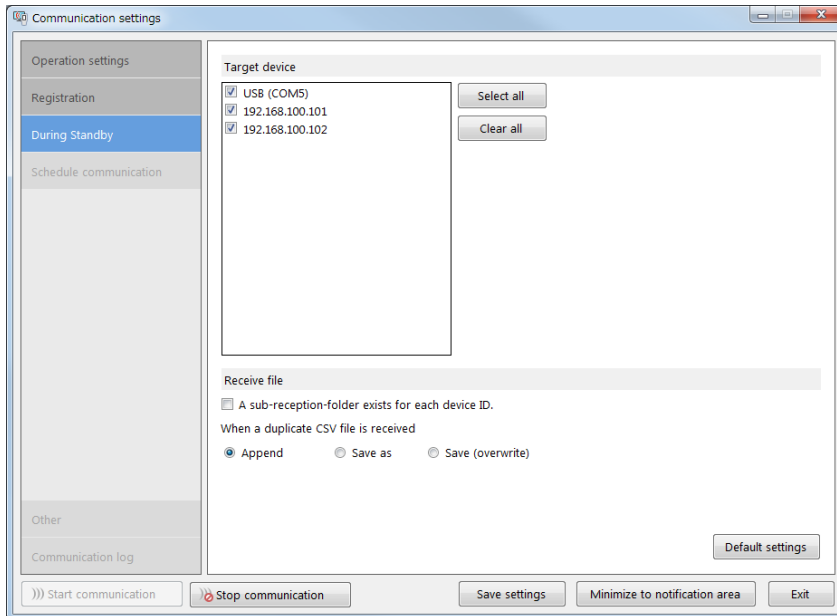

Target device

Check the boxes of the target devices to communicate with and receive files from.

- **"Select all" button**

Select all the check boxes of the USB ports and IP addresses displayed in the list.

- **"Clear all" button**

Clear all the check boxes of the USB ports and IP addresses displayed in the list.

Receive file

- **A sub-reception-folder exists for each device ID.**

When this box is checked, a folder with the device ID set on the BT-W Series will be created in the reception folder, and the received files will be saved in this created sub-folder. You can access these settings in "27.Comm Middleware" in the BT System Menu to set the device ID.

- **Operation when the same file is received**

Here a method is set to handle the instance when a received file has the same filename as an existing file in the reception folder.

[Options] Append | Save as | Save (overwrite)

Append ... Append the new data to the end of the existing file, and then save the updated file.

Save as ... Add a number to the end of the file name, and save the data as a new file.

For a file named "InventoryLog.csv," new files will be saved with the file name changed in order such as "InventoryLog~1.csv," "InventoryLog~2.csv," and "InventoryLog~3.csv."

Save (overwrite) ... Overwrites the existing file with the new received one.

"Default settings" button

Resets the communication settings to their default values.

■ Schedule communication

You can register up to three schedules. The following settings are required for each schedule.


"Execute immediately" button

Immediately execute the details set for the scheduled communication. This is useful when testing a schedule before the designated time occurs

"Default settings" button

Resets the schedule settings to their default values.

Processing details (Target device tab)

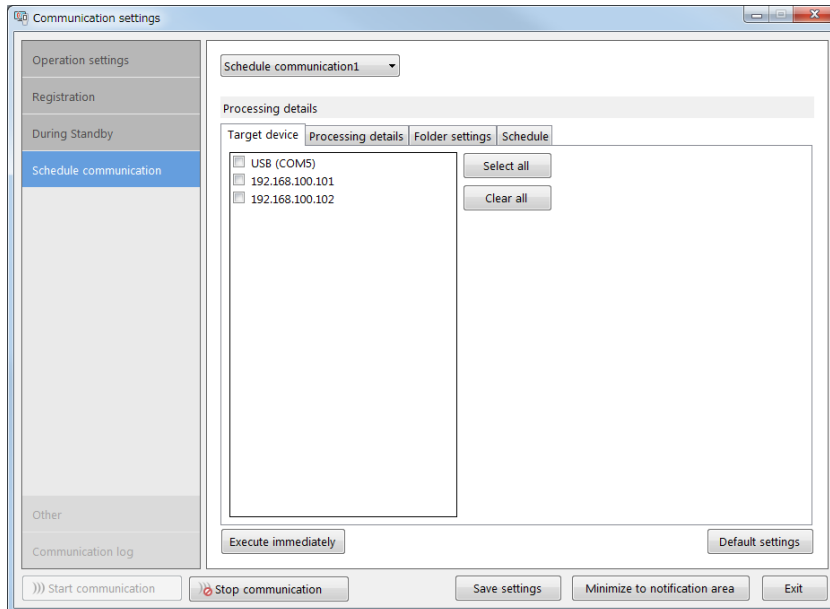

Select the check boxes corresponding to the target devices.


- **"Select all" button**

Select all the check boxes of the USB ports and IP addresses displayed in the list.

- **"Clear all" button**

Clear all the check boxes of the USB ports and IP addresses displayed in the list.


Processing details (Processing details tab)

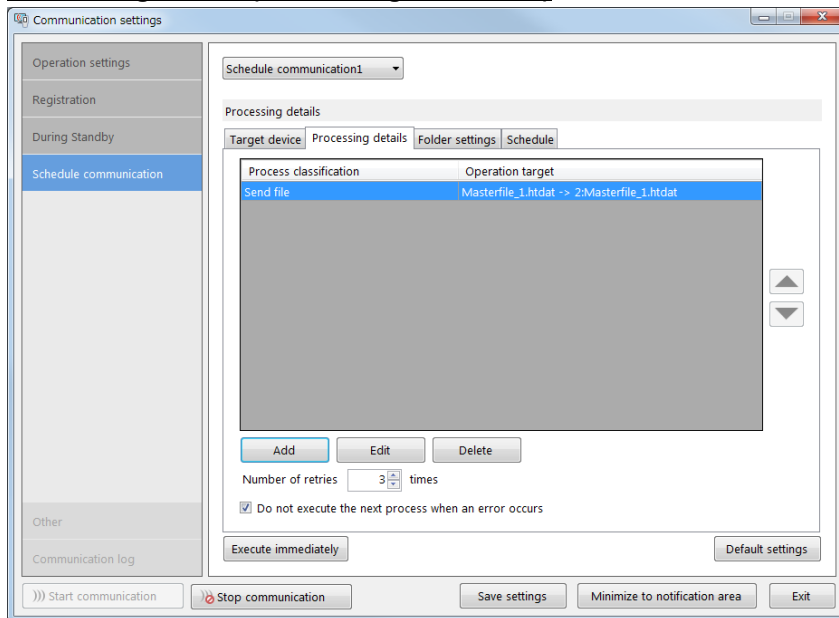

Set the processing details. You can register multiple processes. You can use the arrow buttons on the right side of the screen to change the order of the processes.

• "Add" button

Add processing details. Click "Add" to display the following dialog box.

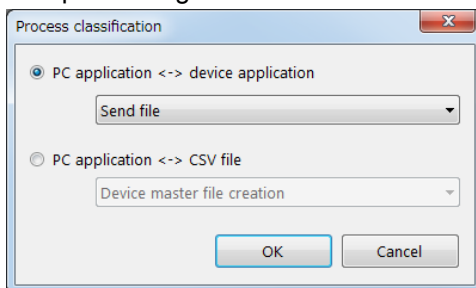

PC Application <-> Device Application

[Options] Send file | Receive file | Receive data file | File name change | Delete file | Send device master file |

Send the work list

Send file

... Send a file to the target BT-W Series.

Receive file

... Receive a file from the target BT-W Series.

Receive data file

... Receive all the data files saved on the target BT-W Series.

File name change


... Change the name of a file on target BT-W Series.

Delete file

... Delete a file on the target BT-W Series.

Send device master file

... Convert the CSV file placed in the send folder into the device master file, and then send this master file. You will have to establish the binding between the device master data and the CSV file in the dialog box (shown below) that is displayed after you select this item.

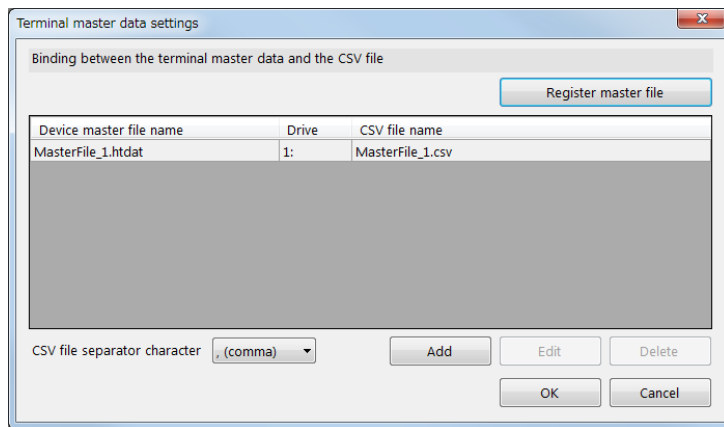

- **"Register master file" button**

Update the list of applicable files for converting to a device masterfile.

- **CSV file separator character**

Specify the delimiting character of the target data file for conversion to masterfile.

- **"Add" button**

Add a definition of a binding between device master data and a CSV file.

- **"Edit" button**


Edit the selected binding definition.

- **"Delete" button**

Delete the selected binding definition

Send Work List

... Convert the CSV file placed in the send folder and used in "[5.5.4. Master Check Control](#)" to the device masterfile and send this masterfile. You will have to establish the binding between the device master data and the CSV file in the dialog box (shown below) that is displayed after you select this item. This function is required for using "Reveive Master File".

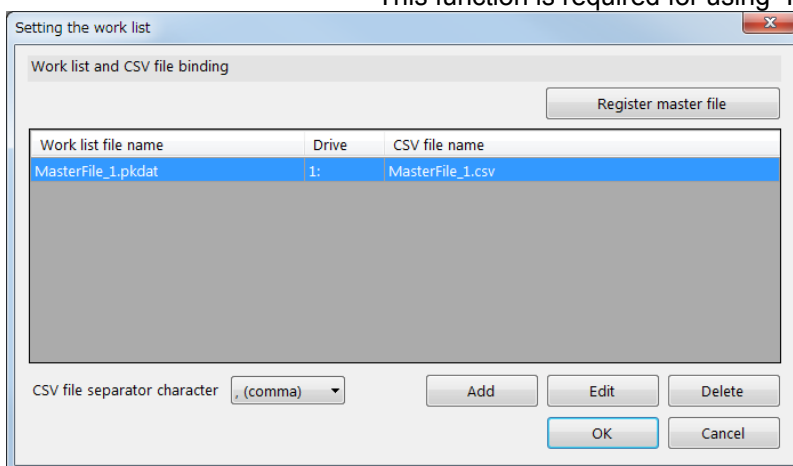

- **"Register master file" button**

Update the list of applicable files for converting to a device masterfile.

- **CSV file separator character**

Specify the delimiting character of the target data file for conversion to masterfile.

- **"Add" button**

Add a definition of a binding between device master data and a CSV file.

- **"Edit" button**

Edit the selected binding definition.


- **"Delete" button**

Delete the selected binding definition.

PC application <-> CSV file

[Options] Device master file creation | Management database output (CSV) | Management database reading (CSV) | Create the work list

Device master file creation ... Convert a CSV file in the 'send folder' to the masterfile for the device. After pressed, the masterfile is also created in the 'send folder.'
You will have to establish the binding between the device master data and the CSV file in the dialog box (shown below) that is displayed after you select this item.

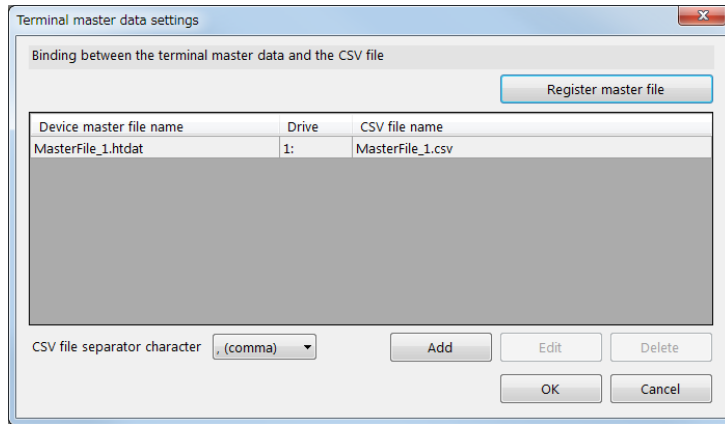


- **"Register master file" button**
Updates the list of applicable files for converting to a device masterfile.
- **CSV file separator character**
Specify the delimiting character of the target data file for conversion to masterfile.
- **"Add" button**
Add a definition of a binding between device master data and a CSV file.
- **"Edit" button**
Edit the selected binding definition.
- **"Delete" button**
Delete the selected binding definition.

Create the work list

... Convert a CSV file in the 'send folder' and used in "[5.5.4. Master Check Control](#)" to the masterfile for the device.

You will have to establish the binding between the device master data and the CSV file in the dialog box (shown below) that is displayed after you select this item.

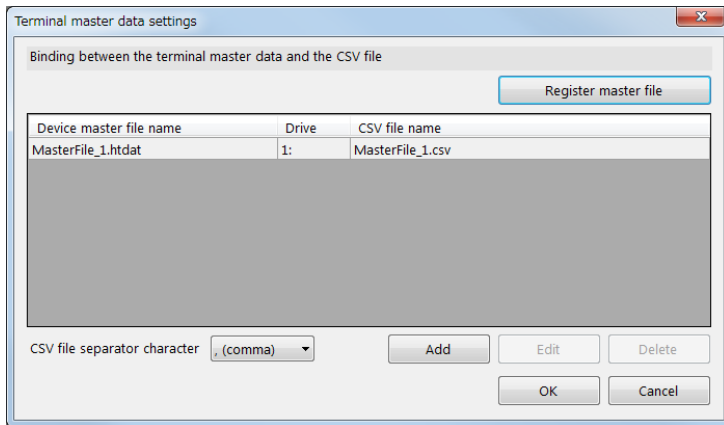

- **"Register master file" button**

Updates the list of applicable files for converting to a device masterfile.

- **CSV file separator character**

Specify the delimiting character of the target data file for conversion to masterfile.

- **"Add" button**

Add a definition of a binding between device master data and a CSV file.

- **"Edit" button**

Edit the selected binding definition.

- **"Delete" button**

Delete the selected binding definition.

Management database output (CSV) ... The data saved to the management database is output to the CSV file.

Management database reading (CSV) ... The management database is read from the CSV file.

Note

* When you are starting the communication software in a standalone manner, such as when you have selected "Output CSV file to PC" in "[4.2.6 Operation Settings](#)," you cannot select "Management database output (CSV)" or "Management database reading (CSV)."

- **"Edit" button**

Edit the selected processing details.

- **"Delete" button**

Delete the selected processing details.

- **Number of retries**

Set the number of retries when a communication error occurs.

[Setting range] 0 to 10 times

- **Do not execute the next process when an error occurs**

When you check this box, the subsequent process will be canceled when an error occurs. (This applies when multiple processing details have been set.)


Processing details (Schedule tab)

The screenshot shows a window titled 'Communication settings'. On the left is a sidebar with a list of settings: 'Operation settings', 'Registration', 'During Standby', 'Schedule communication' (highlighted in blue), 'Other', and 'Communication log'. The main area is titled 'Schedule communication1' and contains a 'Processing details' section with four tabs: 'Target device', 'Processing details', 'Folder settings', and 'Schedule' (which is active). Under the 'Schedule' tab, there are radio buttons for scheduling: 'None', 'Every hour' (selected), 'Day', 'Each week', and 'Each month'. To the right of these is a dropdown menu currently set to 'Every hour'. Below the radio buttons is a 'Start at' field with two spinners, both set to '0'. At the bottom of the main area are two buttons: 'Execute immediately' and 'Default settings'. The very bottom of the window has a row of five buttons: 'Start communication', 'Stop communication', 'Save settings', 'Minimize to notification area', and 'Exit'.

Set the schedule with which to execute processing. You can set to perform the processing once per hour, once per day, once per week, or once per month.

■ Other

* This screen is only enabled when you select the "Advance settings (for advanced users)" check box.

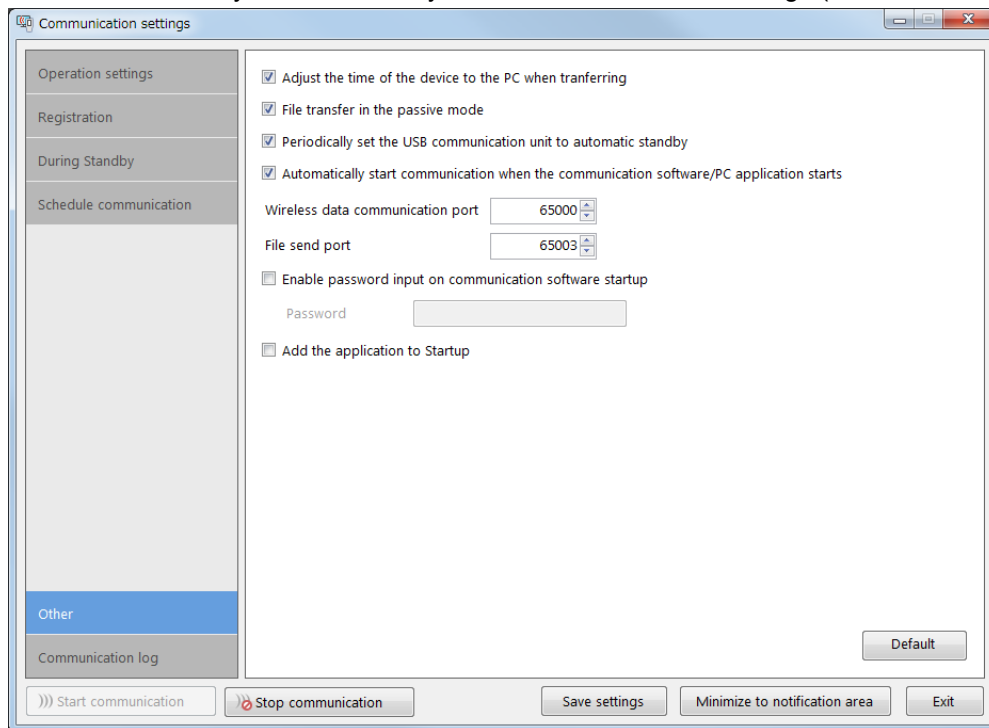

Adjust the time of device to the PC when transferring

Check this box to have the BT-W device's system time synced to the operation PC's during communication.

File transfer in the passive mode

Check this box to communicate in passive mode. Communication with BT-W device's applications created using the BT Application Design Tool is performed in passive mode, so it is recommended to only uncheck this option if necessary.

Periodically set the USB Communication Cradle to automatic standby

Check this box to periodically search for USB Communication Cradles. Even during communication, newly connected USB Communication Cradles are automatically registered and can be communicated with.

Automatically start communication when the communication software/PC application starts

Check this box to automatically start communication when the PC application starts. If you also register a shortcut to the PC application in the Windows startup, you can enable the communication standby state without performing any operations when the PC starts.

Wireless data communication port

Set the port to use in sending data over a wireless LAN.

[Setting range] 0 to 65535

File send port

Set the port to use in sending files through a LAN Communication Cradle or over a wireless LAN.

[Setting range] 0 to 65535

Enable password input on communication software startup

Check this box to enable the input of the password when the communication software starts and to set the password.

Add the application to startup


Check this box to register the communication software to the PC's startup processing. When you start the operation PC, the communication software will automatically start and be minimized in the notification area.

"Default" button

Return the settings on this screen to their default values.

■ Communication log

* This tab is only enabled when you select the "Advance settings (for advanced users)" check box.

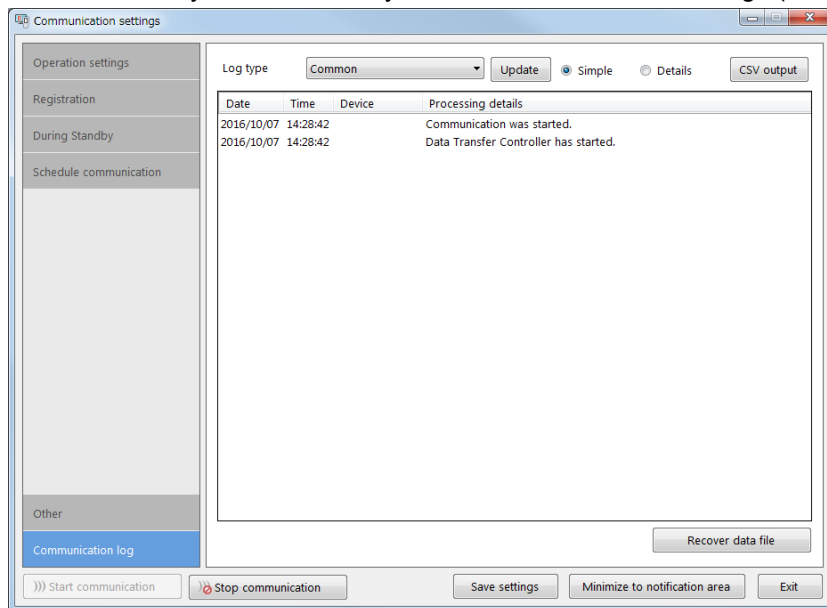

You can check the operation and communication histories of the communication software.

Log type

Select the type of log to display.

[Options] Common | File communication standby | Schedule communication | PC application error

"Update" button

Update the display of the log.

Display type

Select the type of log to display.

[Options] Simple | Details

"CSV output" button

Output the log details to a CSV file.


8. Template Usage Method

This chapter explains how to use templates.

8.1. PokaYoke

8.1.1. Device Application

■ Screen transitions

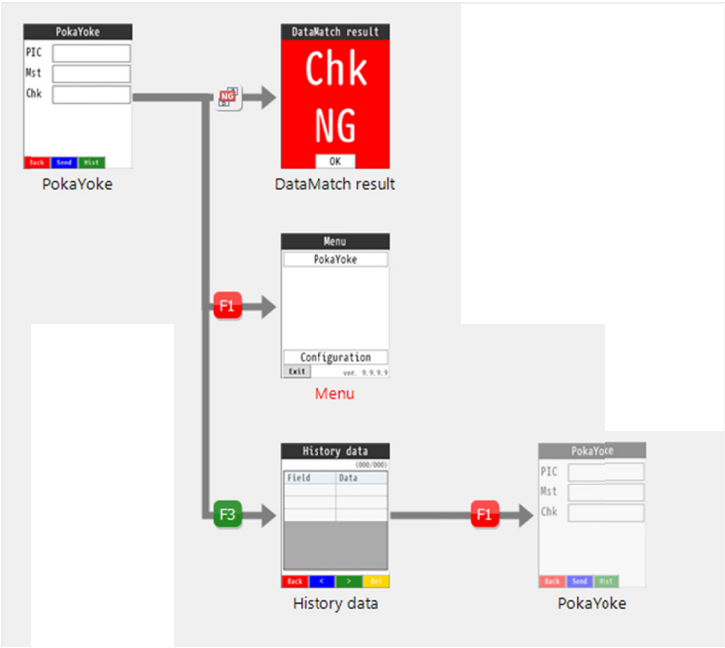

■ PokaYoke screen

PokaYoke	
PIC	123 (1)
Mst	123456789 (2)
Chk	123456789 (3)
Back Send Hist	

Enter values in the following order. After you enter (3), return to (2).

- (1) Enter the code of the person in charge.
- (2) Enter the code of the comparison target.
- (3) Enter the data and collate it against (2).
 - DataMatch OK ... Output the OK data and return to (2).
 - DataMatch NG ... Switch to the DataMatch NG screen.

- "Back" ... Return to the top menu.
- "Send" ... Send the data file.
- "Hist" ... Switch to the history data screen.


■ DataMatch NG screen



The colors on the screen are repeatedly inverted and, at the same time, the buzzer, vibrator, and LED also activate to alert the operator.

Tap "OK" to output the NG (failing) data and return to the PokaYoke screen.

■ History data screen

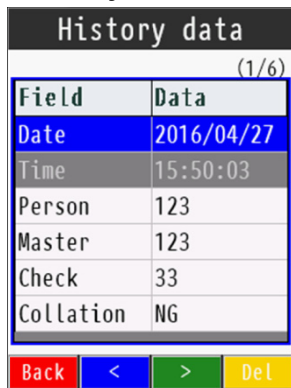

Field	Data
Date	2016/04/27
Time	15:50:03
Person	123
Master	123
Check	33
Collation	NG

You can check the history of the data that has been output.

You can select items in the table in the center of the screen by selecting it and pressing the ENT key. Select an item and press the ENT key to edit the "Data" value.

"Back" ... Return to the PokaYoke screen.

"<" ... Display the next history data entry.


">" ... Display the previous history data entry.

"Del" ... Delete the history data. You can select whether to delete one entry or all entries.

8.1.2. PC Application

To learn more about the basic usage of PC applications, see "[7.2. PC Application Usage Method.](#)"

■ Pokayoke PC application screen

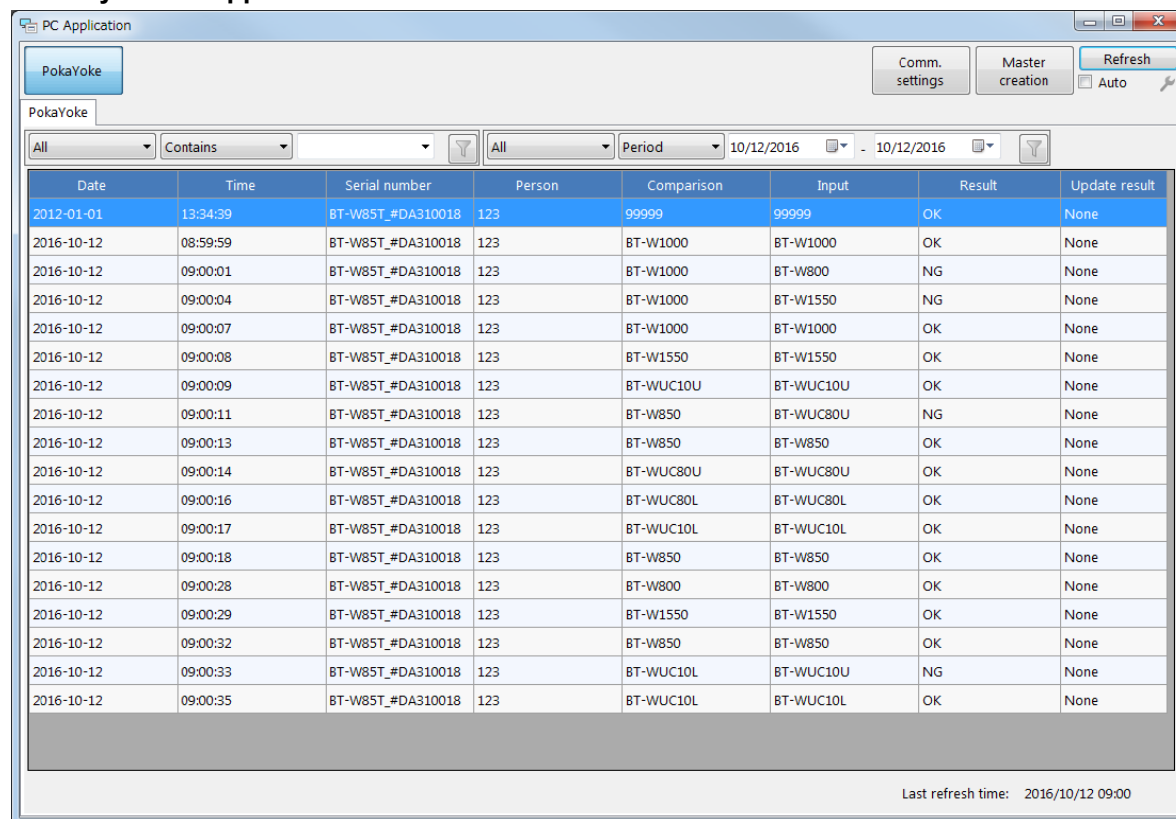

PC Application

PokaYoke

Comm. settings Master creation Refresh

Auto

All Contains All Period 10/12/2016 - 10/12/2016

Date	Time	Serial number	Person	Comparison	Input	Result	Update result
2012-01-01	13:34:39	BT-W85T_#DA310018	123	99999	99999	OK	None
2016-10-12	08:59:59	BT-W85T_#DA310018	123	BT-W1000	BT-W1000	OK	None
2016-10-12	09:00:01	BT-W85T_#DA310018	123	BT-W1000	BT-W800	NG	None
2016-10-12	09:00:04	BT-W85T_#DA310018	123	BT-W1000	BT-W1550	NG	None
2016-10-12	09:00:07	BT-W85T_#DA310018	123	BT-W1000	BT-W1000	OK	None
2016-10-12	09:00:08	BT-W85T_#DA310018	123	BT-W1550	BT-W1550	OK	None
2016-10-12	09:00:09	BT-W85T_#DA310018	123	BT-WUC10U	BT-WUC10U	OK	None
2016-10-12	09:00:11	BT-W85T_#DA310018	123	BT-W850	BT-WUC80U	NG	None
2016-10-12	09:00:13	BT-W85T_#DA310018	123	BT-W850	BT-W850	OK	None
2016-10-12	09:00:14	BT-W85T_#DA310018	123	BT-WUC80U	BT-WUC80U	OK	None
2016-10-12	09:00:16	BT-W85T_#DA310018	123	BT-WUC80L	BT-WUC80L	OK	None
2016-10-12	09:00:17	BT-W85T_#DA310018	123	BT-WUC10L	BT-WUC10L	OK	None
2016-10-12	09:00:18	BT-W85T_#DA310018	123	BT-W850	BT-W850	OK	None
2016-10-12	09:00:28	BT-W85T_#DA310018	123	BT-W800	BT-W800	OK	None
2016-10-12	09:00:29	BT-W85T_#DA310018	123	BT-W1550	BT-W1550	OK	None
2016-10-12	09:00:32	BT-W85T_#DA310018	123	BT-W850	BT-W850	OK	None
2016-10-12	09:00:33	BT-W85T_#DA310018	123	BT-WUC10L	BT-WUC10U	NG	None
2016-10-12	09:00:35	BT-W85T_#DA310018	123	BT-WUC10L	BT-WUC10L	OK	None


Last refresh time: 2016/10/12 09:00

The PC application is only showing the log database as the viewer. The data sent from the BT device application is accumulated.

8.2. Storage and Retrieval

8.2.1. Device Application

■ Screen transitions (storage)

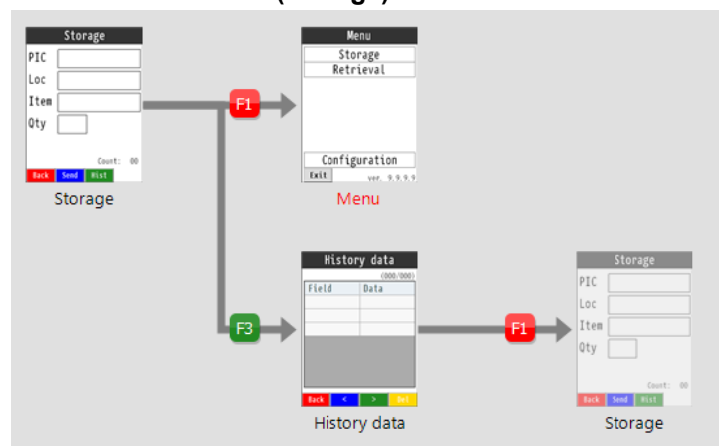

■ Storage screen

Storage	
PIC	123 (1)
Loc	11111 (2)
Item	123456789 (3)
Qty	1 (4)
Count: 1	
Back	Send Hist

Enter values in the following order. After you enter (4), return to (2).

- (1) Enter the code of the person in charge.
- (2) Enter the location code.
- (3) Enter the item code.
- (4) Enter the quantity.

"Back" ... Return to the top menu.

"Send" ... Send the data file.

"Hist" ... Switch to the history data screen.

■ History data screen

History data	
(1/1)	
Field	Data
Date	2016/04/27
Time	16:00:04
Person	123
Location	11111
ItemNo	123456789
Storage	1
Back	< > Del

You can check the history of the data that has been output.

You can select items in the table in the center of the screen by selecting it and pressing the ENT key. Select an item and press the ENT key to edit the "Data" value.


"Back" ... Return to the storage screen.

"<" ... Display the next history data entry.

">" ... Display the previous history data entry.

"Del" ... Delete the history data. You can select whether to delete one entry or all entries.

■ Screen transitions (retrieval)

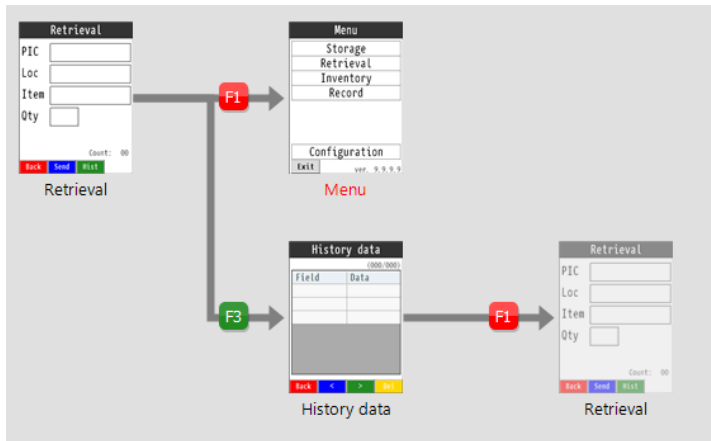

■ Retrieval screen

Retrieval	
PIC	123 (1)
Loc	11111 (2)
Item	123456789 (3)
Qty	1 (4)
Count: 1	
Back Send Hist	

Enter values in the following order. After you enter (4), return to (2).

- (1) Enter the code of the person in charge.
- (2) Enter the location code.
- (3) Enter the item code.
- (4) Enter the quantity.

"Back" ... Return to the top menu.

"Send" ... Send the data file.

"Hist" ... Switch to the history data screen.

■ History data screen

History data	
(1/1)	
Field	Data
Date	2016/04/27
Time	16:03:30
Person	123
Location	11111
ItemNo	123456789
Retrieval	1
Back < > Del	

You can check the history of the data that has been output. Select an item in the table to edit its "Data" value.

"Back" ... Return to the retrieval screen.

"<" ... Display the next history data entry.

">" ... Display the previous history data entry.

"Del" ... Delete the history data. You can select whether to delete one entry or all entries.

8.2.2. PC Application

To learn more about the basic usage of PC applications, see "[7.2. PC Application Usage Method.](#)"

■ Warehousing Inventory PC application screen

PC Application

Warehousing

Inventory management master Order list

All Contains CSV

Location

- All
- B-3
- A-1
- A-2
- B-1
- B-2

Location	Item number	Product name	Unit price	Inventory	Order point
A-1	BT-W1000	SAMPLE_1	310000	12	5
A-1	BT-W1550	SAMPLE_2	350000	17	5
A-1	BT-WUC10U	SAMPLE_3	60000	1	2
A-1	BT-WUC10L	SAMPLE_4	60000	5	3
A-2	BT-W800	SAMPLE_5	280000	6	3
A-2	BT-W850	SAMPLE_6	310000	12	5

Total count: 21 item(s) Total inventory value: 34,380,000 Last refresh time: 2016/10/12 09:12

Storage log Retrieval log

All Contains All Period 10/12/2016 - 10/12/2016 CSV

Date	Time	Serial number	Person	Location	Item number	Quantity	Update res
2016-10-12	09:05:24	BT-W85T_#DA310018	123	A-1	BT-W1000	1	OK
2016-10-12	09:05:30	BT-W85T_#DA310018	123	A-1	BT-W1550	2	OK
2016-10-12	09:05:33	BT-W85T_#DA310018	123	A-2	BT-W800	3	OK
2016-10-12	09:05:36	BT-W85T_#DA310018	123	A-2	BT-W850	2	OK
2016-10-12	09:11:51	BT-W85T_#DA310018	123	A-1	BT-W1000	1	OK

Last refresh time: 2016/10/12 09:12

Storage log

This log contains the data obtained in the Storage application.

Retrieval log

This log contains the data obtained in the Retrieval application.

Order list

This tab displays data from the inventory management master in an order list. The data that is displayed is that whose stock quantity is less than the order point.

"CSV output" button

Output the management database details to a CSV file. The CSV file is saved in the following folder: "PC Application Start Folder" > "PC" > "Export."

NOTE


*** Method for importing the CSV file into the inventory management master**

Place the file "DepositoryMaster.csv" in the following folder: "PC Application Start Folder" > "PC" > "Import." Then, click "Refresh" to apply this file to the "Inventory management master" sheet.

8.3. Inventory

8.3.1. Device Application

■ Screen transitions

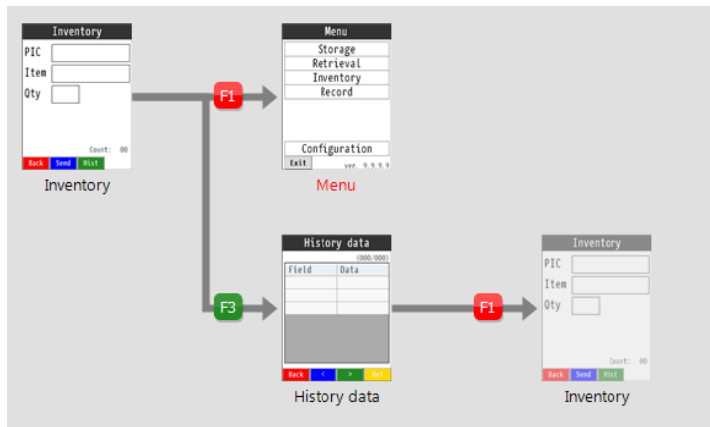

■ Inventory screen

Inventory	
PIC	123 (1)
Item	123456789 (2)
Qty	1 (3)
Count: 1	
Back Send Hist	

Enter values in the following order. After you enter (3), return to (2).

(1) Enter the code of the person in charge.

(2) Enter the item code.

(3) Enter the quantity.

"Back" ... Return to the top menu.

"Send" ... Send the data file.

"Hist" ... Switch to the history data screen.

■ History data screen

History data	
(1/1)	
Field	Data
Date	2016/04/27
Time	16:13:33
Person	123
ItemNo	123456789
Quantity	1
Back < > Del	

You can check the history of the data that has been output.

You can select items in the table in the center of the screen by selecting it and pressing the ENT key. Select an item and press the ENT key to edit the "Data" value.

"Back" ... Return to the inventory screen.

"<" ... Display the next history data entry.

">" ... Display the previous history data entry.

"Del" ... Delete the history data. You can select whether to delete one entry or all entries.

Increment function

During quantity input, the quantity will be automatically incremented when the same barcode data is read.

Quantity input skip function

During quantity input, the quantity input will be skipped when barcode data that differs from that read previously is read.

8.3.2. PC Application

To learn more about the basic usage of PC applications, see "[7.2. PC Application Usage Method.](#)"

■ Inventory PC application screen

Item number	Product name	Unit price	Theoretical Qty	Actual Qty	2016/10/11	(Difference)	Inventory result2
BT-W1000	SAMPLE_1	310000	10	0	10	0	
BT-W1550	SAMPLE_2	350000	5	0	5	-10	
BT-WUC10U	SAMPLE_3	60000	3	0	3	2	
BT-WUC10L	SAMPLE_4	60000	5	0	5	0	

Date	Time	Serial number	Person	Item number	Quantity	Update r
2016-10-11	18:49:45	00000	123	BT-W1550	5	OK
2016-10-11	18:49:56	00000	123	BT-WUC10U	3	OK
2016-10-11	18:49:59	00000	123	BT-WUC10L	5	OK

"AdjustInventory" button

Record in the management database the results of comparing the theoretical inventory against the actual inventory and apply the actual inventory counts to the theoretical inventory.

"Clear" button

Delete the actual inventory.

"CSV output" button

Output the management database details to a CSV file. The CSV file is saved in the following folder: "PC Application Start Folder" > "PC" > "Export."

NOTE


*** Method for importing the CSV file into the inventory management master**

Place the file "InventoryMaster.csv" in the following folder: "PC Application Start Folder" > "PC" > "Import." Then, click "Refresh" to apply this file to the "Inventory management master" sheet.

8.4. Record

8.4.1. Device Application

■ Screen transitions

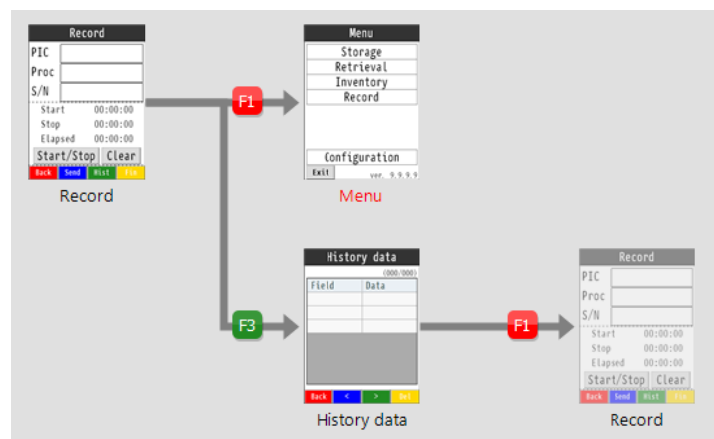

■ Record screen

Record	
PIC	123 (1)
Proc	111 (2)
S/N	123456789 (3)
Start	16:16:52
Stop	16:17:03
Elapsed	00:00:11 (4)
Start/Stop Clear	
Back	Send Hist Fin (5)

Enter values in the following order. After you enter (5), return to (2).

- (1) Enter the code of the person in charge.
- (2) Enter the process number.
- (3) Enter the product number.
- (4) Start/stop the stop watch.
- (5) Use the F4 key or the finalize button to output the data.

"Back" ... Return to the top menu.

"Send" ... Send the data file.

"Hist" ... Switch to the history data screen.

"Fin" ... Finalize the screen details and output the data.

"Clear" ... Clear the display data of the stop watch.

■ History data screen

History data	
(1/1)	
Field	Data
Date	2016/04/27
Time	16:16:44
Person	123
ProcessNo	111
SerialNo	123456789
Start Time	16:16:39
Back < > Del	

You can check the history of the data that has been output.

You can select items in the table in the center of the screen by selecting it and pressing the ENT key. Select an item and press the ENT key to edit the "Data" value.

"Back" ... Return to the record screen.

"<" ... Display the next history data entry.

">" ... Display the previous history data entry.

"Del" ... Delete the history data. You can select whether to delete one or all entries.

8.4.2. PC Application

To learn more about the basic usage of PC applications, see "[7.2. PC Application Usage Method.](#)"

■ Process Record PC application screen

Date	Time	Serial number	Person	Process number	Item number	Start time	Stop time	Elapsed time	U
2016-10-12	10:11:09	BT-W85T_#DA31...	0001	A-1	11111	10:10:51	10:11:03	00:00:12	N
2016-10-12	10:12:40	BT-W85T_#DA31...	0001	A-1	11111	10:12:20	10:12:37	00:00:17	N
2016-10-12	10:13:00	BT-W85T_#DA31...	0001	A-1	22222	10:12:48	10:12:59	00:00:11	N
2016-10-12	10:13:15	BT-W85T_#DA31...	0001	A-1	33333	10:13:05	10:13:14	00:00:09	N
2016-10-12	10:13:30	BT-W85T_#DA31...	0001	A-2	44444	10:13:22	10:13:30	00:00:08	N
2016-10-12	10:13:53	BT-W85T_#DA31...	0001	A-2	55555	10:13:36	10:13:51	00:00:15	N
2016-10-12	10:14:06	BT-W85T_#DA31...	0001	A-1	66666	10:13:58	10:14:06	00:00:08	N
2016-10-12	10:14:20	BT-W85T_#DA31...	0001	A-1	77777	10:14:13	10:14:20	00:00:07	N
2016-10-12	10:14:38	BT-W85T_#DA31...	0001	A-2	88888	10:14:30	10:14:37	00:00:07	N
2016-10-12	10:14:47	BT-W85T_#DA31...	0001	A-2	99999	10:14:45	10:14:46	00:00:01	N


Last refresh time: 2016/10/12 10:14

The PC application is only showing the log database as the viewer. The data sent from the BT device application is accumulated.

8.5. Picking

8.5.1. Device Application

■ Screen transitions (picking)

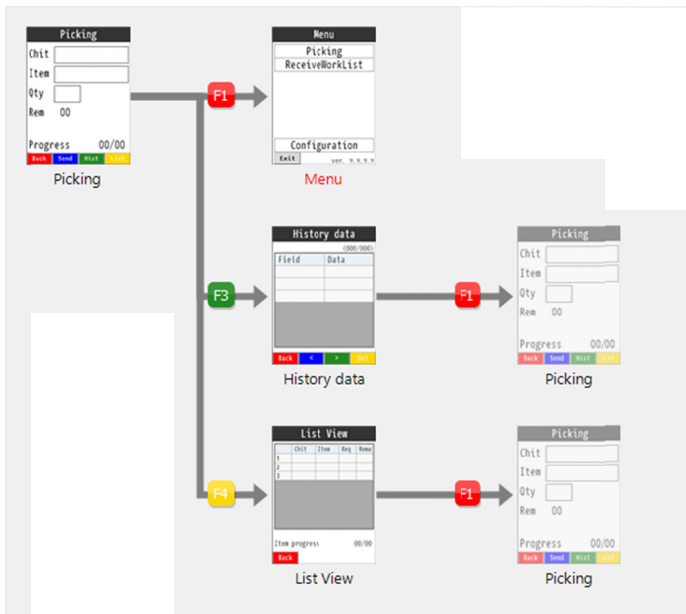

■ Picking screen

Picking	
Slip	
Item	
Qty	
Rem	00
Progress 00/00	
Back	Send Hist List

Enter values in the following order. Check the master file within the BT-W Series against the input data to perform the picking operation After you enter (3), return to (2).

- (1) Enter the slop code.
- (2) Enter the item code.
- (3) Enter the quantity.

"Back" ... Return to the top menu.

"Send". ... Send the data file.

"Hist" ... Switch to the history data screen.

"List" ... Switch to the item list view screen.

■ History data screen

History data	
(000/000)	
Field	Data
Back	< > Del

You can check the history of the data that has been output.

You can select items in the table in the center of the screen by selecting it and pressing the ENT key. Select an item and press the ENT key to edit the "Data" value.

"Back" ... Return to the picking screen.

"<" ... Display the next history data entry.

">" ... Display the previous history data entry.

"Del" ... Delete the history data. You can select whether to delete one entry or all entries.

■ List View screen

List View

	Slip	Item	Req	Rema
1				
2				
3				


Item progress00/00

Back

This screen displays a list of the master file data.
You can check information such as the remaining picking operations and the count of these operations.

"Back" ... Return to the picking screen.

■ Screen transitions (receive work list)

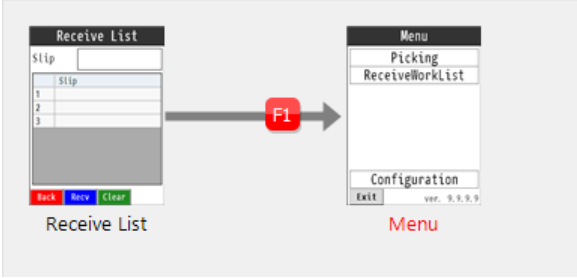

■ Receive List screen

Receive List

Slip

	Slip
1	
2	
3	

BackRecvClear

You can receive the master file that has been set with the master collation part.

You can load a chit number to narrow down the picking list to operate.

- "Back" ... Return to the picking screen.
- "Recv" ... Receive a picking list that has been narrowed down with a slip number.
If you tap this button without loading a chit number, the picking list will be received without being narrowed down.
- "Clear" ... Delete the list of chit numbers.

8.5.2. PC Application

To learn more about the basic usage of PC applications, see "[7.2. PC Application Usage Method.](#)"

■ Picking PC application screen

PC Application

Picking

Comm. settings Master creation Refresh Auto

Order count 6 24
Remaining count 6 22

Slip number

Slip number	Item number	Order count	Input count	Remaining count
11111	12345	1	1	0
11111	23456	5	5	0
11111	34567	10	5	5
11111	45678	20	15	5

Picking log

Date	Time	Serial number	Slip number	Item number	Quantity	Update r
2016-10-12	10:29:11	BT-W85T_#DA310018	11111	12345	1	OK
2016-10-12	10:29:14	BT-W85T_#DA310018	11111	23456	5	OK
2016-10-12	10:29:17	BT-W85T_#DA310018	11111	34567	5	OK
2016-10-12	10:29:20	BT-W85T_#DA310018	11111	45678	15	OK

Last refresh time: 2016/10/12 10:29

"Progress" window

The number of ordered and completed slips and items are displayed to enable you to check the progress of the work.

"Progress" bar

The item count work progress status is displayed with a progress bar.

"Master creation" button

Converts the CSV file in the send folder set with the communication software into a master file to use with the BT device. Perform this operation before receiving the work list in the BT device application.

* For details, see "[7.3. Operation Communication Software.](#)"

NOTE

*** Method for importing the CSV file into the picking master**

Place the file "Picking Master.csv" in the following folder: "PC Application Start Folder" > "PC" > "Import." Then, click "Refresh" to apply this file to the picking table.

"Print" button

Create and print a picking order slip for each slip number.

Page.1

Slip



Slip number : 11111

Item number	Order count	Input count	Remaining count
 12345	1	1	0
 23456	5	5	0
 34567	10	5	5
 45678	20	15	5


9. Technical Tips

9.1. Custom Mode

This mode is used to develop programs by outputting code with BT Application Design Tool. You can enable custom mode separately for BT device applications and PC applications. This section explains the operation method when this mode is enabled in ["4.2.10 Options."](#)


■ Screen changes

If you enable custom mode in ["4.2.10 Options,"](#) "(Custom Mode)" is added to the titles for device applications and PC applications.

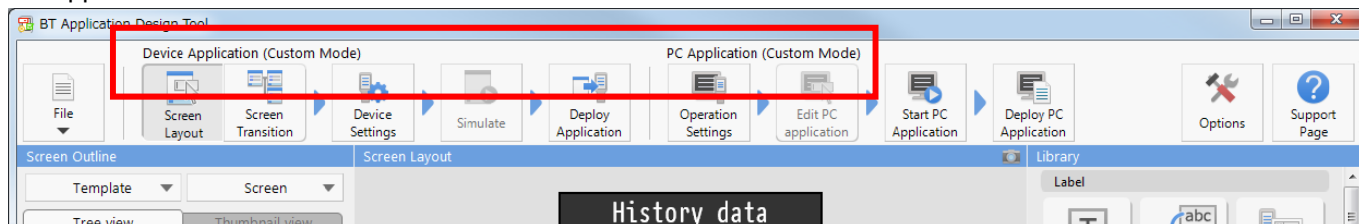

■ File menu changes

If you enable custom mode in ["4.2.10 Options,"](#) the menu that is displayed when you click "File" changes as shown below.

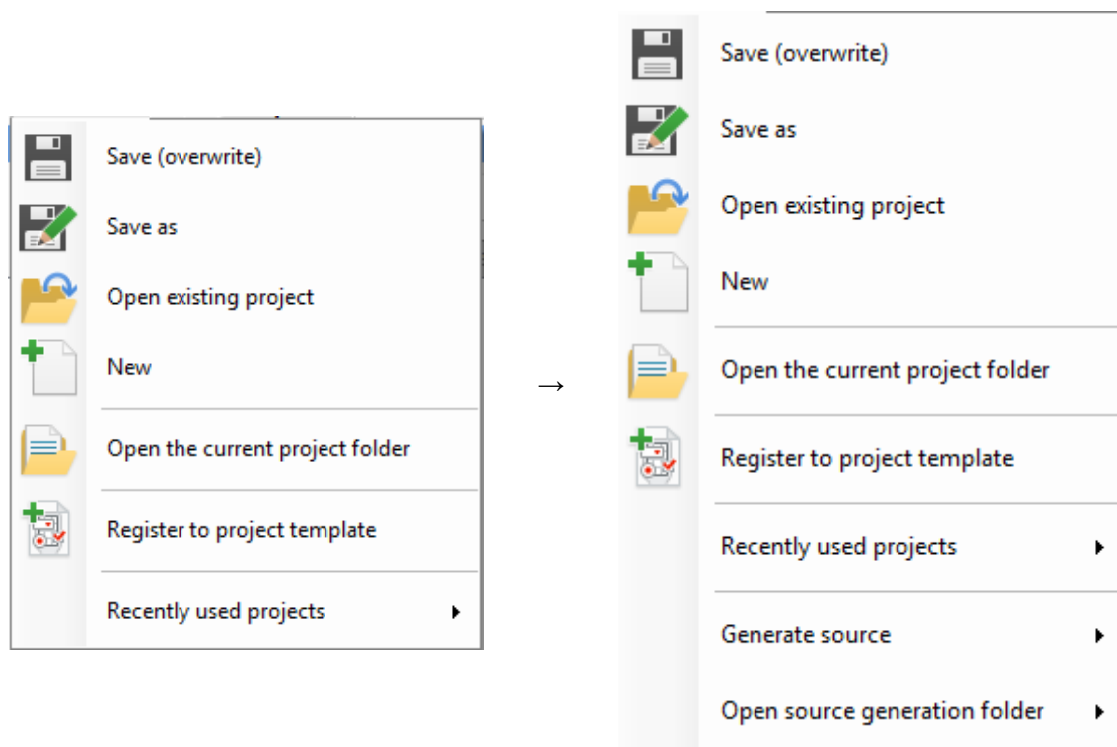

Generate source

Generates the source code of the device and PC applications in the programming language selected in "[4.2.10 Options](#)."

Open source generation folder

Opens the folder in which the source code generated with "Generate source" is saved.

■ About compiling

Device applications are compiled when you click "Simulate" or "Deploy Application." PC applications are compiled when you click "Start PC Application" or "Deploy PC Application."

■ Note

- If you convert a project into a program in custom mode, you will have to develop it entirely as a program.
You will no longer be able to return to the screen editing and PC application editing of BT Application Design Tool.
- During custom mode, any setting changes that you make with "Screen Layout" for a device application and with "Edit PC application" for a PC application will not be applied to the application.
- If you execute the "Generate source" function while changing a program in custom mode, the program being changed will be overwritten.
Exercise caution to avoid executing this function by mistake.

*** About simulations**

Use an actual device to check the operation. When you select "Keyence Script," you can use simulations to check the operations.

*** About program development**

For information on how to write code in Microsoft Visual Basic .NET, see sources such as general publications and the web.

9.2. Configuration Procedures according to Operation Situations

9.2.1. Automatically Updating the Device Master File

When updating the master file, which is used in sections such as "[5.5.3. Search/View Control](#)," you have to use the operation PC to convert the CSV file to a master file for use on the device in advance. To execute this conversion, you have to manually click the "Device master file" button in the communication software. Use the scheduled communication function of the communication software to automatically update the master file.

■ Configuration procedure

- (1) In the communication software, select "Standby for communication from device and start communication from the PC application on the specified date and time." for "Operation method selection."
- (2) On the "Processing details" tab of the "Schedule communication" screen, select "Device master file creation."
- (3) Specify the destination where the master file will be saved and the schedule to complete the configuration.

* For details on the configuration procedure, see "[7.3. Operation Communication Software](#)."

9.2.2. Operation Using Wakeup Mode

It is most common to send files from the BT device to the PC and to receive files from the PC to the BT device. However, you can also reverse these operations. In this situation, use wakeup mode.

■ BT device application configuration procedure

- (1) In "[4.2.3 Device Settings](#)," set "Power Off Mode" to "Wakeup mode" and select a communication path for "Wakeup mode communication path."
- (2) In "[4.2.5 Deploy Applications](#)," select "Restart the device after sending device settings/device application."

■ PC application configuration procedure

- (1) In the communication software, select "Standby for communication from device and start communication from the PC application on the specified date and time." for "Operation method selection."
- (2) On the "Processing details" tab of the "Schedule communication" screen, select "Send file" or "Receive file."
- (3) Specify the destination where the file will be saved and the schedule to complete the configuration.

- * Wakeup mode is only valid when wakeup mode is enabled, the device is off, and the device is charging in a communication cradle. When a wireless LAN is being used for the communication path, the wireless LAN must also be open in addition to the above conditions.
- * It may take approximately 1 minute for wakeup mode to be enabled after a device is placed in a communication cradle.