WASHER GUIDE

How to Use the Washer

Whirlpool Model (to confirm)

IMPORTANT

- Never wash anything dampened with gasoline, dry-cleaning solvents or other flammable fluids. No washer can completely remove oil. Fire or explosion risk.
- Use only HE (High Efficiency) detergent. Regular detergent makes too many suds and can cause errors, leaks, long cycles and mould.
- Do not reach in while the drum is moving. Do not let children play on or in the washer.
- Do not keep laundry products on top of the washer. Do not plug it into an extension cord or adapter.

Get the load ready

1. Sort laundry: darks apart from lights, very dirty items apart from lightly dirty ones. Keep towels away from corduroy and synthetics, which pick up lint.
2. Empty pockets: coins and small items can block the pump. Close zippers, snaps and hooks, tie strings, and turn knits inside out.

3 Load the drum full but not packed tight: the door must close easily. Mix large and small items and avoid washing a single item. Put small items like baby socks in mesh bags (use more than one bag, filled evenly).

Loading suggestions	
Heavy Work Clothes	
2 pair pants	3 pair jeans
3 shirts	1 coverall
Mixed Load	
2 double sheets or 1 king size sheet(s)	6 pair shorts
4 pillowcases	2 shirts
6 T-shirts	2 blouses
	6 handkerchiefs
Towels	
8 bath towels	10 washcloths
8 hand towels	1 bath mat
Delicates	
3 camisoles	2 bras
4 slips	2 nighties
4 panties	

From the manufacturer's manual, page 15. Examples of a full load from the manual.

4 Close the door by pushing it firmly until the lock clicks.


Add detergent and other products

1 Use only detergent marked HE or High Efficiency. Follow the detergent label for how much to use: too much causes suds and leaks.



From the manufacturer's manual, page 11.

2. Pull out the dispenser drawer. Put HE detergent (liquid or powder) in the Main Wash compartment (B). Colour-safe bleach or oxi products can go in with it. Do not mix powder and liquid.

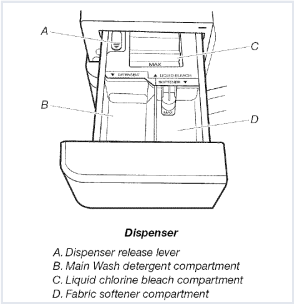

From the manufacturer's manual, page 12.


3. If you want: liquid chlorine bleach in (C), no more than 2/3 cup (160 mL) and not past MAX. Only liquid chlorine bleach goes here. Measure it with a cup: do not guess.

4. If you want: liquid fabric softener in (D), not past MAX. Do not use fabric softener balls.

5. Push the drawer in slowly and completely so nothing spills. Never pour products straight onto the clothes. A little water left in the drawer after a wash is normal.


Choose a cycle and start

1. The control panel. Press POWER to turn the washer on.

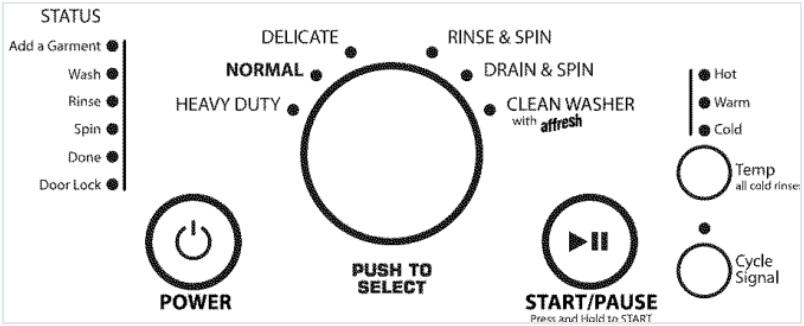

From the manufacturer's manual, page 11. Check that the buttons match your washer.


2 Push the cycle selector until the light for the cycle you want comes on. Normal (about 1 hr 12 min): everyday cottons, sheets, casual and no-iron clothes. Heavy Duty (about 1 hr 22 min): sturdy, very dirty items like jeans and work clothes. Delicate (about 37 min): sheer fabrics and lingerie, in mesh bags, small loads only.

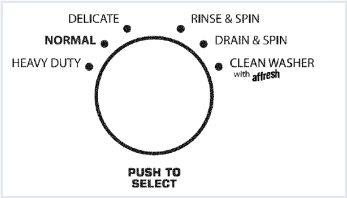

From the manufacturer's manual, page 13.

3 Rinse & Spin: rinse only, or to add fabric softener to a load. Drain & Spin: empties the water and spins. Clean Washer with affresh: the monthly cleaning cycle (see Washer Care), with an empty drum only.

4 Press TEMP to change the wash temperature. Hot: whites and heavy dirt. Warm: bright colours and medium dirt. Cold: colours that run or fade, and light dirt. Follow the care labels. Rinses are always cold.

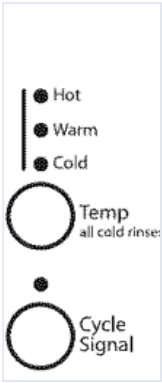

From the manufacturer's manual, page 11.

5 If you want a beep when the wash ends, press and hold CYCLE SIGNAL to turn it on or off. If a button gives a short tone and its light does not come on, that option is not available for that cycle.


6. Press and hold START/PAUSE for about 3 seconds. You will hear the door lock, unlock and lock again: this is normal. If you do not press START/PAUSE within 5 minutes, the washer turns off.



From the manufacturer's manual, page 11.

During the wash

1. The Status lights show what the washer is doing: Wash, Rinse, Spin, then Done. Door Lock means the door cannot be opened.

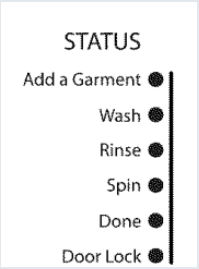


From the manufacturer's manual, page 13.

2. To add an item: while the Add a Garment light is on (about the first 7 minutes), press START/PAUSE once. The door unlocks. Add the item, close the door and hold START/PAUSE for 3 seconds. Not possible on Rinse & Spin, Drain & Spin or Clean Washer.

3. To pause, press START/PAUSE. To continue, press and hold it for 3 seconds.

4. To change the temperature after starting: press START/PAUSE once, press TEMP, then hold START/PAUSE for 3 seconds.

5. To cancel, press POWER. The door unlocks. If the water is high or hot, the washer drains first.

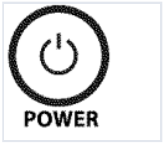


From the manufacturer's manual, page 11.

6. Pauses, clicks, water splashing and some vibration are normal. The washer uses little water, so you may see little water in the drum.

When it finishes

1. When the Done light comes on, the door unlocks. Take the laundry out straight away: metal zippers and buckles can rust and colours can transfer.

2. Check under the rubber seal at the front of the drum for small items.

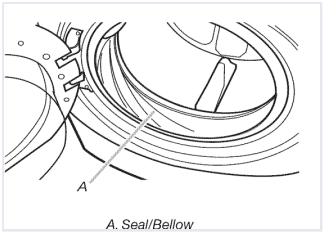

A. Seal/Bellow

From the manufacturer's manual, page 17.

3. Do not put stained clothes in the dryer: heat can set the stain. Wash them again first.

4. Leave the door slightly open so the drum dries. Open and close the door before you start the next load.

Stains (from the manual's stain guide)

1. Ink, grass, tomato: bleach that suits the fabric, Heavy Duty. Coffee, chocolate, mud: bleach that suits the fabric, Warm, Heavy Duty. Blood: bleach that suits the fabric, Cold or Warm, Normal. Collar rings: bleach that suits the fabric, Normal.

2. Make-up and deodorant: Heavy Duty. Dirty motor oil: Warm, Heavy Duty (never wash items soaked in fuel or solvents). Wash stained items soon for best results.

STOP AND CONTACT PROPERTY MANAGEMENT

- Water leaks from the washer, the hoses or the door, or water backs up out of the drain or sink.
- The Wash light keeps flashing after you restart (an error code), or the washer will not fill or drain.
- A burning smell, smoke, or a loud grinding or banging noise. Press POWER and do not use the washer.
- The washer does not turn on, or the breaker or fuse for it trips again.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10307859B (Use & Care Guide) for this Whirlpool front-loading washer. Pictures are taken from that manual. Updated 20 October 2026.