DRYER GUIDE

# Dryer Care


LG Model DLEX5500V (to confirm)

**IMPORTANT**

- Unplug the dryer before cleaning. Turning it off is not enough. Pull the plug, not the cord, and do not touch it with wet hands.
- Never use harsh chemicals, solvents, methylated spirits, steel wool or scouring pads. They damage the dryer.
- Never run the dryer without the lint filter in place. Do not take any part of the dryer apart.


## Before or after every load

1. Open the door and pull the lint filter (1) straight up.

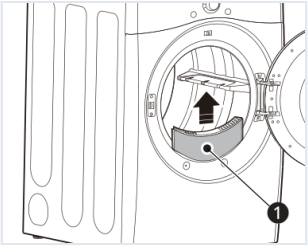



From the manufacturer's manual, page 50.

2. Roll the lint off with your fingers.

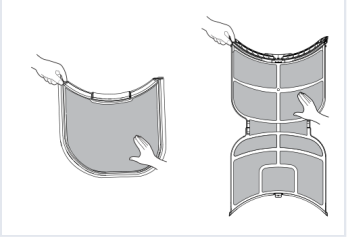

From the manufacturer's manual, page 50.

3. Or vacuum the filter. Push it back down firmly until it clicks.

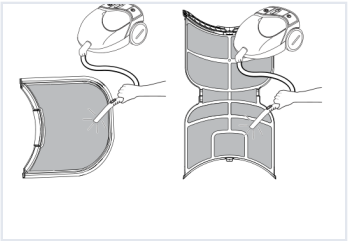


From the manufacturer's manual, page 50.

4. Loads with lots of lint, like new towels, can fill the filter during the cycle. Pause the dryer, clean the filter, then press Start/Pause again.

5. Take laundry out as soon as the cycle ends. Clothes left inside can wrinkle and smell.

## Once a month

1. Hold the clean filter up to a light. If you cannot see through it, it is clogged (often from fabric softener sheets). Wash it in warm soapy water, then let it dry fully before you put it back.

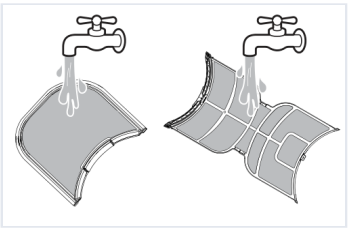

From the manufacturer's manual, page 51.

2. Wipe the door opening and the seal with a soft damp cloth. Lint and dust there can damage the seal.

3. Clean the door window with a soft cloth, warm water and a little mild detergent, then wipe dry.

4. Vacuum lint and dust from around and under the dryer.

## When needed

1. Wipe spills on the outside straight away with a soft damp cloth. Clean the outside with warm water and a mild household detergent.
2. The steel drum can be cleaned with a stainless steel cleaner, used as its label says. Never use abrasive cleaners in the drum.
3. Keep the area around the dryer clear of lint, paper, rags, chemicals and anything that can burn. Do not put anything on top of the dryer while it runs.

**STOP AND CONTACT PROPERTY MANAGEMENT**

- The lint filter is damaged, loose or missing.
- Drying takes longer than usual, or the Flow Sense light shows, even with a clean filter. The manual says the vent duct should be checked for lint every month and cleaned at least once a year by a qualified technician.
- The power cord or plug is damaged, cracked or hot.
- The dryer needs to be moved, levelled, or connected to water for steam: this is done by a technician.
- You smell burning or chemicals, see smoke or hear a strange sound: press Power, unplug the dryer if you can reach the plug safely, and do not use it again.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual for LG Model DLEX5500V (to confirm). Pictures are taken from that manual or are photos of this appliance. Updated 20 October 2026.