WASHER GUIDE

Washer Care

LG Model WM5500HVA

IMPORTANT

- Unplug the washer before cleaning it. Turning it off with the Power button does not disconnect it. Never spray water inside the washer: fire or electric shock risk.
- Never clean it with solvents (benzene, thinner, alcohol, acetone), abrasive cleaners, steel wool or strong chemicals.
- Never mix chlorine bleach with ammonia or acids such as vinegar: it makes poisonous gas.
- Do not spill or leave detergent or bleach on top of the washer: it can damage the surface.

After every wash

1. Take the laundry out straight away. Wipe the door glass and the inside of the door seal (8) dry.



From the manufacturer's manual, page 7. Your washer may look slightly different.

2. Leave the door open (overnight is best) so the drum can dry. This prevents smells. Make sure children and pets cannot climb in.

3. Do not leave water, bleach or other liquids sitting in the drum. They can cause rust, mould and smells.
4. Wipe the outside with a dry or damp cloth, and wipe spills straight away. Do not touch the display with sharp objects.


Clean the drum (once a month)

1. Run Tub Clean every month, and more often if the washer is used a lot. If it already smells musty, run it once a week for three weeks.
2. Take everything out of the drum. Never put laundry in during this cycle.
3. If you use a cleaner: drum cleaner or limescale remover goes in the main detergent compartment, liquid chlorine bleach in the bleach compartment, cleaning tablets straight in the drum. For powder cleaner, first take out the liquid detergent insert. Do not fill past the MAX line.
4. Close the door, press Power, select Tub Clean and press Start/Pause.
5. When it ends, leave the door open so the drum dries completely. If you used a drum cleaner or descaler, run Rinse+Spin before your next wash.
6. White mineral spots on the drum (hard water): wipe with a soft cloth and stainless steel cleaner. After using a descaler, run Tub Clean before washing clothes.

Clean the detergent drawer (once or twice a month)

1. Turn off the washer and unplug it. Pull the drawer straight out until it stops.


2. Press down hard on the release button (1) and pull the drawer all the way out. Take out the inserts.

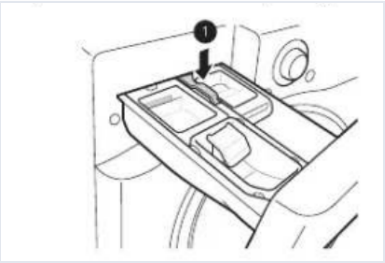

From the manufacturer's manual, page 25.

3. Clean the drawer and inserts with warm water and a soft cloth or brush. No soap. Dry them with a towel.

4. Clean the drawer opening, top and bottom, with a small non-metal brush. Then slide the drawer back in.

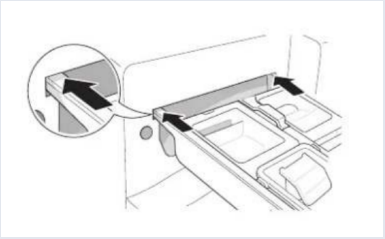

From the manufacturer's manual, page 26.

Clean the door seal (once a month)


1. Wear rubber gloves and goggles. Mix 3/4 cup (177 mL) of liquid chlorine bleach in 1 gallon (3.8 L) of water. Never use bleach undiluted: it damages the seal.

2. Wipe all around the door seal with a sponge or soft cloth dipped in the mix. Dry it with a towel and leave the door open until the seal is dry.

Clean the drain pump filter (from time to time)


1. A blocked filter stops the washer draining and shows Drainage. Clean it now and then, or when that message shows. Only do this when the washer has finished and the water has cooled.

2. Turn off the washer and unplug it. The filter is behind the small cover at the bottom front (6). Put towels on the floor.

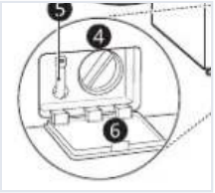


From the manufacturer's manual, page 7.

3. Open the cover.

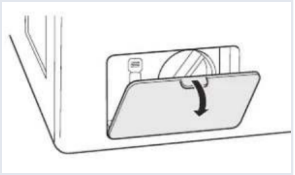
From the manufacturer's manual, page 27.

4. Hold a wide, low bowl under it. Unclip the small drain hose, pull out its plug and let the water drain. There can be a lot of water: empty the bowl as needed.

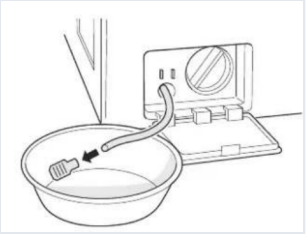

From the manufacturer's manual, page 27.

5. Turn the filter counterclockwise and pull it out. More water may come out.




From the manufacturer's manual, page 27.

6. Remove lint, coins and other objects from the filter and the opening.

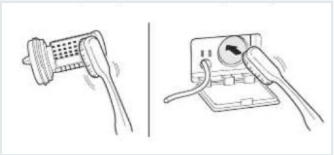


From the manufacturer's manual, page 27.

7. Push the plug back into the small hose and clip the hose back in place.

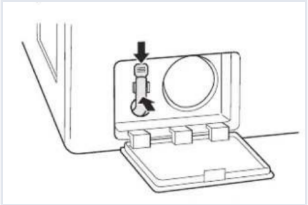

From the manufacturer's manual, page 27.

8. Put the filter back and turn it clockwise until tight. Close the cover. Never run the washer without the filter: it will leak.

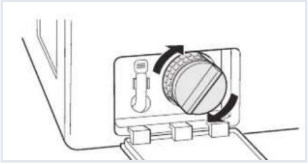

From the manufacturer's manual, page 27.

If you go away

1. For a long trip, unplug the washer and turn off the water taps behind it. If you cannot reach the taps, ask property management.

2. If the hot water has not been used for 2 weeks or more, run each hot tap in the home for a few minutes before using the washer. This lets out hydrogen gas that can build up. Do not smoke or use a flame while doing this.

STOP AND CONTACT PROPERTY MANAGEMENT

- A strange sound, a burning or chemical smell, or smoke: unplug the washer if it is safe.
- Water leaks, or the washer has been standing in water: do not touch it.
- The power cord or plug is damaged.
- The washer shows Water supply often: the water inlet filters behind it may need cleaning. This needs the hoses taken off.
- The washer room could freeze, or the washer needs to be moved: it must be drained, protected or re-installed by a technician.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual for LG Model WM5500HVA. Pictures are taken from that manual or are photos of this appliance. Updated 20 October 2026.