WASHER GUIDE

How to Use the Washer

LG Model WM5500HVA


IMPORTANT

- Never wash anything with gasoline, dry-cleaning solvents, cooking oil or other flammable products on it. Fire or explosion risk.
- Never mix chlorine bleach with ammonia or acids such as vinegar: it makes poisonous gas.
- Do not reach in while the drum is moving. Do not let children or pets play on or in the washer. Keep laundry products out of their reach.
- Do not sit or stand on the door, and do not put things on top of the washer. Do not touch the plug or the buttons with wet hands, and do not use an extension cord.

Get the load ready

1. Sort laundry by fabric, how dirty it is and colour. Follow the care labels on your clothes.
2. Empty pockets: coins, paper clips and other items can damage clothes and the washer. Close zippers and hooks, and tie drawstrings. Pre-treat stains and brush off sand, dirt and hair.
3. If you use detergent pods, gel or tablets, put them in the empty drum first, before the laundry. Powder colour-safe bleach also goes straight in the drum.

4. Load large items first, then small ones. Large items should be no more than half the load. Put clothes in loosely and do not press them down. The door must close easily.

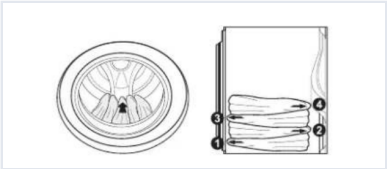

From the manufacturer's manual, page 18.

5. Wash bulky items (blankets, comforters, pet beds) on their own. Do not wash one small item on its own: add similar items. Put small items and bras in a mesh bag.

6. Waterproof items (rain clothes, mattress covers, outdoor clothes, plastic mats): use only the Waterproof, Bedding, Bulky/Large or Jumbo Wash cycle. Other cycles can make the washer shake hard.

Add detergent

1. Pull out the detergent drawer (2). Add HE (High-Efficiency) detergent only, and measure it: too much makes too many suds.



From the manufacturer's manual, page 7. Your washer may look slightly different.

2. If you want, add liquid bleach or fabric softener to their own compartments. Do not fill past the MAX line. Powder detergent: first take out the liquid detergent insert (if there is one).

3. Never put pods, gel or tablets in the drawer. Do not mix laundry products unless the label says so.
4. Close the drawer. Keep it closed when you are not filling it.

Start the wash

1. Close the door. The washer will not fill or run with the door open.
2. Press Power. Turn the cycle knob to a cycle and press OK (✓). If you press Start/Pause without choosing, the Normal cycle starts.
3. If you want, change the settings with the buttons. If a setting is not allowed with that cycle, a different chime sounds and its light stays off.
4. Press Start/Pause. The door locks and the drum turns briefly without water to weigh the load. Press it within a short time, or the washer turns off and the settings are lost.
5. You may not see water in the drum during the wash. This is normal: the washer uses very little water.
6. The printed manual does not describe each cycle. Full cycle details are in LG's online manual: gscs-manual.lge.com.

Pause, stop or lock

1. To pause or add items: press Start/Pause and wait for the drum to stop completely before you open the door.

2. If the water is too hot or too high, the door stays locked. To stop and drain: turn the power off, then on, then select Quick Wash.

3. Control Lock (stops children changing settings): press Options, turn the knob to Control Lock, press OK, choose On or Off, press OK.

4. Do not touch draining water. It may be hot.

When it finishes (melody)

1. Take the laundry out straight away. Damp laundry left inside wrinkles, smells and can transfer colour.

2. Check around the door seal (8) for small items caught in it.



From the manufacturer's manual, page 7. Your washer may look slightly different.

3. Leave the door open so the drum can dry. Make sure children and pets cannot climb in.

LG ThinQ app (optional)

1. With the LG ThinQ phone app you can start the washer remotely, get an alert when it finishes, and see when Tub Clean is due. The washer works only with 2.4 GHz Wi-Fi.

2. Remote Start: load the washer and add detergent, press Power, press Options, turn the knob to Remote Start, press OK, choose On, press OK. Then start the cycle in the app. If the door is opened, it cannot be started remotely.

3. To turn Wi-Fi off, press and hold the Wi-Fi button for 3 seconds.

STOP AND CONTACT PROPERTY MANAGEMENT

- A strange sound, a burning or chemical smell, or smoke: unplug the washer if it is safe.
- Water leaks, or the washer has been standing in water: do not touch it.
- The power cord or plug is damaged.
- You smell gas (propane or natural gas): do not use the washer or any appliance. Open a window or door.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual for LG Model WM5500HVA. Pictures are taken from that manual or are photos of this appliance. Updated 20 October 2026.