
WASHER GUIDE

How to Use the Washer


Whirlpool Model WFW9351 or WFW9151 (to confirm)

IMPORTANT: Never wash anything with gasoline or other flammable fluids on it: fire risk. Use only HE (High Efficiency) detergent. Do not overload. Do not reach in while the drum moves, and do not let children play on or in the washer. Run the washer only when you are home, and never on an extension cord.

1 Load

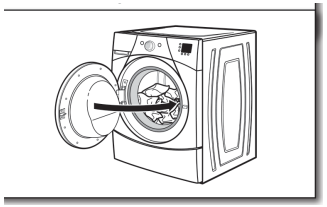


From the manufacturer's manual, page 9.

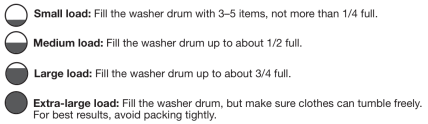


From the manufacturer's manual, page 8.

- Sort by colour and fabric. Keep very dirty items and delicates apart.
- Empty pockets, close zippers and hooks, tie strings. Coins can block the pump.
- Load loosely, mixing large and small items. Do not wash a single item alone. Small items go in mesh bags.
- Small load: 3 to 5 items (1/4 full). Medium: 1/2. Large: 3/4. Clothes must tumble freely.
- Push the door until the latch clicks.

2 Detergent

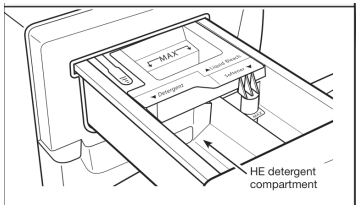


From the manufacturer's manual, page 10.

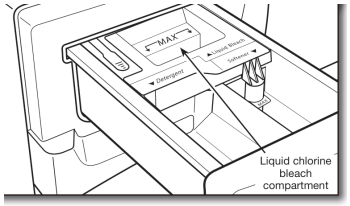

From the manufacturer's manual, page 10.

- **HE detergent**, liquid or powder, in its compartment. Colour-safe bleach can go with it. Do not mix powder and liquid.
- **Fabric softener** (liquid only): max 1/4 cup (60 mL), not past MAX. No softener balls.
- **Chlorine bleach**: max 2/3 cup (165 mL), not past MAX. Never colour-safe bleach here.
- Never pour products straight onto clothes.
- Close the drawer slowly and fully. A little water left in it is normal.

3 Cycle and options

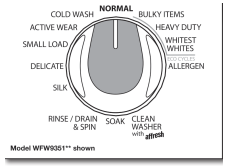


From the manufacturer's manual, page 11.

- Press and hold **POWER**, then turn the knob.
- **Normal**: everyday loads. **Heavy Duty**: towels, jeans. **Whitest Whites**. **Cold Wash**: colours. **Delicate**: lingerie, sweaters. **Bulky Items**: comforters. **Small Load**: 3 to 5 items. **Rinse/Drain & Spin**: spin out a wet **load**.
- **Not sure? Choose Normal** for everyday laundry.
- Buttons under the display change Temperature, Spin and Soil Level. Faster spin means drier clothes but more wrinkles.
- **Extra Rinse**, **Delay Start** (up to 10 h, use powder detergent).
- **TumbleFresh**: keeps clean clothes from sitting still and getting musty when you can't empty the washer right away. After the wash ends, the drum turns the clothes over every now and then, for up to 6 hours. Turn it on before starting the wash: press TumbleFresh until its light comes on. While it runs, the Done light stays on, the TumbleFresh light flashes and the door stays locked. Press **POWER** any time to stop it and unlock the door; otherwise it stops by itself after 6 hours. It doesn't work when spin speed is set to No Spin.

4 Start and finish




From the manufacturer's manual, page 11.

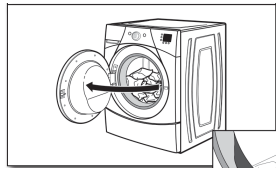

From the manufacturer's manual, page 12.

- Press and hold **START/PAUSE**. The door locks, unlocks and locks again: normal. Start within 5 minutes or it turns off.
- **Add 1 or 2 items** while Add a Garment is lit: press START/PAUSE once, wait for the door to unlock.
- **Pause**: press START/PAUSE once; hold it to continue. **Cancel**: press POWER. **Lock buttons**: hold Control Lock 3 s.
- At the end, the **Done** light comes on in the display (picture below). Unload straight away and check the door seal for small items. If **TumbleFresh** is on, Done stays lit and the door stays locked: press **POWER** to unlock.

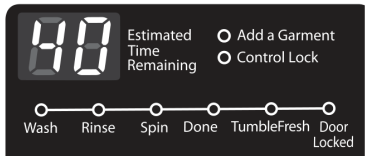

Display on model WFW9151 (WFW9351 has the same Done light). Manual, page 6.

- Leave the door open so the drum dries. Open and close it before the next wash.

STOP AND CONTACT PROPERTY MANAGEMENT: Water leaks. An error code comes back after a restart, or the washer will not fill or drain. A burning smell, smoke, or grinding or banging noise. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10432633A for Whirlpool front-loading washer models WFW9351 and WFW9151. Pictures are taken from that manual. Updated 21 October 2026.