
WASHER GUIDE

Washer Troubleshooting

Whirlpool Model WFW9351 or WFW9151 (to confirm)

IMPORTANT: Do not open the washer cabinet or try to repair it. If water is leaking near an electrical outlet, do not touch the washer or the plug.

1 A code shows

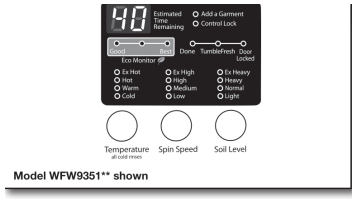

From the manufacturer's manual, page 11.

- **Sd**: too many suds. Let it carry on. If the knob lights flash, choose the cycle again with a cold temperature and press START/PAUSE. Next time use less HE detergent.
- **F8 E1**: no water. Check both taps behind the washer are on and the hoses are not kinked. Press START/PAUSE once to clear, then again to restart.
- **F9 E1**: cannot drain. Check the drain hose is not kinked or blocked, then clear and restart.
- **Other F/E code**: press POWER. If water is left, run RINSE/DRAIN & SPIN. If it comes back, contact property management.

2 Won't start or door won't open



From the manufacturer's manual, page 11.


- Close the door until it latches, then press and hold START/PAUSE. After a cycle, open and close the door first.
- Control Lock light on: hold Control Lock (Cycle Signal on some models) for 3 seconds. Check the plug and breaker.



From the manufacturer's manual, page 6.
Both models are shown.


- Door locked: press START/PAUSE once and wait for the drum to stop. If water is left, run RINSE/DRAIN & SPIN. If TumbleFresh is on, press POWER.

3 Wet clothes, noise or suds

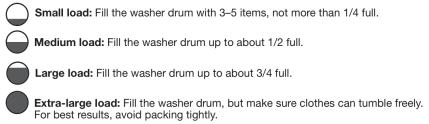

From the manufacturer's manual, page 8.


- Still wet: run RINSE/DRAIN & SPIN with no detergent. Spread out a tight or one-item load, or take half out and spin again. Delicate cycles leave clothes wetter.
- Clicks at the start (door lock), humming while draining, and zips touching the drum are normal.
- Shaking: don't wash a single item or pack the drum. Use Bulky Items for comforters. If it still moves, contact property management.

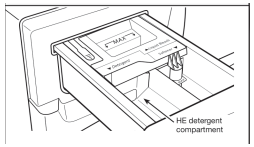

From the manufacturer's manual, page 10.

- Suds or drips at the door: use only measured HE detergent and wipe the door glass.

4 Smell, poor results, timing

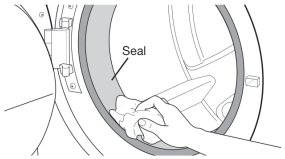

From the manufacturer's manual, page 13.

- Bad smell: run the monthly clean (see Appliance Care) and leave the door open between washes.
- Not clean: don't pack the drum, use the dispenser, no softener balls. Grey whites: wash apart from darks, warmer water if the label allows.
- Wrinkles: load loosely, slower spin, unload straight away.
- Low-looking water, a changing time left, or an option that won't light up for that cycle: all normal.

STOP AND CONTACT PROPERTY MANAGEMENT: Water leaks from the washer, the hoses or the door. An error code comes back after you restart, or the washer will not fill or drain. A burning smell, smoke, or a loud grinding or banging noise. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10432633A for Whirlpool front-loading washer models WFW9351 and WFW9151. Pictures are taken from that manual. Updated 21 October 2026.