
DISHWASHER GUIDE

# How to Use the Dishwasher


Frigidaire dishwasher (model to confirm)

**IMPORTANT:** Use only automatic dishwasher detergent, never hand dish soap. Load knives and sharp items pointing down. Do not let children play in or on the dishwasher or sit or stand on the open door. Open the door slowly during a cycle: hot water can splash out. Do not touch the heating element at the bottom during or right after a cycle.

## 1 Load

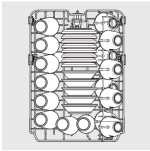


Upper basket. From the manufacturer's manual, page 7.

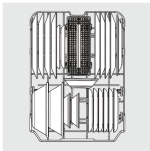

Lower basket. From the manufacturer's manual, page 7.


- Scrape off large food, bones and toothpicks. Empty glasses and cups. Rinse only if the dishes will wait before washing.
- **Upper basket**: glasses, cups, small plates and plastics marked dishwasher safe. Open side down, tilted slightly.
- **Lower basket**: plates, bowls, pots and pans facing down. Items up to 11 inches tall. Fold the tines down for big pots.



Cutlery basket. From the manufacturer's manual, page 8.


- **Cutlery basket**: knives and sharp items pointing down.
- Turn the spray arm under the upper basket by hand: nothing should stop it or block the detergent cup.
- If the dishwasher drains into the sink's garbage disposal, run the disposal first so it is empty.

## 2 Detergent and rinse aid

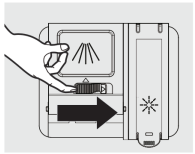

From the manufacturer's manual, page 9.

- Push the release catch to open the detergent cup.

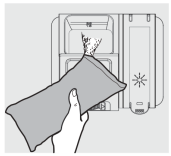

From the manufacturer's manual, page 9.


- Add **automatic dishwasher detergent**, then press the cover down until it closes. The cover is always open again at the end of a cycle: normal.



From the manufacturer's manual, page 10.

- **Rinse aid** (liquid only) helps dishes dry. Check the window next to the cup. To fill, lift the tab, fill up to the full mark (not past it), press the cover down. It lasts about a month.
- Never put detergent in the rinse aid side, and never use powder or solid rinse aid.


## 3 Cycle and options




Control panel. From the manufacturer's manual, page 5.

- **Normal Wash**: everyday loads. **Heavy Wash**: pots, pans, casseroles. **1 Hour Wash**: lightly soiled, no drying. **China Crystal**: delicate china and glass. **Energy Saver**: lightly soiled, pre-rinsed dishes.
- **Rinse Only**: rinses now so food doesn't dry on until you run a full load. No detergent.
- Press **Options** to choose **Sanitize** (Heavy and Normal only), **High Temp** or **Heat Dry**. A light shows what is on.
- **Delay**: press Delay until the hours (1h to 24h) show, then press START/Cancel.
- **Control Lock**: hold Options and Delay together for 3 seconds. Do the same to unlock.

## 4 Start and finish

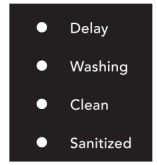


Cycle lights. From the manufacturer's manual, page 6.

- Close the door until it latches and press **START/Cancel**. The display shows the minutes left. The time can jump up or down: normal.
- **Cancel**: hold START/Cancel for 3 seconds.
- **Add a dish**: open the door a little and wait for the spraying to stop. Add the dish, close the door firmly and press START/Cancel.
- At the end it beeps and the **Clean** light stays on until you open the door (**Sanitized** if you chose Sanitize). Dishes can be hot.

**STOP AND CONTACT PROPERTY MANAGEMENT:** Water leaks or pools under the dishwasher. Error code i1 or i4 shows, or it will not fill or drain. A burning smell, smoke, or a grinding noise that keeps going. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's Use & Care manual A15931101 for this Frigidaire dishwasher. Pictures are taken from that manual. Updated 21 October 2026.