TUMBLE DRYER GUIDE

Dryer Troubleshooting

Gorenje Model DE8B

IMPORTANT

- Never dry anything with petrol, solvents or cooking oil on it, or anything made of rubber or foam rubber. Fire risk.
- Do not open the dryer or try to repair it. Unplug it before you check anything.

A code or light on the display

1. Tank light (9) or "Full": the water tank is full. Empty it and press Start/Pause (3).



From the manufacturer's manual, page 52.

2. PF: the power went off. Press Start/Pause (3) to carry on. This also restarts a start delay countdown.



From the manufacturer's manual, page 52.

3. E4: the dryer overheated. Clean the door filter, let the dryer cool down, then try again.




From the manufacturer's manual, page 52.

4. E0, E1, E2, E3, E6, E7 or E8: switch off, wait at least 1 minute, switch on and start again. If the code comes back, write it down, switch off, unplug the dryer and contact property management.

The dryer does not start


1. Check the plug is pushed in and On/Off (1) is pressed. If nothing lights up, check whether a breaker or fuse has tripped.

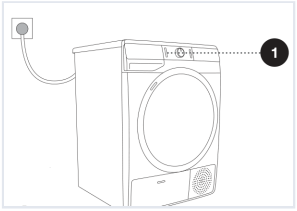

From the manufacturer's manual, page 31.


2. Close the door firmly, then press Start/Pause (3).

3. If the tank light (9) is on, empty the water tank, then press Start/Pause (3).

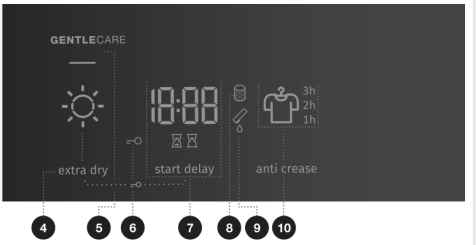

From the manufacturer's manual, page 17.

4. If a start delay is set, the dryer is waiting. Hold Start delay (7) for 3 seconds to cancel it.

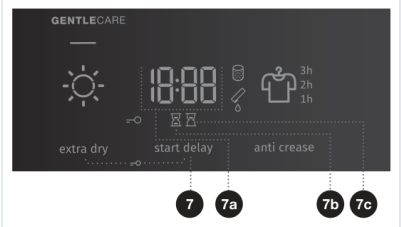

From the manufacturer's manual, page 37.


5. If the buttons do nothing and the lock light (6) is on, hold Extra dry (4) and Start delay (7) for 3 seconds.

6. If the display is dark and Start/Pause flashes, the dryer went to sleep after 5 minutes. Press On/Off or turn the knob.

7. If a button flashes and beeps, that option does not work with the programme you chose.

Laundry is not dry, or it takes too long

1. Clean the door filter. If that does not help, clean the condenser unit (see Dryer Care).

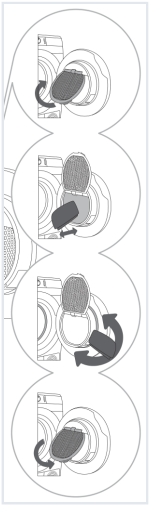

From the manufacturer's manual, page 45.

2. Only dry laundry that was spun in the washer. Do not overfill, and do not dry too little: for a few small items use the Time programme.

3. Sort laundry by type and thickness and choose the right programme. Use Extra dry, or run Time for another 30 to 60 minutes.

4. Let fresh air into the room: open a door or window. A very cold, very hot or small room makes drying slower.
5. Bedding rolls into a ball: close buttons and zips, use the Bedding programme, then loosen it and run Time.

Other problems

1. It stops heating during a programme: the filter is probably blocked. Clean it, let the dryer cool down and try again.
2. The door opens during drying: there is too much laundry. Take some out.
3. Laundry is very creased: take it out as soon as it ends, do not overfill, or use Anti crease.
4. If your dryer has a drum light and it does not come on when you open the door, unplug the dryer and contact property management.


This is normal

1. A pumping or water sound: the pump is moving water into the tank.
2. Rumbling or rattling: buttons and zips hitting the drum.
3. A light knocking after the dryer has not been used for a long time. It goes away by itself.
4. The time left changes during the programme, and the knob does not turn by itself.

5 The back of the dryer, the door and the water in the tank get hot.

Before you call

1 Write down any code. The model and serial number are on the plate inside the door opening.

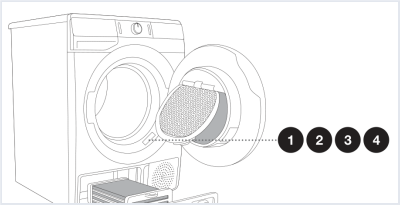

From the manufacturer's manual, page 53.

STOP AND CONTACT PROPERTY MANAGEMENT

- You smell burning or see smoke, or the power cord is damaged.
- It still does not heat after you clean the filter, or an error code comes back.
- The drum light does not work, or water leaks from the dryer.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual for Gorenje Model DE8B. Pictures are taken from that manual or are photos of this appliance. Updated 20 October 2026.