
DISHWASHER GUIDE

# Dishwasher Troubleshooting

Frigidaire dishwasher (model to confirm)

**IMPORTANT:** Do not open the dishwasher panels or try to repair it. If water overflows, turn off the water to the dishwasher if you know where the valve is (often under the kitchen sink; property management can confirm) and do not restart it until the water is cleaned up.

## 1 Code or won't start




Control panel with display. From the manufacturer's manual, page 5.

- **i1**: water takes too long to come in (supply off or low pressure). Contact property management if it happens again.
- **i4**: leaking. Turn it off and contact property management.





From the manufacturer's manual, page 6.

- Won't start: close the door until it latches. **Delay** light on: hold START/Cancel 3 seconds to cancel. Controls do nothing: hold Options and Delay 3 seconds (Control Lock). Check the plug and breaker.


## 2 Long cycles, dirty dishes

- Heavy soil and Sanitize make cycles longer. Not-hot incoming water does too: avoid running it during showers. A beep at the end is normal.

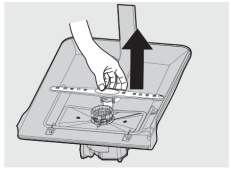

From the manufacturer's manual, page 12.


- Not clean: don't load too close together; make sure the spray arms turn freely; use fresh detergent; choose Heavy Wash for very dirty loads.

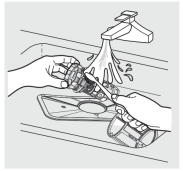

From the manufacturer's manual, page 12.

- Clean the filters (see Appliance Care). Detergent left in the cup: old detergent, or a dish blocked the spray arm.

## 3 Wet, spotty or marked

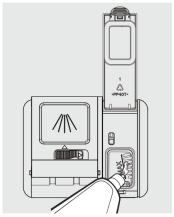

From the manufacturer's manual, page 10.

- Wet dishes, spots or film: fill with fresh rinse aid and choose a cycle with drying or Heat Dry.
- Black or grey marks: aluminium pans rubbed against dishes. Load them apart.
- Reddish tomato stains: run Rinse Only right after loading. Coffee or tea stains: use a dishwasher spot cleaner.

## 4 Water, suds or noise

- Water left at the bottom: the cycle was stopped. Run a cycle to the end.
- Won't drain: run the sink's garbage disposal so it is empty. Still not draining: contact property management.
- Suds or leaks: use only automatic dishwasher detergent, never hand dish soap.
- Detergent cup and drain pump noises are normal. Grinding means a hard object got in: if it keeps going after a full cycle, contact property management.
- Won't fill: close the door fully. If it still won't fill, contact property management.

**STOP AND CONTACT PROPERTY MANAGEMENT:** Water leaks, overflows or pools under the dishwasher. Code i1 or i4 comes back, or it will not fill or drain. A burning smell, smoke, or a grinding noise that keeps going after a full cycle. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's Use & Care manual A15931101 for this Frigidaire dishwasher. Pictures are taken from that manual. Updated 21 October 2026.