DRYER GUIDE

How to Use the Dryer


LG Model DLEX5500V (to confirm)

IMPORTANT

- Never dry anything with gasoline, solvents, cooking oil or vegetable oil on it, even after washing. It can catch fire.
- Never put foam rubber, rubber, plastic or fibreglass in the dryer (bath mats, bibs, plastic tablecloths). Use Air Dry only for items the label says can tumble dry.
- Never run the dryer without the lint filter in place. Do not reach in while the drum is moving. Do not let children or pets climb into the dryer.
- Do not stop the dryer before the end unless you take everything out at once and spread it out. The last part of the cycle cools the load to prevent fires.
- Do not open the door or touch it during a steam cycle. The door gets very hot and steam can burn.

Get ready

1. Clean the lint filter before every load: pull it straight up, roll the lint off with your fingers, push it back down until it clicks.

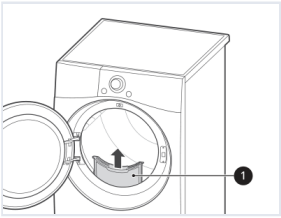

From the manufacturer's manual, page 31.

2 Check the care label. Square with a circle: can tumble dry. Lines under it: Perm. Press or Delicates. Crossed out: do not tumble dry.

Tumble Dry	
Label	**Directions**
	Dry
	Normal
	Permanent Press / Wrinkle Resistant
	Gentle / Delicate
	Do not tumble dry
	Do not dry (used with do not wash)

From the manufacturer's manual, page 32.

3 Dots in the circle give the heat: 3 dots High, 2 Medium, 1 Low, filled circle no heat (Air Dry).

Heat Setting	
Label	**Directions**
	High
	Medium

Heat Setting	
Label	**Directions**
	Low
	No Heat / Air

From the manufacturer's manual, page 32. Continues on page 33.

Load the dryer

1 Check the drum is empty. Empty all pockets (tissue, pens, lighters). Dry only clean, washed clothes.

2 Sort loads: dry heavy items (towels, jeans) apart from light ones. Dry fuzzy towels apart from dark clothes that pick up lint.

3 Mix large and small items. Put items with zips, hooks, straps or strings in a mesh bag. Tie any strings or belts.


4. Do not overfill: wet clothes swell as they dry and need room to tumble. Split a very large load in two. For a very small load, add a few items so it tumbles.

5. Push everything fully into the drum, away from the door seal, then close the door. Mind your fingers in the door.

6. Wool: follow the label. It may still be damp at the end. Do not run it again: pull it into shape and lay it flat to finish drying.


Choose and start

1. The control panel. Numbers in the steps below match this picture.

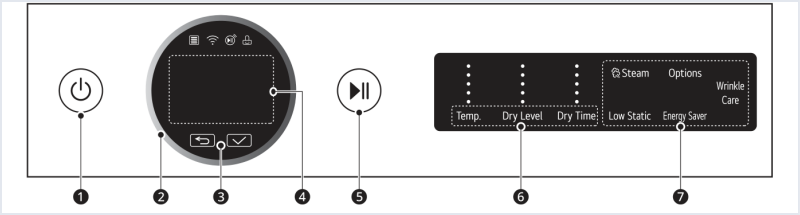

From the manufacturer's manual, page 34. The manual covers several models. Check that the buttons match your dryer.


2. Press Power (1). Turn the knob (2) to choose a cycle. The display shows its settings. Normal: cotton, jeans, shirts and mixed loads. Bedding: blankets, pillows, comforters. Delicates: blouses, lingerie, sheer items. AI Dry: the dryer picks the settings.

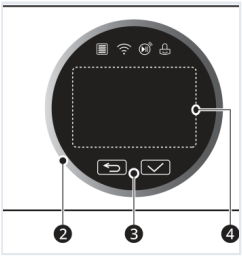

From the manufacturer's manual, page 34.


3. More cycles can be added to the knob list: press Options, turn the knob to Cycle List Edit, press OK, choose a cycle and press OK. Useful ones: Towels, Heavy Duty, Timed Dry, Quick Dry (small loads), Air Dry (no heat), Perm. Press, Small Load (up to 3 items), Easy Ironing (leaves clothes slightly damp).

4. If you want, press Temp., Dry Level or Dry Time (6) until the light you want shows (1 to 5). Dry Level 1 is Damp, 3 Normal, 5 Very dry. Two beeps means the setting is not available for that cycle.

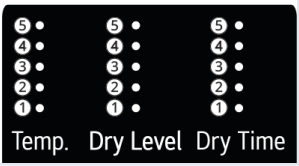

From the manufacturer's manual, page 36.

5. Options (7): Wrinkle Care tumbles the load now and then for up to 3 hours if you cannot unload at once. Steam reduces wrinkles and smells. Low Static adds steam near the end to cut static. Energy Saver is on by default in Normal: it uses less power but takes longer.

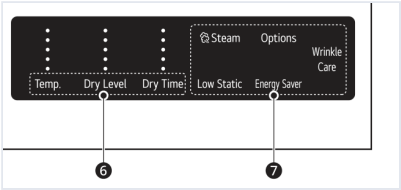

From the manufacturer's manual, page 34. The manual covers several models. Check that the buttons match your dryer.

6. Do not use Steam with wool, silk, leather, lingerie, foam, down or electric blankets. Steam Fresh and Steam Sanitary are for dry clothes only, about 1 to 5 items at a time.

7. More settings: press Options, turn the knob to the item and press OK. Damp Dry Signal beeps when the load is about 80% dry, for items you want to iron or hang. Drum Light turns on the light in the drum.


8. Press Start/Pause (5). If you wait too long, the dryer turns off and the settings are lost.

Pause, stop and finish

1. To pause, press Start/Pause or open the door. Press Start/Pause again soon, or the dryer turns off. To cancel, press and hold Power. To change an option, pause, change it, then press Start/Pause.
2. At the chime, take the laundry out straight away so it does not wrinkle. If Wrinkle Care is on, only Power works: press Power first, then unload.
3. Then clean the lint filter, ready for the next load.

Child lock

1. Turn the dryer on. Press Options, turn the knob to Control Lock, press OK, choose On or Off, press OK. The lock light (5) shows on the display. Only Power works while locked. It does not lock the door, and turning the dryer off does not unlock it.

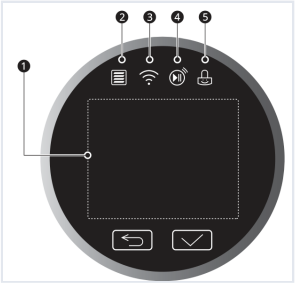

From the manufacturer's manual, page 35.

STOP AND CONTACT PROPERTY MANAGEMENT

- You smell burning or chemicals, see smoke or hear a strange sound: press Power, unplug the dryer if you can reach the plug safely, and do not use it again.
- The display shows "Duct blockage", "Temp sensor error", "Humidity sensor error", or a power message ("Power supply", "Power issue", "High voltage", "Low voltage").
- The dryer does not heat (and Energy Saver is off), or the steam does not work.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual for LG Model DLEX5500V (to confirm). Pictures are taken from that manual or are photos of this appliance. Updated 20 October 2026.