WASHER GUIDE

Washer Troubleshooting


LG Model WM5500HVA

IMPORTANT

- Do not reach in while the drum is moving. Do not let children or pets play on or in the washer.
- Do not open the washer or try to repair it yourself. If water is on the floor near the outlet, do not touch the washer or the plug.

Messages you can fix

1. Unbalance: the load is too small, heavy and light items are mixed, or items are tangled. Add similar items or spread the load out, then restart.

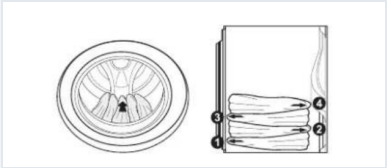


From the manufacturer's manual, page 18.

2. Oversudsing: too much detergent. The washer removes the suds by itself (about 2 hours). Next time use less HE detergent.


3. Water supply: check the taps behind the washer are fully open and the hoses are not bent or squashed. Check another tap in the home has good pressure.

4. Drainage: check the drain hose behind the washer is not bent or squashed. Then clean the drain pump filter behind the small cover at the bottom front (6). See Washer Care.

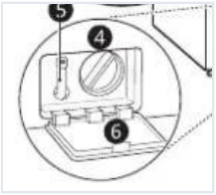

From the manufacturer's manual, page 7.

5. Door open or Door unlocked: open and close the door again. Check for clothes caught around the door and the door seal (8).

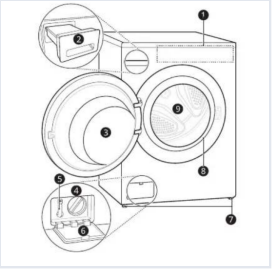
From the manufacturer's manual, page 7. Your washer may look slightly different.

6. Power failure: check the plug is in, then press Start/Pause to restart.

7. Motor error: leave the washer for 30 minutes, then restart the cycle.

8. No temp detected: unplug the washer for 60 minutes, plug it back in and try again.

9. Voltage abnormality: unplug the washer, then plug it back in.

Messages that need service

1. No water detected or Water too high: turn off the water taps behind the washer, unplug it and contact property management.

2. Freeze error (hoses or pump frozen), Vibration sensor or Steam error: stop and contact property management.
3. Any message that comes back after the steps above: contact property management.

Other problems

1. Buttons beep but nothing happens: Control Lock is on. Press Options, turn the knob to Control Lock, press OK, choose Off, press OK.
2. Door will not open: the water is too hot or too high. Turn the power off, then on, then select Quick Wash to drain.
3. You cannot see water during the wash: this is normal. The washer uses very little water.
4. The drum turns before filling: this is normal. It is weighing the load.
5. Loud bang when it fills with water: this comes from the home's pipes (water hammer), not the washer. Tell property management.
6. Musty smell: run Tub Clean once a week for three weeks, and leave the door open after each wash.
7. The washer shakes hard: wash bulky or waterproof items on their own in the right cycle. If it still shakes or moves, contact property management: it may need levelling.

Wi-Fi and LG ThinQ app

1. The washer works only with 2.4 GHz Wi-Fi. Turn off mobile data on your phone while you connect it.
2. If the app asks for the washer's password: type the last 4 characters of the network name twice, with no spaces. Example: LG_XXXX_8b92 gives 8b928b92.
3. Still not connecting: unplug the washer for about a minute and try again. The router may be too far away.
4. Smart Diagnosis (if LG asks for it): press Power, press Options, choose Additional Settings, then Smart Diagnosis, and follow the LG ThinQ app.

STOP AND CONTACT PROPERTY MANAGEMENT

- A strange sound, a burning or chemical smell, or smoke: unplug the washer if it is safe.
- Water leaks, or the washer has been standing in water: do not touch it.
- The power cord or plug is damaged.
- Any message in "Messages that need service", or a message that keeps coming back.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual for LG Model WM5500HVA. Pictures are taken from that manual or are photos of this appliance. Updated 20 October 2026.