DISHWASHER GUIDE

# Dishwasher Troubleshooting

Whirlpool dishwasher, stainless steel tub (model to confirm)


**IMPORTANT:** Water leaking or overfilling (codes F1E1, F1E5, F8E4, F8E5): keep the door closed. Turn off the water to the dishwasher if you know how. If the water cannot be turned off, do NOT turn off the power. Press Cancel once to stop the alarm, then contact property management right away.

## 1 Won't start

- Close the door tightly until it latches.
- Press **Start/Resume**, then close the door **within 4 seconds**. Light flashing: press Start/Resume again and close the door.
- Check that a cycle was chosen.
- Still nothing: the breaker or water may be off. Contact property management.

## 2 Long cycles, wet or spotty

- **2 to 5 hours is normal.** The first cycle and some options take longer.
- Wet dishes: fill the **rinse aid**.

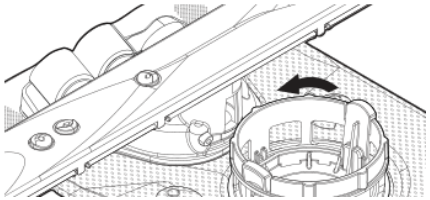

Upper filter. From the manufacturer's manual, page 5.

- White spots or residue: hard water. Clean the filters monthly and run a dishwasher cleaner or vinegar rinse (see Appliance Care). Tell property management if it continues.

## 3 Water or drain codes

- **H2O**: no water reaching the dishwasher. Contact property management to check the water supply. When it is fixed, press **Start/Resume**.
- **F9E1**: will not drain. Contact property management (the drain hose or disposal connection may need checking).
- **F1E1, F1E5, F8E4, F8E5**: follow the IMPORTANT box above.

## 4 Other codes and blinking lights

- **F1E2, F6E1, F7E2, F7E3, F9E3**: the dishwasher needs service. Contact property management.
- No display? The same faults show as blinking lights, for example **8 blinks, pause, 1 blink = H2O**. Count the blinks and tell property management.
- Press **Cancel** once to stop an alarm sound.

**STOP AND CONTACT PROPERTY MANAGEMENT:** Water leaks, overflows or pools under the dishwasher. Any code other than H2O, or H2O comes back. It will not drain. A burning smell or smoke. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's Owner's Manual W11589935 for this Whirlpool dishwasher. Pictures are taken from that manual. Updated 25 October 2026.