DRYER GUIDE

Dryer Care


Whirlpool Model (to confirm)

IMPORTANT

- Never run the dryer if the lint screen is loose, damaged, blocked or missing. It can overheat and damage the dryer and clothes.
- Keep the area around the dryer clear of lint, dust and anything that blocks the air flow. Never store gasoline or other flammable products near it.
- Do not take any part of the dryer apart or try to repair it.

Every load

1. Clean the lint screen before or after every load. It is in the door opening. Pull it straight up, roll the lint off with your fingers, push it firmly back in. Do not rinse it: wet lint is hard to remove. A blocked screen makes drying slow.

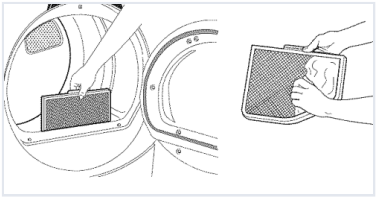


From the manufacturer's manual, page 6.

2. If lint falls into the dryer when you take the screen out, tell property management: the vent hood needs checking.

3. Use only one dryer sheet per load, and only once: sheets can block the air grille. Use only softener or anti-static products that say they are safe for dryers.

Wash the lint screen every 6 months

1. Do it sooner if the screen looks clogged, if clothes take longer to dry, or if the dryer stops before the load is dry. Detergent and softener leave a coating on it.
2. Roll the lint off with your fingers, then wet both sides of the screen with hot water.
3. Scrub it with a nylon brush, hot water and liquid detergent to remove the build-up.

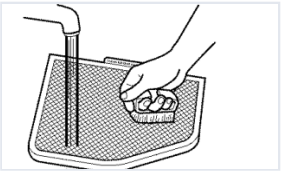

From the manufacturer's manual, page 6.

4. Rinse it with hot water, dry it well with a clean towel, and put it back in the dryer.

Clean the drum (when it has stains)

1. Make a paste of powdered laundry detergent and very warm water and put it on a soft cloth. Or use a non-flammable household cleaner. Rub the stains until the dye is gone.
2. Wipe the drum well with a damp cloth, then tumble a load of clean cloths or towels to dry it.
3. Blue jeans and bright cottons can stain the drum. This is harmless and does not stain other clothes. Dry these items inside out to avoid it.

Around the dryer and when away

1. Keep the area around the dryer and its exhaust opening free of lint, dust and dirt. Do not pile laundry against it or block the vents in a closet door.

2. Use the dryer only when you are at home. Before a long time away, clean the lint screen and ask property management whether the dryer should be unplugged.

STOP AND CONTACT PROPERTY MANAGEMENT

- The lint inside the dryer cabinet and in the exhaust vent needs removing every 2 years or more often. This must be done by a qualified person.
- The light inside the drum does not work (it needs a special 10-watt appliance bulb; the dryer must be unplugged).
- The lint screen is damaged or missing.
- The dryer needs to be moved or reconnected.
- You smell gas (gas dryers): do not light anything or touch any switch or phone in the building. Leave, call the gas supplier from a neighbour's phone or from outside, or the fire department, then property management.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10296184B for this Whirlpool electronic dryer. Pictures are taken from that manual. Updated 20 October 2026.