DRYER GUIDE

# Dryer Troubleshooting

Whirlpool Model (to confirm)

**IMPORTANT**

- Do not open the dryer cabinet or try to repair it.
- Never dry anything that has had oil, gasoline or solvents on it.

## The dryer does not start

1. Close the door completely.
2. Press and hold START/PAUSE for 2 to 5 seconds.




From the manufacturer's manual, page 11.

3. If the Control Lock light is on, press and hold Cycle Signal for 3 seconds to unlock.
4. "PE" on the display means the power went off. Press and hold START/PAUSE to restart.
5. Check the dryer's breakers in the electrical panel (electric dryers use two). If one has tripped and trips again, contact property management.

## Clothes take too long to dry

1. Clean the lint screen.



From the manufacturer's manual, page 13.


2. Dry smaller loads so clothes can tumble freely.




From the manufacturer's manual, page 8.

3. Check that Air Dry is not selected (it uses no heat).

4. If an Auto cycle stops too early, choose More with the Dryness Level button.

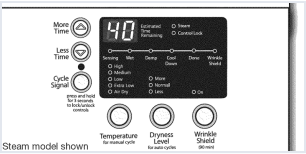


From the manufacturer's manual, page 11.

5. "AF" on the display means low airflow. Clean the lint screen and press any button to clear it.

6. Check no dryer sheet is stuck on the air grille behind the lint screen.

7. The dryer needs a room above 7°C (45°F) to work properly.

8. If loads always come out too damp on Auto cycles, you can make all Auto cycles dry longer: with the dryer off, hold Temperature for 6 seconds, press Temperature to pick 2 (15% more) or 3 (30% more), then press START/PAUSE.

9. Steam models: if Quick Refresh leaves damp spots, finish with Enhanced Touch Up.

## The dryer runs but does not heat

1. Check that Air Dry is not selected.
2. Check the breakers: the drum can turn without heat if one of the two has tripped.
3. "L2" on the display means low power. Press any button to clear it and check the breakers. If it comes back, contact property management.

## Noises

1. Thumping after the dryer has not been used for a while is normal and stops after a few minutes.
2. Rattling: check pockets and the front and back edges of the drum for small objects. If clothes are balled up, separate them and restart. If it still vibrates, it may not be level: contact property management.
3. Clicking on gas dryers and humming during steam cycles are normal.

## Wrinkles, stains, lint, smells or a hot load


1. Take clothes out as soon as the cycle ends, or use Wrinkle Shield.




From the manufacturer's manual, page 11.

2. Add dryer sheets at the start of the cycle only. Do not use them with steam cycles.

3. Hot load: let Cool Down finish before you take the load out, and use an Auto cycle with lower heat.

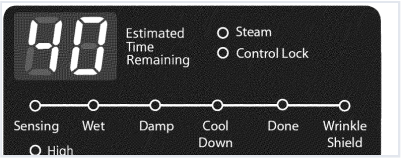


From the manufacturer's manual, page 7. Steam model shown.

4. Lint on clothes: clean the lint screen before each load.

5. Smell after painting nearby: air out the room, then wash and dry the clothes again.

**STOP AND CONTACT PROPERTY MANAGEMENT**

- You smell gas: do not touch any switch or phone in the building. Leave, call the gas supplier from outside, then property management.
- A burning smell or smoke: press POWER and do not use the dryer again.
- An "F" code (for example F1 E1) shows on the display, or the dryer does not heat.
- "AF" keeps coming back after you clean the lint screen.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

---

Based on the manufacturer's manual W10385092A for this Whirlpool electronic dryer. Pictures are taken from that manual. Updated 20 October 2026.