
DRYER GUIDE

# Dryer Care

LG dryer, DL*X550, DL*X650 or DL*X670 series (model to confirm)


**IMPORTANT:** Turn off and unplug the dryer before cleaning it. Never use harsh chemicals, solvents, steel wool or abrasive cleaners. Never run the dryer without the lint filter in place.

## 1 Lint filter, every load

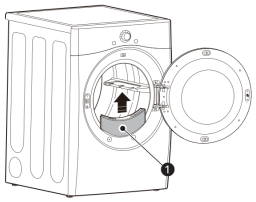

Lint filter (1). Manual, page 49.


- Before every load, open the door and pull the filter straight up.

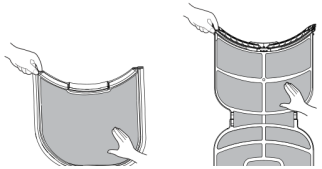

Roll the lint off with your fingers. Manual, page 49.

- Roll the lint off with your fingers, or vacuum it.
- Push it back in firmly until it clicks.

## 2 Wash the filter when needed

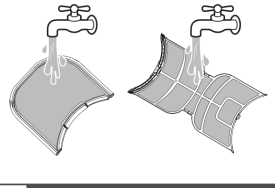

Wash a clogged filter in warm, soapy water. Manual, page 50.

- Hold the clean filter up to a light. If it looks dirty or clogged with fabric softener, wash it in warm, soapy water.
- Let it dry completely before putting it back.
- Very linty loads, like new towels: pause the cycle and clean the filter halfway.

## 3 Inside and outside

- Outside: warm water with a mild, non-abrasive detergent. Wipe spills straight away.
- Door opening and seal: wipe with a soft damp cloth to remove lint and dust.
- Door window: a soft cloth with warm soapy water, then wipe dry.
- Drum: a stainless steel cleaner, following its label.

## 4 Around the dryer

- Vacuum lint and dust from around and under the dryer regularly.
- If drying gets slower or air seems weak, tell property management: the vent duct may be blocked.
- Do not keep anything flammable on or near the dryer.

**STOP AND CONTACT PROPERTY MANAGEMENT:** Lint builds up behind the dryer or around the outside vent, the **Duct blockage** message shows, or the Flow Sense indicator shows 4 bars: the vent duct needs cleaning (the manual says check it monthly and clean it at least once a year). A burning smell. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's Owner's Manual MFL71996102 for LG dryers DL*X550, DL*X650 and DL*X670. Pictures are taken from that manual. Updated 29 October 2026.