DRYER GUIDE

How to Use the Dryer


Whirlpool Model (to confirm)

IMPORTANT

- Never dry anything that has had gasoline, solvents or any oil on it, including cooking oil, even after washing. Fire risk.
- Items with foam, rubber or plastic: dry them on a clothesline or with Air Dry only.
- Clean the lint screen before every load. Do not let children play on or in the dryer, and do not reach in while the drum is moving.
- Use the dryer only when you are at home. Keep gasoline and other flammable products away from it.

Get ready

1. Clean the lint screen: pull it straight up, roll the lint off with your fingers and push the screen firmly back in. Do not rinse it.

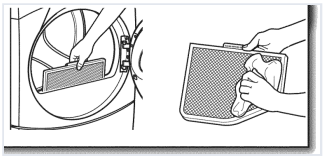

From the manufacturer's manual, page 10.

2. Open the door and put the laundry in loosely. Do not overload: clothes must tumble freely. Add one dryer sheet to the wet load if you want (not with steam cycles), then close the door.



From the manufacturer's manual, page 10.


3 Load size: small is 3 to 4 items (1/4 full), medium is 1/2 full, large is 3/4 full.



From the manufacturer's manual, page 8.


Start the dryer

1 Press POWER.

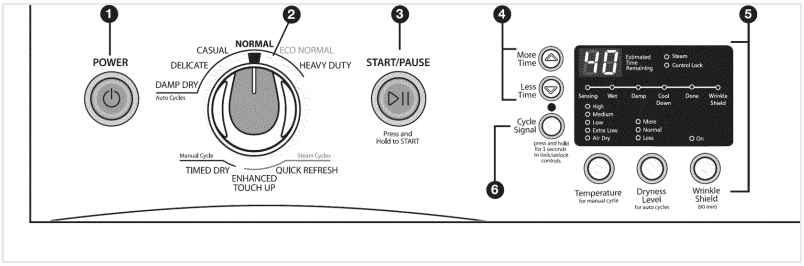


From the manufacturer's manual, page 6. Steam model shown. Your dryer may have fewer buttons.

2 Turn the cycle knob. Auto cycles sense when clothes are dry and save energy: Normal or Eco Normal for everyday loads, Heavy Duty for towels and jeans, Casual for shirts and synthetics, Delicate for lingerie and washable woollens, Damp Dry for clothes you want to iron. Timed Dry runs for a set time (up to 100 minutes).

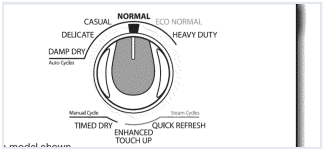

From the manufacturer's manual, page 10.

3 If you want, change the settings. Auto cycles: press Dryness Level for More, Normal or Less (set it before you start). Timed Dry: use More Time or Less Time and press Temperature. Use the lowest heat if you are unsure.

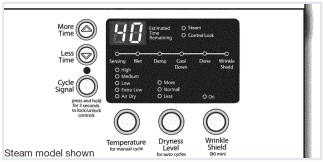

From the manufacturer's manual, page 11.

4 Foam, rubber, plastic, shower curtains or rubber-backed rugs: use Timed Dry with Air Dry (no heat), or hang them up.

5 Steam models only: Quick Refresh freshens 1 to 9 dry items. Enhanced Touch Up removes wrinkles from a load left in the dryer. Do not add dryer sheets, and wash new or starched clothes first.

6 If you cannot unload as soon as it ends, press Wrinkle Shield: it tumbles the load now and then for up to 90 minutes.


7 Press and hold START/PAUSE to start.



From the manufacturer's manual, page 11.

During and after

1. The lights show the stage: Sensing, Wet, Damp, Cool Down, Done. At Damp you can take out items you want to hang or iron.

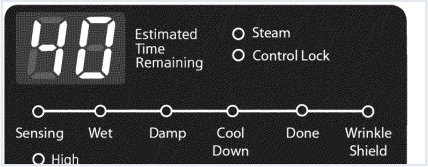

From the manufacturer's manual, page 7. Steam model shown.


2. To pause, press START/PAUSE once. To cancel, press POWER.

3. To lock the buttons, press and hold Cycle Signal for 3 seconds. Do the same to unlock them.



From the manufacturer's manual, page 7.


4. When Done lights up, take the clothes out straight away so they do not wrinkle. Let Cool Down finish first: clothes can be hot.



From the manufacturer's manual, page 11.

Drying rack (if your dryer has one)

1. For sweaters or shoes that should not tumble: hook the rack into the door opening and rest the back on the rear ledge. Leave the lint screen in. Use Timed Dry or Air Dry only. Clean the lint screen afterwards.

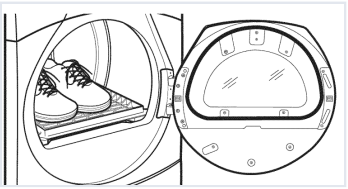

From the manufacturer's manual, page 12. Check that your dryer has this rack.

STOP AND CONTACT PROPERTY MANAGEMENT

- You smell gas: do not touch any switch or phone in the building. Leave, call the gas supplier from outside, then property management.
- A burning smell or smoke: press POWER and do not use the dryer again.
- An "F" code (for example F1 E1) shows on the display, or the dryer does not heat.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10385092A for this Whirlpool electronic dryer. Pictures are taken from that manual. Updated 20 October 2026.