DISHWASHER GUIDE

Dishwasher Care

KitchenAid dishwasher, stainless steel tub (model to confirm)


IMPORTANT: Do not touch the heating element during or right after a cycle. Never use a wire brush or scouring pad on the filters, or abrasive cleaners on the outside. Use vinegar only now and then: it is an acid and can damage the dishwasher.

1 Outside and inside

- Outside: soft damp cloth and mild detergent only. No abrasive cleaners (stainless doors may have a fingerprint-resistant coating).
- **Once a month**: run a dishwasher cleaner such as affresh®, following the package directions.
- White residue: **place** (do not pour) 2 cups (500 mL) white vinegar in a glass or dishwasher-safe cup on the bottom rack. Run a full cycle with an air-dry or energy-saving dry option and **no detergent**.


2 Clean the filters

- How often: every 2 months if you only scrape plates; every 4 months to once a year if you rinse them first. **White residue (hard water): once a month.**

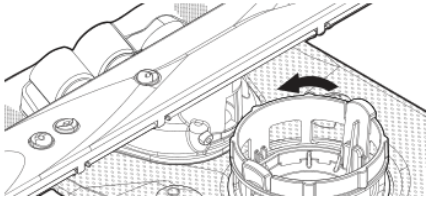

Turn the upper filter. From the manufacturer's manual, page 5.


- Turn the upper filter **1/4 turn counterclockwise** and lift it out.

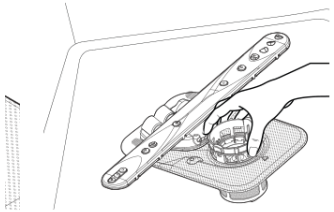

From the manufacturer's manual, page 5.


- Gently pull the upper filter assembly apart.

3 Rinse and put back

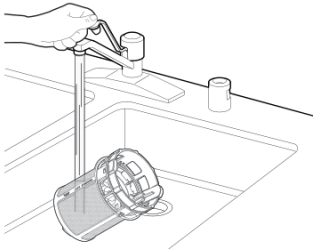

From the manufacturer's manual, page 6.

- Rinse the filters under running water until most soil is gone.

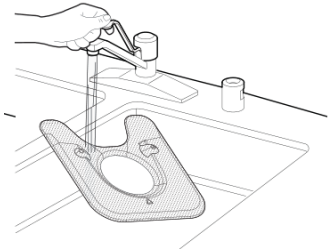

From the manufacturer's manual, page 6.


- Hard soil or white deposits: use a **soft** brush.

Scan for the manufacturer's video on putting the filter back. From the manual, page 6.

- Put the filters back fully before the next cycle.

4 Rinse aid, salt, time away

- Keep **rinse aid** filled for dry dishes.

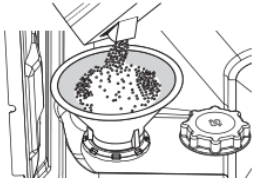

Salt reservoir, under the lower rack on the left. From the manufacturer's manual, page 5.

- **Low-salt light** (some models): refill with **dishwasher softener salt** only. Remove the lower rack, unscrew the cap, fill to the edge with the funnel, wipe away salt and screw the cap on tightly. Run a cycle right away. Unsure? Contact property management.
- Away for a long time, or risk of freezing: tell property management.

STOP AND CONTACT PROPERTY MANAGEMENT: A filter is broken or will not go back in place. Water leaks or pools under the dishwasher. The dishwasher is not draining well. White residue keeps coming back after cleaning. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's Owner's Manual W11589935 for this KitchenAid dishwasher. Pictures are taken from that manual. Updated 25 October 2026.