DRYER GUIDE

Dryer Troubleshooting


LG Model DLEX5500V (to confirm)

IMPORTANT

- Never dry anything with gasoline, solvents, cooking oil or vegetable oil on it, or anything with foam rubber, rubber or plastic. Fire risk.
- Do not open the dryer cabinet or try to repair it. Unplug the dryer before you clean it.

A message shows on the display

1. Duct blockage (80%, 90% or 95%): the vent is blocked. Stop using the dryer: a blocked vent can cause a fire. Contact property management.

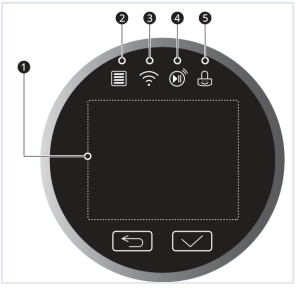

From the manufacturer's manual, page 35.

2. Flow Sense light (2) on during drying: the vent is partly blocked. The dryer still works but is slow. Clean the lint filter and tell property management. The light stays on up to 2 hours after the cycle: open the door or press Power to clear it.


3. After the vent is cleaned, the light can take a few cycles to go off. If it is still on after 5 cycles, contact property management.

4. Temp sensor error or Humidity sensor error: press Power to turn the dryer off and contact property management.

5. Power supply, Power issue, High voltage or Low voltage: check the breaker for the dryer. If the message comes back, contact property management.

Buttons beep but nothing happens

1. Control Lock is on (lock light (5) on the display). Press Options, turn the knob to Control Lock, press OK, choose Off, press OK.

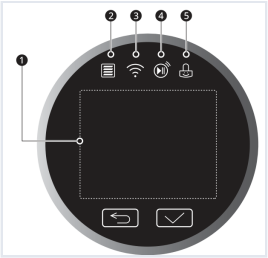

From the manufacturer's manual, page 35.

2. Two beeps when you press a setting: that setting is not available for this cycle.

3. If Wrinkle Care is running after the cycle, only Power works. Press Power or open the door.

The dryer does not start or turn on


1. Check the plug is pushed fully into the outlet and the breaker has not tripped. Do not use an extension cord.

2. Close the door firmly, then press Start/Pause soon after choosing the cycle. If you wait too long the dryer turns off.

3. If Remote Start was turned on, the dryer waits for the phone app. Press Options, turn the knob to Remote Start, press OK, choose Off, press OK.


No heat, or clothes take too long to dry

1. Clean the lint filter and hold it up to a light. If it is clogged, wash it (see Dryer Care). With new towels, pause and clean it mid-cycle.

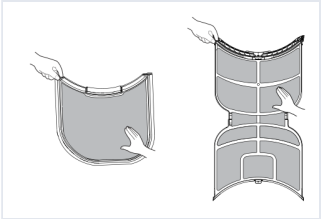

From the manufacturer's manual, page 50.

2. In Normal, Energy Saver is on by default. The cycle starts with no heat and takes longer. Press Energy Saver (7) to turn it off.

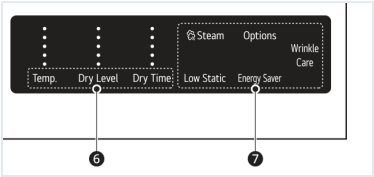

From the manufacturer's manual, page 34. The manual covers several models. Check that the buttons match your dryer.

3. Do not overload: split big loads. Dry heavy items apart from light ones: light items fool the sensor.

4. Very small load: add a few wet items, or use Timed Dry. The sensor can stop a tiny load too soon.

5. Choose a higher Dry Level (More or Very) for heavy loads. Drying time also changes with load size and how well the washer spun the clothes.

6. If it still does not heat, check the breaker. If that is fine, contact property management.

Damp spots after drying

1. A blanket or comforter can roll into a ball. Pause once or twice and spread it out.
2. To finish a few damp items, clean the lint filter and run Timed Dry.

Wrinkles, lint, static, stains or shrinking

1. Wrinkles: do not overdry. Use a lower Dry Level or shorter time, take clothes out promptly, or use Wrinkle Care.
2. Lint on clothes: clean the filter, check pockets for tissue, do not overload, and dry fuzzy towels apart from dark clothes.
3. Static: do not overdry. Use Low Static or a dryer-safe fabric softener as its label says. Synthetics get more static. Some static even with Low Static is normal.
4. Greasy or dirty spots: follow the fabric softener instructions, dry only clean clothes, and make sure stains are washed out first.
5. Shrinking: follow the care labels and use a low heat or no heat setting.
6. Still wrinkled after Steam Fresh: use 1 to 5 similar items. Steam also removes creases and pleats: iron them back. Strong smells need a wash.

This is normal

1. The dryer tumbles by itself after the cycle: Wrinkle Care tumbles the load every few minutes for up to 3 hours. Open the door or press Power to stop it.
2. During steam, the drum stops and turns for about 2 seconds a minute. Steam is hard to see. Water can drip from the nozzle at the start or from the bottom of the door.
3. A new dryer smells of rubber for the first few cycles.
4. Other smells: unload promptly, keep the lint filter clean and dry, and do not use too much detergent in the washer.

STOP AND CONTACT PROPERTY MANAGEMENT

- You smell burning or chemicals, see smoke or hear a strange sound: press Power, unplug the dryer if you can reach the plug safely, and do not use it again.
- The display shows "Duct blockage", "Temp sensor error", "Humidity sensor error", or a power message ("Power supply", "Power issue", "High voltage", "Low voltage").
- The dryer does not heat (and Energy Saver is off), or the steam does not work.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual for LG Model DLEX5500V (to confirm). Pictures are taken from that manual or are photos of this appliance. Updated 20 October 2026.