
WASHER GUIDE

Washer Care

Whirlpool Model WFW9351 or WFW9151 (to confirm)

IMPORTANT: Wear rubber gloves when cleaning with bleach and follow the bleach label. Do not use abrasive cleaners, and do not take any part of the washer apart. Use only HE detergent and measure it: too much leaves residue and causes smells.


1 After every load

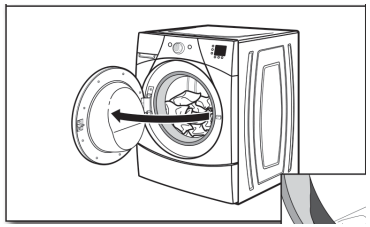

From the manufacturer's manual, page 12.

- Take the laundry out as soon as the cycle ends.
- Leave the door open so the washer can dry. This prevents smells.
- Wipe spills on the outside with a soft damp cloth, with mild soap if needed.
- Now and then, wipe the inside of the door glass. Residue there can cause drips.


2 Monthly clean (or every 30 washes)

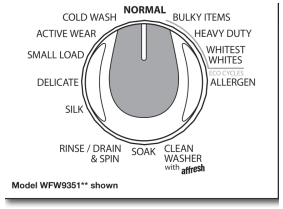

From the manufacturer's manual, page 11.


- Empty drum. Put one **AFFRESH** tablet in the drum, or 2/3 cup (160 mL) of liquid chlorine bleach in the bleach compartment. No detergent.
- Close the door and drawer. Press **POWER**, turn the knob to **CLEAN WASHER with affresh**, press and hold **START/PAUSE**.
- For about 3 minutes the drum turns and the door locks and unlocks: normal. If the Wash light flashes, take out what is in the drum and start again.
- Let it finish. If stopped, "Int" shows and the door can take up to 10 minutes to unlock. Then leave the door slightly open.

3 Dispenser drawer

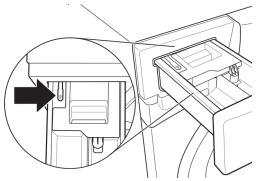


From the manufacturer's manual, page 13.

- Pull the drawer out until it stops. Press down on the release lever and pull it straight out.

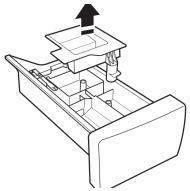

From the manufacturer's manual, page 13.


- Lift out the insert. Wash both in warm soapy water, rinse, and dry. Not dishwasher safe.

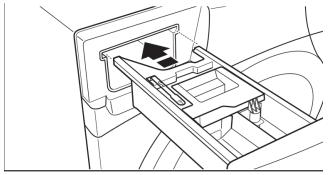

From the manufacturer's manual, page 13.

- Put the insert back, line the drawer up with the guides and slide it in.

4 Door seal and time away

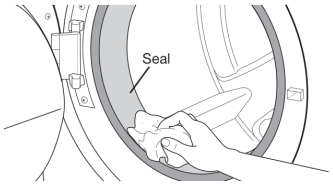

From the manufacturer's manual, page 13.

- Pull back the seal and check for stains and small objects.
- Wipe stains with a damp cloth and 3/4 cup (177 mL) of liquid chlorine bleach in 1 gallon (3.8 L) of warm water. Leave 5 minutes, wipe dry, leave the door open.
- Run the washer only when you are home. Before a long trip, ask property management whether the water taps behind the washer should be turned off.
- After a long time unused, run a Normal cycle with half the usual HE detergent and no clothes.

STOP AND CONTACT PROPERTY MANAGEMENT: A water hose behind the washer is bulging, cracked, kinked or leaking (the manual says hoses should be replaced every 5 years). A bad smell stays after the monthly clean. The washer needs to be moved, or the room could freeze. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10432633A for Whirlpool front-loading washer models WFW9351 and WFW9151. Pictures are taken from that manual. Updated 21 October 2026.