WASHER GUIDE

# Washer Troubleshooting

Whirlpool Model (to confirm)

**IMPORTANT**

- Do not open the washer cabinet or try to repair it.
- If water is leaking near an electrical outlet, do not touch the washer or the plug.
- Never use an extension cord or adapter, and never remove the ground prong from the plug.

## The Wash light is flashing (error code)

1. This washer has no screen. A flashing Wash light means an error. Count the flashes before each 2-second pause: for example 8 flashes, pause, 1 flash is code F8 E1.




From the manufacturer's manual, page 13.

2. F8 E1, no water: press POWER. Check that both water taps behind the washer (hot and cold) are fully open and the hoses are not kinked. Unplug the washer, plug it back in, choose the cycle and press START/PAUSE.

3. F9 E1, will not drain: press POWER. Unplug the washer, plug it back in, choose the cycle and press START/PAUSE. Pocket items can block the pump.

4. Any other F and E code: press POWER. If there is a lot of water inside, select DRAIN & SPIN first. Then choose the cycle and press START/PAUSE.

5. If any code comes back, stop using the washer and contact property management.

## Will not start or will not turn on

1. Close the door firmly, then press and hold START/PAUSE for 3 seconds.




From the manufacturer's manual, page 11.

2. After a wash, the door must be opened and closed before a new cycle can start.

3. Buttons do not respond: press POWER twice, then try choosing a cycle again. If the controls are locked, a button held for 3 seconds unlocks them. The manual does not say which button on this model: check with property management.

4. No power at all: check it is plugged in and that the breaker or fuse for the washer has not tripped. Do not use an extension cord.


5. Short pauses of about 2 minutes are normal in some cycles. An overloaded washer may not run: take some items out.

6. Stops at the same point every time: unplug the washer, wait 5 minutes, plug it back in and run another cycle.

## The door will not open

1. If the Add a Garment light is on, press START/PAUSE once. The door unlocks.

2. If water is left inside: press START/PAUSE, select DRAIN & SPIN and hold START/PAUSE for 3 seconds. The door unlocks when the spin ends.

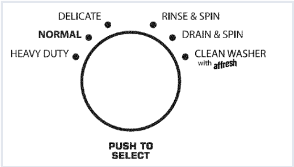


From the manufacturer's manual, page 13.

## Clothes are still wet, or water is left


1. Run DRAIN & SPIN (no detergent). Delicate spins slowly, so clothes come out wetter: choose a cycle with a faster spin.

2. One heavy item or a bulky load can unbalance the drum. Add more items or spread the load out. If still wet, take half the load out and spin again.

3. Too many suds slow the spin. The washer runs a special routine on its own to remove them. Use only HE detergent and less of it next time.

## Noise and shaking

1. Clicks from the door lock, water spraying, short pauses, gurgling or humming while draining, and zippers or buckles touching the drum are normal. Rattling: check under the door seal for coins or small items.

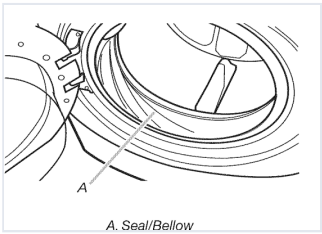


*A. Seal/Bellow*

From the manufacturer's manual, page 17.


2. Shaking: do not wash a single item, do not pack the drum tight, and load evenly. If it still shakes, walks or bangs, contact property management: the washer may not be level.

## Water, suds and leaks

1. Little water in the drum or few suds: normal for this washer. A little water left in the dispenser is also normal.
2. Drips from the door after you open it during Add a Garment are normal.
3. Water on the floor: too much or non-HE detergent can cause suds that leak from the back. Use only HE detergent and measure it. If it still leaks, stop and contact property management.
4. Hot water feels less hot after many loads in a row: this is normal.
5. The cycle takes longer than expected: the washer adds time for suds, an unbalanced load, a single or bulky item, or a large load on Delicate. This is normal.

## Dispenser problems

1. Products in the wrong place: detergent and colour-safe bleach in Main Wash (B), only liquid chlorine bleach in (C), fabric softener in (D). Measure, pour slowly and wipe spills.

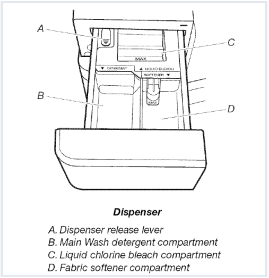


**Dispenser**

*A. Dispenser release lever*
*B. Main Wash detergent compartment*
*C. Liquid chlorine bleach compartment*
*D. Fabric softener compartment*

From the manufacturer's manual, page 12.

2. Products left in the drawer: clean the drawer and inserts (see Washer Care) and check both water taps are fully open.

## Bad smell or poor results

1. Bad smell: use only HE detergent, leave the door open between washes, and run CLEAN WASHER every month (3 AFFRESH tablets if it already smells).
2. Lint, residue, grey whites or dull colours: put detergent in the dispenser, not the drum. Sort properly, do not overload, and check pockets for tissue. Use a little more HE detergent for very dirty loads or hard water.
3. Detergent does not dissolve well in cold water below 60°F (15.6°C): use warm or hot if the label allows. Powder may not dissolve on Delicate: use liquid detergent instead.
4. Colour transfer, wrinkles or tangles: take clothes out as soon as the washer stops. For wrinkles, do not overload, use Delicate, or warm water if safe for the fabric.
5. Fabric softener balls do not work in this washer: use the softener compartment.

**STOP AND CONTACT PROPERTY MANAGEMENT**

- Water leaks from the washer, the hoses or the door, or water backs up out of the drain or sink.
- The Wash light keeps flashing after you restart (an error code), or the washer will not fill or drain.
- A burning smell, smoke, or a loud grinding or banging noise. Press POWER and do not use the washer.
- The washer does not turn on, or the breaker or fuse for it trips again.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

---

Based on the manufacturer's manual W10307859B (Use & Care Guide) for this Whirlpool front-loading washer. Pictures are taken from that manual. Updated 20 October 2026.