
DISHWASHER GUIDE

Dishwasher Care

Frigidaire dishwasher (model to confirm)

IMPORTANT: Let the heating element at the bottom cool before cleaning inside: burn risk. Do not use benzene, wax, thinner, chlorine bleach or alcohol. Do not spray water over the dishwasher or let water reach electrical parts. Do not remove the long rubber seal around the tub opening.

1 Outside and inside

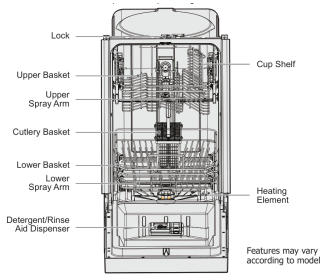


Inside the dishwasher. From the manufacturer's manual, page 4.

- Wipe spills as they happen. Soft damp cloth on the control panel. Stainless door: stainless steel cleaner and a soft cloth.
- Wipe the inside and the inner door with a wet dishcloth.
- Now and then, fill the detergent cup and run it empty on **Normal Wash** with **Sanitize**.
- White spots or smell: run Normal Wash empty with no detergent. Once water has run through, open the door, put an 8 oz cup of white vinegar upright in the lower basket, close and let it finish.


2 Clean the filters

- Turn the dishwasher off and let the heating element cool.

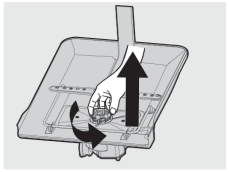


From the manufacturer's manual, page 11.

- Turn the filter insert counterclockwise and lift it out.

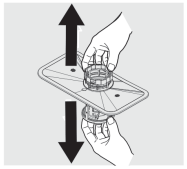

From the manufacturer's manual, page 11.


- Pull out the flat, rectangular fine filter.

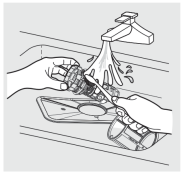

From the manufacturer's manual, page 12.


- Remove food and rinse the filters under running water.

3 Put filters back, spray arm

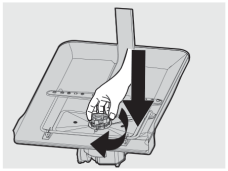

From the manufacturer's manual, page 12.

- Put the filters back in reverse order. Turn the insert clockwise to the close arrow. If it is not closed properly, it cleans less well.

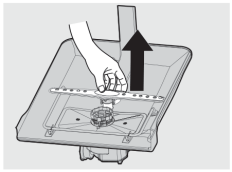

From the manufacturer's manual, page 12.


- Dishes not clean or holes blocked: pull the lower spray arm straight up, gently.
- Clear the holes, push it back and spin it by hand to check it turns.

4 Door seal and rinse aid



From the manufacturer's manual, page 12.

- Door not closing well or leaking: wipe the door seal with a damp cloth to remove food.

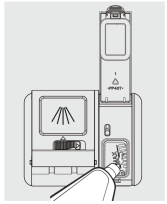

From the manufacturer's manual, page 10.

- Check the rinse aid window about once a month. Lift the tab, fill with liquid rinse aid up to the full mark (not past it), press the cover down firmly.

STOP AND CONTACT PROPERTY MANAGEMENT: A filter or the spray arm is broken or will not lock back. The door seal is torn, or the door still does not close properly. Water leaks or pools under the dishwasher. A bad smell stays after the vinegar cycle. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's Use & Care manual A15931101 for this Frigidaire dishwasher. Pictures are taken from that manual. Updated 21 October 2026.