TUMBLE DRYER GUIDE

How to Use the Dryer

Gorenje Model DE8B


IMPORTANT

- Only dry laundry that was washed in water. Never dry anything with petrol, solvents, cooking oil, wax or stain remover on it: wash it in hot water with detergent first. Fire risk.
- Never dry rubber, latex, foam rubber, shower caps or bathing caps. Take lighters and matches out of pockets.
- Never use the dryer without the door filter, or with a damaged filter.
- The door, the back and the laundry get very hot. Keep children and pets away. Check only laundry is in the drum before you close the door.
- Do not stop the dryer before the end: the last part cools the laundry down. If you must stop it, take everything out quickly and spread it out to cool.

Get the laundry ready

1. Check the care labels. Do not dry items marked "Do not tumble dry", leather, waxed or coated clothes, sequins, or clothes with large wooden, plastic, metal or rusting parts.


2 Sort laundry by type and thickness. Close zips and buttons, tie strings, turn pockets inside out. Put very delicate items in a laundry bag.

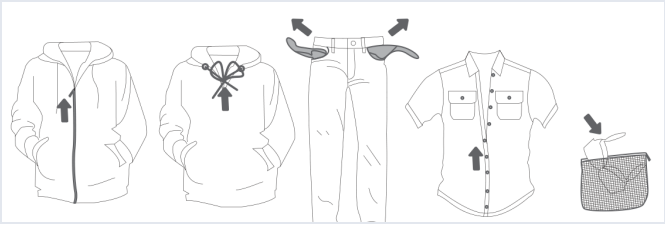

From the manufacturer's manual, page 29.


Load the dryer

1 Plug in the dryer and press On/Off (1).

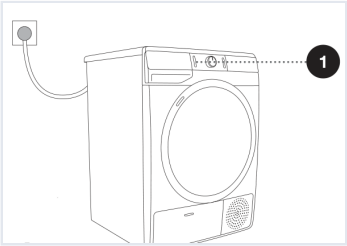

From the manufacturer's manual, page 31.


2 Pull the left side of the door to open it. Check the drum is empty, then put the laundry in.

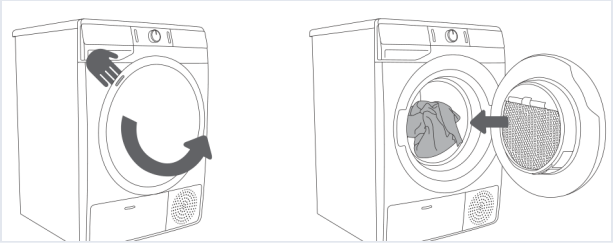

From the manufacturer's manual, page 32.

3 Only dry laundry spun in the washer (800 rpm or faster). Shake out sheets and towels. Do not overfill: see the maximum load for each programme below.


4. Close the door.

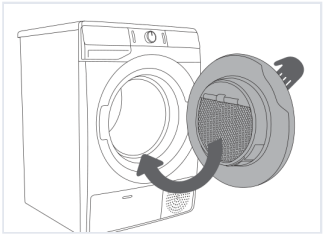

From the manufacturer's manual, page 32.

Choose a programme

1. Turn the knob (2) to a programme. The knob does not turn by itself during the programme.

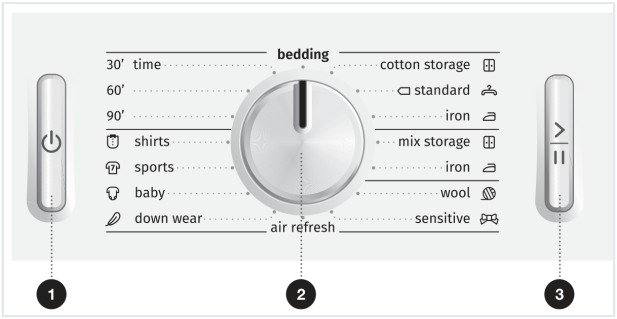

From the manufacturer's manual, page 16.

2. Cotton, up to 8 kg: "cotton storage" (dry to put away), "standard" (dry), "iron" (slightly damp). For towels, sheets and thick cotton.

3. Mixed cotton and synthetics, up to 3.5 kg: "mix storage" (dry) or "mix iron" (delicate synthetics, ready to iron). Shirts, up to 2 kg: fewer creases.


4. Bedding, up to 5 kg. Down wear (down jackets, pillows, duvets), up to 1.5 kg. Dry large items alone.

5. Sports (sportswear, breathable fabrics) 3 kg. Baby 4 kg. Wool (softens wool and silk) 2 kg. Sensitive (very delicate synthetics, may stay slightly damp) 1 kg. Air refresh (no heat) 2 kg.

6. Time 30, 60 or 90 minutes, up to 4 kg: for items still a little damp, or for just a few small items, because the dryer may not sense when a tiny load is dry.


Options (choose before you press Start)

1. Extra dry (4) dries more. Gentlecare (5) uses a lower heat for delicates.

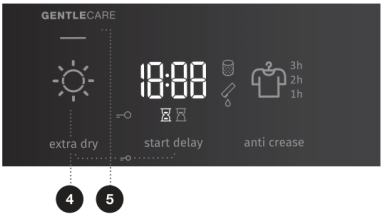


From the manufacturer's manual, page 36.

2. Start delay (7): press it to choose when the dryer starts, from 30 minutes up to 24 hours. Then press Start/Pause (3). To cancel, hold Start delay for 3 seconds.

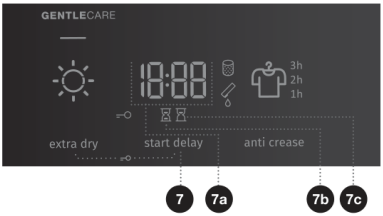

From the manufacturer's manual, page 37.

3. Anti crease (10): press it to choose 1, 2 or 3 hours. The drum keeps turning after the end until you open the door. Use it if you cannot take the laundry out straight away.

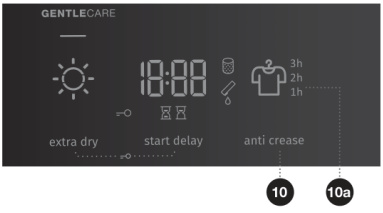


From the manufacturer's manual, page 38.

4. Dim lights show the options you can choose. If a button flashes and beeps, that option does not work with this programme. Options are not kept for the next load.

Start, pause and stop

1. Press Start/Pause (3). Its light is steady while the dryer runs. The time left can change during the programme: this is normal.

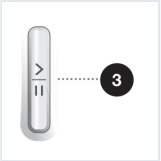

From the manufacturer's manual, page 41.

2. To pause, press Start/Pause. Opening the door also pauses the dryer. Close the door and press Start/Pause to carry on.

3. To add laundry, open the door, press Start/Pause, add the items, close the door and press Start/Pause. Careful: the door and laundry are hot.

4. To change the programme, press On/Off twice (off, then on), choose again and press Start/Pause.

5. To cancel, hold Start/Pause for 3 seconds. The dryer cools down first.

6. If the water tank fills up, the dryer pauses and the tank light (9) comes on. Empty the tank and press Start/Pause.




From the manufacturer's manual, page 52.

When it finishes

1. "End" shows on the display. Open the door and take the laundry out straight away so it does not crease.

2. Clean the door filter, close the door and press On/Off (1). Empty the water tank and unplug the dryer (see the Dryer Care guide).

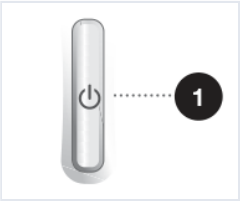


From the manufacturer's manual, page 41.

3. If you do nothing for 5 minutes, the display switches off to save power and Start/Pause flashes. Press On/Off, turn the knob or open the door to wake it.

Child lock

1. Hold Extra dry (4) and Start delay (7) together for 3 seconds. The lock light (6) comes on and the settings cannot be changed. Do the same to unlock. The lock stays on after you switch off.

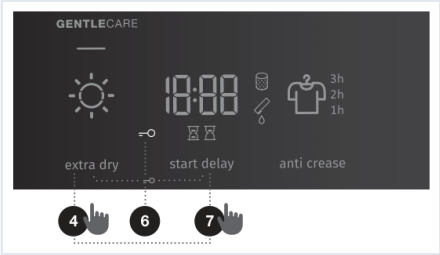

From the manufacturer's manual, page 39.

Tips to save time and power

1. Dry full loads, spin laundry well and clean the filter every time: drying is faster and uses less power.
2. Do not over-dry: it can shrink clothes and makes ironing harder. Fabric softener in the washer is not needed.

STOP AND CONTACT PROPERTY MANAGEMENT

- You smell burning or see smoke, or the power cord is damaged.
- It still does not heat after you clean the filter, or an error code comes back.
- The dryer needs to be moved, or the room could get below freezing.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual for Gorenje Model DE8B. Pictures are taken from that manual or are photos of this appliance. Updated 20 October 2026.