DRYER GUIDE

Dryer Troubleshooting

Whirlpool Model (to confirm)

IMPORTANT

- Never run the dryer if the lint screen is loose, damaged, blocked or missing. Do not reach in while the drum is moving.
- Do not open the dryer cabinet or try to repair it.

The dryer will not run

1. Check the door is firmly closed.
2. Press START/PAUSE firmly. For large loads, press and hold it for 2 to 5 seconds.




From the manufacturer's manual, page 4.

3. Check the breakers or fuses for the dryer (there may be two). If one has tripped, reset it once. If it trips again, or you cannot find it, contact property management.

The drum turns but there is no heat

1. Check that Air Dry is not lit. Press TEMP to choose Hot, Warm or Low.

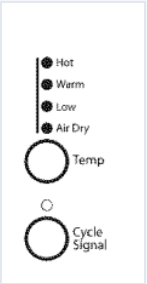


From the manufacturer's manual, page 4.

2. Electric dryers use two breakers or fuses. If one has tripped the drum can turn with no heat. Reset it once; if it trips again, contact property management.

WET light flashing


1. If the WET light flashes with a pause between flashes, the dryer has found a problem that needs service. Stop using it and contact property management.

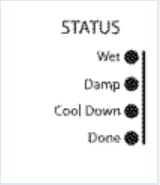

From the manufacturer's manual, page 4.

Clothes not drying, take too long, or are too hot

1. Clean the lint screen. Do this before every load. If it looks coated, wash it (see Dryer Care).

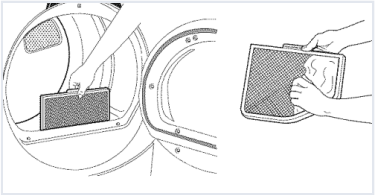

From the manufacturer's manual, page 6.

2. Check Air Dry was not chosen by mistake. Choose the right heat for the fabric.
3. Dry smaller loads so clothes can tumble freely.
4. Check no dryer sheet is stuck on the grille. Use only one sheet, only once.
5. The room must be warmer than 7°C (45°F) for the dryer to work properly.
6. If the dryer is in a closet, make sure the vents at the top and bottom of the closet door are not blocked.
7. If it is still slow, the exhaust vent may be blocked with lint. Contact property management.

Automatic cycle ends too early, or clothes still damp

1. The clothes may not be touching the moisture sensor strips inside the drum. Dry a fuller load (not packed tight), or finish with a timed cycle. If it keeps happening, the dryer may not be level: contact property management.
2. If all automatic loads come out less dry than you like, you can make every automatic cycle dry longer. The dryer must not be running. Press and hold TEMP for at least 6 seconds until it beeps. The STATUS lights show the setting: Wet only = factory setting, Wet + Damp = 15% more drying, Wet + Damp + Cool Down = 30% more drying.



From the manufacturer's manual, page 8.

3. Press TEMP again until the setting you want is lit solid, then press START/PAUSE to save it. To leave without saving, press POWER.

Noises and shaking

1. A thumping sound for the first few minutes after the dryer has not been used for a while is normal.
2. Thumping or shaking during the cycle: the clothes may be knotted or balled up. Separate them and restart.
3. Rattling or clicking: a coin, button or clip may be caught at the front or back edge of the drum. Check the edges. Empty pockets before washing.
4. If it still shakes or vibrates, the dryer may not be level. Contact property management.

Lint, stains, wrinkles or smell

1. Lint on clothes: clean the lint screen.
2. Spots on clothes: put dryer sheets in at the start of the cycle, never on a half-dry load.
3. Blue marks on the drum come from jeans. They do not transfer to other clothes.
4. Wrinkled loads: take clothes out as soon as the cycle ends, and dry smaller loads.
5. Smell after painting, staining or varnishing nearby: air out the room. When the smell is gone, rewash and dry the clothes.

STOP AND CONTACT PROPERTY MANAGEMENT

- You smell gas (gas dryers): do not light anything or touch any switch or phone in the building. Leave, call the gas supplier from a neighbour's phone or from outside, or the fire department, then property management.
- The WET light is flashing with a pause between flashes: the dryer has found a problem that needs service.
- The drum turns but there is no heat, or a breaker or fuse for the dryer trips again after you reset it.
- A burning smell or smoke: press POWER and do not use the dryer again.
- Clothes still take too long after you cleaned the lint screen: the exhaust vent may be blocked or need checking.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10296184B for this Whirlpool electronic dryer. Pictures are taken from that manual. Updated 20 October 2026.