TUMBLE DRYER GUIDE

Dryer Care


Gorenje Model DE8B

IMPORTANT

- Switch off and unplug the dryer before cleaning.
- Never use the dryer without the door filter or the condenser unit, or if either one is damaged. Fire risk.
- Never put chemicals or fragrances in the water tank. The water is not safe to drink.
- Do not clean the dryer with a jet of water or with solvents. Children must not clean the dryer without an adult.

Where the parts are


1. Door filter (1), condenser unit behind the covers at the bottom (2), water tank at the top left (3).

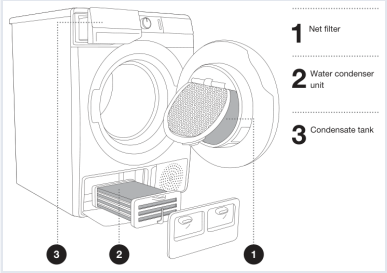

From the manufacturer's manual, page 44.


After every load: clean the door filter

1. Open the door and lift the filter cover. Gently scrape the fluff off the filter with your hand or a cloth.

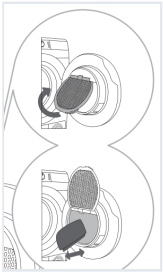

From the manufacturer's manual, page 45.


2. If needed, also wipe the filter housing and the door seal. Close the filter cover. Mind your fingers. The clean-filter light (8) reminds you to do this.

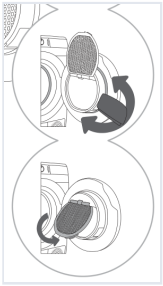

From the manufacturer's manual, page 45.

After every load: empty the water tank

1. Pull the tank out with both hands. Turn it upside down over a sink. Pull out the spout to pour more easily. Careful: the water may be hot.

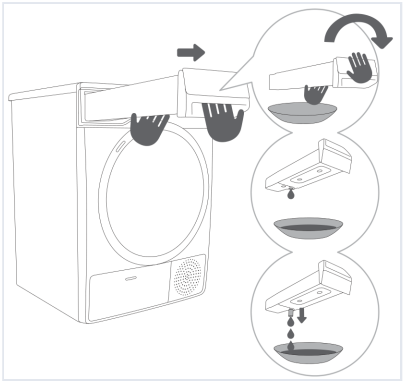

From the manufacturer's manual, page 47.


2. Push the tank back in all the way. If the tank is full, the dryer pauses and the tank light (9) comes on.

3. If property management has connected the dryer hose to a drain, you do not need to empty the tank. Ask if you are not sure.

Regularly: clean the condenser unit


1. Do this whenever drying starts to take longer. The manual gives no set interval. Unplug the dryer and put a cloth on the floor: some water will spill.

2. Open the outer cover. Turn the two levers on the inside cover up and take the inside cover off. Turn the condenser lever up and pull the unit out by its handle.

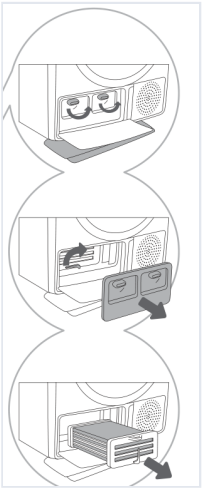

From the manufacturer's manual, page 46.

3. Rinse the unit on both sides under running water and let it drain well. Do not poke between the ribs and do not put it in a dishwasher.

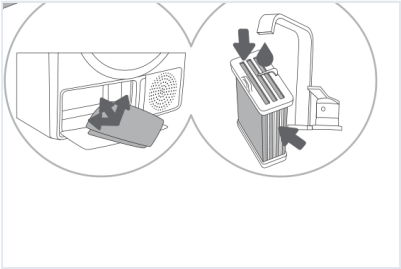

From the manufacturer's manual, page 46.

4. Wipe the space behind it, right to the back, and the seals with a soft damp cloth.

5. Slide the unit back in, turn its lever down, refit the inside cover and close the outer cover.

Outside and around the dryer

1. Unplug the dryer. Wipe the outside with a soft damp cloth, then dry it. No solvents or harsh cleaners. Never spray it with water.



From the manufacturer's manual, page 48.

2. Keep the air vent at the front and the vents at the back clear. Do not push the dryer against the wall or furniture.

3. Keep fluff, dust and dirt from building up around the dryer. Let fresh air into the room while drying.

STOP AND CONTACT PROPERTY MANAGEMENT

- You smell burning or see smoke, or the power cord is damaged.
- It still does not heat after you clean the filter, or an error code comes back.
- The door filter or the condenser unit is damaged or missing.
- Water leaks from the dryer or from its drain hose.
- The dryer needs to be moved, or the room could freeze: water left inside can damage it.
- The inside needs its periodic clean by a service technician.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual for Gorenje Model DE8B. Pictures are taken from that manual or are photos of this appliance. Updated 20 October 2026.