
DRYER GUIDE

How to Use the Dryer

LG dryer, DL*X550, DL*X650 or DL*X670 series (model to confirm)

IMPORTANT: Clean the lint filter before every load, and never run the dryer without it. Never dry anything with gasoline, cleaning solvents or cooking oil on it, or anything with foam rubber, rubber or plastic. Do not touch the door or reach in during steam cycles. Keep children and pets out of the drum.


1 Clean the filter, then load

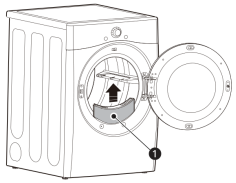

Lint filter (1): pull it straight up. Manual, page 49.

- Pull the lint filter (1) straight up, roll the lint off with your fingers, and push it back until it clicks.
- Load loosely: clothes grow as they dry. Push everything fully inside, away from the door seal.
- Tie strings and belts. Items with zippers or hooks go in a mesh bag.
- Dry heavy items apart from light ones, and follow the care labels.
- Never dry bath mats, rubber, plastic or fibreglass items.

2 Choose a cycle

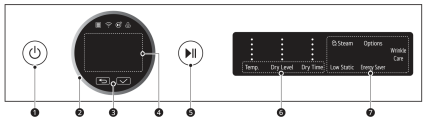

1 Power, 2 cycle knob, 3 Back and ✓ (OK), 4 display, 5 Start/Pause, 6 Temp., Dry Level, Dry Time, 7 options. Manual, page 33.

- Press **Power** (1). Turn the knob (2) to a cycle.
- **Normal**: cotton, jeans, mixed loads. **AI Dry**: adjusts to the load. **Bedding**: comforters, pillows. **Delicates**: blouses, lingerie.
- **Not sure? Choose Normal** for everyday laundry.
- Change **Temp.**, **Dry Level** and **Dry Time** with the buttons (6).
- **Energy Saver** is on by default in Normal: the cycle starts with no heat, which is normal. **Wrinkle Care** tumbles the clothes for up to 3 hours after the cycle.

3 Start and finish

- Press **Start/Pause** (5). Start soon after choosing, or the dryer turns off and the settings are lost.
- To pause, open the door or press **Start/Pause**.
- Buttons beep but nothing happens? **Control Lock** is on. Press **Options**, turn the knob to Control Lock, press ✓, choose Off, press ✓.
- A chime sounds at the end. Unload straight away to avoid wrinkles. With Wrinkle Care on, the dryer turns by itself every few minutes: normal. Turn the dryer off before unloading.

4 Tips for good drying

- Very small load: add a few items so the dryer can sense when it is dry.
- One bulky comforter: pause once or twice and unroll it so the middle dries.
- Wool: follow the label. If still damp, do not repeat the cycle: lay it flat to finish.
- **Steam** options: not for wool, silk or delicate fabrics. Water drips and a drum that stops during steam are normal.

STOP AND CONTACT PROPERTY MANAGEMENT: A burning smell or smoke (a light smell on the very first use is normal). The **Duct blockage** message, or clothes take much longer than usual to dry. The dryer does not heat. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's Owner's Manual MFL71996102 for LG dryers DL*X550, DL*X650 and DL*X670. Pictures are taken from that manual. Updated 29 October 2026.