WASHER GUIDE

How to Use the Washer


LG front-load washer WM5500H*A or WM6500H*A (model to confirm)

IMPORTANT: Use only **HE (High-Efficiency)** detergent, and less than half the maximum on the bottle for an average load. Pods, gel and tablets go in the drum, never in the drawer. Never mix chlorine bleach with ammonia or vinegar. Do not touch the door during steam cycles: it gets very hot. Keep children and pets out of the drum.

1 Load

- Sort by colour, dirt level and fabric. Wash darks apart from lights.
- Empty pockets, close zippers and hooks, tie strings. Small items go in a mesh bag.
- Load loosely, large items first. Do not press clothes down: the door must close easily.
- Do not wash one small item alone. DO NOT OVERLOAD. Overloading will cause leak.
- Waterproof items (rain jackets, mattress covers): use the **Bedding** cycle only.
- Check that nothing hangs over the rubber door seal.


2 Detergent



1 Pre-wash (some models), 2 liquid detergent cup, 3 main wash detergent, 4 fabric softener, 5 liquid chlorine bleach. Manual, page 21.


- **HE detergent** goes in the main wash compartment (3). Liquid: keep the liquid detergent cup (2) in place. Powder: take the cup out first.
- **Pods, gel or tablets**: one only, in the empty drum before the clothes.
- **Fabric softener** (4) and **liquid chlorine bleach** (5): never past the MAX line. Never more than 1 cup of bleach.
- Close the drawer gently. A little water left in it after the wash is normal.
- Do not keep detergent or bleach on top of the washer.

3 Cycle and settings




1 Power, 2 cycle knob, 3 Back and ✓ (OK), 4 display, 5 Start/Pause, 6 Temp., Spin, Soil, 7 options. Manual, page 23.

- Press **Power** (1). Turn the knob (2) to a cycle and press ✓ (3).

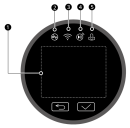

Screen inside the knob: it shows the cycle and settings. Back and ✓ (OK) buttons below. Manual, page 24.

- **Normal**: cotton, jeans, mixed loads. **AI Wash**: adjusts to the load. **Towels**. **Heavy Duty**. **Bedding**: comforters and waterproof items. **Delicates**. **Quick Wash**: small, lightly soiled loads.
- **Not sure? Choose Normal** for everyday laundry.
- Change **Temp.**, **Spin** and **Soil** with the buttons (6). Two chimes and no light means that setting is not allowed for this cycle.



Temp., Spin and Soil levels light up 1 to 5. Manual, page 25.

- **Extra Rinse** (1 to 3 rinses), **Delay Start** (1 to 19 hours), **Fresh Care** (tumbles for up to 19 hours if you cannot unload right away).

4 Start and finish

- Press **Start/Pause** (5). The door locks and the drum turns briefly to weigh the load. Start soon after choosing, or the washer turns off.
- Seeing very little water is normal for this washer.
- **Pause**: press Start/Pause. **Cancel**: press Power; the door unlocks after a short pause.
- Buttons beep but nothing happens? **Control Lock** is on. Press **Options**, turn the knob to Control Lock, press ✓, choose Off, press ✓.
- At the end a melody plays. Unload straight away and check the door seal for small items.
- Leave the door open so the drum dries.

STOP AND CONTACT PROPERTY MANAGEMENT: Water leaks or pools under the washer. A message comes back after a restart, or the washer will not fill or drain. A burning smell, smoke, or a loud banging or grinding noise. If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's Owner's Manual MFL71964314 for LG washers WM5500H*A and WM6500H*A. Pictures are taken from that manual. Updated 29 October 2026.