DRYER GUIDE

# Dryer Care

Whirlpool Model (to confirm)

**IMPORTANT**

- Never run the dryer with the lint screen loose, damaged, blocked or missing. It can overheat.
- Keep gasoline and other flammable products away from the dryer.
- Keep the area around the dryer clear, including piles of laundry in front of it.


## Every load

1. Clean the lint screen before or after each load. Pull it straight up, roll the lint off with your fingers and push it firmly back in.



From the manufacturer's manual, page 13.

2. Use only one dryer sheet per load, and only once. A sheet stuck on the air grille behind the lint screen slows drying.

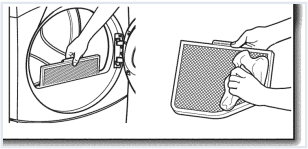

From the manufacturer's manual, page 10.

3. If lint falls into the dryer while you take the screen out, tell property management: it can collect in the vent.

## Every 6 months, or when it looks clogged: wash the lint screen

1. Detergent and softener can coat the screen. It is clogged if lint falls off it while it is in the dryer, or if clothes take longer to dry.
2. Roll the lint off, then wet both sides of the screen with hot water.
3. Scrub the screen with a nylon brush, hot water and liquid detergent to remove build-up.



From the manufacturer's manual, page 13.

4. Rinse it with hot water, dry it well with a clean towel and put it back.

## Clean the drum

1. Wipe the drum with a soft cloth and a little mild dish soap in very warm water. Or use a microfiber cloth with hot water from a spray bottle, then dry it with a second cloth.
2. Rinse with a wet sponge or towel, then tumble a load of clean towels to dry it.
3. Blue marks from jeans on the drum are harmless and do not transfer to other clothes. Dry jeans and bright cottons inside out to avoid them.

## Around the dryer

1. Keep the area around the dryer clear of lint, dust, laundry piles and anything that blocks air flow.
2. Before you go away for a long time, clean the lint screen. Use the dryer only when you are at home.
3. Property management arranges cleaning of the inside of the dryer and the vent at least every 2 years. Do not open the dryer yourself.

**STOP AND CONTACT PROPERTY MANAGEMENT**

- Clothes take much longer than usual to dry, or the display shows "AF": the vent may be blocked.
- The lint screen is damaged or missing, or the drum light stops working (it needs a special 10-watt appliance bulb).
- On steam models, the water hose is bulging, kinked or leaking.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10385092A for this Whirlpool electronic dryer. Pictures are taken from that manual. Updated 20 October 2026.