DRYER GUIDE

How to Use the Dryer


Whirlpool Model (to confirm)

IMPORTANT

- Never dry anything that has ever had gasoline, solvents or any oil on it (including cooking oil), even after washing. No washer can remove all oil. Fire or explosion risk.
- Items with foam, rubber or plastic: dry on a clothesline or with Air Dry only (no heat).
- Never run the dryer if the lint screen is loose, damaged, blocked or missing. Do not reach in while the drum is moving.
- Do not let children play on or in the dryer. Use the dryer only when you are at home.

The control panel


1. POWER turns the dryer on and off. The round button chooses the cycle. TEMP sets the heat on timed cycles. CYCLE SIGNAL turns the end beep on or off. STATUS lights show progress.

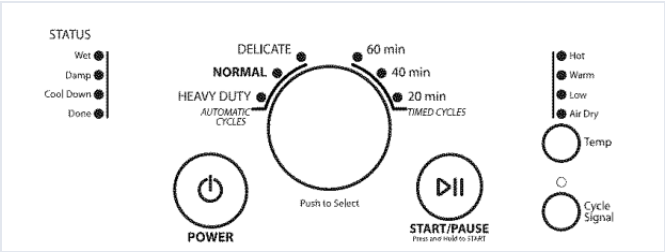

From the manufacturer's manual, page 4. The manual covers several models. Check the buttons match your dryer.

Start a load

1. Clean the lint screen before every load: pull it straight up, roll the lint off with your fingers, and push it firmly back in. Do not rinse it to remove lint.

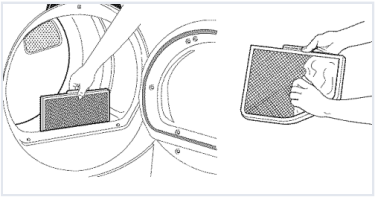

From the manufacturer's manual, page 6.

2. Empty pockets. Put the laundry in loosely and shut the door. Do not overload: clothes need room to tumble.


3. If you use a dryer sheet, use only one, put it in at the start (not on a half-dry load), and use it only once.

4. Press POWER.



From the manufacturer's manual, page 4.

5. Push the cycle button until the light is on the cycle you want. Automatic cycles (left side) sense when the clothes are dry. Timed cycles (right side) run for 60, 40 or 20 minutes.

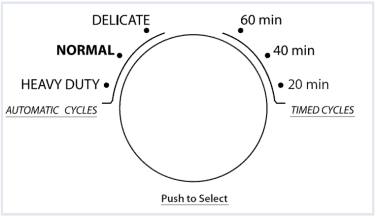

From the manufacturer's manual, page 5.


6. Press and hold START/PAUSE to begin. For a large load, hold it for 2 to 5 seconds.



From the manufacturer's manual, page 4.

Which cycle to choose

1. HEAVY DUTY (hot, about 45 minutes): towels, jeans and other heavy items.
2. NORMAL (warm, about 35 minutes): corduroys, work clothes, sheets.
3. DELICATE (low heat, about 30 minutes): lingerie, blouses, washable woollens.
4. On automatic cycles the heat is set for you and cannot be changed. Times vary with the load size and fabric.
5. Timed cycles (60, 40 or 20 min) are for bulky items, bedspreads and heavy work clothes, or to finish a damp load. They start on Hot: press TEMP until the heat you want (Hot, Warm, Low or Air Dry) lights up. If clothes are still damp at the end, run another timed cycle.

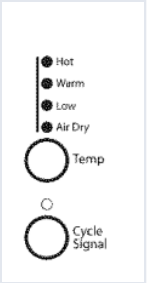

From the manufacturer's manual, page 4.

Air Dry (no heat)


1. Use a timed cycle with Air Dry for foam rubber (pillows, padded bras, stuffed toys) and plastic (shower curtains, tablecloths): about 20 to 30 minutes. Rubber-backed rugs: 40 to 50 minutes. Sheer nylon and olefin: 10 to 20 minutes.
2. Check covers are stitched shut. Stop now and then to shake and fluff pillows. Foam pillows dry slowly: make sure they are completely dry.

Change, pause or stop

1. You can change the cycle or the heat any time before you press START/PAUSE. Three short beeps mean that choice is not possible, and it is ignored.
2. To change the cycle after it has started: press POWER, press POWER again (or the cycle button), choose the new cycle, then press and hold START/PAUSE. The new cycle starts from the beginning.
3. On timed cycles you can change the heat at any time by pressing TEMP.
4. To pause: open the door or press START/PAUSE once. To restart: close the door and press and hold START/PAUSE.
5. To stop at any time: press POWER.

Finish

1. The STATUS lights show Wet, Damp, Cool Down and Done. A light inside the drum turns on when you open the door.

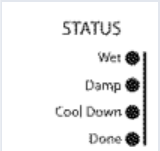

From the manufacturer's manual, page 4.

2. When Done lights up, take the clothes out straight away so they do not wrinkle.
3. Press CYCLE SIGNAL, before or during a cycle, to turn the end-of-cycle beep on or off.

STOP AND CONTACT PROPERTY MANAGEMENT

- You smell gas (gas dryers): do not light anything or touch any switch or phone in the building. Leave, call the gas supplier from a neighbour's phone or from outside, or the fire department, then property management.
- The WET light is flashing with a pause between flashes: the dryer has found a problem that needs service.
- The drum turns but there is no heat, or a breaker or fuse for the dryer trips again after you reset it.
- A burning smell or smoke: press POWER and do not use the dryer again.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10296184B for this Whirlpool electronic dryer. Pictures are taken from that manual. Updated 20 October 2026.