WASHER GUIDE

Washer Care

Whirlpool Model (to confirm)

IMPORTANT

- Use only HE (High Efficiency) detergent, and measure it. Other detergents leave a film that causes smells.
- Do not use abrasive cleaners. Wear rubber gloves when cleaning with bleach and follow the bleach label.
- Do not take any part of the washer apart or try to repair it.

After every wash


1. Take the laundry out as soon as the wash ends.
2. Leave the door slightly open so the inside can dry. The door seal is tight, so a closed door traps damp air and causes smells.
3. Wipe spills on the outside with a soft damp cloth or sponge, with mild soap and water. Wipe the outside now and then to keep it clean.

Clean the washer once a month

1. Take everything out of the drum. Do not put clothes in for this cycle.

2. Put one AFFRESH washer cleaner tablet in the drum (recommended). Or put 2/3 cup (160 mL) of liquid chlorine bleach in the bleach compartment (C). No detergent, and no more bleach than that.


3. Close the door and the drawer. Press POWER, select CLEAN WASHER with affresh, and press and hold START/ PAUSE.

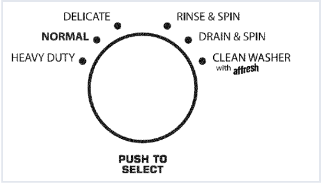

From the manufacturer's manual, page 13.

4. For about 3 minutes the drum turns without water and the door unlocks and locks again, while it checks the drum is empty. This is normal.

5. If the Wash light flashes, items were found: press POWER, take them out and start again.

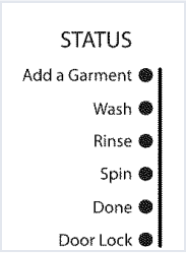


From the manufacturer's manual, page 13.

6. Let the cycle finish (about 54 minutes). Then leave the door slightly open so the inside dries.

7. If the washer already smells, use 3 AFFRESH tablets instead of 1, and wipe away any residue after the cycle.

Clean the door seal (when you see stains)

1. Take everything out of the drum. Pull back the coloured door seal (A) and check under it for stains and small items.

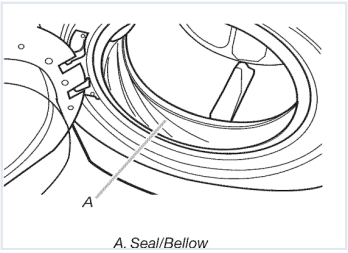


A. Seal/Bellow

From the manufacturer's manual, page 17.

2. If there are stains: mix 3/4 cup (177 mL) of liquid chlorine bleach in 1 gallon (3.8 L) of warm water. Wipe the seal with a damp cloth and this mix, wait 5 minutes, then wipe it dry. Leave the door open to air dry.

Clean the dispenser drawer (when products build up)

1. Pull the drawer out, press the release lever (A) and take the drawer out.

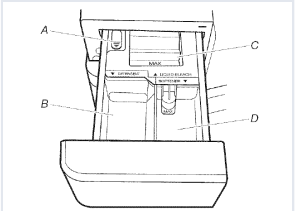

Dispenser

A. Dispenser release lever
B. Main Wash detergent compartment
C. Liquid chlorine bleach compartment
D. Fabric softener compartment

From the manufacturer's manual, page 12.

2. Take out the inserts (the siphons in the softener and bleach compartments). Wash all the parts under running water. Do not put them in the dishwasher.

3. Put the inserts back and slide the drawer back in. A clogged softener compartment or drawer stops products from going in.

If you go away for a while

1. Use the washer only when you are at home. Before a long trip, leave the door slightly open and ask property management whether the washer should be unplugged and the water taps turned off.

2. If the hot water has not been used for 2 weeks or more, hydrogen gas can build up in the pipes. Before using the washer, turn on all hot water taps and let them run for several minutes. Do not smoke or use any flame while you do this.

STOP AND CONTACT PROPERTY MANAGEMENT

- A water hose behind the washer is bulging, cracked, kinked or leaking. (The manual says the hoses should be replaced every 5 years.)
- A bad smell stays after the monthly cleaning cycle.
- The washer needs to be moved, or the room could freeze: this must be done by a technician.
- Water leaks from the washer, or the Wash light keeps flashing after you restart.

If you are unsure, or if the problem continues, stop using the appliance and contact property management.

Based on the manufacturer's manual W10307859B (Use & Care Guide) for this Whirlpool front-loading washer. Pictures are taken from that manual. Updated 20 October 2026.