# SPEAR3 RF System

## Legacy System Architecture

| | |
|---|---|
| **Document ID** | Doc L |
| **Revision** | R1 |
| **Status** | Released |
| **Author** | Faya Wang |
| **Reviewer** | Jim Sebek, Marc Larrus and Ben Morris |
| **Classification** | Tier 2 — Legacy System and Operational Reference |
| **Affiliation** | SSRL, SLAC National Accelerator Laboratory |
| **Date** | 5 November 2026 |

This document records the pre-upgrade configuration of the SPEAR3 RF station from the original drawings, publications, engineering records and legacy code. The Open Items register lists the points that still require investigation. The document is ready for review.

# Contents

**Revision History** **9**

**Open Items — Still To Be Confirmed** **9**

**Document Scope and Provenance** **10**

**I SYSTEM OVERVIEW** **11**

**1 Introduction and Purpose** **11**

**2 System Architecture Overview** **11**
2.1 Top-Level System Block Diagram . . . . . 11
2.2 Control Boundaries . . . . . 11

**3 Physical Layout and Locations** **13**

**4 Key System Parameters** **16**
4.1 RF System Parameters . . . . . 16
4.2 HVPS Parameters . . . . . 17
4.3 Operating Point (June 2020) . . . . . 18

**II RF SIGNAL CHAIN** **19**

**5 LLRF Controller (VXI System)** **19**
5.1 Overview . . . . . 19
5.2 VXI Crate Layout and Module Inventory . . . . . 19
5.3 CLK (Clock and RF Reference Distribution) Module . . . . . 21
5.4 RFP (RF Processor) Module — Heart of the LLRF . . . . . 24
5.5 MPS Shutoff Module (Slot 5) . . . . . 24
5.6 IQA (IQ/Amplitude Detector) Modules . . . . . 25
5.7 ARC Interlock Module (AIM) . . . . . 26
5.8 Feedback Loop Architecture . . . . . 27
5.9 Communication Architecture . . . . . 28

**6 Klystron and Drive System** **28**
6.1 Klystron . . . . . 28
6.2 Drive Amplifier . . . . . 30

**7 Waveguide Distribution Network** **31**
7.1 Network Topology . . . . . 31
7.2 Monitored RF Signals . . . . . 32

**8 RF Cavities and Tuner Assemblies** **34**
8.1 Cavity Specifications . . . . . 34
8.2 Tuner Mechanical Assembly . . . . . 34

**III POWER SYSTEMS 40**

**9 High-Voltage Power Supply — Power Section 40**
9.1 Architecture Overview . . . 40
9.2 Power Conversion Chain . . . 40
9.3 Key Component Specifications . . . 40
9.4 Monitoring Signals (B514 → B118) . . . 43
9.5 Stored Energy and Discharge Times . . . 44
9.6 Control Power and Trigger Pulses . . . 46

**10 HVPS Control System (B118) 52**
10.1 Overview . . . 52
10.2 SLC-500 PLC Hardware Configuration . . . 55
10.3 Control Functions . . . 56
10.4 The EMERGENCY OFF Mushroom . . . 57
10.5 Analog Regulation . . . 58
10.6 Terminal Strips and External Connections . . . 59

**11 Enerpro SCR Firing System 60**
11.1 Overview . . . 60
11.2 Current Hardware . . . 61
11.3 Phase References . . . 62
11.4 Legacy vs. Upgrade Firing Board . . . 63

**12 Arc Protection and Crowbar System 64**
12.1 Four-Layer Protection Architecture . . . 64
12.2 Arc Trigger Inputs . . . 65
12.3 Klystron Arc Energy Budget . . . 65

**IV PROTECTION AND SAFETY SYSTEMS 66**

**13 Personnel Protection System (PPS) Interface 66**
13.1 Overview . . . 66
13.2 Legacy PPS Chain 1: HV Contactor . . . 66
13.3 Legacy PPS Chain 2: Ross Grounding Switch . . . 68
13.4 Identified Issues . . . 68
13.5 Relay Chain Details (Contactor Disconnect Panel) . . . 68
13.6 PPS Dual-Chain Interaction and Roles . . . 71

**14 RF Machine Protection System (MPS) 71**
14.1 Overview . . . 71
14.2 Hardware Evolution . . . 72
14.3 Protection Functions . . . 72
14.4 MPS Wiring . . . 72

**15 Interlock Architecture and Signal Chain** **73**
15.1 Overview . . . 73
15.2 Interlock Chassis and RF Local Display Panel . . . 73
15.3 Complete Trip Chain . . . 75

**V CONTROL SOFTWARE AND INSTRUMENTATION** **78**

**16 EPICS IOC and SNL Software Architecture** **78**
16.1 IOC Platform . . . 78
16.2 rf_states.st — Master Station State Machine . . . 78
16.3 rf_hvps_loop.st — HVPS Supervisory Control . . . 79
16.4 rf_tuner_loop.st — Cavity Tuner Control . . . 79
16.5 rf_dac_loop.st — Drive/Gap Voltage DAC Control . . . 79
16.6 rf_calib.st — Calibration Sequences . . . 79
16.7 rf_msgs.st — Message Logging . . . 79

**17 Tuner Control System** **79**
17.1 Configuration Currently in Service . . . 79
17.2 Planned Upgrade Configuration (not yet installed) . . . 80
17.3 Tuner Motion Parameters . . . 80

**18 Diagnostics, Calibration and Monitoring** **82**
18.1 RF Signal Monitoring . . . 82
18.2 HVPS Monitoring . . . 82
18.3 Fault Recording . . . 82
18.4 Calibration Data . . . 83
18.5 Fault Data Availability and Analysis . . . 83

**VI INTEGRATION AND LEGACY CONSIDERATIONS** **85**

**19 Cabling and Interconnections** **85**
19.1 Major Cable Runs . . . 85
19.2 Connector Types . . . 85

**20 Known Issues** **85**
20.1 Critical Issues . . . 85
20.2 Operational Workarounds . . . 86

**A Source Document Reference Index** **87**
A.1 Published Papers and Conference Proceedings . . . 87
A.2 Vendor and Companion References . . . 87
A.3 Repository Source Index . . . 87

**B Symbol and Notation Conventions** **95**
B.1 Frequently Used Symbols . . . 95
B.2 Abbreviations . . . 95
B.3 Conventions . . . 96

# List of Figures


1 Top-level architecture of the legacy SPEAR3 RF station. Buildings: **B132** klystron and control, **B118** HVPS control, **B514** HVPS power. Solid lines are electrical or hardwired connections; dashed lines are optical fibers. . . . 12

2 LLRF control electronics in Room 101, Building B132 — racks B132-11 to B132-15 from left to right, the primary control location for the SPEAR3 RF station . . . 13

3 Building B132 — the klystron building housing the LLRF control electronics, drive amplifier, and RF MPS . . . 14

4 Building B514 — the high-voltage power supply substation housing the main transformer/rectifier tank, phase tank, and crowbar tank . . . 15

5 HVPS grounding and termination tank located in Room 101, Building B132 — cylindrical stainless/aluminum vessel with two high-voltage cable entries through flexible metallic conduit at the top; contains the Ross Engineering HV grounding switch, the Danfysik UltraStab DC-CT that measures klystron cathode current, a 3.3 mΩ (15 A = 50 mV) return-cable shunt, and the Pearson CT-110 wide-bandwidth current transformer used for klystron arc detection [R25] . . . 15

6 RF cavities installed in the SPEAR3 storage ring tunnel (inward view) — showing the waveguide connections and cavity arrangement in the radiation enclosure . . . 16

7 Legacy VXI crate in B132. IQA-2 measures cavities 1–2 and IQA-3 cavities 3–4, including forward, reflected and probe signals [R60], [R76]. . . . 19

8 Rear of the LLRF VXI crate and Fast Interlock Chassis in rack B132-11. The three blue optical fibers joined to the three orange ones on the outside run to the HVPS controller in B118 (SCR ENABLE, KLYSTRON CROWBAR and STATUS); the remaining blue fibers come from the optical arc detectors, of which those at the cavity windows are not in use [R87]. 20

9 VXI crate slot map. Elma 13-slot chassis, label B132-101-11-24. Slots 3, 8 and 10 are empty: the gap-voltage feed-forward module and the two comb-filter modules that PEP-II carries are not required by SPEAR3. . . . 20

10 Clock module top-level inputs and outputs. . . . 22

11 Functional clock chains from [R53]. ESYNC and ASYNC synchronize counters/dividers; TCLK comes from the turn counter, with a separate fiducial-error comparison. Register, delay-vernier and fault circuitry are omitted. . . . 23

12 Communication architecture below the VXI IOC. . . . 28

13 Marconi klystron in B132, with collector cooling and solenoid assembly. . . . 30

14 Klystron filament control chassis (SD-340-311-00) — supplies the klystron heater. A solid-state relay switches the 120 V input and a motor-driven variac sets the output, rated 140 V and 1 kVA; an AC voltmeter and an ammeter, fed by the 10:1 current transformer T1, monitor it. The PLC-5 drives FILAMENT_ON and MOTOR-UP through connector J1 and reads the voltage and current monitors there [R85]. . . . 30

15 Spare RF drive amplifier (KAW2051M12) held in B132 — amplifies the LLRF drive signal to ~29 W (44.6 dBm) at ~476.3 MHz to drive the klystron input . . . 31

16 Waveguide distribution network from klystron to cavities. Each magic-tee divides the incident power; return power divides between the source and load ports according to the relative phases of the returning waves. . . . 31

17 AFT circulator — positioned between the klystron output and the magic-tee splitter network; routes reflected power from the load network away from the klystron to protect it from reflected energy . . . 32

18 Magic-tee power splitter and bellows network on the SPEAR3 tunnel roof — the two-stage magic-tee arrangement divides RF power equally among all four cavities . . . . . 32
19 Waveguide distribution network routing RF power from the klystron output through the circulator, magic-tee splitters, and into the tunnel toward the four RF cavities . . . . . 33
20 Water-cooled waveguide load — absorbs circulator dump power and magic-tee difference-port reflected power; water cooling carries away dissipated RF energy. This load serves the magic-tee on the tunnel roof. . . . . 33
21 High-conductivity water (HCW) cooling station behind the booster — supplies cooling water to the waveguide loads, absorbing reflected and dump power from the RF distribution network . . . . . 34
22 PEP-II bare single-cell RF cavity — copper cavity body prior to installation of HOM dampers, tuner assembly, and waveguide couplers; the SPEAR3 cavities are of this same design . . . . . 35
23 RF cavity assembly — cavity body with waveguide coupler, HOM damper waveguide stubs, and tuner plunger installed . . . . . 35
24 Labeled RF cavity assembly — identifying the accelerating cell, input coupler, HOM damper ports, movable tuner plunger, probe port, and ceramic RF window . . . . . 36
25 Movable tuner plunger assembly mounted below an RF cavity — the SLO-SYN stepper motor drives the plunger in/out to shift the cavity resonant frequency and minimize RF reflection under varying beam loading . . . . . 36
26 HOM (Higher-Order Mode) load at an E-plane mitre bend in the waveguide stub — absorbs parasitic cavity modes that would otherwise cause beam instability . . . . . 37
27 HOM load at an H-plane mitre bend — the three HOM loads per cavity (E-mitre, H-mitre, and plate) together damp all significant parasitic resonances above the fundamental accelerating mode . . . . . 37
28 Water-cooled HOM load plate — dissipates HOM power as heat, carried away by the high-conductivity water cooling system. . . . . 38
29 Four RF cavities installed in the SPEAR3 storage ring tunnel (outward view, tuner side) — showing the complete cavity row with waveguide distribution network and interconnecting bellows runs visible . . . . . 38
30 HVPS power conversion chain, substation to klystron cathode. . . . . 45
31 PEP-II Klystron Power Supply — annotated circuit schematic showing the complete power conversion chain from the 12.5 kV 3-phase input through the disconnect/breaker, phase-shifting transformer (T0), thyristor-controlled rectifier bridges (40 kV, 80 A), filter inductors, secondary rectifier stages, 8 $\mu$F/30 kV filter capacitors, 500 $\Omega$/1 kW filter resistors, 30 kV/30 A rectifiers, Crowbar, and Termination Tank to the Klystron (90 kV, 27 A). The intermediate DC levels labeled on the power stage outputs ($-26$ kV, $-52$ kV, $-77$ kV, $-90$ kV) are cumulative stage tap voltages. The SPEAR3 HVPS is directly derived from this PEP-II design 46
32 HVPS2 main oil tank at Building B514 — this large oil-immersed enclosure houses the phase-shift transformer (T0), the two rectifier transformers (T1, T2), the two filter inductors, four filter capacitors with their eight resistors, and the main and filter diode rectifier stacks. The SCR phase controller and the SCR crowbar are mounted inside it in their own isolated oil tanks with oil-to-oil bushings, so either can be serviced without contaminating the main tank oil [R6]. SPEAR1 is an identical installation . . . . . 47

33 Thyristor stack assemblies inside the HVPS2 phase tank, viewed into the side access opening with the cover removed — showing columns of Powerex T8K7 SCR thyristor discs (flat black cylinders) paired on copper bus bar assemblies with gate driver signal wiring; this photo was taken with SPEAR2 drained and accessed during the April 2026 scheduled downtime; SPEAR1 contains identical hardware . . . . . 47
34 HVPS cable switch tank at Building B514 — provides the switchover connection between the SPEAR1 and SPEAR2 HVPS units and the klystron HV cable; allows the active unit to be changed without disconnecting the klystron high-voltage cable . . . . . 48
35 HVPS2 installation at Building B514 showing the large beige oil-filled power supply enclosures, ”SPEAR 2” identification label, and ”DANGER HIGH VOLTAGE” placard on the panel door; the cable trays, conduit runs, and grounding conductors are visible; a ”DO NOT ENERGIZE” lock-and-tag notice is visible at left (SPEAR2 is the off-duty unit); SPEAR1 forms an identical installation on the right of SPEAR2 . . . . . 49
36 NWL manufacturer’s rating plate on the SPEAR2 transformer tank, at the left-hand end of the installation above. It reads: **Model No. 39308**, **2,750 kVA klystron power supply**, input **12.5 kV at 127 A AC, 3-phase, 60 Hz**, output **−90 kV DC at 27 A DC**, 55 °C rise, Class OA, 7.5% impedance, 95 kV BIL, 2,600 gallons of oil, 67,400 lb, dated Mar 1997. The plate also carries the winding and rectifier schematic with its cumulative DC stage taps, and cites NWL drawings D36941 (physical outline) and D36943 (electrical schematic). SPEAR1 carries an identical plate . . . . . 50
37 HVPS2 main oil tank being accessed from the top during the 2026 HVPS inspection — revealing the internal copper bus bar assembly and SCR bridge structures below . . . . . 51
38 HVPS controller enclosures in Building B118. The two units are identical; one is energized and the other completely switched off, with the roles exchanged at each scheduled down. . 52
39 HVPS controller enclosure interior (SPEAR1) — the SLC-500 PLC rack (center, a 10-slot chassis carrying the CPU and I/O modules in slots 0–9 with slot 4 empty, labeled ”SPEAR 1 RFHVPS”), four blue KEPCO DC supplies — **PS-1** 120 V/1 A, **PS-2** 240 V/0.25 A, **PS-3** 5 V/20 A and **PS-4** 120 V/1 A, in that order on both the chassis labels and [R63] — the Enerpro FCOG6100 SCR firing board (dark blue PCB, lower center), the analog regulation board (green PCB), and terminal strips TS-1 to TS-6 in the lower section; the BNC monitoring output panel is at lower right. On [R63] the three rails arrive at every SCR gate-trigger module as `+100V` (red, PS-1 and PS-4), `+200V` (orange, PS-2) and `BIAS` (blue, PS-3), and rung 0068 switches their 120 V AC feed; whether the 5 V rail is still loaded has not been checked. [O12] . . . . . 53
40 SPEAR1 **local control panel** labeled ”SPEAR 1 HOFFMANN BOX”. Across the top are the four permit status lamps **PPS PERMIT**, **EMERGENCY OFF**, **KEY ENABLE** and **WAVEGUIDE PERMIT** — LED1 to LED4 of the LOCAL CONTROL PANEL block on [R63] — all lit green here. Below them are the OFF and ON pushbuttons, the EMERGENCY OFF mushroom, and the **PERMIT** key switch, which must be turned from DISABLE to **ENABLE** before the HVPS can be switched on; the key contact drives SLC-500 slot 6 IB16 IN12, labeled ”KEY ENABLE” on [R63]. The QuickPanel II touchscreen is the local operator display, with a taped warning that only its lower-left corner may be touched to wake it, because a stray touch elsewhere can shut the RF HVPS off. SPEAR2 has an identical panel. 54
41 HVPS analog voltage regulation loop. The analog regulator card compares the PLC reference with the HVPS output voltage feedback and generates a *bipolar* error signal; that error is weighted and added to the PLC’s *unipolar* feedforward output to form SIG HI. Power-line harmonics are clearly visible on the error signal in normal operation. . . . . 58
42 The two legacy PPS chains. . . . . 67

43 PPS contact readback trace across four drawings. . . . . 70
44 RF Local Display Panel 340-310 (serial 12) in rack B132-12. (a) Front: the station mimic and summary lamps, among them the five SPARE lamps, all lit; the STATION LOCK-OUT (online/offline) and STATION MODE (local/remote) key switches; the HVPS voltage and current monitor connectors. (b) Rear: the eleven orange fibers, the beam-abort BNC J6 (not cabled), J2 (SYSTEM I/O) and J3 (FROM A/B INPUTS) with their cables, the fuse F1 (1/2 A) and the AC inlet J1. The chassis above it is a spare Fast Interlock Chassis 340-307, a slightly different version of the 340-308 in service, not in use. . . . . 74
45 Protection interfaces and supervisory actions. The Layer 1 fibers run between the RF Local Display Panel in B132 and the HVPS controller in B118 (§15.2); the klystron-arc and transformer-arc triggers act on the controller's trigger boards (§12.2). . . . . 76
46 Fast Interlock Chassis 340-308 in B132: lamps for the six AIM commands and the twelve arc trip tests, channel monitor points, the spare-fault input and the J16 detected-klystron-power monitor output, which is not cabled. . . . . 77
47 Rear of the Fast Interlock Chassis 340-308 in rack B132-11: the blue arc-detector fibers on the transmit (TX CH.1 to 12, J33 to J44) and receive (RX CH.1 to 12, J17 to J28) connectors; the six orange command fibers to the RF Local Display Panel (J45 to J50: FILAMENT ON, SOLENOID ON, HVPS ON, BEAM ABORT, FILAMENT TIMEOUT, FAULT RESET) and the two from it (J29 HEARTBEAT, J30 A/B SUMMARY); at the right, the RF amplitude output J31 and the RF input J32. . . . . 77
48 Allen-Bradley Cavity Tuner Motor Driver chassis (SLAC 340-315, SN08) in the B132 electronics rack — showing the SLC adapter module (leftmost, with COMM FAULT indicator and STATUS showing RUN/fault) followed by four AB 1746-HSTP1 STEPPER modules (each with RUN, CCW, CW, ERR, FLT indicators; green RUN lights confirm active communication), plus one additional STEPPER module at far right. This chassis is the motion controller currently driving all four cavity tuners; it is to be replaced by the Galil DMC-4143 when the LLRF upgrade project completes . . . . . 81
49 Cavity Tuner Motor Driver 340-315, SN08. . . . . 82

# Revision History

| Revision | Date | Scope of Change | Summary |
|---|---|---|---|
| **R1** | 2026-11-05 | RF Local Display Panel; HVPS fibers; klystron tube history; filament chassis; station modes | Identified the Local Control Chassis as the RF Local Display Panel 340-310 (rack B132-12) and rewrote §15.2 from its drawings and J. Sebek's notes. The three HVPS fibers run between the panel in B132 and the HVPS controller in B118, not to B514; the rack photograph, trigger-board description, cabling table and Figures 1 and 45 are updated to match. FICTRL destinations now name the panel, and `Beam_Abort_Reset` is a register bit, not one of Dusatko's six control signals. Open item O7 now covers the panel logic and the beam-abort endpoint. Added the klystron tube history and spares status. Added [R81]–[R84]; [R5] now cites Doc 0 R4. From the original drawings and J. Sebek's notes: the 10:1 T1 of the filament chassis is the ammeter's current transformer, not a step-down transformer, and the PLC-5, not the AIM, switches the chassis [R85]; the panel's solenoid inputs come from PLC-5 outputs [R82]; SPEAR3 does not use PARK or ON_FM [R86]. Added [R85] and [R86]. Listed the control racks B132-11 to B132-15 (§3) and the two arc triggers of the HVPS controller (§12.2); added [R87]. |
| **R0** | 2026-10-05 | Draft | Initial draft of the Tier 2 legacy system reference for the SPEAR3 RF system, documenting the complete "as-built" and operational configuration prior to the LLRF Upgrade Project. |

# Open Items — Still To Be Confirmed

| ID | Item | Required Evidence | Needed Before | Page |
|---|---|---|---|---|
| O1 | Manual ground-switch contact | Identify the landed NO/NC contact and test its sense; distinguish the test-stand wiring [R64] from the SPEAR3 schematic [R62]. | Grounding verification | p. 68 |
| O2 | RF MPS trip matrix | Supply deployed logic and a per-fault truth table linking inputs to RF inhibit, SCR inhibit, crowbar and reset behavior. | Protection acceptance | p. 72 |
| O3 | Terminal inventory | Complete TS-1–TS-8 identification and distinguish surveyed wiring from drawing-only assignments. | Controller rewiring | p. 59 |
| O4 | Physical RF channel map | Verify the recovered 24-input logical map [R76] against connectors, cable labels and cavity identities. | RF cabling changes | p. 25 |
| O5 | PPS pin pairs / lamps | Confirm E–F, G–H, A–B and C–D functions, readback excitation and lamp-state interpretation with PPS. | PPS approval | p. 59 |

| ID | Item | Required Evidence | Needed Before | Page |
|---|---|---|---|---|
| O6 | RF Local Display Panel logic | Read out the equations of the panel's GAL22V10 logic device, which forms SCR ENABLE, KLYSTRON CROWBAR and the beam abort [R84]. | Interface Chassis logic design | p. 73 |
| O7 | Crowbar configuration | Record SCR type and matching trigger-board revision/components for every stack. | Board replacement | p. 43 |
| O8 | TS-5 assignments | Reconcile the terminal/color/function disagreements in the controller and switchgear drawings by an approved field trace. | Contactor rewiring | p. 59 |
| O9 | Current-sense circuit | Confirm the 0.5-ohm burden and Slot-9 input assignment; [R72]'s prose and measurement table disagree. | Regulator calibration | p. 61 |
| O10 | PPS sequence / timing | Supply the external PPS logic and end-to-end tests, including either-permit loss, stuck outputs and contactor blocking. | PPS approval | p. 71 |
| O11 | EMERGENCY OFF scope | Test the mushroom end to end: record which slot-6 inputs drop, whether the emergency-off latch and alarm assert, and whether the vacuum contactor opens. Compare the running ladder against [R26]. | Any reliance on the mushroom for operation | p. 58 |
| O12 | PS-3 5 V rail | Check at the terminals whether the 5 V supply still feeds the gate-trigger `BIAS` inputs, or is grounded. | Controller refurbishment | p. 53 |
| O13 | MPS Shutoff module | Find its drawing; record how the SPEAR MPS and orbit-interlock permits enter it and the electrical form of its J3 output, and confirm what the AIM does when its External MPS channel, which is enabled, trips. | Interface Chassis installation | p. 25 |

# Document Scope and Provenance

## Purpose

Doc L consolidates the documented pre-upgrade RF plant, control electronics, software, protection interfaces and cabling into a baseline for engineering review. The legacy system uses the VXI LLRF crate, PLC-5 RF MPS, SLC-500 HVPS controller and Allen-Bradley tuner controllers. Prepared replacements are identified only to avoid confusing them with this baseline.

## Reference Tag Format

**[Rn]** links to a source-index entry, indexed in Appendix A.

# Part I
# SYSTEM OVERVIEW

## 1 Introduction and Purpose

SPEAR3 adopted the PEP-II High Energy Ring station architecture: one klystron, four cavities, a 12-pulse HVPS, waveguide distribution and VXI LLRF electronics. The SPEAR3 installation was commissioned in late 2003 [R1]. PEP-II publications [R2], [R3] describe the parent system; they are not records of every SPEAR3 modification. Figure 1 summarizes the documented legacy configuration.

## 2 System Architecture Overview

### 2.1 Top-Level System Block Diagram

The legacy SPEAR3 RF system consists of the major elements listed below, connected as shown in Figure 1. Figure 2 shows the B132 rack row that holds the control electronics; §3 lists its five racks.

| Block | Location | Description |
|---|---|---|
| IOC / VXI crate | B132 | VxWorks IOC, six SNL programs, CLK, RFP, three IQAs and AIM; module map in §5 and software in §16 [R53], [R60]. |
| Remote I/O | B132 / B118 | One 6008-SV1R scanner with HVPS, stepper and RF MPS adapters; map in §5.9 [R60]. |
| HVPS controller | B118 | SLC-500, analog regulator and Enerpro firing boards; power sequencing and regulation in §§10–11 [R25], [R26], [R40]. |
| RF MPS | B132 | PLC-5 / 1771 equipment protection; distinct from facility MPS and PPS. Trip-matrix limits in §14 [R21]. |
| Interlock interfaces | B132 | Fast IC 340-308, AIM and RF Local Display Panel 340-310; the panel's logic equations remain O6. Hardware boundaries in §15 [R53], [R79], [R81]. |
| HVPS power / PPS | B514 / B132 | Two selectable supplies, primary contactor and termination-tank grounding switch. Ratings, stored energy and PPS dependencies in §9 and §§12–13 [R6], [R22], [R25]. |
| Klystron / drive | B132 | Marconi tube driven by KAW2051M12 amplifier; more details on the tube are discussed in §6 [R1], [R32], [R56]. |
| Waveguide / cavities | B132 / tunnel | AFT circulator, three magic-tees, loads and four HOM-damped copper cavities (§§7–8) [R1], [R7]. |
| Tuner system | B132 / tunnel | Four 1746-HSTP1 axes and SS2000MD4 drivers operate M093-FC11 motors; potentiometers indicate position (§17) [R36], [R78]. |

### 2.2 Control Boundaries

The RFP closes the fast RF loop in hardware. The IOC provides setpoints, tuner control, sequencing and diagnostics; its Remote I/O link is not the fast interlock path. The RF MPS and HVPS PLCs have separate protection responsibilities. PPS contactor and grounding functions require their own approved safety logic and verification.

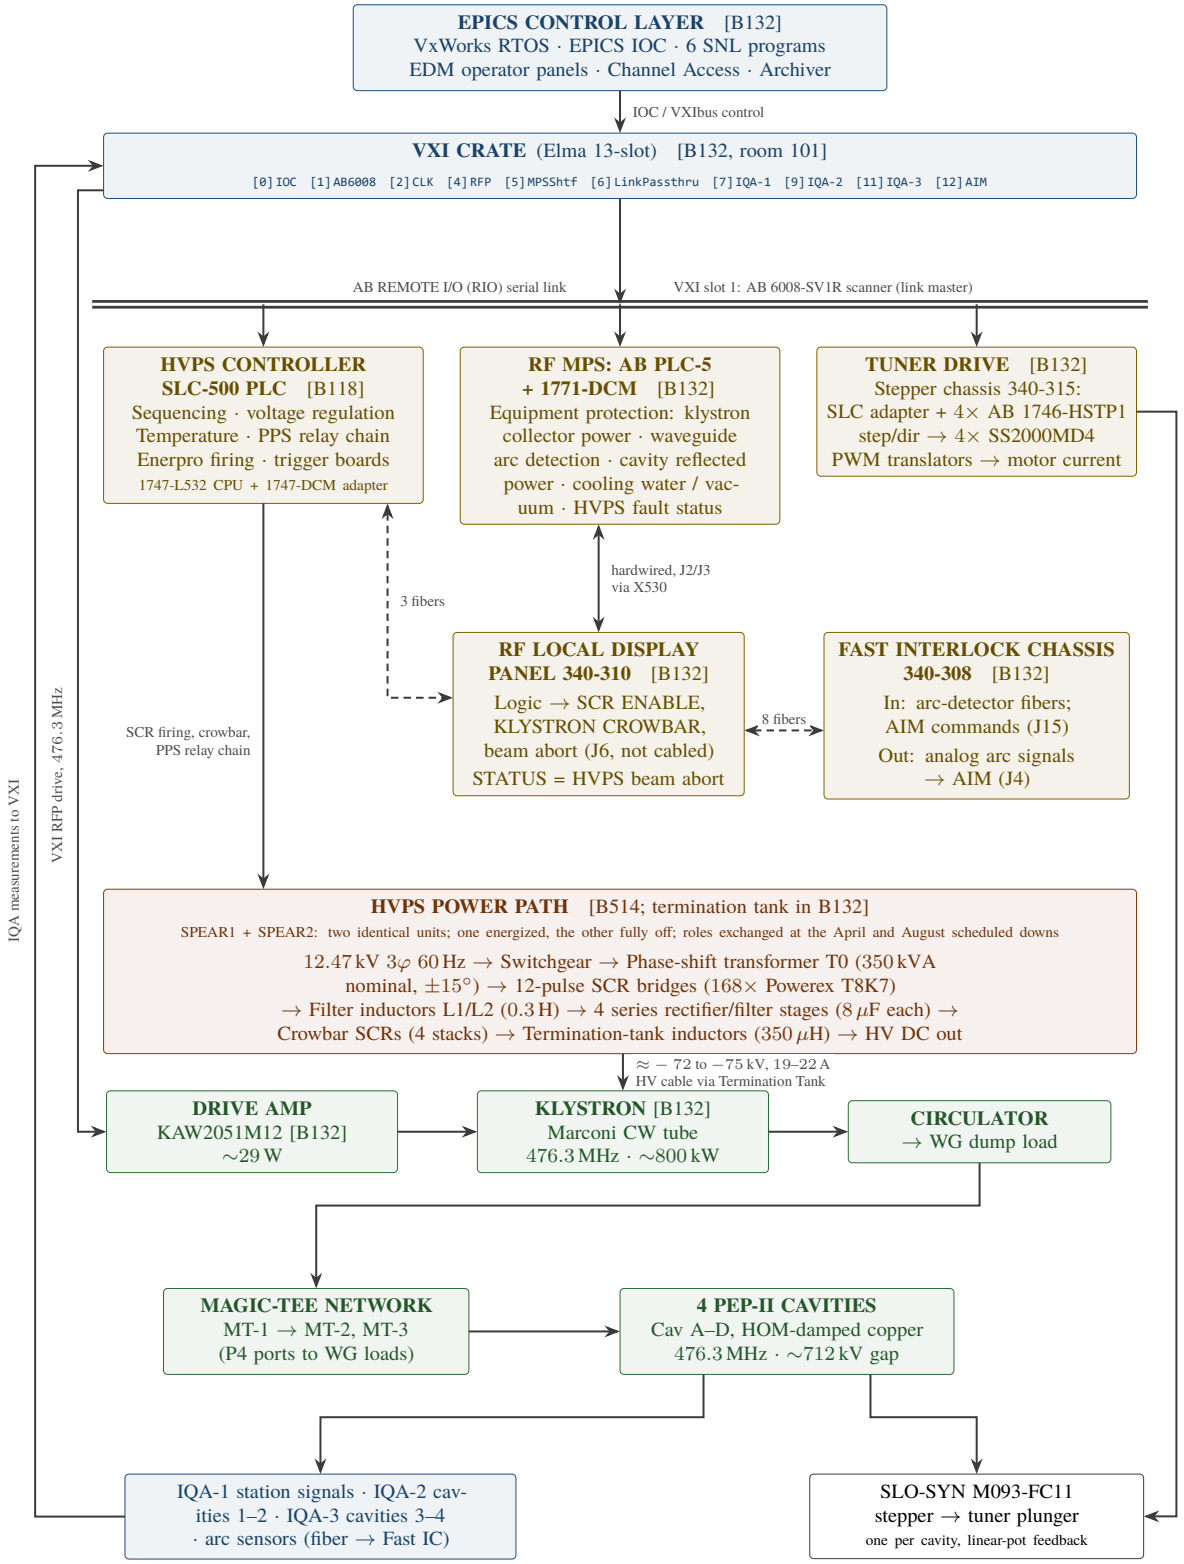



**Figure 1:** Top-level architecture of the legacy SPEAR3 RF station. Buildings: **B132** klystron and control, **B118** HVPS control, **B514** HVPS power. Solid lines are electrical or hardwired connections; dashed lines are optical fibers.

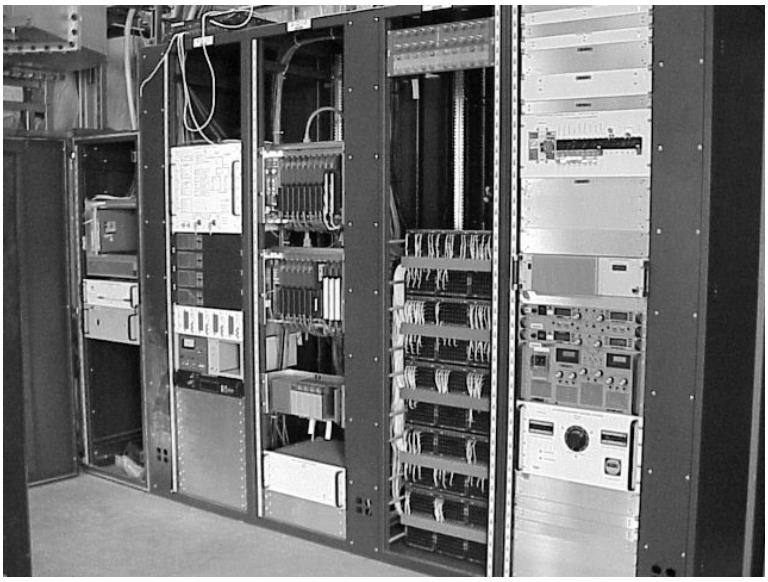


**Figure 2:** LLRF control electronics in Room 101, Building B132 — racks B132-11 to B132-15 from left to right, the primary control location for the SPEAR3 RF station

# 3 Physical Layout and Locations

The SPEAR3 RF station is distributed across several buildings at SSRL. The physical geography governs cable runs, signal latency and maintenance access.

| Location | Equipment | Notes |
|---|---|---|
| **Building B132** (Room 101) | Klystron; control racks B132-11 to B132-15 (below) with the VXI crate (LLRF controller), drive amplifier, Fast Interlock Chassis, RF Local Display Panel, RF MPS PLC, stepper motor controllers and the heater and coil supplies | — (primary location) |
| **Building B118** (Power Supply Room) | HVPS controller enclosure and local control panel (Hoffman Box), SLC-500 PLC, Enerpro firing boards, analog regulator card, monitoring oscilloscope | ~100 m cable run to B514 |
| **Building B514** (HVPS Substation) | HVPS Main Tank (transformer, rectifier, inductor, filter caps), Phase Tank (12 thyristor stacks), Crowbar Tank (4 thyristor stacks, output voltage divider) | — |
| **Contactor Disconnect Panel** (Switchgear) | Vacuum contactor (Ross HQ3), contactor controller/driver (Ross HCA-1-A), K4/MX/RR/TX/BR relays, L1 holding and L2 closing coils, S2–S5 auxiliary contacts | B514 |
| **Termination Tank** (B132, Room 101) | HV cable termination, Ross Engineering HV grounding switch, Danfysik DC-CT, Pearson CT-110 current transformer | Near klystron |
| **Switch-over Tank** | HV cable connections between SPEAR1/SPEAR2 HVPS and klystron | Adjacent to B514 |

| Location | Equipment | Notes |
|---|---|---|
| **SPEAR3 Storage Ring Tunnel** | 4 RF cavities, waveguide distribution network (circulator, magic-tees, waveguide loads), tuner motor assemblies, arc detection sensor mounting points | Radiation area, restricted access |

In B132 Room 101 the control electronics stand in five racks, B132-11 to B132-15, left to right in Figure 2. The panel and X530 placements follow J. Sebek's notes [R81].

| Rack | Equipment |
|---|---|
| B132-11 | VXI crate (§5) with the Fast Interlock Chassis 340-308 below it; drive amplifier; RF patch panel |
| B132-12 | RF Local Display Panel 340-310 (§15.2), with a spare Fast Interlock Chassis 340-307 above it, a slightly different version of the 340-308 in service, not in use |
| B132-13 | RF MPS PLC-5, a main 1771 crate with a second crate below it; Cavity Tuner Motor Driver 340-315; the two LLRF9 units of the upgrade |
| B132-14 | Cross-connect blocks, among them X530 for the RF Local Display Panel's connectors J2 and J3 and X15 for the waveguide pressure switches; a spectrum analyzer and, above it, the 2U "LLRF Window Interlock Status" chassis, built in 2021 to turn a legacy permit into an enable for the LLRF9 |
| B132-15 | Klystron filament heater chassis (Figure 14); main focus and bucking coil supplies |

Figures 3 and 4 show the two buildings. Figure 5 shows the termination tank in B132 Room 101, which carries the grounding switch and the cathode-current instrumentation, and Figure 6 the cavity row inside the tunnel.




**Figure 3:** Building B132 — the klystron building housing the LLRF control electronics, drive amplifier, and RF MPS




**Figure 4:** Building B514 — the high-voltage power supply substation housing the main transformer/rectifier tank, phase tank, and crowbar tank



**Figure 5:** HVPS grounding and termination tank located in Room 101, Building B132 — cylindrical stainless/aluminum vessel with two high-voltage cable entries through flexible metallic conduit at the top; contains the Ross Engineering HV grounding switch, the Danfysik UltraStab DC-CT that measures klystron cathode current, a 3.3 mΩ (15 A = 50 mV) return-cable shunt, and the Pearson CT-110 wide-bandwidth current transformer used for klystron arc detection [R25]



**Figure 6:** RF cavities installed in the SPEAR3 storage ring tunnel (inward view) — showing the waveguide connections and cavity arrangement in the radiation enclosure

# 4 Key System Parameters

- **RF frequency.** This document uses **476.3 MHz** as nominal.
- **Klystron cathode voltage and current.** These are adjusted continuously by the HVPS supervisory loop to hold drive power in range as beam current, klystron gain, and cavity conditions vary. Values quoted in this document are typical readbacks for normal operation at 500 mA.

## 4.1 RF System Parameters

| Parameter | Value | Notes |
|---|---|---|
| RF Frequency (nominal) | ~476.3 MHz | Harmonic 372 of the revolution frequency. |
| Revolution Frequency | ~1.2804 MHz | $f_{\text{rev}} = f_{\text{RF}}/372$ |
| Ring Circumference | ~234.1 m | Nominal geometric scale. |
| Beam Energy | 3.0 GeV | |
| Design Beam Current | 500 mA | Top-off mode |
| Fill Pattern | Operating configuration | Not fixed by the RF hardware. |
| Number of Cavities | 4 | Single-cell, HOM-damped copper (PEP-II HER type) |

| Parameter | Value | Notes |
|---|---|---|
| Cavity Shunt Impedance ($R_s$) | 3.73 MΩ, $V^2/(2P)$ | PEP-II nominal value [R7]. McIntosh's SPEAR3 value of 3.8 MΩ uses the same convention: $(800\,\text{kV})^2/(2\times 85\,\text{kW}) = 3.76\,\text{M}\Omega$ [R1]. See §B.3. |
| Cavity Unloaded Q ($Q_0$) | 32,000 | Schwarz [R7] |
| Cavity Loaded Q ($Q_L$) | ~6,780 | PEP-II nominal $\beta = 3.72$ and $Q_0 = 32{,}000$ [R7]; $Q_L = Q_0/(1+\beta)$. Not a measurement of the installed couplers. |
| Gap Voltage per Cavity | ~712 kV | Approximately 712.5 kV for equal sharing of the 2.85 MV station voltage in [R4]; not four independent calibrated readbacks. |
| Total Accelerating Voltage | ~2.85 MV | Sum of 4 cavities (design 3.2 MV) |
| Klystron Output Power | ~800 kW | Representative project operating value [R5]. |
| Drive Power | ~29 W | At klystron input |
| IF Frequency | 5.1216 MHz | $f_{\text{IF}} = f_{\text{RF}}/93 = f_{\text{RF}} - f_{\text{LO}}$. (The PEP-II IF is 4.9072 MHz $= f_{\text{RF}}/97$ — a *different* divisor; see §5.3.1.) |
| LO Frequency | 471.187 MHz | Generated by CLK module PLL471 ($f_{\text{LO}} = f_{\text{RF}} \times 92/93$); distributed to the IQAs at +14.0 dBm on PKZ front-panel connectors [R53] |

## 4.2 HVPS Parameters

| Parameter | Value | Notes |
|---|---|---|
| Input Supply | 12.47 kV RMS, 3-phase, 60 Hz | Substation 507, Breaker 160. Rated 127 A/phase at 12.5 kV, 2750 kVA, per the NWL nameplate schematic [R70]; typical input current ≈ 113 A [R56] |
| Phase-shifted secondary (to T1/T2 primaries) | 12.91 kV RMS phase-to-phase | The $\pm 15^\circ$ extended-delta output is approximately 3.5% larger than the incoming line. |
| Output Voltage (rated max) | −90 kV DC | Negative polarity for klystron cathode |
| Output Current (rated max) | 27 A | |
| Output Power (rated max) | 2.5 MW | |
| Output Voltage (typical operating) | ≈ −72 to −75 kV | [R56] gives −74.7 kV at 500 mA; [R72] records −72.08 kV in June 2020. |
| Output Current (typical operating) | ≈ 19–22 A | 22.0 A at full 500 mA operation [R56]; 19.4 A in June 2020 (§4.3) |

| Parameter | Value | Notes |
|---|---|---|
| Output with firing inhibited and primary energized | ≈ 1.3 kV | Rectified transformer leakage remains with the normal klystron load [R56]. In September 2026 the supply read approximately 0.6 kV during the turn-on check (PPS check), with the contactor closed and ready for operation, and about 1.3 kV in normal operation with the setpoint at zero. |
| Topology | 12-pulse thyristor phase-controlled rectifier | ”Star point controller” configuration, primary-side filter inductor [R6] |
| Voltage Regulation | < 0.1% | Design specification, Cassel & Nguyen [R6]. |
| Ripple | < 1% peak-to-peak, < 0.2% RMS | Above 60 kV [R6] |
| Configuration | 2 units — SPEAR1 and SPEAR2 | One unit is energized; the other is completely switched off (not a warm standby). Roles are exchanged at the two scheduled downs each year (April and August). Either unit may be the active one. |

**Initial check**: The leakage voltage read during the turn-on check indicates transformer health and correct HVPS operation.

## 4.3 Operating Point (June 2020)

This is a single consistent set of readbacks, used throughout this document to check the HVPS control-chain arithmetic. It is a snapshot, not a setpoint.

| Parameter | Measured |
|---|---|
| Output Voltage | 72.08 kV |
| Output Current | 19.4 A |
| Cathode Power | 1.398 MW |
| SIG HI (J4-3) | 4.40 V |
| Voltage Sense | 7.183 V |

**Basis**: The 16 June 2020 measurements are from [R72]. The divider uses a 100 MΩ high arm and a 500 kΩ low arm loaded by the regulator input, giving approximately 10,000:1 overall [R71], [R72].

# Part II
# RF SIGNAL CHAIN

## 5 LLRF Controller (VXI System)

### 5.1 Overview

The LLRF controller is a VXI-based system located in Building B132 that provides the fast RF feedback, station state management, and measurement functions for the RF station. It was designed for PEP-II by P. Corredoura, S. Allison, R. Sass, R. Tighe, and R. Claus at SLAC (1996–1997).

The VXI crate hosts an IOC running VxWorks RTOS. Supervisory communication with the HVPS, RF MPS and stepper controllers uses the slot-1 Allen-Bradley 6008-SV1R Remote I/O scanner; DCM modules are the remote adapters. Hardwired interlocks bypass this link [R53], [R60]. Figure 7 shows the installed crate and Figure 8 the rear cabling.

The subsections that follow take the crate in slot order — the clock and RF reference source in slot 2, the RF processor that closes the fast loop in slot 4, the three measurement modules in slots 7, 9 and 11, and the interlock interface in slot 12 — and then describe the loops those modules implement (§5.8) and the supervisory link out of the crate (§5.9).



**Figure 7:** Legacy VXI crate in B132. IQA-2 measures cavities 1–2 and IQA-3 cavities 3–4, including forward, reflected and probe signals [R60], [R76].

### 5.2 VXI Crate Layout and Module Inventory

The station uses an Elma 13-slot chassis, label B132-101-11-24. Figure 9 gives the slot map and the table below gives the function of each slot; both follow the RCS head of `spear-rf-code-legacy/rfApp/DbIoc/srf1.substitutions,v`, which instantiates the crate template. The slot names in the figure are the literal strings from that file (`"B132-IOCRF"`, `"AB Scanner"`, `"Clock"`, `"RF Processing"`, `"MPS Shutoff"`, `"Link Passthru"`, `"IQA1"`, `"IQA2"`, `"IQA3"`, `"Arc Interlock"`).

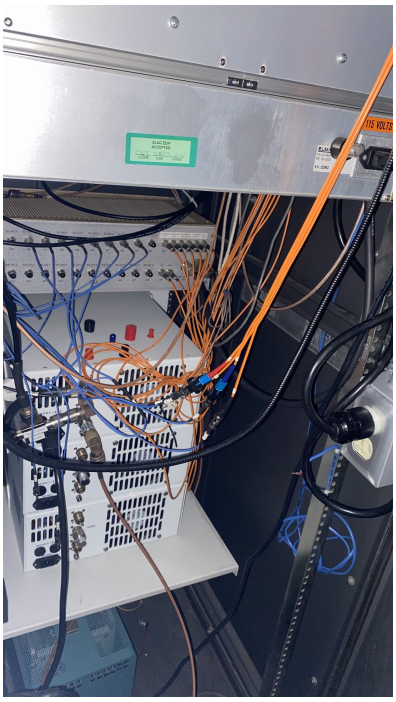


**Figure 8:** Rear of the LLRF VXI crate and Fast Interlock Chassis in rack B132-11. The three blue optical fibers joined to the three orange ones on the outside run to the HVPS controller in B118 (SCR ENABLE, KLYSTRON CROWBAR and STATUS); the remaining blue fibers come from the optical arc detectors, of which those at the cavity windows are not in use [R87].

| slot: | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | B132-IOCRF | AB Scanner | Clock | *empty* | RF Processing | MPS Shutoff | Link Passthru | IQA1 | *empty* | IQA2 | *empty* | IQA3 | Arc Interlock |
| | IOC VxWorks PowerPC | 6008-SV1R RIO scanner | CLK | | RFP | SPEAR MPS in + orbit interlock | ripple-link passthrough | Klystron fwd/refl | | Cavities 1–2 | | Cavities 3–4 | AIM |

**Figure 9:** VXI crate slot map. Elma 13-slot chassis, label B132-101-11-24. Slots 3, 8 and 10 are empty: the gap-voltage feed-forward module and the two comb-filter modules that PEP-II carries are not required by SPEAR3.

| Slot | Module | Function | SPEAR3 Status |
|---|---|---|---|
| 0 | B132-IOCRF (Slot 0 $\mu$Processor) | VXI bus controller, EPICS IOC host (VxWorks RTOS, Kinetics Systems) | **Active** |
| 1 | AB Scanner | Allen-Bradley 6008-SV1R Remote I/O scanner (PLC interface) | **Active** |
| 2 | CLK/RF Distribution | Master clock, LO generation (471.187 MHz = RF $\times$ 92/93), RF reference fanout (+14.0 dBm); CLK40/20/10 timing signals; TSYNC synchronization pulse | **Active** |
| 3 | *(empty)* | GVF slot from PEP-II — not installed in SPEAR3 | **Not installed** |
| 4 | RFP (RF Processor) | Central feedback processing — IQ demod, vector sum, direct loop, baseband modulator | **Active** |
| 5 | MPS Shutoff | CF2 slot from PEP-II, repurposed for MPS Shutoff in SPEAR3 | **Active** |
| 6 | Link Passthru | RF amplifier Link passthrough module | **Active** |
| 7 | IQA-1 | Klystron, circulator, drive, reference and WG01 load signals; ripple-link source | **Active** |
| 8 | *(empty)* | — | — |
| 9 | IQA-2 | Cavity 1–2 forward, reflected and probe signals; WG02 load | **Active** |
| 10 | *(empty)* | — | — |
| 11 | IQA-3 | Cavity 3–4 forward, reflected and probe signals; WG03 load | **Active** |
| 12 | ARC/Interlock Module (AIM) | Arc detection, interlock management, fault history | **Active** |

Slots 3, 8 and 10 are empty. The gap voltage feed-forward (GVF) module and the two comb-filter modules that PEP-II carries — in its own slots 3, 5 and 6 — are not required by SPEAR3, which instead uses slots 5 and 6 for the MPS shutoff and link passthrough functions [R53].

## 5.3 CLK (Clock and RF Reference Distribution) Module

The Clock module in VXI slot 2 is the master timing and RF reference source for the entire LLRF system, and is described first because every other module runs from its outputs. It was originally designed for PEP-II and modified for SPEAR3 frequencies.

### 5.3.1 System Timing Parameters

**The SPEAR3 and PEP-II clocks use different division ratios**, so each column carries its own multiplier.

| Parameter | SPEAR3 | PEP-II |
|---|---|---|
| Storage Ring RF | 476.309 MHz | 476.000 MHz |
| RF Tuning Range | $\pm$200 ppm | $\pm$100 ppm |

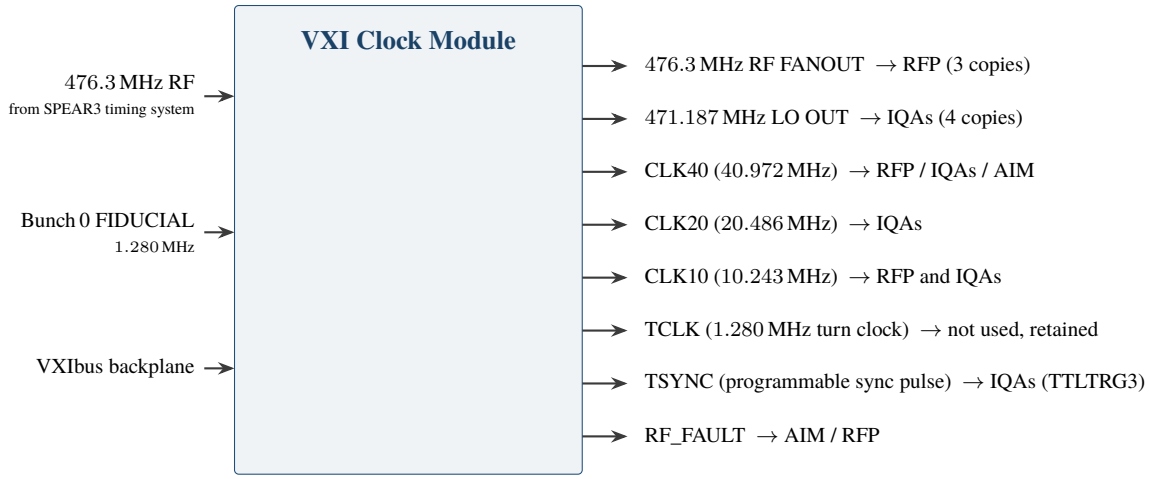



**Figure 10:** Clock module top-level inputs and outputs.

| Parameter | SPEAR3 | PEP-II |
|---|---|---|
| Ring Circumference | 234.126 m | 2199.33 m |
| Number of RF Buckets (h) | 372 | 3492 |
| Fiducial Rate $(f_{RF}/h)$ | 1.28040 MHz | 136.312 kHz |
| LO Frequency | 471.1874 MHz (RF × 92/93) | 471.0928 MHz (RF × 96/97) |
| CLK40 | 40.9728 MHz (32 × fiducial) | 39.2579 MHz (288 × fiducial) |
| CLK20 | 20.4864 MHz (16 × fiducial) | 19.6289 MHz (144 × fiducial) |
| CLK10 | 10.2432 MHz (8 × fiducial) | 9.8145 MHz (72 × fiducial) |
| PLL40 Ref Clock | 5.1216 MHz (RF/93) | 4.9072 MHz (RF/97) |
| **IF** $(= f_{RF} - f_{LO})$ | **5.1216 MHz** $(f_{RF}/93)$ | **4.9072 MHz** $(f_{RF}/97)$ |

**Design values**: The stated ±200 ppm RF tuning range is approximately ±95 kHz [R53].

### 5.3.2 Clock Module Signals (Top-Level I/O)

Figure 10 shows the module's external connections; the signals are described below.

**Signal descriptions**:

- **476.3 MHz RF FANOUT** — Input from SPEAR3 timing system (minimum +9.0 dBm required); amplified to +14.0 dBm and fanned out to RFP and other modules; PKZ impedance-controlled connectors
- **471.187 MHz LO** — Phase-locked local oscillator ($= f_{RF} \times 92/93$); 4 copies at +14.0 dBm on front-panel PKZ connectors distributed to all three IQA modules for downconversion to 5.122 MHz IF
- **CLK40** — 40.972 MHz system clock; output on VXIbus backplane ECLTRG0 (bussed to all modules via P2); runs RFP and IQA digital logic; a delay vernier adjusts backplane timing skew
- **CLK20** — 20.486 MHz; output on ECLTRG1; drives IQA ADC quadrature sampling
- **CLK10** — 10.243 MHz; output on TTLTRG0 to RFP/IQA logic; also the reference for PLL471. The AIM uses CLK40
- **TCLK** — 1.280 MHz turn clock (50% duty cycle); generated by ÷372 ECL counter locked to fiducial; output on TTLTRG1; not used by any SPEAR3 module (GAP module absent) but retained for diagnostics

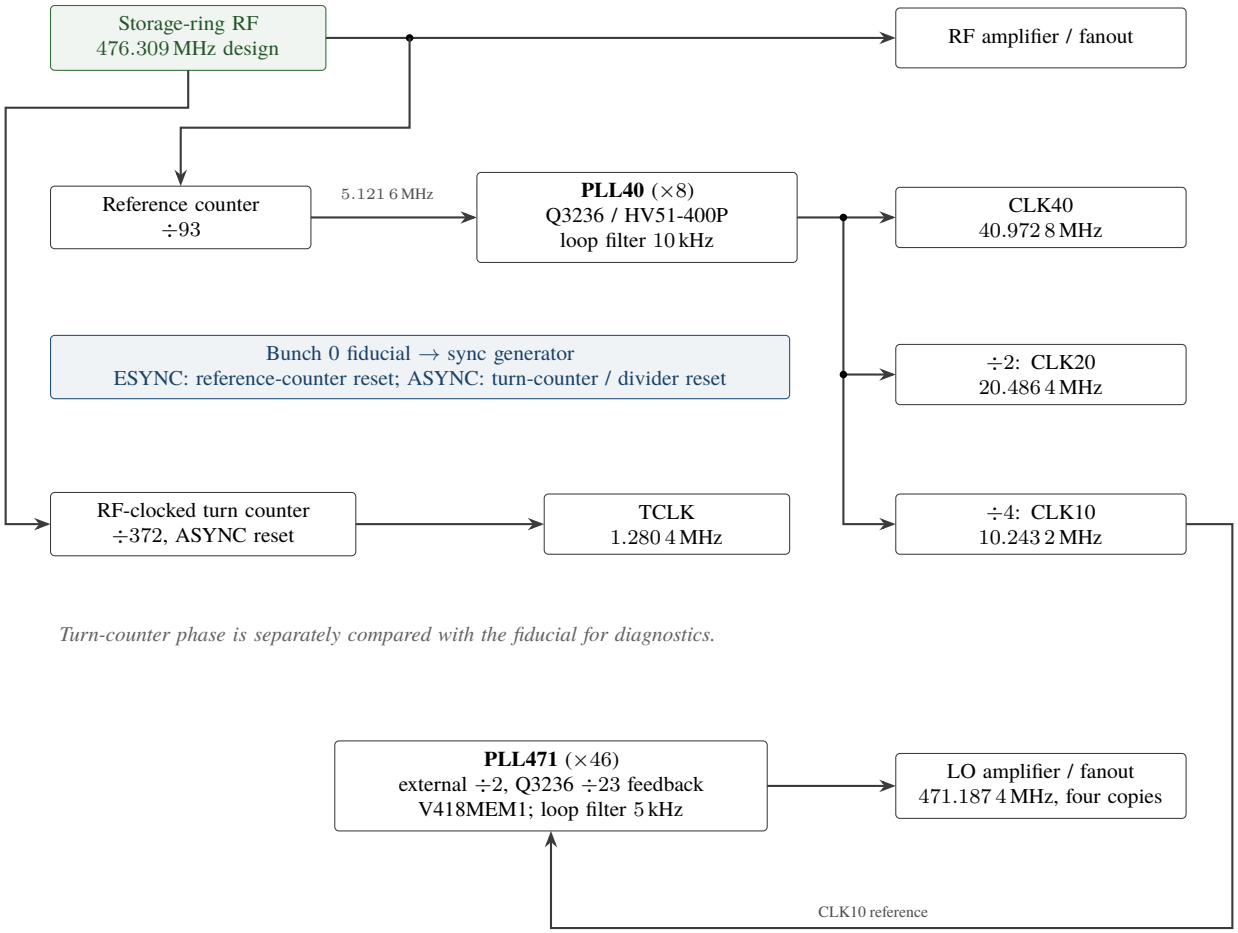



**Figure 11:** Functional clock chains from [R53]. ESYNC and ASYNC synchronize counters/dividers; TCLK comes from the turn counter, with a separate fiducial-error comparison. Register, delay-vernier and fault circuitry are omitted.

- **TSYNC** — Programmable synchronization pulse derived from fiducial; width and delay are software-controlled via VXI registers; used by IQA and other modules to synchronize internal state machines; output on TTLTRG3
- **RF_FAULT** — Open-collector backplane fault line; asserted by clock when RF input is lost or PLL loses lock; monitored by AIM and RFP

### 5.3.3 Clock Module Architecture

Figure 11 traces the two phase-locked loops and the divider chains that produce the signals listed above.Both PLLs and the RF input/fanout circuitry are housed in an temperature stabilized enclosure on the PCB to minimize phase noise, jitter, and frequency drift.

### 5.3.4 Changes Made to Adapt Clock for SPEAR3

| Item | Change for SPEAR3 |
|---|---|
| PLL40 Ref prescaler | Division ratio changed to ÷93 |

| Item | Change for SPEAR3 |
|---|---|
| PLL40 VCXO | Changed to Connor-Winfield HV51-400P (40.972 MHz center, ±200 PPM, TTL output — level-shift circuitry added to produce pseudo-ECL) |
| PLL471 feedback divider | Changed to ÷23 (external ÷2 + Q3236 internal ÷23; effective ratio 92/93 from 476.3 MHz) |
| Turn Counter | Division ratio changed to ÷372 |
| Configuration ID | DIP switch changed to indicate SPEAR3 model; IOC software verifies Config ID at boot |

## 5.4 RFP (RF Processor) Module — Heart of the LLRF

The RFP module is the central signal processing module in the VXI crate. It performs:

**Analog Signal Processing**:

- Direct analog quadrature demodulation of the cavity probe signals to baseband I/Q using the 476.3 MHz reference; the 5.122 MHz IF is used by the IQA modules, not this analog direct-loop path [R53]
- Vector summing of 4 cavity I/Q signals
- Direct loop error amplifier comparing vector sum against IQ reference
- Lead and integral compensation networks for loop stability
- Baseband modulator (4 × Gilbert-cell multipliers in 2×2 matrix for I→I, I→Q, Q→I, Q→Q correction)
- IQ RF modulator (baseband → 476 MHz upconversion for klystron drive)

**Digital Control Interface**:

- Octal DACs (12-bit, ±2048 counts) for: tune mode IQ setpoints, operate mode IQ offsets, klystron modulator matrix coefficients, ripple loop coefficients
- Mode control: TUNE / OPERATE switching
- RF switch: enable/disable RF output to klystron
- Built-in history buffer (circular buffer, freeze on fault for post-mortem analysis)
- Network analyzer and arbitrary waveform generator for loop-response measurements [R53]

**Key PVs** (from `rf_dac_loop_pvs.h,v`, `rf_states.st,v`, and `rfp.db`):

| Process variable | Meaning |
|---|---|
| `{STN}:STN:TUNE:IQ.A` | Tune mode IQ setpoint magnitude (counts) |
| `{STN}:STN:TUNE:CTRL` | Tune loop control |
| `{STN}:STNDIRECT:LOOP:PHASE` | Direct loop phase setpoint |
| `{STN}:STNDIRECT:LOOP:COUNTS` | Direct loop amplitude setpoint (counts) |
| `{STN}:STN:RFP:RFENABLE` | RF output enable/disable (from rf_states.st) |
| `{STN}:STN:RFP:RUNMODE` | TUNE/OPERATE mode select (from rfp.db) |
| `{STN}:STN:RFP:MODU.DLE` | Direct loop enable (RFP module register) |

## 5.5 MPS Shutoff Module (Slot 5)

The MPS Shutoff module connects the station to the SPEAR3 machine protection system. J. Dusatko describes it as the MPS interlock module: it receives the interlock signal of the SPEAR MPS and drives `RF_FAULT` on the VXI backplane, so that the RFP removes the klystron drive; it has no VXIbus interface and takes only crate power and `RF_FAULT` from the backplane [R53]. His description places the RF amplifier for the clock input in slot 5; the crate configuration in service names slot 5 “MPS Shutoff” and slot 6 “Link Passthru” [R60].

- **Inputs**: the SPEAR MPS and the orbit interlock each give the LLRF a 24 V permit [R89]. Their wiring into the module is not on any RF drawing in the repository.
- `RF_FAULT`: asserted on the VXI P2 backplane when a permit is lost. The RFP removes the drive, and the AIM latches the backplane fault, which the state machine reads as `STN:VXI:LTCH` and answers by turning the station off [R16], [R53], [R60].
- **J3**: cabled to the SPARE FAULT input on the front of the Fast Interlock Chassis (checked November 2026). That input drives an optocoupler that reads a fault when no current flows, and the chassis passes it on pin 34 of the 37-pin cable from its J2 to the AIM's J4, where an open line also reads as a fault [R79].
- **No VXIbus interface**: no EPICS record reads the module itself [R53].

In the AIM the J3 signal appears as the spare channel of the arc registers and, since January 2003, as a bit of the fast interlock status register. The SPEAR3 database names that channel External MPS: `{STN}:STN:MPS:LTCH` shows the AIM's latch of it when the AIM's hardware fault enable for the channel is set, and reads OK otherwise, and the SPEAR3 station MPS summary `STNMPS:SUMY:LTCH` includes it [R60], [R88]. The record shows on the station status which permit tripped the station; the trip itself reaches the state machine through `STN:VXI:LTCH`. The channel is enabled: no jumper is fitted for it on the AIM, and `STN:AIM:ARCENBSTT` read `0x71FB` on 11 November 2026, with bit 8 set. What the AIM's fault logic does when it trips, for example whether it drops its HVPS on request as for an arc, is not documented [O13].

## 5.6 IQA (IQ/Amplitude Detector) Modules

Three IQA modules measure RF signals by downconversion and quadrature sampling [R53], producing:

- $I$ component (in-phase), $Q$ component (quadrature)
- Amplitude $A = \sqrt{I^2 + Q^2}$
- Phase $\phi = \text{atan2}(Q, I)$, retaining quadrant information

**Channel allocation**: The four-cavity station instantiates both IQA substitution files in [R76]. Their zero-based `CH` indices give the following complete logical map; the parenthesized numbers are the corresponding one-based inputs.

| CH (input) | IQA-1, slot 7 | IQA-2, slot 9 | IQA-3, slot 11 |
|---|---|---|---|
| 0 (1) | Klystron output forward | Cavity 1 forward | Cavity 3 forward |
| 1 (2) | Klystron output reflected | Cavity 1 reflected | Cavity 3 reflected |
| 2 (3) | Circulator load forward | Cavity 2 forward | Cavity 4 forward |
| 3 (4) | Circulator load reflected | Cavity 2 reflected | Cavity 4 reflected |
| 4 (5) | Klystron drive forward | Cavity 1 probe | Cavity 3 probe |
| 5 (6) | Station RF reference | Cavity 2 probe | Cavity 4 probe |
| 6 (7) | WG01 load forward | WG02 load forward | WG03 load forward |
| 7 (8) | WG01 load reflected | WG02 load reflected | WG03 load reflected |

IQA-1 also sources the backplane ripple link to the RFP [R53]. The logical map is source-verified; match physical connector labels and cable destinations to the installed station before cabling work for the upgrade LLRF9 system. [O4]

Each IQA muxes 8 RF input channels through a single ADC in round-robin fashion, downconverting from 476.3 MHz to the 5.1216 MHz IF (using the 471.187 MHz LO from the CLK module) and bandpass-filtering at the IF before quadrature sampling with the 20.486 MHz CLK20. The PEP-II variant of the module uses a different IF (4.9072 MHz) and therefore a different bandpass filter — this filter change was one of the modifications required to adapt the IQA to SPEAR3 [R53]. The 8 channels also have amplitude

threshold comparators that assert RF_FAULT on the VXIbus backplane if any channel exceeds its programmed limit. Each IQA contains circular history buffers that record I/Q data per channel and can be read out over VXI after a fault.

## 5.7 ARC Interlock Module (AIM)

The AIM module provides the interface between the VXI crate and the external interlock system:

- Beam abort force/reset interface
- Filament control signals
- HVPS permissive signals
- Fault history buffers — two independent systems:
  - **System A** (12-channel AIM support): hardware history controlled through the HISBUF, ADCMUX and ADCCTL interfaces. The source defines HVPS-only or HVPS-plus-arc acquisition and fault-triggered stopping. Installed version, channel map and acquisition setup require confirmation [R60].
  - **System B**: The IOC's rf_statesFF state set requests module history-file exports after the shutdown sequence. It configures up to 11 file families, including an AIM export; these are not 11 additional AIM ADC channels.
- Fast interlock status register (FISTAT, A16): the AIM's latches of the VXI backplane, AB heartbeat, AB summary and forced faults (bits 1 to 4), the HVPS-on state (bit 6) and, since 2003, the spare fault (bit 8), which carries the External MPS signal (§5.5). The first-fault register records which arc channel or which of the four latched faults came first; it has no bit for the spare fault [R60]
- Arc-threshold configuration through the AIM TRIPLVL registers. Thresholds, channel enables and the physical sensor map must be recorded together [R53], [R60]. The SPEAR3 database names eleven channels: the klystron and circulator arcs (bits 0 and 1), the air-side and vacuum-side window arcs of cavities 1 to 4 (bits 3 to 6, and 7, 12, 13 and 14) and External MPS (bit 8) [R88]. The fault enables are jumpers on the AIM (headers H5 and H6; no jumper = enabled) [R79]; on 11 November 2026 STN:AIM:ARCENBSTT read 0x71FB, which enables exactly these eleven channels. In the arc status words an enabled channel reads 1 while clear and 0 once tripped; disabled channels read 0 [R60].

**AIM FICTRL control register** (A16 offset 0x20): Dusatko identifies six outgoing control signals routed through the ARC chassis and its isolated interfaces [R53]. The original register definition also includes a forced-fault test bit and beam-abort reset bit [R60]:

| Signal | Bit | Symbol | Dusatko's six? | Ultimate destination |
|---|---|---|---|---|
| Solenoid_On | 0 | AIM_V_SOLENOID | Yes | RF Local Display Panel (station online request), then the PLC-5 [R84] |
| HVPS_On | 1 | AIM_V_HVPS | Yes | RF Local Display Panel logic, which forms SCR ENABLE for the HVPS controller in B118 [R81], [R84] |
| Klys_Filament_On | 2 | AIM_V_FILAMENT | Yes | RF Local Display Panel (filament and focus request), then the PLC-5 [R84] |
| Filament_Timeout | 3 | AIM_V_FILTMOOVRD | Yes | RF Local Display Panel (filament timeout bypass), then the PLC-5 as a 24 V request [R81] |

| Signal | Bit | Symbol | Dusatko's six? | Ultimate destination |
|---|---|---|---|---|
| `Forced_Fault` | 4 | `AIM_V_FRCDFLT` | **No — register bit** | The AIM's own forced fault, set from EPICS; it trips the station and blocks the automatic reset [R16], [R60] |
| `Fault_Reset` | 5 | `AIM_V_FLTRESET` | Yes | Clears the AIM's latches; through its fiber, resets the RF Local Display Panel's latches and the PLC-5 [R81] |
| `Beam_Abort` | 6 | `AIM_V_FRCBMABT` | Yes | RF Local Display Panel (VXI beam abort); its logic combines it with the HVPS beam abort, received on the STATUS fiber, and drives the beam-abort output on BNC J6, which is not cabled at SPEAR3 |
| `Beam_Abort_Reset` | 7 | `AIM_V_RSTBMABT` | **No — register bit** | Resets the AIM beam-abort latch; no fiber of its own [R81] |

The filament and solenoid commands follow the panel schematic: receiver U13 ("solenoid on") drives the station online request and U14 ("filament on") the filament and focus request [R84], as the legacy message logger also has it [R20]. WD-340-330-29 and [R81] pair them the other way round; their labels at the Fast Interlock Chassis end are swapped.

**`RF_FAULT` backplane line**: Shared hardware fault line driven by the CLK, RFP, IQA, MPS interlock interface and AIM. The RFP uses it to inhibit klystron RF drive; the AIM monitors it for station fault handling [R53]. This action does not depend on the Remote I/O scanner or SNL polling.

**Fault export**: The SNL exporter retrieves module histories; it is separate from the hardware mechanism that freezes those histories. File naming, trigger conditions and completeness checks are summarized in §18.3.

## 5.8 Feedback Loop Architecture

The legacy LLRF system implements multiple feedback loops, some inherited from PEP-II and some SPEAR3-specific:

**Active in SPEAR3**:

1. **Direct RF Feedback Loop** — Analog baseband feedback reduces the effective cavity impedance seen by the beam. The SPEAR3 system paper gives an approximately 800 kHz bandwidth and 15 dB impedance reduction [R1].
2. **Tuner Loop** — EPICS/SNL slow loop controlling the stepper motors to maintain cavity resonance. Implemented in `rf_tuner_loop.st,v` (§17.3).
3. **HVPS Voltage Regulation Loop** — Regulates klystron cathode voltage via the PLC/analog-regulator SIG HI chain to the Enerpro SCR firing angle. Implemented across `rf_hvps_loop.st,v` (SNL) and PLC ladder logic (§10.5).
4. **DAC Control Loop** — Manages drive power and gap voltage setpoints through the RFP octal DACs. Implemented in `rf_dac_loop.st,v`.

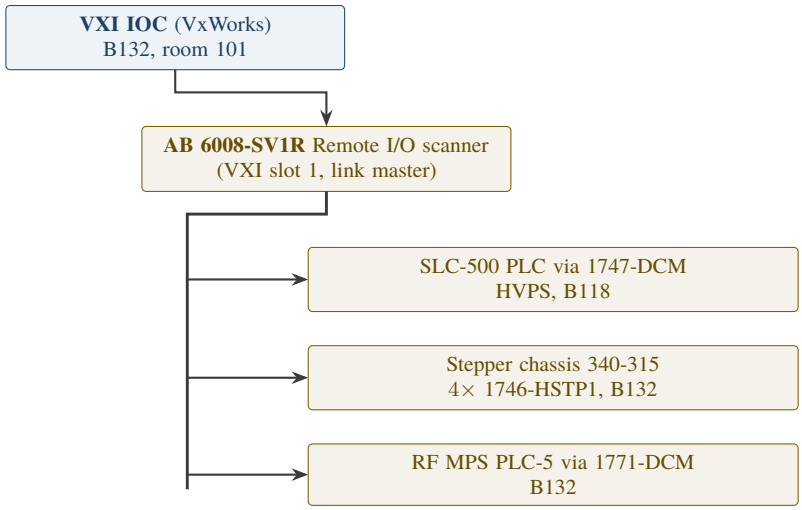



**Figure 12:** Communication architecture below the VXI IOC.

5. **Ripple Loop** — RFP DSP1610 amplitude/phase regulation. Dusatko states that harmonic ripple removal is not implemented [R53]; the 2004 paper describes adaptive cancellation [R1], and the 2021 test note measures harmonic rejection but does not isolate this loop's contribution [R4].

**NOT active in SPEAR3** (PEP-II only, module not installed):

- Comb (Narrowband) RF Feedback Loop — PEP-II multi-bunch stabilization at revolution harmonics; the two CFM modules that implement it are absent from the SPEAR3 crate
- Gap Voltage Feed-Forward (GVF/GAP) — PEP-II gap-transient compensation with LFB interface; module absent. SPEAR3 instead obtains its station reference from a pair of RFP-resident DACs driven by a slow EPICS loop [R53].

### 5.9 Communication Architecture

The VXI slot-1 **Allen-Bradley 6008-SV1R scanner**, mounted through an HP E1407A adapter, controls one Remote I/O link [R53], [R60]. Supervisory update rates depend on EPICS record scans and PLC data transfers; there is no single 1 Hz link rate. The direct RF loop and fast hardware interlocks bypass this serial link. Figure 12 shows the resulting hierarchy.

## 6 Klystron and Drive System

### 6.1 Klystron

The SPEAR3 klystron is a Marconi 476 MHz CW klystron located in Building B132. It is a single-beam tube with a non-full-power collector, meaning collector power must be actively managed to avoid thermal damage. Over the years, different tube models have been used, and the installed tube's exact specifications may vary.

| Parameter | Value |
|---|---|
| Frequency | ~476.3 MHz (follows the ring size) |
| Manufacturer | Marconi |
| Power rating basis | 1.5 MW |

| Parameter | Value |
|---|---|
| Operating Output Power | ~800 kW typical |
| Cathode Voltage | $\approx -72$ to $-75$ kV typical; $-90$ kV maximum (HVPS rating) |
| Cathode Current | $\approx$ 19–22 A typical; 27 A maximum (HVPS rating) |
| Perveance | $I = K\|V\|^{3/2}$, $K \approx 10^{-6}\,\mathrm{A\,V^{-3/2}}$ [R56] |
| Drive Power | ~29 W |
| Gain | ~44.4 dB (800 kW / 29 W) |
| Collector type | Non-full-power (requires collector power protection) |

**Tube History and Spares Status**: Tube 1 — Original (in service 2003–2020). The tube installed at SPEAR3 commissioning had previously been deployed on the PEP-II High Energy Ring in 2001, where it suffered a vacuum leak at its collector after approximately 1,300 hours of operation. CPI rebuilt it with a new electron gun and a redesigned collector assembly; SLAC high-power-tested it in September 2003. It then served SPEAR3 continuously from commissioning through 16 years of operation until it failed on 3 September 2020 at 05:40 [R56]. A simultaneous HVPS fault compounded the recovery; the klystron was confirmed failed on 4 September at 11:48, and 500 mA beam was restored with the replacement tube on 7 September 2020 at 18:05 — five days of total downtime.

Tube 2 — Current (in service September 2020–present). The replacement is a PEP-II retired K3512S drawn from the SLAC Technology and Innovation Directorate Test Stand 18 (TS18). It is the same model designation as Tube 1 but a physically different unit. As of October 2026, it has approximately six years of SPEAR3 service hours. On 7 October 2026, the klystron operated at 795 kW forward power — 99 % of the IOC's 800 kW limit — with the HVPS loop holding drive power 4.4 dB below the saturation setting [R5].

Spares status. Two additional PEP-II retired K3512S tubes reside at TS18 awaiting testing. Both are non-operational: blockages in their cooling water circuits prevent high-power testing. TS18 itself lacks routine maintenance since the PEP-II program ended. No warm spare klystron is held at SPEAR3. A klystron failure requiring tube exchange is estimated to cause approximately five days of downtime, contingent on TS18 being operable and the tested spare being available. The vendor (CPI / successor) no longer actively markets this tube model; the manufacturer support base has substantially eroded since PEP-II shutdown. The klystron is a single point of failure for the entire facility and is the primary driver for the SSA upgrade program.

**Collector Power Protection**: Because the klystron has a non-full-power collector, the collector dissipation (cathode power minus RF output power) must be monitored. In the legacy system, this is implemented through:

1. The RF MPS computes a collector-power estimate from cathode power and measured RF output.
2. The Fast IC's RF detector takes the klystron forward power on its rear input J32 and sends the detected level from its rear output J31 (RF AMPL.) to the PLC-5, which forms the collector power from it and the HVPS voltage and current [R79]; its front BNC J16 (DETECTED KLYSTRON POWER) is a monitor output and is not cabled.
3. Separately, processing mode in `rf_hvps_loop.st,v` reduces requested voltage for excessive *forward RF power*, cavity voltage or vacuum.

Figure 13 shows the installed tube with its collector cooling and solenoid assembly. The heater is run from the separate filament control chassis of Figure 14, which the PLC-5 switches on and ramps up through connector J1 [R85]; the AIM's filament and focus request reaches the PLC-5 through the Fast Interlock Chassis and the RF Local Display Panel (§15.2) [R81].

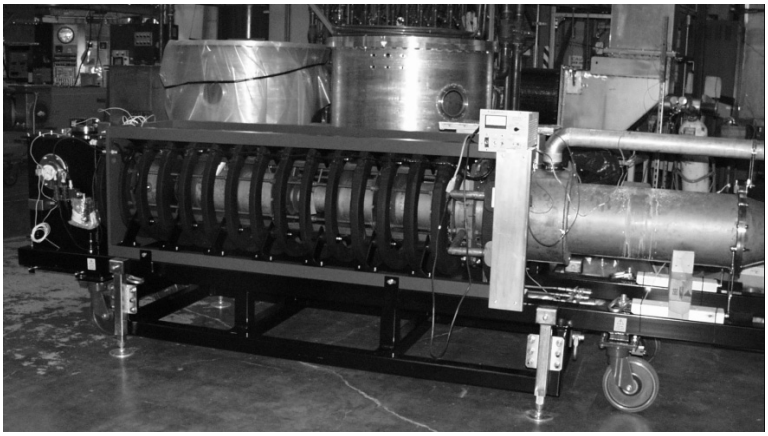


**Figure 13:** Marconi klystron in B132, with collector cooling and solenoid assembly.




**Figure 14:** Klystron filament control chassis (SD-340-311-00) — supplies the klystron heater. A solid-state relay switches the 120 V input and a motor-driven variac sets the output, rated 140 V and 1 kVA; an AC voltmeter and an ammeter, fed by the 10:1 current transformer T1, monitor it. The PLC-5 drives FILAMENT_ON and MOTOR-UP through connector J1 and reads the voltage and current monitors there [R85].

## 6.2 Drive Amplifier

The drive amplifier (KAW2051M12) boosts the LLRF drive signal to ~29 W (44.6 dBm) at the station RF frequency (~476.3 MHz) to drive the klystron input.

The vendor rating is 125 W CW over 476 MHz ±5 MHz, with a 450–500 MHz frequency range, at least 55 dB gain and at most 50 ns group delay at 476 MHz [R32]. Figure 15 shows the spare unit held in B132.




**Figure 15:** Spare RF drive amplifier (KAW2051M12) held in B132 — amplifies the LLRF drive signal to ~29 W (44.6 dBm) at ~476.3 MHz to drive the klystron input

# 7 Waveguide Distribution Network

## 7.1 Network Topology

The klystron output feeds a waveguide network that distributes RF power equally to the four cavities, as shown in Figure 16.

Each magic-tee splits incident power between two branches. Their return waves combine coherently at the source and difference-port load; equal reflected powers alone do not determine the destination. The waveguide electrical lengths set the relative phases [R1], [R7]. The circulator diverts power returning toward the klystron to its own load. Figure 17 shows that circulator and Figure 18 the magic-tee and bellows

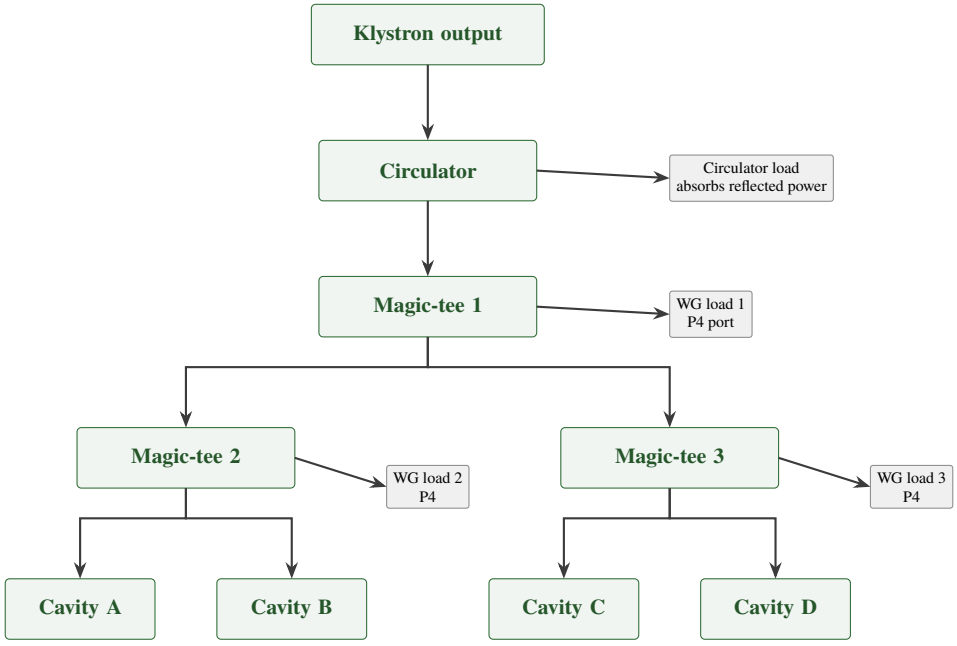



**Figure 16:** Waveguide distribution network from klystron to cavities. Each magic-tee divides the incident power; return power divides between the source and load ports according to the relative phases of the returning waves.

assembly on the tunnel roof.

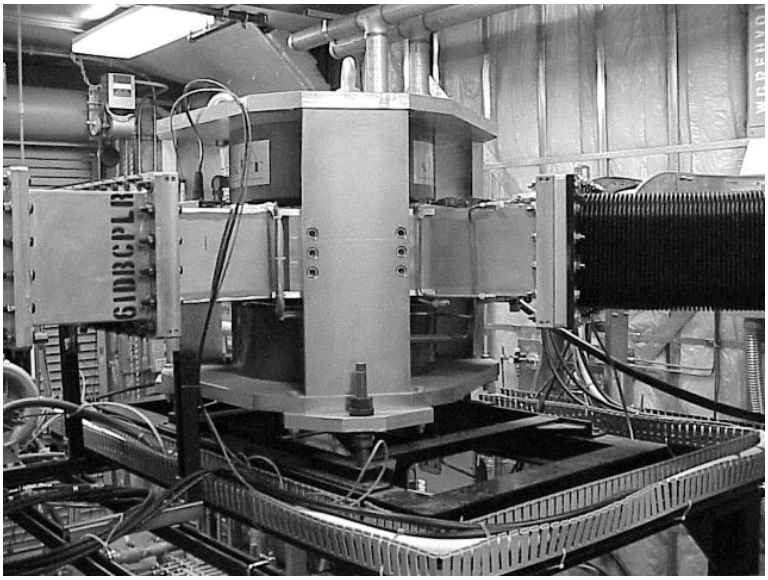



**Figure 17:** AFT circulator — positioned between the klystron output and the magic-tee splitter network; routes reflected power from the load network away from the klystron to protect it from reflected energy

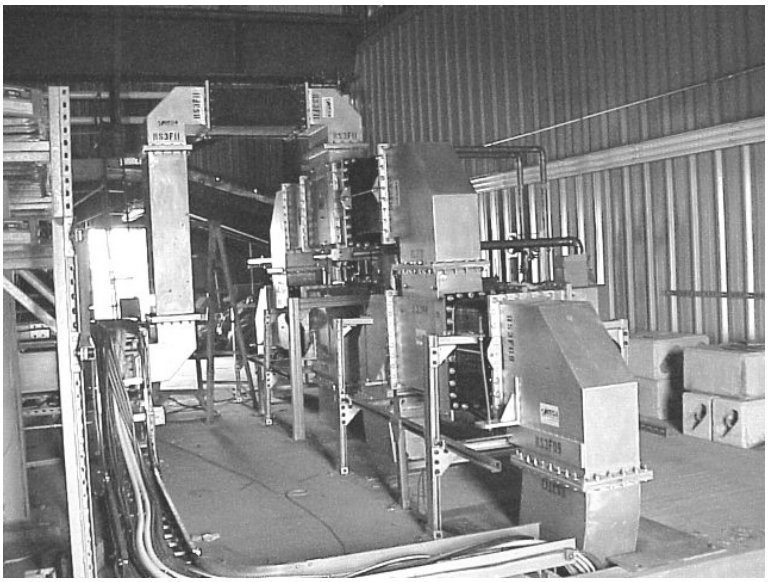


**Figure 18:** Magic-tee power splitter and bellows network on the SPEAR3 tunnel roof — the two-stage magic-tee arrangement divides RF power equally among all four cavities

## 7.2 Monitored RF Signals

The system monitors 24 RF signals at various points in the waveguide network. Key signals include:

- Klystron forward and reflected power (signals 1, 2)

- Each cavity's forward power, reflected power, and probe signal (signals 9–14, 17–22)
- Waveguide load powers (signals 7–8, 15–16, 23–24)
- Station reference and klystron drive (signals 5, 6 — 5 = klystron drive power, 6 = station reference power)
- Circulator load forward and reflected power (signals 3, 4)

Figure 19 shows the installed run from the klystron output into the tunnel. The circulator dump port and the magic-tee difference ports terminate in water-cooled loads (Figure 20) fed from the high-conductivity water station behind the booster (Figure 21).

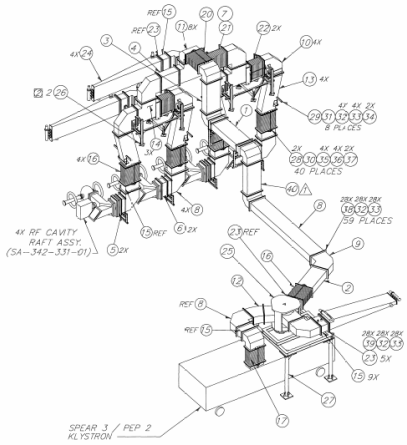



**Figure 19:** Waveguide distribution network routing RF power from the klystron output through the circulator, magic-tee splitters, and into the tunnel toward the four RF cavities




**Figure 20:** Water-cooled waveguide load — absorbs circulator dump power and magic-tee difference-port reflected power; water cooling carries away dissipated RF energy. This load serves the magic-tee on the tunnel roof.

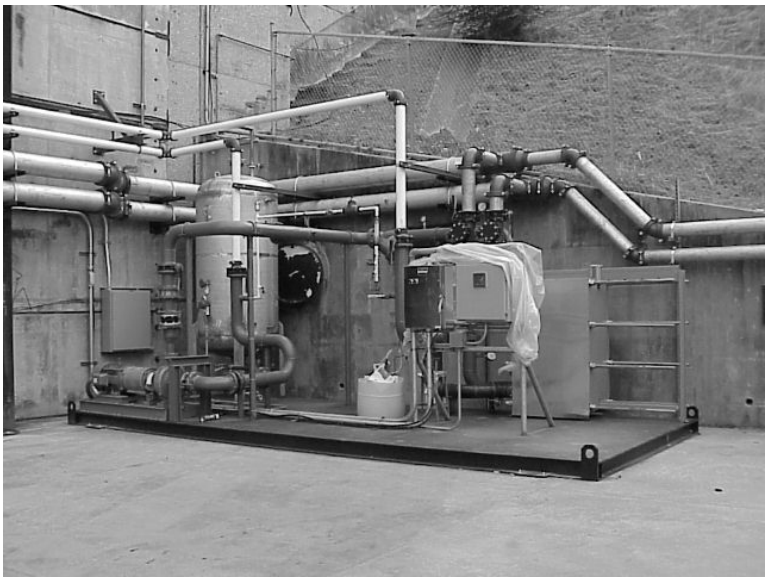


**Figure 21:** High-conductivity water (HCW) cooling station behind the booster — supplies cooling water to the waveguide loads, absorbing reflected and dump power from the RF distribution network

# 8 RF Cavities and Tuner Assemblies

## 8.1 Cavity Specifications

Four single-cell, HOM-damped copper cavities of the PEP-II HER design are installed in the ring [R1], [R45]. Three waveguide ports couple HOM energy to loads. Each cavity provides:

- Accelerating gap voltage: ~712 kV (operating)
- Resonant frequency: tuned to the station RF frequency (~476.3 MHz), tuner-adjustable
- 3 HOM (Higher-Order Mode) loads per cavity for beam stability
- Ceramic window for RF power transmission
- Internal probe for field amplitude and phase monitoring

Each cavity has waveguide window viewports on either side of the ceramic window, providing mounting points for arc detection sensors.

Figure 22 shows a bare cavity body of this design and Figure 23 a complete assembly; the parts are named in Figure 24. The tuner plunger enters from below (Figure 25), and the three HOM loads terminate an E-plane mitre bend (Figure 26), an H-plane mitre bend (Figure 27) and a water-cooled plate (Figure 28). Figure 29 shows the installed row from the tuner side.

## 8.2 Tuner Mechanical Assembly

Each cavity has an individual stepper motor tuner that adjusts the cavity resonant frequency by varying the insertion depth of a mechanical plunger.

The 2023 inspection found that cavities A/B could challenge their lower bellows before the hardware stops acted, and that C's lower limit switch needed replacement. It also proposed a 12.5 mm upper software limit for A, whose upper switch actuated at 13.3 mm [R36].

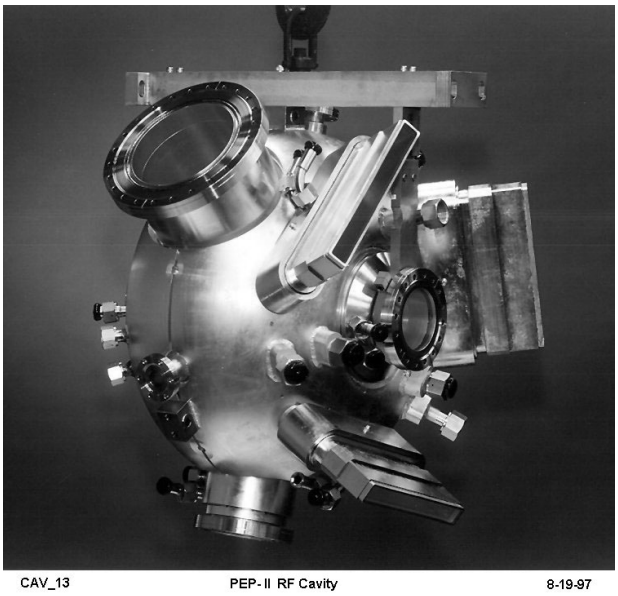



**Figure 22:** PEP-II bare single-cell RF cavity — copper cavity body prior to installation of HOM dampers, tuner assembly, and waveguide couplers; the SPEAR3 cavities are of this same design

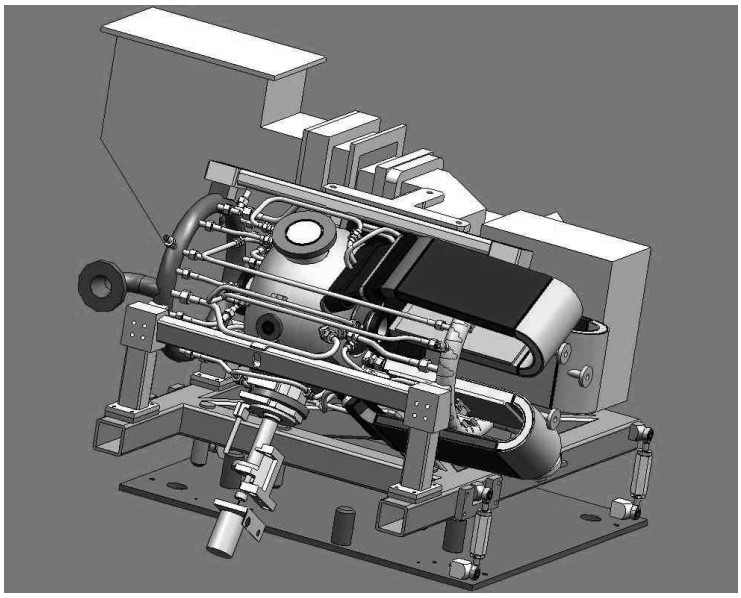


**Figure 23:** RF cavity assembly — cavity body with waveguide coupler, HOM damper waveguide stubs, and tuner plunger installed

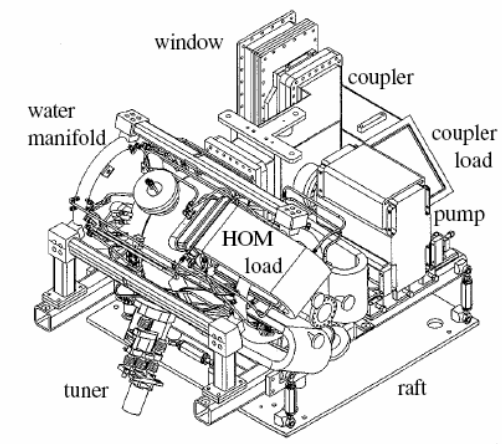



**Figure 24:** Labeled RF cavity assembly — identifying the accelerating cell, input coupler, HOM damper ports, movable tuner plunger, probe port, and ceramic RF window



**Figure 25:** Movable tuner plunger assembly mounted below an RF cavity — the SLO-SYN stepper motor drives the plunger in/out to shift the cavity resonant frequency and minimize RF reflection under varying beam loading

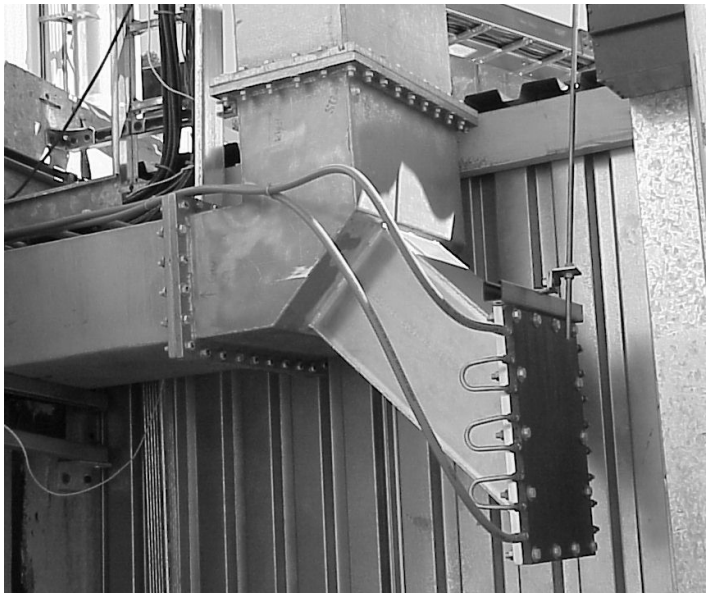


**Figure 26:** HOM (Higher-Order Mode) load at an E-plane mitre bend in the waveguide stub — absorbs parasitic cavity modes that would otherwise cause beam instability

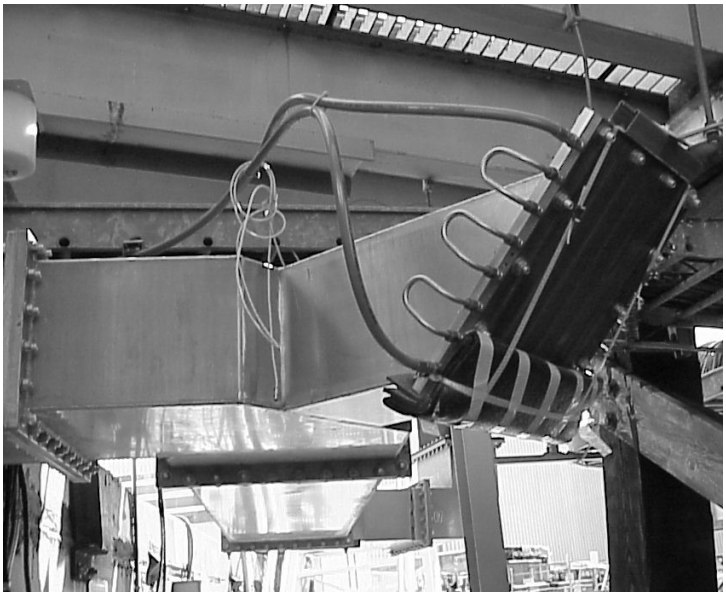


**Figure 27:** HOM load at an H-plane mitre bend — the three HOM loads per cavity (E-mitre, H-mitre, and plate) together damp all significant parasitic resonances above the fundamental accelerating mode

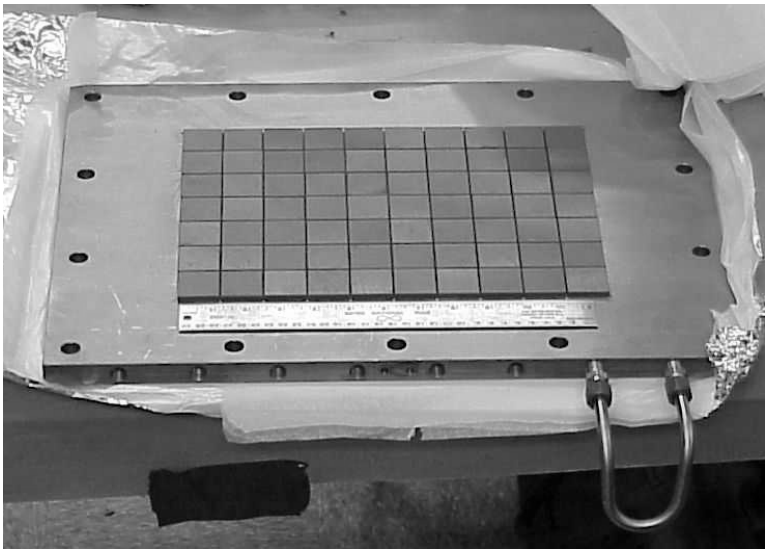


**Figure 28:** Water-cooled HOM load plate — dissipates HOM power as heat, carried away by the high-conductivity water cooling system.

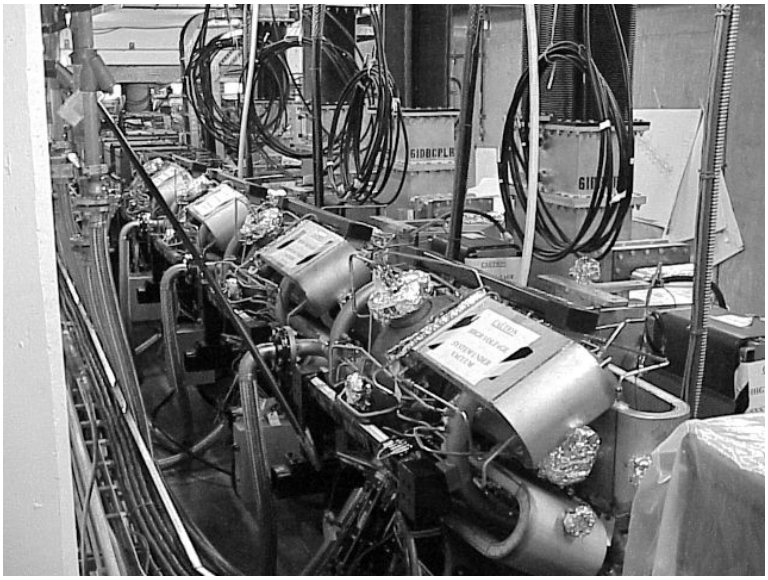


**Figure 29:** Four RF cavities installed in the SPEAR3 storage ring tunnel (outward view, tuner side) — showing the complete cavity row with waveguide distribution network and interconnecting bellows runs visible

**Tuner travel — checked September 2026.** J. Sebek and R. Lion checked the installed tuner mechanics. The hardware limit switches are presently set at approximately $\pm$**25 mm**, whereas the plunger actually moves only about $\pm$**4 mm** over a year of operation. The mechanical travel will therefore be restricted to $\pm$**10 mm**. That still covers the observed annual excursion with a wide margin, and a $\pm$10 mm stroke does not stress the bellows.

| Component / parameter | Specification | Source |
|---|---|---|
| Motor | Superior Electric SLO-SYN M093-FC11 (NEMA 34D) | [R30] |
| Motor driver (in service) | Superior Electric SLO-SYN SS2000MD4-M PWM translator, one per motor (obsolete part) | [R29] |
| Motor controller (in service) | Allen-Bradley 1746-HSTP1 stepper module, one per cavity, in chassis 340-315 | [R78] |
| Motor controller (to be upgraded) | Galil DMC-4143 Rev 1.3h, 4-axis | [R34], [R35] |
| Position feedback | Linear potentiometer on each tuner assembly (indication only — not used to close the loop) | [R36] |
| Step resolution | 0.003175 mm/step (1.27 mm/rev $\div$ 400 steps/rev) | `rf_cav.db,v` `DIST` |
| Slew setting | `VELO`=3 rev/s, equivalent to 3.81 mm/s; `ACCL`=0.5 s to velocity | Original record and device support [R78] |
| Software travel limits | $-$29.5 mm (`DRVL`) to +18 mm (`DRVH`) | `rf_cav.db,v` |
| Retry deadband | 0.015875 mm (exactly 5 steps) | `rf_cav.db,v` |
| Loop rate | 2 Hz, 4 independent instances of `rf_tuner_loop.st,v` | [R18] |

# Part III
# POWER SYSTEMS

## 9 High-Voltage Power Supply — Power Section

### 9.1 Architecture Overview

The HVPS is a 12-pulse thyristor phase-controlled rectifier based on the PEP-II design (SLAC, 1997) [R6]. It delivers negative-polarity DC high voltage to the klystron cathode. The power section is located in Building B514; the control system is in Building B118.

Two complete HVPS units exist: **SPEAR1** and **SPEAR2**. Both are maintained in operating condition and connect to the klystron through a switch-over tank. At any time **one unit is energized and the other is completely switched off** — this is not a warm-standby arrangement. The roles are exchanged at the two scheduled accelerator downs each year (April and August), which equalizes run-time and gives maintenance access to the off-duty unit. Either SPEAR1 or SPEAR2 may be the active unit.

### 9.2 Power Conversion Chain

Figure 30 traces the conversion from the 12.47 kV substation feed to the klystron cathode.

**Supply rating versus T0 rating.** NWL's schematic and the SPEAR2 nameplate rate the complete supply at **2750 kVA, 12.5 kV, 127 A RMS** [R70], [R75]. The separate nominal rating of the extended-delta phase-shifting transformer T0 is **350 kVA** in [R22]. This is consistent with the original paper's statement that the phase-shifter size is less than 15% of the full-load MVA [R6]; its winding rating is not the station through-power rating.

Figure 31 is the annotated PEP-II schematic from which the SPEAR3 supply derives. The main oil tank (Figure 32) holds the transformers, inductors, filter components and rectifier stacks, with the thyristor stacks in their own isolated tank (Figure 33). Figure 34 shows the switch tank that selects which unit feeds the klystron. Figure 35 shows the installation as a whole and Figure 36 the NWL rating plate cited above; Figure 37 shows the tank top opened for the 2026 inspection.

### 9.3 Key Component Specifications

| Component | Specification | Source |
|---|---|---|
| Complete HVPS assembly | **2750 kVA input**, 12.5 kV at 127 A RMS, three-phase, 60 Hz; output $-90$ kV DC at 27 A DC | NWL schematic [R70]; SPEAR2 nameplate [R75] |
| Phase-shift transformer T0 | **350 kVA nominal component specification**; extended-delta phase shifter producing two three-phase sets at $\pm 15^{\circ}$. Approximately 12.91 kV RMS line-to-line at the rectifier-transformer primaries for a 12.47 kV input | [R22]; [R6]; [R56] |
| Nameplate construction data | $55\,^{\circ}$C rise, Class OA (oil-immersed, self-cooled), **7.5% impedance**, **95 kV BIL**, 2,600 gallons of oil, 67,400 lb. NWL drawings: D36941 physical outline, D36943 electrical schematic | NWL rating plate [R75] |

| Component | Specification | Source |
|---|---|---|
| Rectifier transformers T1, T2 | 1.5 MVA each, open wye primary / dual wye secondary | SD-730-790-01-C1 [R9]; [R22] |
| Transformer secondaries | T1-S1 = T1-S2 = T2-S1 = 21.0 kV RMS $\varphi$–$\varphi$; T2-S2 = 10.5 kV RMS | [R56] |
| Series DC stage taps | $-26$ kV, $-52$ kV, $-77$ kV, $-90$ kV (cumulative, as labeled on the schematic) | SD-730-790-01-C1 [R9] |
| SCR stacks (phase control) | 12 stacks $\times$ 14 Powerex T8K7 = 168 thyristors. The schematic labels the thyristor-controlled rectifier assembly ”40KV 80A”; this is not an individual-device rating | [R56]; SD-730-790-01-C1 [R9] |
| Thyristor snubbers / sharing | 0.047 $\mu$F across each thyristor; 0.015 $\mu$F R-C snubber per stack; MOVs plus $\approx$ 20 M$\Omega$ sharing resistor per thyristor ($\approx$ 280 M$\Omega$ per stack) | [R56] |
| Filter inductors L1, L2 | 0.3 H, 85 A full load, 0.38 $\Omega$ DC resistance | [R56]; labeled ”FILTER INDUCTOR” on SD-730-790-01-C1 [R9] |
| Secondary rectifiers | 4 six-pulse main bridges in series, ”RECTIFIERS 30KV 30A”; 4 filter bridges, ”FILTER RECTIFERS 30KV 3A AVG” | SD-730-790-01-C1 [R9]; [R22] |
| Filter capacitors | ”CAPACITORS 8uFD 30KV” — **8 $\mu$F per stage $\times$ 4 series stages** ($\approx$ 2 $\mu$F net) | SD-730-790-01-C1 [R9]; [R56] |
| Filter series resistors | ”FILTER RESISTORS 500 OHMS 1KW” — 8 total, two per stage, in oil | SD-730-790-01-C1 [R9]; [R22] |
| Additional output capacitor | 0.22 $\mu$F across the HVPS output (not shown on the top-level schematic) | [R56] |
| Crowbar SCRs (SCR13–16) | 4 stacks in series, 6 thyristors per stack with 5 M$\Omega$ sharing resistors. The schematic labels the crowbar assembly ”CROWBAR 40KV 80A” (per-stack device rating); the oil-to-oil feed-through bushings are separately rated 100 kV DC with 80 kA peak fault current | SD-730-790-01-C1 [R9]; [R22]; [R6]; [R56] |
| Cable termination inductors | **350 $\mu$H, 40 A** as built — labeled ”350 $\mu$H 40A” on the Grounding Tank drawing, where they are designated **L1 and L2**. Each is shunted by a 25 kV / 100 A diode and a 30 nF / 37 kV capacitor. *SLAC-PUB-7591 [R6] describes ”small 200 $\mu$H inductors in the termination tank” — that is the 1997 design figure; the as-built value is 350 $\mu$H.* | SD-730-790-05-C1 [R62]; [R6] |

| Component | Specification | Source |
|---|---|---|
| Output voltage divider | **Two identical dividers**, each **five 20 MΩ resistors in series (100 MΩ) into two 1 MΩ resistors in parallel (500 kΩ)** — R1–R7 and R11–R17 on WD-730-794-04-C0 [R71], in its "TRANSFORMER TANK WD-730-792-01" section. Each feeds a coaxial run (VOLTAGE 1 via J7, VOLTAGE 2 via J8) to TS-3 "VOLTAGE MONITORS" as DC-VOLTAGE #1 and #2. **The 500 kΩ bottom leg is loaded by the regulator board's ≈ 10.5 kΩ input**, which dominates it; the resulting end-to-end scale factor is $R_{\text{load}}/R_{\text{div}} = 10^4/10^8 =$ **$1 \times 10^{-4}$, i.e. ≈ 10,000:1** (9.1 V at 91 kV) [R72]. Independently confirmed by the PS Monitor Board output labeled "+ Voltage 10 kV/V" | WD-730-794-04-C0 [R71]; [R72]; SD-730-793-12-C3 [R61] |
| Output HV cable | Mil-C-17/81-0001 (formerly RG-220), ≈ 101–103 pF/m; ≈ 10 m HVPS → transfer tank, < 50 m transfer tank → termination tank | [R56] |
| Regulator card | PC-237-230 (SD-237-230-14-C1), "PEP II RF System — Enerpro Voltage and Current Regulator Board" | [R12] |

### 9.3.1 SCR Trigger and Monitor Electronics (SD-730-793 series)

The `SD-730-793-xx` drawings are **printed-circuit-board schematics for the trigger, interlock and monitoring electronics**.

| Drawing | Title | Role |
|---|---|---|
| **SD-730-793-03-C4** | 2MW Klystron PS 12 kV SCR Driver Board (M. Nguyen, 23 MAY 02) | Gate drive to the phase-control thyristor stacks. Opto-isolated 6N-139 input; CD4047B astable plus CD4528 monostables; MIC-4451 drivers into IXFH12N90 MOSFETs and a 60T/60T/60T pulse transformer. On-drawing timing diagram: **TP1 = 50 $\mu$s ± 5%, TP2 = 16 $\mu$s ± 1 $\mu$s (adj. by R2), TP4–TP5 = 5 $\mu$s / 5 $\mu$s / 18 $\mu$s ± 5%** |
| **SD-730-793-04-C2** | 2MW Klystron Power Supply SCR Crowbar Trigger Board (M. Nguyen, 10-JUN-02) | Crowbar gate drive. Same 6N-139 / CD4047B / CD4538 / MIC-4451 / IXFH12N90 / 60T pulse-transformer topology, but on a **millisecond** envelope: **TP1 = 50 ms (adj. by R1), TP2 = 5 ms, TP3 = 44 $\mu$s (adj. by R2), TP4–TP5 = 3 × 5 $\mu$s optical SCR trigger**. A second output, **J1 (SIP4) "Output Plug to Old Slave Trigger Bd"**, driven by MIC-4427s, fires the slave boards so all four crowbar stacks trigger together |
| **SD-730-793-07-C2** | SCR Control Driver — **Right Side** Trigger Interconnect Bd | Carries **J1 BNC "TRANSFORMER ARC TRIGGER"** and **J2 HFBR-2412 "F.O SCR ENABLE"** receiver; drives ±A/±B/±C SCR trigger outputs; exchanges the COMMANDS bus (+12V PWR, 24V FAULT/ENABLE, FO SCR ENABLE, CB ENABLE, SLAVE CB TRIG, PLC FORCE CB, SLAVE CB OFF) with the left-side board |

| Drawing | Title | Role |
|---|---|---|
| **SD-730-793-08-C1** | SCR Control Driver — **Left Side** Trigger Interconnect Bd | Carries **J1 BNC "KLYSTRON ARC TRIGGER"**, **J2 HFBR-2412 "F.O KLYSTRON CROWBAR"** receiver and **J3 HFBR-1412 "F.O STATUS"** transmitter; MONITORING bus M1 (SCR ENABLE MON, CB TRIG MON, CB MONITOR, KLYS ARC MON, SCR MONITOR, KLYS CB MON) |
| **SD-730-793-12-C3** | 2MW Klystron PS Monitor Board | Conditions the HVPS voltage and current monitors; outputs **BNC1 "+ Voltage 10 kV/V"**, **BNC2 "+ Current 5A/V"**, and a **BNC3 "CROWBAR"** input; isolated ±15 V rails via two NMH2415S DC-DC converters |
| **SD-730-793-13-C1** | 2MW Klystron Power Supply Optical SCR Trigger Board | Generates the gate pulse train through a 60T/60T/60T pulse transformer; power connector P1 carries **+240 V, +120 V, GND, +5 V, AC OUT** — matching the 240 V first pulse / 120 V subsequent pulses described in §9.6 |

These three fiber-optic ports — SCR ENABLE (right board), KLYSTRON CROWBAR (left board) and STATUS (left board) — are the B118 ends of the three fibers from the RF Local Display Panel in B132 (§15.2) [R82], [R83].

Boards **-03**, **-04** and **-13** share the same **4DB-P107-06** power connector with the same pinout (+240 V, +120 V, GND, +5 V, AC OUT ×2), confirming that the two-level 240 V / 120 V gate-drive scheme is used on all three.

**SCR variants**: SD-730-793-04-C2 distinguishes optical and conventional SCR trigger configurations by R3/R37 values of 24.9 kΩ and 78.70 kΩ respectively. The 2004 SPEAR3 paper reports optical SCRs [R1]; this does not identify every presently installed stack.

Confirm SCR type and matching trigger-board configuration before replacing a board. [O7]

**Two generations of crowbar trigger board exist.** `sd7307940400.pdf` is **SD-730-794-04-C0**, "SCR Crowbar Trigger Board", R. Cassel 11/08/99 — an earlier design using +15 V logic, a 6N-138 optocoupler, discrete IRFD9120/IRFD110 gate drivers and IXYTH12N90 switches, with R3/R4 = 147 kΩ. It was superseded by SD-730-793-04-C2 (2002), which uses +12 V logic, a 6N-139, MIC-4451 drivers and IXFH12N90 switches with R3 = 24.9 kΩ. The "Old Slave Trigger Bd" referred to on the 2002 sheet is most likely a board of this 1999 vintage. **Component values are not interchangeable between the two generations.**

## 9.4 Monitoring Signals (B514 → B118)

Four analog monitoring signals are sent from the HVPS power section to the B118 control room and are wired to a four-channel oscilloscope in the Hoffman Box area:

| Signal | Purpose | Sensor |
|---|---|---|
| HVPS Output Voltage | DC voltage monitoring and regulation feedback | ≈10,000:1 resistive divider |
| HVPS Output Current | DC current monitoring | Danfysik UltraStab DC-CT in the Termination Tank; output goes to both Slot-9 `1746-NI4` Input 3 and the PS Monitor Board [R25] |

| Signal | Purpose | Sensor |
|---|---|---|
| Inductor 2 Voltage | T2 firing circuit timing verification (sawtooth) | Inductor tap |
| Transformer 1 Phase Current | T1 firing circuit health monitoring | Transformer CT |

Two further sensors in the Termination Tank feed protection rather than monitoring: a **3.333 mΩ (15 A = 50 mV) shunt** in the HV return cable, wired via TS-6 20/21 to BNC-12; and a **Pearson CT-110** (10 A/V) wide-bandwidth current transformer whose coaxial output feeds J1 of the Left Side Trigger Interconnect Board (SD-730-793-08-C1) and initiates a crowbar trigger on a large enough transient [R25]. §12.2 describes both arc triggers.

## 9.5 Stored Energy and Discharge Times

The following estimates summarize the circuit models in J. Sebek's hazards note [R56]. Isolation, discharge and absence-of-voltage verification require the applicable approved procedure and qualified personnel. The models assume the identified discharge paths remain intact.

| Component | Value | Stored energy | Time constant | Estimated decay time |
|---|---|---|---|---|
| Filter inductor (each of 2) | 0.3 H at 85 A | 1,084 J | < 0.1 s | < 0.1 s |
| Phase stack snubber capacitor | 0.015 $\mu$F at 18.26 kV | 2.5 J | 4.2 s | 24.8 s |
| Per-thyristor snubber capacitor | 0.047 $\mu$F | 40 mJ | 0.94 s | 3.1 s |
| Filter capacitors (normal shutdown) | $\approx$ 2 $\mu$F net | 8,788 J | < 1 s | < 1 s |
| Additional output capacitor | 0.22 $\mu$F | 911 J | < 1 s | < 1 s |
| Output cables | $\approx$ 0.006 $\mu$F | 25 J | < 1 s | < 1 s |
| **Total output capacitance (source removed, normal load)** | $\approx$ **2.23 $\mu$F** | $\approx$ **9,724 J** | **< 1 s** | **< 1 s** |
| Total output capacitance (source and klystron load removed) | $\approx$ 2.23 $\mu$F | $\approx$ 9,724 J | 20.9 s | 160 s |
| Filter capacitors (only filter-rectifier bleeders connected) | 8 $\mu$F per stage | 8,788 J total | 640 s | **4,890 s** |

Capacitor times refer to decay below 50 V at the output, or below 12.5 V per series stage where that approximation is used. The inductor row describes current/energy decay, not a voltage clearance criterion.

**Normal turn-off.** The controller inhibits all phase-control stacks except B+ and B-, which provide a freewheel path for the primary-inductor current. The measured inductor voltage decays in about 10 ms. The source-free klystron-load model predicts capacitor decay below 50 V in about 250 ms, but an energized primary leaves approximately **1.3 kV** of rectified leakage at the output after firing is inhibited [R56]. A normal RF shutdown is therefore not electrical isolation.

**Abnormal configurations.** The 81.5-minute estimate assumes the filter-rectifier bleeders remain connected. Further disconnection or component failure can remove that path entirely. No finite discharge time is established here for an isolated capacitor.

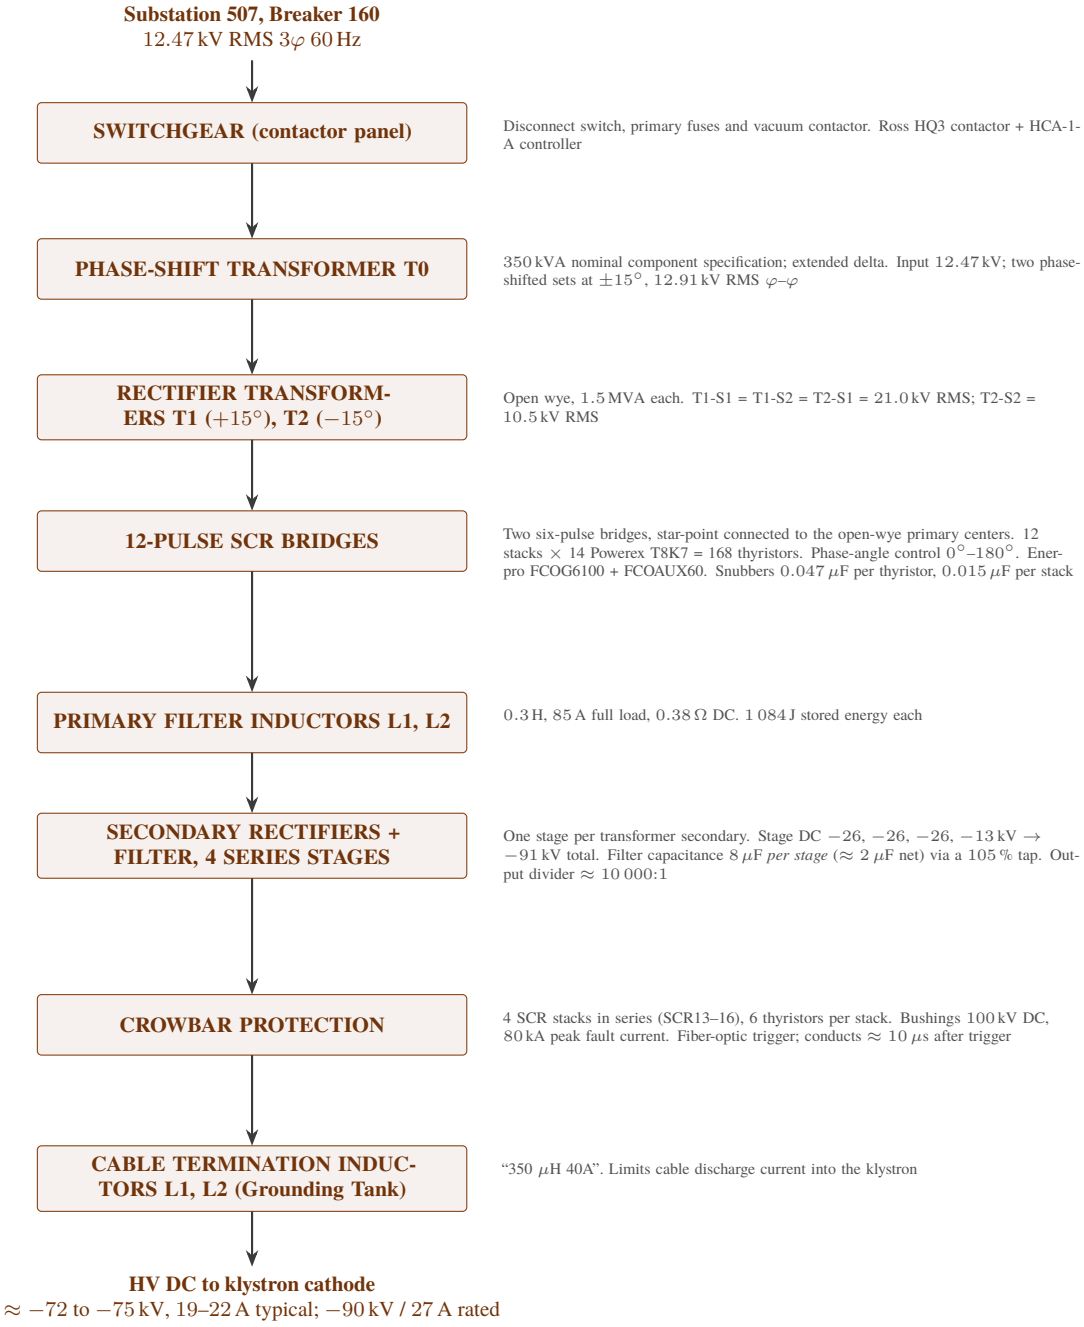



**Figure 30:** HVPS power conversion chain, substation to klystron cathode.

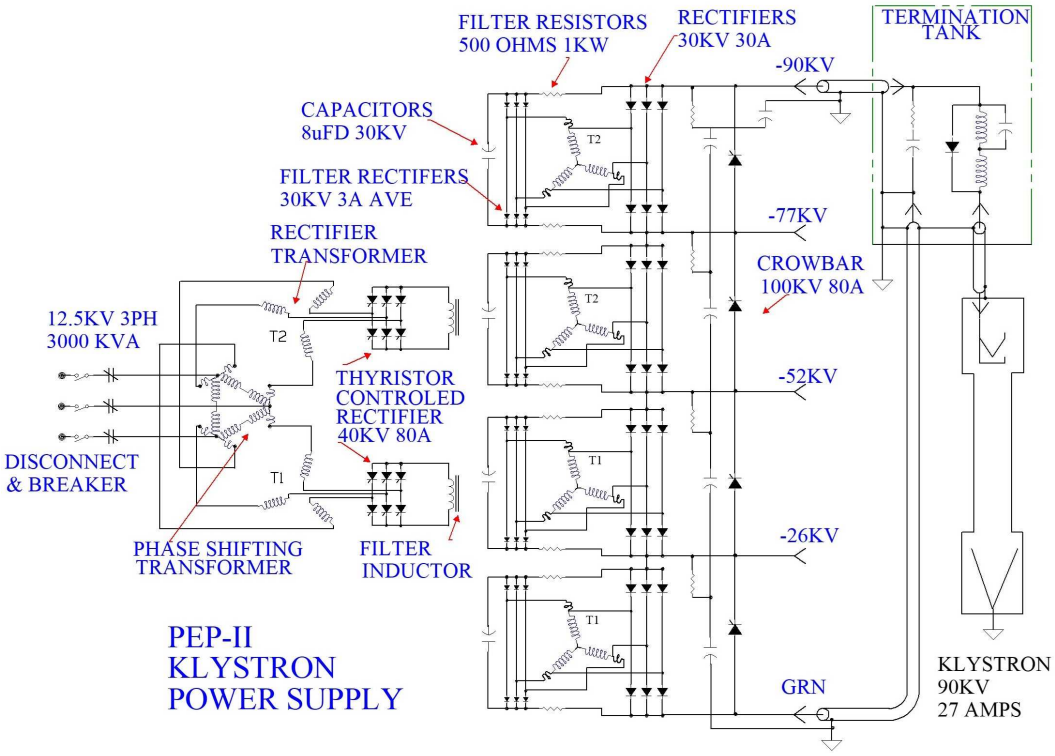



**Figure 31:** PEP-II Klystron Power Supply — annotated circuit schematic showing the complete power conversion chain from the 12.5 kV 3-phase input through the disconnect/breaker, phase-shifting transformer (T0), thyristor-controlled rectifier bridges (40 kV, 80 A), filter inductors, secondary rectifier stages, 8 $\mu$F/30 kV filter capacitors, 500 $\Omega$/1 kW filter resistors, 30 kV/30 A rectifiers, Crowbar, and Termination Tank to the Klystron (90 kV, 27 A). The intermediate DC levels labeled on the power stage outputs ($-26$ kV, $-52$ kV, $-77$ kV, $-90$ kV) are cumulative stage tap voltages. The SPEAR3 HVPS is directly derived from this PEP-II design

## 9.6 Control Power and Trigger Pulses

| Item | Specification |
|---|---|
| DC control power | 125 V DC from Substation 507, used by the local contactor controller in the switchgear; also feeds its local MPS for transformer tank overpressure, main tank oil temperature, and LCW flow through the oil cooling radiators |
| AC control power | Three phases of 208 V AC — one for the contactor controller, one for the main-tank oil pump, one for the switchgear compartment light |
| Thyristor gate trigger pulses | Trains of 16 $\mu$s pulses in 15° bursts; first pulse 240 V, subsequent pulses 120 V. Similar amplitudes fire the crowbar thyristors |

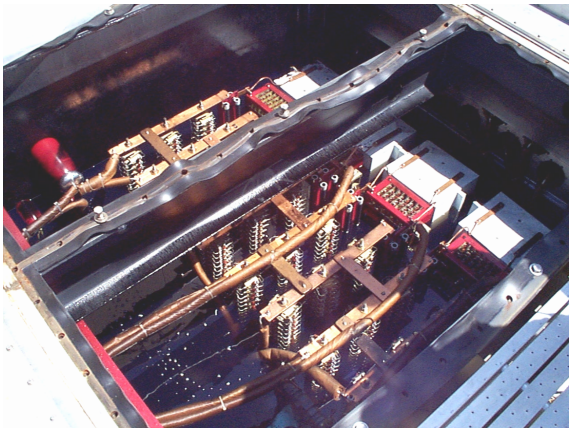


**Figure 32:** HVPS2 main oil tank at Building B514 — this large oil-immersed enclosure houses the phase-shift transformer (T0), the two rectifier transformers (T1, T2), the two filter inductors, four filter capacitors with their eight resistors, and the main and filter diode rectifier stacks. The SCR phase controller and the SCR crowbar are mounted inside it in their own isolated oil tanks with oil-to-oil bushings, so either can be serviced without contaminating the main tank oil [R6]. SPEAR1 is an identical installation

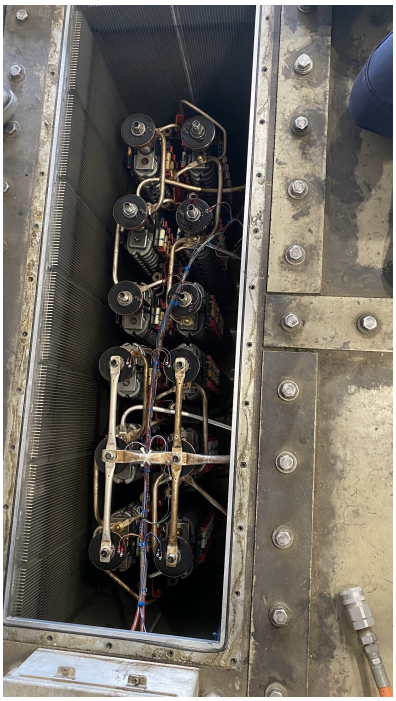


**Figure 33:** Thyristor stack assemblies inside the HVPS2 phase tank, viewed into the side access opening with the cover removed — showing columns of Powerex T8K7 SCR thyristor discs (flat black cylinders) paired on copper bus bar assemblies with gate driver signal wiring; this photo was taken with SPEAR2 drained and accessed during the April 2026 scheduled downtime; SPEAR1 contains identical hardware

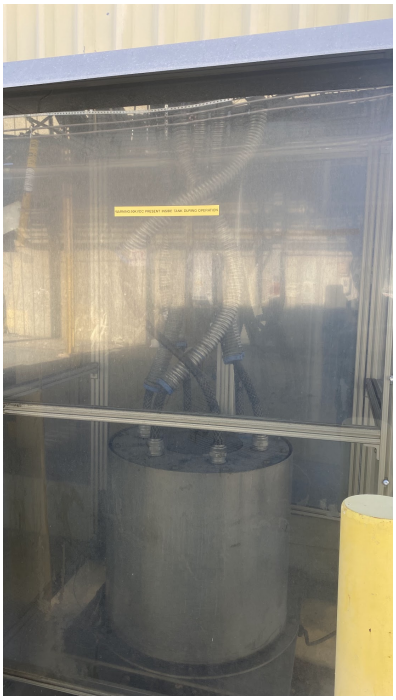


**Figure 34:** HVPS cable switch tank at Building B514 — provides the switchover connection between the SPEAR1 and SPEAR2 HVPS units and the klystron HV cable; allows the active unit to be changed without disconnecting the klystron high-voltage cable




**Figure 35:** HVPS2 installation at Building B514 showing the large beige oil-filled power supply enclosures, ”SPEAR 2” identification label, and ”DANGER HIGH VOLTAGE” placard on the panel door; the cable trays, conduit runs, and grounding conductors are visible; a ”DO NOT ENERGIZE” lock-and-tag notice is visible at left (SPEAR2 is the off-duty unit); SPEAR1 forms an identical installation on the right of SPEAR2

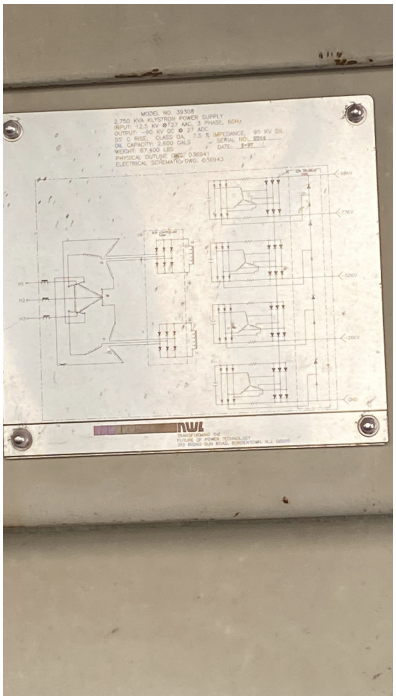


**Figure 36:** NWL manufacturer's rating plate on the SPEAR2 transformer tank, at the left-hand end of the installation above. It reads: **Model No. 39308**, **2,750 kVA klystron power supply**, input **12.5 kV at 127 A AC, 3-phase, 60 Hz**, output **−90 kV DC at 27 A DC**, 55 °C rise, Class OA, 7.5% impedance, 95 kV BIL, 2,600 gallons of oil, 67,400 lb, dated Mar 1997. The plate also carries the winding and rectifier schematic with its cumulative DC stage taps, and cites NWL drawings D36941 (physical outline) and D36943 (electrical schematic). SPEAR1 carries an identical plate



**Figure 37:** HVPS2 main oil tank being accessed from the top during the 2026 HVPS inspection — revealing the internal copper bus bar assembly and SCR bridge structures below

# 10 HVPS Control System (B118)

## 10.1 Overview

Each HVPS unit has **two** Hoffman NEMA enclosures of its own, standing side by side in Building B118. Both are called ”the Hoffman box” in conversation — indeed the door label on the smaller one also reads **”HOFFMANN BOX”** — so this document keeps them apart by function:

- The **controller enclosure** — the large cabinet, titled **TRIGGER ENCLOSURE** on its own master wiring diagram WD-730-790-02-C6 [R63]. It holds the SLC-500 PLC, the analog regulation electronics, the Enerpro SCR firing boards, the power supplies, the terminal strips and the fiber-optic interfaces. Its door carries the unit identification label, a DANGER HIGH VOLTAGE placard, the lock-and-tag procedure form and the SLAC HV Switching Order. §§10.2–10.6 describe its contents.
- The **local control panel** — the smaller enclosure beside it, which is the operator interface: a QuickPanel II touchscreen, four permit status lamps, ON and OFF pushbuttons, an EMERGENCY OFF mushroom and the PERMIT key switch. It appears on [R63] as the **LOCAL CONTROL PANEL** block, where the mushroom is drawn as switch **S1** with *two* normally-closed contacts (§10.4).

SPEAR1 and SPEAR2 each have a complete pair; the off-duty unit’s pair is de-energized along with its power section. Figure 38 shows the two enclosures side by side — SPEAR1 active in Figure 38a and SPEAR2 switched off in Figure 38b. Figure 39 shows the controller-enclosure interior and Figure 40 the local control panel.




**(a)** SPEAR1 — the active unit. The door carries the identification label, a DANGER HIGH VOLTAGE placard, the lock-and-tag procedure form and the SLAC HV Switching Order.




**(b)** SPEAR2 — identical hardware, switched off. The posted oscilloscope trace shows 12-pulse thyristor firing waveforms from HER B-2, circa 2007.

**Figure 38:** HVPS controller enclosures in Building B118. The two units are identical; one is energized and the other completely switched off, with the roles exchanged at each scheduled down.

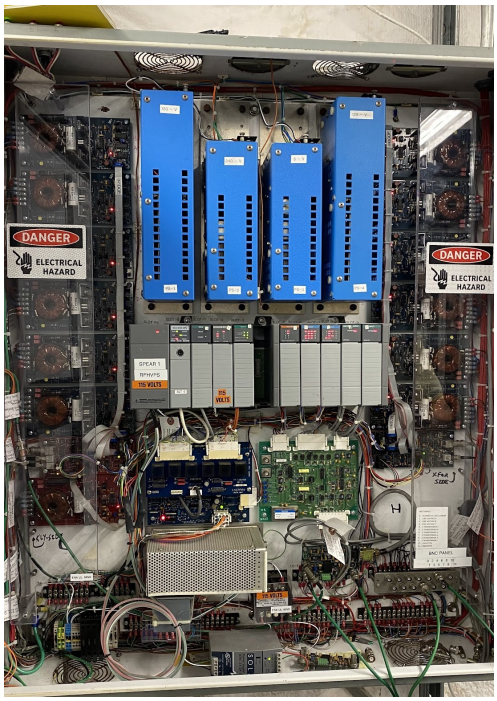



**Figure 39:** HVPS controller enclosure interior (SPEAR1) — the SLC-500 PLC rack (center, a 10-slot chassis carrying the CPU and I/O modules in slots 0–9 with slot 4 empty, labeled ”SPEAR 1 RFHVPS”), four blue KEPCO DC supplies — **PS-1** 120 V/1 A, **PS-2** 240 V/0.25 A, **PS-3** 5 V/20 A and **PS-4** 120 V/1 A, in that order on both the chassis labels and [R63] — the Enerpro FCOG6100 SCR firing board (dark blue PCB, lower center), the analog regulation board (green PCB), and terminal strips TS-1 to TS-6 in the lower section; the BNC monitoring output panel is at lower right. On [R63] the three rails arrive at every SCR gate-trigger module as `+100V` (red, PS-1 and PS-4), `+200V` (orange, PS-2) and `BIAS` (blue, PS-3), and rung 0068 switches their 120 V AC feed; whether the 5 V rail is still loaded has not been checked. **[O12]**




**Figure 40:** SPEAR1 **local control panel** labeled ”SPEAR 1 HOFFMANN BOX”. Across the top are the four permit status lamps **PPS PERMIT**, **EMERGENCY OFF**, **KEY ENABLE** and **WAVEGUIDE PERMIT** — LED1 to LED4 of the LOCAL CONTROL PANEL block on [R63] — all lit green here. Below them are the OFF and ON pushbuttons, the EMERGENCY OFF mushroom, and the **PERMIT** key switch, which must be turned from DISABLE to **ENABLE** before the HVPS can be switched on; the key contact drives SLC-500 slot 6 IB16 IN12, labeled ”KEY ENABLE” on [R63]. The QuickPanel II touchscreen is the local operator display, with a taped warning that only its lower-left corner may be touched to wake it, because a stray touch elsewhere can shut the RF HVPS off. SPEAR2 has an identical panel.

## 10.2 SLC-500 PLC Hardware Configuration

| Slot | Module | Function |
|---|---|---|
| 0 | SLC-500 CPU (AB-1747-L532) | Main processor |
| 1 | 1747-DCM (DCM-FULL) | Remote I/O adapter — presents the SLC-500 to the VXI 6008-SV1R scanner as RIO rack 1 |
| 2 | 1746-IO8 | 8-point digital I/O. OUT3 (terminal 5) drives the Ross Grounding Switch coil (120 VAC); also 12 kV and 240 V control |
| 3 | Thermocouple Module (AB-1746-THERMC on [R63]) | Four thermocouples: IN0 SCR tank top oil (TC-1), IN1 SCR tank bottom oil (TC-2), IN2 crowbar (TC-3), IN3 air (TC-4) [R63]. The program copies the module's eight input words, four channel data and four channel status, to N7:100–N7:107 (rung 0092) and writes four configuration words from N7:90–N7:93 (rung 0115); channels 0 and 1 hold the oil-temperature permit B3:4/1 while both read below 800 (rung 0043), and channels 0–3 are scaled for the touch panel [R26] |
| 4 | (empty) | Unused slot |
| 5 | 1746-OX8 | 8-point relay output. OUT1 = Contactor On/Off (TS-5 2); OUT2 = Contactor Enable → K4 coil (TS-5 4); also SCR enable, crowbar, fast inhibit |
| 6 | 1746-IB16 | 16-point 24 V DC digital input — interlock, oil-level, arc, permit and PPS status. Complete input map in §10.2.1 |
| 7 | 1746-IV16 | 16-point 24 V DC digital input. IN0 = Blocking relay; IN1 = Overcurrent; IN2 = Contactor Closed/OK; IN3 = Contactor Ready; IN13 = Ross Ground Relay NO |
| 8 | AB-1746-NIO4V | 4-channel analog I/O (voltage reference output, phase angle readback) |
| 9 | AB-1746-NI4 | 4-channel analog input. IN3 = Danfysik DC-CT output (HVPS current); also AC current and voltage monitors |

### 10.2.1 Slot 6 — 1746-IB16 digital input map

WD-730-790-02-C6 [R63] prints all sixteen input labels along the terminal block of the slot-6 module, numbered 0–15 with terminals 16 and 17 as DC COM. Seven of the sixteen are independently corroborated — five by the PLC symbol database [R27] and six by the PPS wiring trace [R25], overlapping on four — and all seven agree position for position.

| IN | Label as drawn | Wire | Cross-check and notes |
|---|---|---|---|
| 0 | SCR DISABLE | YEL | Drawing only |
| 1 | CROWBAR TRIGGER MON | BLU | Drawing only |
| 2 | CROWBAR MONITOR | GRAY | Drawing only |
| 3 | KLYSTRON ARC MONITOR | BLK | Drawing only |
| 4 | SCR MONITOR # 1 | RED | Drawing only |
| 5 | XFORMER ARC MONITOR | BLK | Drawing only |

| IN | Label as drawn | Wire | Cross-check and notes |
|---|---|---|---|
| 6 | SCR MONITOR # 2 | RED | Drawing only |
| 7 | KLYSTRON CB MON | BRN | [R27] names this point `KLYSTRON_CROWBAR` |
| 8 | GRN TANK OIL OK | RED | [R27] ”GRN TANK OIL LEVEL”; [R25] Grounding Tank oil level |
| 9 | GRN SWITCH CLOSED | GRAY | [R27] ”Grounding Switch closed”; [R25] manual grounding-switch auxiliary contact |
| 10 | CROWBAR OIL LVL OK | VIOL | [R27] ”CROWBAR OIL LEVEL”; [R25] crowbar tank oil level |
| 11 | SCR OIL LEVEL OK | YEL | [R27] ”SCR OIL LEVEL”; [R25] SCR phase tank oil level |
| 12 | KEY ENABLE | ORG | The PERMIT key switch on the local control panel, which must be at ENABLE before the HVPS can be switched on |
| 13 | EMERGENCY OFF | BLK | Contact **S1B** of the EMERGENCY OFF mushroom, via TS-8 terminal 2 (§10.4) |
| 14 | PPS # 1 | GRN | PPS enable channel 1, GOB pin E; the same loop drives the PPS4 red status lamp and passes through mushroom contact **S1A** [R25] |
| 15 | PPS # 2 | BLU | PPS enable channel 2, GOB pin G; the same wire drives the PPS3 red status lamp [R25] |
| 16–17 | DC COM | — | Module commons |

**What is not established**: [R27] lists addresses `I:6/0`–`I:6/6` and `I:6/12`–`I:6/15` with their **symbol fields blank**, so their correspondence to ladder rungs and to EPICS PVs has not been traced.

## 10.3 Control Functions

The PLC implements the following control functions in ladder logic:

1. **Power-up/power-down sequencing** — Orderly startup of contactors, SCR drives, and HVPS output
2. **Voltage reference generation** — Converts the EPICS setpoint (via VXI → Remote I/O) into the analog reference for the regulator board
3. **SIG HI feedforward** — Computes an approximate SIG HI value for the Enerpro board from the target voltage
4. **Safety interlock monitoring** — Monitors oil levels, temperatures, PPS status, fiber optic signals
5. **Crowbar management** — Arms/disarms crowbar protection, handles crowbar events
6. **Communication** — Exchanges input and output data tables with the VXI IOC over the Remote I/O link

**Key PLC Registers**:

| Register | Purpose |
|---|---|
| N7:10 | Voltage reference output (to analog regulator) |
| N7:11 | Phase angle / SIG HI feedforward |
| N7:100–N7:103 | Thermocouple data, channels 0–3 (N7:104–N7:107: channel status, unused) |
| N7:110–N7:113 | Scaled temperature values |

| Register | Purpose |
|---|---|
| I:1 / O:1 | Remote I/O data words (VXI interface) |

**PPS-related ladder rungs** (from the original code review in [R25]):

| Rung | Function |
|---|---|
| 0002 | `ENABLE B3:0/6`, in series with system-ready, manual-ground-switch and remote-on conditions → Close Contactor `O:5/1`, the point [R63] labels **CONT. ON/OFF**. The seal-in branch parallels only the momentary ON pulses, so `ENABLE` is a hard series permissive |
| 0014 | `I:6/13` EMERGENCY OFF (examine-if-open) **in series with** PPS 1 → emergency-off latch, alarm and the `O:1/107` status bit |
| 0015 | PPS 1 **in parallel with** PPS 2 → sets `B3:1` ”PPS ON” |
| 0016 | PPS 1 **in series with** PPS 2 (and other conditions) → energizes the Ross Grounding Switch relay coil |
| 0017 | In series with Touch Panel Enable and Emergency Off Clear → OX8 OUT2. *The rung is labeled ”Crowbar On” in the PLC listing, but [R25] concludes the label is wrong; [R63] settles it by printing OX8 OUT2 as* **CONT. ENABLE** |
| 0068 | PPS 2 in series with the touch-panel key enable → Bias Power (120 VAC to the Kepco supplies) |

## 10.4 The EMERGENCY OFF Mushroom

On [R63] the mushroom is switch **S1** of the LOCAL CONTROL PANEL block, and it carries **two** normally-closed contacts rather than one:

- **S1B** sits in the EMERGENCY OFF lamp loop and returns on TS-8 terminal 2 to slot-6 `IN13`.
- **S1A** sits in the *PPS PERMIT* lamp loop and returns on TS-8 terminal 1 to slot-6 `IN14`, the PPS #1 input. [R25] traces the same loop point to point — TS-8 1 to slot 6 IN 14 on green, then the PPS4 lamp anode, then white to the ”Local Panel Emergency Off Key switch 1A”.

Pressing the mushroom therefore de-energizes `I:6/13` *and* `I:6/14` together. Two consequences follow, both read from the drawings and the printed program alone.

**Consequence 1 — the emergency-off latch does not assert.** Rung 0014 places `I:6/13` (examine-if-open) **in series with** `I:6/14` (examine-if-closed) [R26]. With both inputs dropped that branch is false, so a mushroom press does not set `EMERGENCY OFF LATCH B3:1/0`, does not raise the emergency-off alarm and does not set the `O:1/107` bit reported to the VXI; the latch is reached only through the grounding-switch branch. Losing `I:6/14` does still clear `B3:0/0` in rung 0016, which clears `ENABLE B3:0/6` in rung 0017, so the shutdown propagates — but by a different path than the rung names suggest.

**Consequence 2 — losing `ENABLE` commands both a firing inhibit and a contactor open.** Rung 0011 forces the reference and phase-angle words `N7:10` and `N7:11` to zero, and rung 0012 asserts `FAST INHIBIT` on both the `O:5/6` relay and the Enerpro status bit, stopping thyristor firing; with the primary still energized the output then falls to the $\approx 1.3$ kV of rectified leakage [R56] rather than to zero. `ENABLE B3:0/6` is *also* a plain series contact in rung 0002, ahead of the seal-in branch — and that branch parallels only the momentary ON pulses, not `ENABLE`. On the printed listing, losing `ENABLE` therefore also drops `CLOSE CONTACTOR O:5/1`, the point [R63] labels **CONT. ON/OFF**, which drives the MX On/Off coil through TS-5 terminals 2 and 1 [R80]; [R65] opens the vacuum contactor when MX drops.

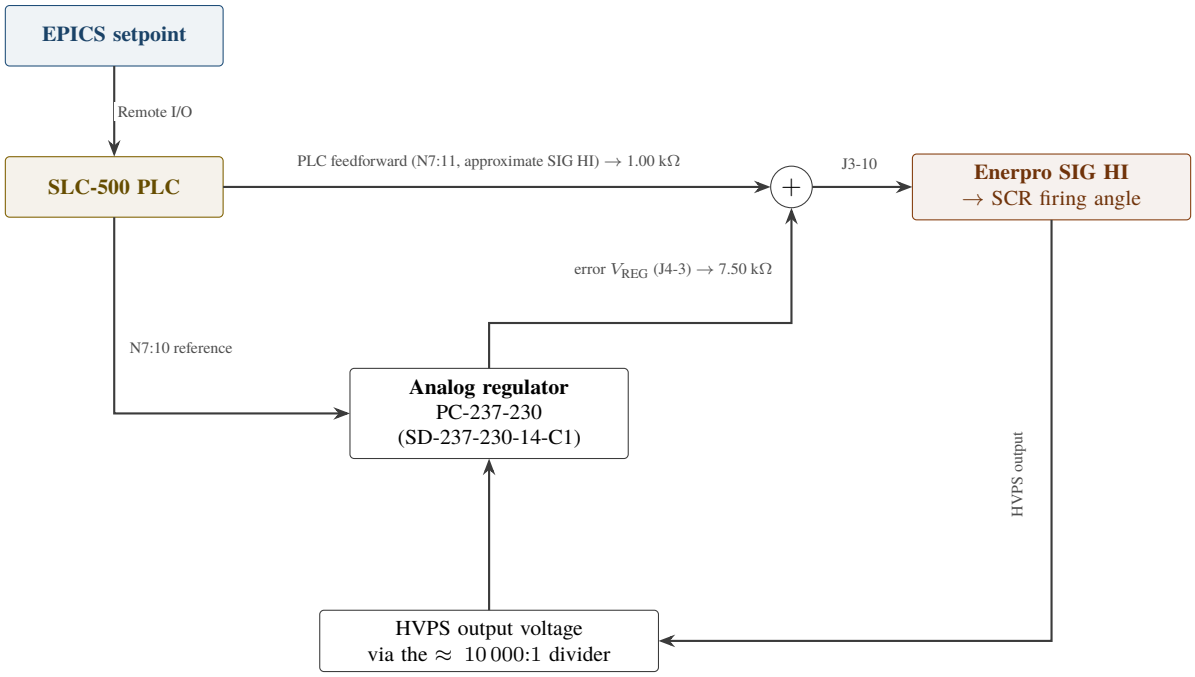



**Figure 41:** HVPS analog voltage regulation loop. The analog regulator card compares the PLC reference with the HVPS output voltage feedback and generates a *bipolar* error signal; that error is weighted and added to the PLC's *unipolar* feedforward output to form SIG HI. Power-line harmonics are clearly visible on the error signal in normal operation.

**Neither consequence has been tested.** Both are derived from [R63], [R80], [R65] and the 2021 ladder printout [R26]. The scope of the mushroom and the state of the vacuum contactor after a press have not been verified on the installed units, and a printed listing is not proof of the program now running. Until an end-to-end test is recorded, the mushroom must be treated as a firing inhibit and permit break, **not** as an AC disconnect or an isolation device. **[O11]**

## 10.5 Analog Regulation

The voltage regulation loop is a **summing** arrangement, not a simple cascade: the PLC supplies both a feedforward estimate of SIG HI *and* the reference for an analog error amplifier, and the Enerpro SIG HI input is a weighted sum of the two [R40], [R72]. Figure 41 shows the arrangement.

The analog regulator card (PC-237-230, drawing SD-237-230-14-C1) compares the PLC reference with the HVPS output voltage feedback and generates a bipolar error signal. That error leaves the card on **J4-3** as $V_{\mathrm{REG}}$ and is combined with the PLC's unipolar feedforward output ($V_{\mathrm{PLC}}$, Slot-8 Output 1) in a **passive resistive combiner** — 7.50 kΩ on the regulator card, 1.00 kΩ in series with the PLC wire — whose junction is the Enerpro SIG HI input on **J3-10** [R72]:

$$V_{\mathrm{SIG\,HI}} = \frac{1}{8.5}\,V_{\mathrm{REG}} + \frac{7.5}{8.5}\,V_{\mathrm{PLC}} = 0.1176\,V_{\mathrm{REG}} + 0.8824\,V_{\mathrm{PLC}},$$

with a source resistance of 882.4 Ω. The feedforward therefore sets the operating point and the regulator only trims it: at the documented $V_{\mathrm{PLC}} = 4.4538$ V the error amplifier's ±14 V swing maps to ±1.6464 V at SIG HI [R72]. Power-line harmonics are clearly visible on the error signal in normal operation [R40].

## 10.6 Terminal Strips and External Connections

The inventory below follows the source drawings and analysis; incomplete or conflicting terminal assignments still require a field record. [O3] [O8]

Internal wiring in the controller enclosure is organized on numbered terminal strips (reference drawing WD-730-790-02-C6 [R15]). The strips identified in the original PPS wiring trace [R25] are:

| Terminal strip | Function | External cable |
|---|---|---|
| TS-2 | Control power supply distribution — system common, ± rails, status | Internal |
| TS-3 | **Voltage Monitor.** Drawn on WD-730-790-02-C6 [R63] directly against a block titled "PEP2 RF SYSTEM KLY PS MONITOR BD SD-730-793-12" and labeled VOLTAGE MONITOR. Terminals: DC VOLTAGE *1, DC VOLTAGE *2, COM, VOLTS, AMPS, COM, −15 V, +15 V, CURRENT 5A/V | Internal |
| TS-4 | Transformer interlocks | To HVPS tanks |
| TS-5 | Contactor controls, 15 terminals (B118 → Switchgear) | Belden 83715 (15C #16 Teflon) |
| TS-6 | Grounding tank / Termination Tank, 21 terminals (B118 → B132) | Belden 83709 (9C #16 Teflon) + Belden 83715 |
| TS-7 | Power distribution | Internal |
| TS-8 | PPS permits — PPS 1 on terminal 1, PPS 2 on terminal 3, common on terminal 6 | From PPS GOB1208PNE connector |

**PPS status indication** is *not* on a terminal strip: the four external status LEDs (two green, two red) on the top left of the controller enclosure are wired to an **AMP 8-pin connector, J2** [R25]. WD-730-790-02-C6 [R63] draws the four LEDs between the mating pair **AMP-8PINM P2** (LED pigtails) and **AMP-8PIN J2** (cable), and labels them individually: **PPS1 LED1 GRN, PPS2 LED2 GRN, PPS3 LED3 RED, PPS4 LED4 RED**. The **PPS GOB1208PNE** connector appears alongside them on the same sheet.

### 10.6.1 What the four lamps are wired to

PPS pin pairing and readback excitation need verification against installed behavior. [O5]

Each lamp is a bare LED with its anode on one PPS circuit node and its cathode on the system common (GOB pin **H** — TS-5 1/8, TS-2 2/4/6, TS-6 2). The anode assignments below are given identically by the drawing [R63] and by the terminal-by-terminal trace [R25], down to the cable color code.

| Lamp | J2 anode / cathode | Pin | Circuit the anode sits on | Lamp follows |
|---|---|---|---|---|
| **PPS1 LED1** *green* | 1 (RED) / 2 (RED/BLK) | B | Chain-1 contactor readback; distinguish disconnect-panel TB2 from HQ3 TB2 (Figure 43) | Intended closed readback for contactor open; excitation and pin pairing unverified |
| **PPS2 LED2** *green* | 3 (BLU) / 4 (BLK) | D | Chain-2 grounding readback: TS-6 11–12 → Ross grounding-switch auxiliary contact | Readback loop made: grounding switch **CLOSED**, HV bus grounded |
| **PPS3 LED3** *red* | 5 (WHT) / 6 (WHT/BLK) | G | **PPS 2 enable**: TS-8 3, and SLC-500 slot 6 IB16 **IN15** (drawn "PPS #2" on [R63]) | PPS is granting the Chain-2 permit: grounding switch may be held open |
| **PPS4 LED4** *red* | 7 (GRN) / 8 (GRN/BLK) | E | **PPS 1 enable**: TS-8 1, and SLC-500 slot 6 IB16 **IN14** (drawn "PPS #1" on [R63]) | PPS is granting the Chain-1 permit: contactor may close |

These indicators are hardwired to PPS circuit nodes rather than driven by PLC outputs [R25], [R63]. That does not make them independent proof of contact position or absence of voltage: illumination depends on external circuit excitation, common-return integrity and the unconfirmed PPS pin assignments.

### 10.6.2 Indicator interpretation limits

The table gives the intended interpretation of the circuit nodes. A dark lamp can indicate a missing permit, an open return, absent readback excitation or a failed indicator. A permit and its readback may coexist during a transition. These observations alone neither isolate a fault nor authorize access. Record all four lamp states against verified contact positions during the PPS validation walk-down.

The adjacent local control panel has a separate **PPS PERMIT** lamp on the PPS 2 line (GOB pin G), in series with the emergency-off contact [R63]. It does not indicate both PPS channels. The PPS 1 line also enters the local emergency-off/key-switch circuit [R25].

**Verification limits**: TS-1 is unidentified; TS-5 has conflicting source labels. The TS-5/TS-6/TS-8 trace in [R25] needs verification against the installed system. See Open Items, O3, O5 and O8.

# 11 Enerpro SCR Firing System

## 11.1 Overview

The documented board set is an **Enerpro FCOG6100 Rev K with an FCOAUX60 Rev D auxiliary firing board** [R40]. The supply has two phase-shifted six-pulse power bridges, but the vendor schematic describes FCOAUX60 as an auxiliary gate-drive board, not a standalone 30° delay generator [R13], [R28].

**For the upcoming upgrade.** The **Enerpro FCOG1200** is a genuine 12-pulse board and is the *replacement* selected for the HVPS controller upgrade; it is not installed. Everything in this section describes the FCOG6100 + FCOAUX60 set that is in service today.

## 11.2 Current Hardware

| Board | Model | Revision | Serial Numbers | Schematic |
|---|---|---|---|---|
| Main firing boards | Enerpro FCOG6100 | Rev. K | SPEAR1: 41506 in [R40], 41504 in [R72]; SPEAR2: 50470 | Enerpro E128; SLAC SD-237-230-12-R0 [R13] |
| Auxiliary firing boards | Enerpro FCOAUX60 | Rev D | SPEAR1: 03198; SPEAR2: 03813 | [R40], [R72] |

### 11.2.1 The regulator board and how SIG HI is actually formed

SIG HI is formed in **two stages**. The SLAC-designed regulator card **SD-237-230-14-C1** (board designation PC-237-230) first selects a single control output $V_{\mathrm{REG}}$ from its two internal loops; $V_{\mathrm{REG}}$ is then resistively summed with the PLC feedforward to form the voltage actually presented to the Enerpro board (§10.5). The card's internal architecture is documented in detail by J. Sebek [R72], and three features of it are operationally important.

**(a) The card's two internal loops are combined by minimum-select, not by addition.** The board has two analog control chains — one for the negative output *voltage*, one for the positive input *current* — processed through identical signal-conditioning and error-amplifier stages. They are combined through a **non-linear diode "summing junction"** in which the **anodes of two diodes are tied together**. The *lower* of the two cathode voltages wins and sets the common anode voltage, which becomes the card's control output $V_{\mathrm{REG}}$ on J4-3. A 15 V DC supply through a 10 kΩ resistor keeps the conducting diode biased, and a **10 V Zener** clamps the anode. In other words the two loops compete and **whichever demands less output takes control** — the classic voltage-or-current-limit arrangement.

**(b) Voltage regulation dominates at the documented operating point.** The AC-current reference at J4-2 (IL1) is the Enerpro +5 V reference. With the approximately 2 V current readback in [R72], the current error amplifier saturates positive and does not win the minimum-select. This operating-point analysis does *not* prove that it can never take control at higher current. The separate overcurrent comparator remains a protection function; its as-set threshold requires verification.

**(c) AC and DC current are separate measurements.** The regulator uses rectified 300:5 input CT signals and a drawing-stated 0.5 Ω burden [R67], [R70]. The Danfysik transducer separately measures cathode DC current. Confirm the burden and the Slot-9 input mapping, for which [R72] contains conflicting prose and table entries. **[O9]**

**Signal path summary**

| Signal | Path |
|---|---|
| Voltage reference (set-point) | AB **Slot-8 Output 0** → **J4-1 / J4-7**. *On the board schematic this input is confusingly labeled "POS. VOLTAGE LIMIT COMMAND"; it is the reference voltage input, not a limit* [R72] |
| HV readback | Voltage dividers (§9.3) → **J1A / J1B** "NEG. VOLTAGE SENSE" → INA117 → error amplifier |
| Voltage monitor out | BUF634 → 1 kΩ → **J3-1** → AB **Slot-8 Input 0** |

| Signal | Path |
|---|---|
| Current monitor out | BUF634 → **J3-2** → AB **Slot-9 In-0**, per the measurement table in [R72]; that source's prose says In-1. Confirm the installed connection against [R63]. |
| Current reference | Enerpro +5 V reference → **J4-2 (IL1)** |
| Card control output | Diode minimum-select → buffer → **J4-3** as $V_{\mathrm{REG}}$; also read back on AB **Slot-8 Input 1** [R72] |
| Enerpro SIG HI | $V_{\mathrm{REG}}$ through 7.50 kΩ on the card, summed with the PLC feedforward (AB **Slot-8 Output 1**) through a 1.00 kΩ series resistor → **J3-10** on the Enerpro board |

**Loop dynamics** The voltage input network has a nominal 0.01 s time constant (15.9 Hz corner). With $R_{FB1} = 10.0$ kΩ, $C_{FB1} = 2.0$ μF and $C_{FB2} = 1.0$ nF, the error amplifier contributes an integrator, a 7.96 Hz zero and a 15.9 kHz pole [R72]. Integral action removes steady-state error only for a stable, unsaturated closed loop; these component values alone do not establish whole-station bandwidth or stability.

**Protection thresholds** The overvoltage comparator is adjustable from 2 V to 12 V, approximately 20 kV to 120 kV at the nominal divider scale. Trip states latch in a CD4044B. The cited sources do not supply accepted and as-found voltage/current trip settings.

**Test points**

| TP | Measures |
|---|---|
| TP1 | Output of the current difference amplifier |
| TP2 | Output of the over-current comparator |
| TP4 | Inverted voltage difference of the negative voltage sense |
| TP5 | Output of the inverting error amplifier |
| TP8 | Output of the over-voltage comparator |
| TP9 | Inverted input of the voltage reference |
| TP10 | Over-voltage threshold setting |
| TP11 | Over-current threshold setting |
| TP12 | Inverted reference value generated by the Enerpro board |

## 11.3 Phase References

Enerpro firing boards normally take their phase references from the *rectifier transformer secondaries*. The SPEAR3 HVPS cannot do this: there are no accessible secondary references, so the timing is instead derived from **monitor windings on the legs of the phase-shifting transformer T0**. Those windings lead one rectifier transformer primary by 15° and lag the other by 15° — they are not in phase with either bridge.

Measured characteristics of these references, on both SPEAR1 and SPEAR2 [R40]:

| Property | Value |
|---|---|
| Waveform | Sinusoidal, ≈ **190 V peak-to-peak** |
| Source impedance at the HVPS | 500 Ω |
| Voltage ratio of the monitor windings | ≈ 100:1 (125 V $\varphi$–$\varphi$ for 12.5 kV $\varphi$–$\varphi$), 5 A RMS rating [R22] |

On the installed FCOG6100 these three references enter through **connector J5** as off-board phase references and are scaled by the on-board resistors **R37, R38 and R39** (J5-1 = R37 = phase A, J5-3 = R38 = phase B, J5-5 = R39 = phase C). Inside the board the references are pulled to +5 V DC through 15 kΩ resistors in RN1, divided by RC networks, and squared up by LM324 comparators in the phase-detection circuitry [R40].

**Resistor value — standard vs. SLAC.** The Enerpro schematic [R13] gives R31–R39 as **1.9 MΩ, ½ W, 1%, RN70** in its parts list, and Note 10 states *"FOR OFF-BOARD PHASE REFERENCES: INSTALL R37-R39 AND J5. OMIT R31-R33 AND T1."* SLAC's boards have **R37–R39 changed to 200 kΩ** to suit the ≈190 Vpk-pk monitor-winding reference, which is much lower than the line voltages the standard 1.9 MΩ value assumes; Sebek works the Thevenin equivalent using 200.5 kΩ (200 kΩ plus the 500 Ω source impedance) [R40]. Both values are correct for their respective contexts and must not be interchanged.

**Connector roles on the FCOG6100** (from the schematic notes [R13]):

| Connector | Role |
|---|---|
| J5 | Off-board phase references (Note 10) — the path used at SPEAR3 |
| J7 | Provided for **test** reference inputs (Note 11) |
| J8 | Cable to the **FCOAUX60** auxiliary board, for gating paralleled SCRs (Note 12) |
| J10 | 50/60 Hz jack (added at revision J) |
| J1/P1, J2/P2 | Gate drive: +A/+B/+C for line-to-load SCRs; −A/−B/−C for load-to-line SCRs |

A **single** on-board jumper block, **PP1** (AMP 435704-8), carries both of the drawing's configuration tables [R13]. Positions **1–6** set the **phase reference**: 1,2,3 open with 4,5,6 closed gives 0°, the reverse gives −30°. Positions **7–8** set the **gate pulse profile**: 7 open / 8 closed = 120° burst; both closed = 2×30° bursts; 7 closed / 8 open = 2×60° spaced pulses; both open = not used. Drawing note 9 directs the shunts to be set from those tables. The SIG HI input path is buffered by U6 with span (R42) and bias (R43) trim; Note 18 records that R52 = 150 kΩ suits 0 V < SIG HI < 5.0 V while R52 = 249 kΩ suits 0.9 V < SIG HI < 5.9 V.

**The "Phase Reference Adapter" is an upgrade item, not legacy hardware.** The FCOG1200 has no place for input resistors between its J7 connector and the phase-detection circuitry, so a small adapter board is being designed for the upgrade: three inputs, **six** resistors, six outputs — 3 × 576 kΩ to J7 pins 1–3 and 3 × 200 kΩ to J7 pins 4–6, with Enerpro replacing RN4A–C with 66.5 kΩ and RN4D–F with 287 kΩ so that one triplet is advanced and the other retarded by 15°. The mating connector is TE 3-640440-8 (Enerpro C2MTAPLG08). None of this exists in the installed system [R58].

## 11.4 Legacy vs. Upgrade Firing Board

| | Installed (legacy) | Selected for upgrade |
|---|---|---|
| Board(s) | FCOG6100 Rev K (six-pulse) + FCOAUX60 Rev D (auxiliary drive) | FCOG1200 Rev L (native 12-pulse) |
| Phase reference entry | J5, with on-board R37–R39 = 200 kΩ | J7, via a custom external adapter (§11.3) |
| Phase-reference matching | Installed phasing and trigger distribution require verification | Proposed RN4 modifications with matched 0.033 $\mu$F capacitors [R58] |
| Auto-balance | Not used | On-board trimpot adjustment only (no independent bridge monitoring available) |
| SIG HI input | Terminated into an inverting op-amp input held at +5 V DC (R49/U6) | High-impedance buffer input, nominal 0.8–5.8 V range |
| Status | In service; obsolete, limited vendor support | Not yet procured/installed |

# 12 Arc Protection and Crowbar System

## 12.1 Four-Layer Protection Architecture

The HVPS implements a 4-layer arc protection system to protect the klystron from destructive energy discharge during arcs. **The response times below distinguish signal latency from physical response** — the two differ by orders of magnitude, and it is the physical response that bounds the protection:

| Layer | Protection | Signal latency | Physical response | Mechanism |
|---|---|---|---|---|
| 1 | SCR firing inhibit | Not measured here | **4–8 ms**, PEP-II result | Inhibit rectification and freewheel primary-inductor current through a conducting phase leg. Interruption depends on AC phase and commutation [R6]. |
| 2 | Crowbar firing | Not measured here | $\approx$ **10 $\mu$s**, PEP-II result | Trigger four series crowbar stacks; the quoted delay is to conduction, not the total sensor-to-trip latency [R6]. |
| 3 | Filter capacitor isolation | — | Passive circuit response | Series filter resistors limit energy delivered from the capacitor bank during an arc. |
| 4 | Cable termination inductors | — | Passive circuit response | Limit cable-discharge current. The 1997 design uses 200 $\mu$H; the SPEAR3 grounding-tank drawing specifies 350 $\mu$H, 40 A [R6], [R62]. |

Layers 1 and 2 are actively commanded: over the SCR ENABLE and KLYSTRON CROWBAR fibers from the RF Local Display Panel (§15.2), by the two arc triggers on the trigger interconnect boards of the HVPS controller (§12.2) and, on a slower supervisory path, by the **SLC-500 HVPS PLC**. Layers 3 and 4 are passive properties of the circuit topology.

## 12.2 Arc Trigger Inputs

Two arc triggers enter the trigger interconnect boards of the HVPS controller in B118 directly. Either one fires the crowbar and inhibits the A and C phase triggers on both boards in hardware, without the SLC-500 [R83], [R87]:

- **Klystron arc.** The Pearson CT-110 (10 A/V) in the termination tank watches the HV cable for the fast transients of a klystron arc. Its coaxial output feeds J1, "KLYSTRON ARC TRIGGER", of the Left Side Trigger Interconnect Board SD-730-793-08-C1 [R25], [R62], [R64]. The return-cable shunt reaches BNC-12 through TS-6 terminals 20 and 21 [R25]. J. Sebek's MPS note takes the klystron arc trigger from BNC-12 and leaves open whether it is the shunt, as the schematic shows, or a direct link to the Pearson [R87].
- **Transformer arc.** The "TRANSFORMER ARC TRIGGER" enters J1 of the Right Side Trigger Interconnect Board SD-730-793-07-C2. A high level inhibits the A and C triggers through the same path as SCR ENABLE and fires the crowbar through SLAVE CB TRIGGER. J. Sebek's note takes it from BNC-0 in the Hoffman box; its sensor, the AC mains input current or a Stangenes transformer in the crowbar tank that senses ground-fault current, is still to be verified [R87].

On the drawings, neither trigger passes through the Fast Interlock Chassis or the RF Local Display Panel. When the crowbar fires, the STATUS fiber goes dark and the panel raises the HVPS beam abort (§15.2). The SLC-500 only monitors the two triggers, on slot-6 inputs 3 and 5 (§10.2.1); EPICS shows them as the latched bits `{STN}:HVPSKLYS:ARC:LTCH` and `{STN}:HVPSXFORM:ARC:LTCH` [R60].

## 12.3 Klystron Arc Energy Budget

The PEP-II paper cites two klystron protection criteria: arc energy below $60\,\mathrm{J}$ and $I^2t$ below $40\,\mathrm{A}^2\,\mathrm{s}$ [R6]. These are different quantities, not interchangeable limits without an arc model. Its reported results are:

| Condition | Energy reaching the klystron |
|---|---|
| Crowbar operating, PEP-II test configuration | **< 5 J** |
| Crowbar disabled, general result in abstract | **< 40 J** |
| Crowbar disabled, with described termination inductors | **< 20 J** |

The rectifier/resistor/filter arrangement limits energy delivery even without crowbar action. These published design results are **not a fault-tolerance certification of the installed SPEAR3 units**; installed component condition, trigger timing and cable configuration require their own acceptance evidence. The 200 $\mu$H termination inductors described in [R6] also differ from the 350 $\mu$H drawing value in [R62].

# Part IV
# PROTECTION AND SAFETY SYSTEMS

Protection is distributed among the Fast IC/AIM hardware, the independent VXI MPS shutoff interface, the RF MPS PLC, the HVPS PLC and IOC supervision. PPS controls the primary contactor and grounding-switch functions separately from equipment protection. Hardware actions do not wait for the IOC, but complete installed-path latencies are not established by the cited sources. The PEP-II power-stage results in §12 must not be used as end-to-end SPEAR3 trip times.

This part of Doc L summarizes the three protection subsystems (PPS, RF MPS, and Fast IC / interlock chain).

## 13 Personnel Protection System (PPS) Interface

### 13.1 Overview

The PPS interface controls two critical safety functions: the HV vacuum contactor (which connects 12.47 kV AC power to the HVPS) and the Ross grounding switch (which grounds the HVPS output for safe access).

**Review priority**: Both chains involve the SLC-500 PLC. The contactor chain also has a hardware PPS supply dependency, whereas the documented Ross-switch output has no separate series PPS interrupt [R25]. This is a personnel-protection review issue; compliance and access authorization must be determined by the responsible PPS authority, not inferred from this architecture summary.

### 13.2 Legacy PPS Chain 1: HV Contactor

Figure 42 shows both legacy chains: Chain 1, described here, interrupts the 12.47 kV supply at the vacuum contactor; Chain 2 grounds the HVPS output at the Ross switch.

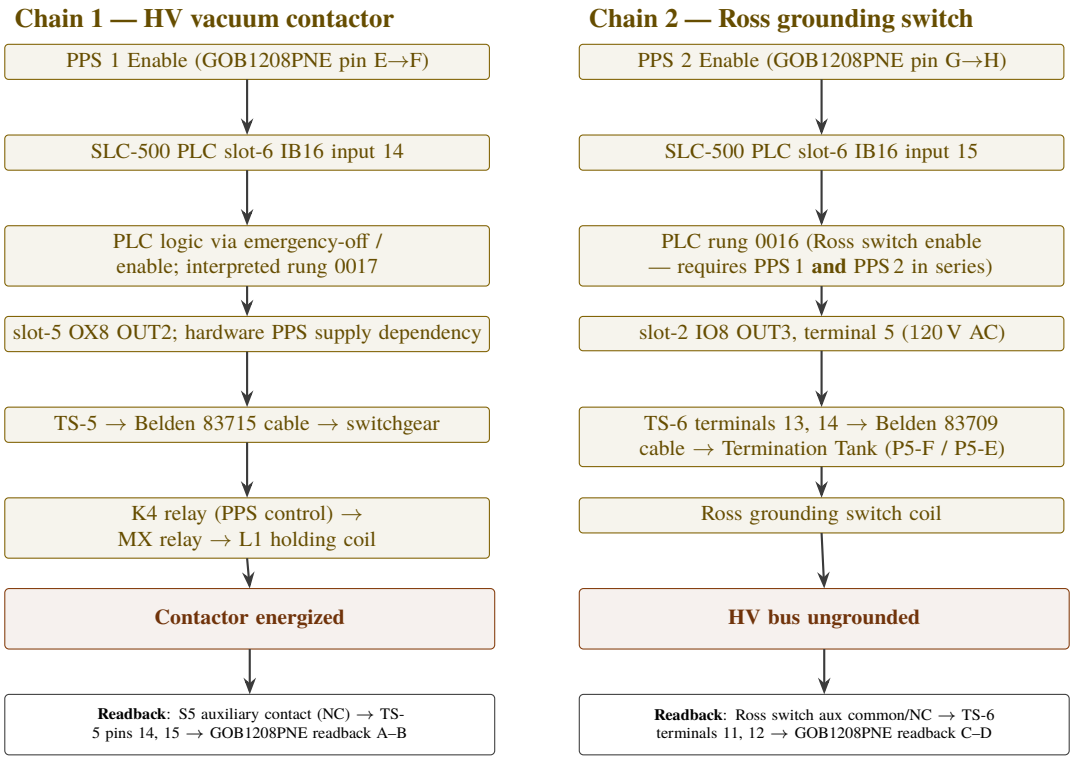



**Figure 42:** The two legacy PPS chains.

## 13.3 Legacy PPS Chain 2: Ross Grounding Switch

**Logic**: Rung 0016 requires PPS 1 *and* PPS 2, with other conditions, to energize the Ross-switch coil. Removing either permit commands de-energization; actual grounding still depends on output and switch operation. Rung 0015 ORs the permits into a status bit, so ”PPS ON” is not proof that both permits are present [R25], [R26].

**Pin-letter caveat**: The E–F/G–H enable and A–B/C–D readback assignments remain assumptions in [R25]; see Open Items, O5.

## 13.4 Identified Issues

WD-730-790-01-C3 [R67] and WD-730-794-02-C0 [R80] label coil RR “PPS” and coil K-4 “RESET”. The two labels are swapped, as [R25] found: K-4 is the PPS control relay and RR the remote reset relay [R69]. The repository copy of WD-730-790-01-C3 carries a note (November 2026). The manual grounding-switch contact sense differs between the schematic and the test-stand wiring drawing. [O1]

| Issue | Severity | Details |
|---|---|---|
| PLC in PPS chain | Critical | Both PPS chains route through SLC-500 PLC ladder logic |
| PPS wiring exposed | High | PPS wires terminate on TS-5, TS-6 and TS-8 inside the HVPS controller enclosure, co-located with non-PPS wiring |
| Ross switch PLC dependency | High | Ross switch coil is driven by a PLC 120 VAC output (Slot-2 IO8 OUT3), with no hardware PPS element in series |
| K4/RR relay labels | Closed | WD-730-790-01-C3 [R67] and WD-730-794-02-C0 [R80] label RR “PPS” and K-4 “RESET”; the labels are swapped, as [R25] found: K-4 is the PPS control relay and RR the remote reset relay. The repository copy of WD-730-790-01-C3 carries a note (November 2026). [R25] also notes that the drawings omit the K4 NO and 86 NC contacts in the MX path. |
| Contactor re-close delay | Low | Because K4 removes all control power from the contactor controller, capacitor C6 must recharge before K3 can re-energize — this is why the contactor takes several seconds to re-close after a PPS enable is restored [R25] |
| Hardware obsolescence | High | SLC-500 and 1746 modules are end-of-life |


## 13.5 Relay Chain Details (Contactor Disconnect Panel)

Confirm historical switchgear device/rating details, including the temperature sensor marked for later addition, against the installed equipment. The SPEAR-only low-pressure switch on [R68] also needs a verified test record.

| Component | Function | Type |
|---|---|---|
| K4 | PPS Control Relay — energized from OX8 OUT2 with the PPS common as its return; two NO contacts, one interrupting controller control power and one in series with the MX coil | Relay |
| MX | **Remote Control Relay, 24 V DC** [R69] — must be energized for K1 (and hence the L2 closing coil) and stays energized to hold L1 | Relay |
| RR | **Remote Reset Relay, 24 V DC** [R69] — its NC contact is in the TX latch chain; energizing RR clears a latched TX overcurrent trip | Relay |
| IP | **Interposing Relay, 24 V DC** [R69] — added at revision 2 of the original LBL drawing alongside 27, MX and RR. Not described in any derived note; presence at SPEAR3 unconfirmed | Relay |
| 27 | **Under Voltage Relay** [R69] | Relay |
| 01 / LT | **Local Control Switch — Trip** [R69] | Switch |
| M | **Main operating and holding coils** [R69] | Coil |
| TX | Auxiliary tripping relay — summarizes the eight overcurrent protection relays (instantaneous 50A/B/C/N and time 51A/B/C/N) and latches; must be de-energized for L1 to hold | Relay |
| L2 | Closing coil — high-power coil that initially closes the vacuum contactor, fired from the stored-energy capacitor bank | Coil |
| L1 | Holding Coil — maintains the vacuum contactor closed once L2 has closed it | Coil |
| S4, S5 | HQ3 auxiliary contacts on TB2 terminals 15–17 and 18–20, NO/COM/NC [R66]. S5 supplies the PPS readback (Figure 43). Do not confuse HQ3 terminal numbering with the separately named disconnect-panel terminal block [R67]. | Contact |
| Vacuum Contactor | Ross Eng. **HQ3**, P/N 813203. The original 1977 drawing lists 14.5 kV, 400 A, three poles, 50E fuses and 50/5 CTs [R69]; these historical protection ratings are not an inventory of the installed SPEAR3 fuse/CT configuration. | HV contactor |
| Controller | Ross Eng. **HCA-1-A**, P/N 820360 — contactor controller / energy-storage driver ([R65] system view; [R66] internal schematic) | Controller |

**Opening Timing** The original controller sequence [R65] states:

| Stage | Time |
|---|---|
| Hold-in after loss of AC control voltage | $\geq$ **170 ms** |
| L1 holding solenoid dropout | within **1 cycle** ($\approx$ 17 ms) |
| HV contacts clear | a further **½–1 cycle**, nominally at the first current zero |
| Loss of control power to interruption | Order 0.2 s from the stated stages, **not a maximum bound**; blocking and stored-energy conditions affect opening |
| Recharge before reclose is possible | **a few seconds** (K2 ready relay waits on the MT1 voltage sensor) |

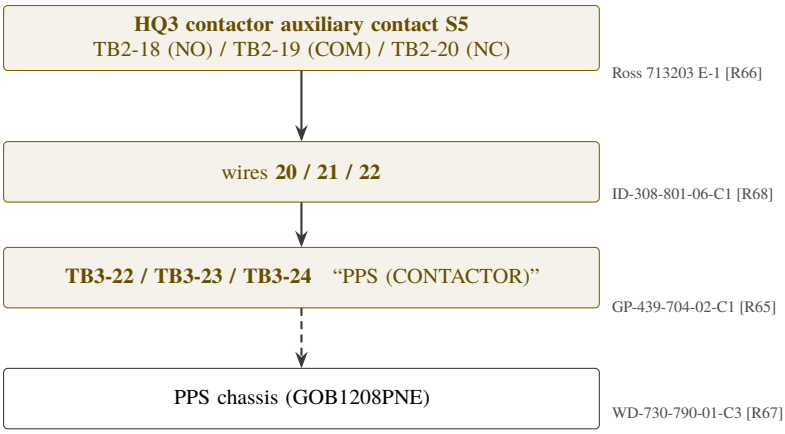


*The dashed line is not confirmed: the GOB1208PNE pin pairing is recorded as an unconfirmed assumption and remains a field-verification item.*

**Figure 43:** PPS contact readback trace across four drawings.

**Blocking condition**: The original LBL drawing describes a 2000 A blocking threshold [R69]. The later controller sequence states that BR can bypass normal opening commands while fault current persists [R65]. Fuse coordination, installed pickup settings and PPS response under this condition require switchgear/PPS review; the historical drawing does not establish current settings or a maximum interruption time.

**Stored Energy in the HCA-1-A Driver** The HCA-1-A contains **300–400 V DC** stored-energy circuits. Its drawing describes door-interlock discharge within 5 s and passive decay to about 80 V in 5 minutes or 40 V in 10 minutes [R66]. These are source-stated expectations, not verified discharge times for the installed unit. Do not use them as access criteria or as a substitute for an approved isolation/discharge procedure and absence-of-voltage testing.

The drawings agree on the internal HQ3 S5 contact and wire numbering. They do not establish a fully verified end-to-end connection to the external PPS chassis:

| Link | Drawing | What it establishes |
|---|---|---|
| 1 | Ross 713203 E-1 [R66] | The HQ3 contactor brings out a spare auxiliary contact set **S5** on **TB2-18 (NO) / TB2-19 (COM) / TB2-20 (NC)** |
| 2 | ID-308-801-06-C1 [R68] | TB2-18, TB2-19 and TB2-20 carry **wires 20, 21 and 22** |
| 3 | GP-439-704-02-C1 [R65] | Wires **20, 21, 22** are the ones labeled **"PPS (CONTACTOR)"**, landing on **TB3-22, TB3-23, TB3-24** |
| 4 | WD-730-790-01-C3 [R67] | The Contactor Disconnect panel labels one auxiliary contact set **"CONTACTS PPS"** |

Figure 43 draws these four links end to end.

### 13.6 PPS Dual-Chain Interaction and Roles

The contactor and grounding-switch chains perform **complementary functions**. Their documented operating directions are:

| | **Chain 1 — HV Vacuum Contactor** | **Chain 2 — Ross Grounding Switch** |
|---|---|---|
| **Safety function** | Disconnect 12.47 kV AC primary power from HVPS | Ground the HVPS HV output bus for safe personnel access |
| **Operating state** | Coil energized → contactor **CLOSED** (12.47 kV connected) | Coil energized → switch held **OPEN** (HV bus not grounded) |
| **Safe-access state** | PPS 1 removed → K4 drops → L1 drops → contactor **spring-opens** → 12.47 kV disconnected | PPS 2 removed → 120 VAC removed → switch **spring-closes** → HV bus grounded |
| **Readback** | S5 NC auxiliary contact closed = contactor OPEN = 12.47 kV removed | Ross switch NC auxiliary contact closed = switch GROUNDED = HV bus grounded |
| **Fail-safe direction** | Lose power → contactor opens → safe | Lose power → switch closes to ground → safe |

**Sequence not established here.** Because rung 0016 requires both permits, removing PPS 1 also commands the grounding-switch coil off. The sources do not support a sequence in which PPS 1 is removed, the supply is allowed to discharge, and only then PPS 2 is removed to initiate grounding. Actual contactor opening, grounding-switch closure, external PPS sequencing and access authorization require a validated end-to-end timing/logic record. No lamp or PLC bit alone proves absence of hazardous energy. **[O10]**

**Dependency Comparison**:

| | **Chain 1** | **Chain 2** |
|---|---|---|
| PLC dependency | PPS 1 routes through SLC-500 Rung 0017 | PPS 2 routes through SLC-500 Rung 0016 |
| Hardware fail-safe | **Present** — OX8 relay input side wired to PPS 1 (24VDC). K4 cannot energize without PPS 1 even if PLC closes relay contact. | **Absent** — IO8 OUT3 drives 120 VAC to Ross coil. PLC failure energized could hold switch open without PPS 2. |
| Residual review issue | Confirm the interpreted K4 wiring, contact behavior and blocking-relay conditions in the installed equipment | A PLC output remaining energized can leave the HV bus ungrounded despite a removed permit |

The grounding switch returns toward ground on loss of *coil power*; loss of a PPS logic signal is not equivalent if the PLC output remains energized. The legacy dependency is documented in [R25]. The proposed replacement is outside this document's scope; see Doc 0.

## 14 RF Machine Protection System (MPS)

### 14.1 Overview

The RF MPS provides equipment/machine protection — distinct from the personnel-safety PPS. It monitors klystron operating parameters and RF station conditions, removing permits to protect equipment from

damage.

## 14.2 Hardware Evolution

| Era | Platform | Status |
|---|---|---|
| **In service** | Allen-Bradley PLC-5 with 1771-series I/O; 1771-DCM Remote I/O adapter (rack 3) | Obsolete, no vendor support, but **this is the platform currently protecting the station** |
| Prepared replacement | Allen-Bradley ControlLogix 1756 (Rockwell conversion kit) | Hardware assembled, software written, tested on SPEAR3 **without RF power**. **Not yet in service**; will be commissioned as part of the LLRF upgrade [R5] |

## 14.3 Protection Functions

The RF MPS monitors and protects against:

- Excessive klystron collector power (cathode power minus RF output)
- Excessive reflected power at any cavity
- Waveguide arc conditions (via interlock chassis inputs)
- Loss of cooling water
- Klystron vacuum excursion
- HVPS fault conditions

The original sources distinguish the following interfaces; they do **not** establish that one RF MPS relay drives three simultaneous, independent shutdown paths: [O2]

- **RF MPS hardwired interface**: PLC/interlock signals connect to the ARC/Fast IC and AIM hardware. Confirm the per-fault SCR-inhibit and crowbar action in a consolidated trip truth table [R21], [R53], [R79].
- **Remote I/O**: Status and permits are read by the IOC for alarms and sequencing. A serial status bit is not a direct hardware RF cutoff, and no fixed 10 ms response is established [R60].
- **SPEAR MPS shutoff interface**: The VXI interlock module asserts `RF_FAULT`, which directly inhibits RFP drive without waiting for EPICS. Its slot is 5 in the archived four-cavity configuration; [R53] describes the earlier slot-6 implementation [R60]. Its J3 output also reaches the AIM as the External MPS channel (§5.5).

**HVPS PLC**: The SLC-500 independently monitors HVPS conditions and controls its enable outputs. The original PLC notes estimate a 5 ms program scan, with selected functions gated at 80 ms or longer intervals [R37]. Neither number is a measured complete fault-response bound.

## 14.4 MPS Wiring

The repository contains 33 MPS drawing files, numbers 02–34 (number 06 is revision 01), covering cavity junctions, vacuum, cooling, analog/digital I/O, tuners, filament, optical interfaces and focus supplies [R21]. They document wiring, not a complete PLC program or a validated per-fault trip truth table.

# 15 Interlock Architecture and Signal Chain

## 15.1 Overview


The interlock system spans multiple hardware layers, from fast analog hardware interlocks to slow PLC-monitored conditions:

| Layer | Speed | Hardware | Function |
|---|---|---|---|
| Fast hardware | No installed end-to-end latency record | Fast IC, AIM, IQA and RFP | Hardware faults and RF-drive inhibit |
| HVPS arc triggers | Hardware; no installed timing record | Trigger interconnect boards of the HVPS controller | Klystron-arc and transformer-arc crowbar triggers (§12.2) |
| RF MPS logic | Scan and I/O dependent; unmeasured here | PLC-5 | Equipment protection calculations |
| HVPS logic | Estimated 5 ms scan; timed functions differ [R37] | SLC-500 | HVPS sequencing and monitoring |
| IOC supervision | Event/scan driven; shutdown includes explicit waits | VXI IOC / SNL | Sequencing, alarms and fault export |

## 15.2 Interlock Chassis and RF Local Display Panel

Two B132 units carry the hardwired protection signals between the VXI crate, the RF MPS PLC and the HVPS controller [R81], [R82], [R84]:

- The **Fast Interlock Chassis 340-308** is the trip-decision element described below. Its connector J15 is cabled to J3 of the AIM (VXI slot 12), and eight fibers link it to the RF Local Display Panel: six carry the AIM's commands (station online request, filament and focus request, HVPS on request, VXI beam abort, filament timeout bypass and reset) and two return the PLC-5's AB summary and AB heartbeat [R79], [R81].
- The **RF Local Display Panel 340-310** (rack B132-12; also referred to as the Local Control Chassis; Figure 44) displays the station status and carries the station online/offline (STATION LOCK-OUT) and local/remote (STATION MODE) key switches (Figure 44a). On its rear (Figure 44b), two 25-pin connectors, J2 (SYSTEM I/O, female) and J3 (FROM A/B INPUTS, male) [R84], wire it to cross-connect block X530 in rack B132-14 and on to the PLC-5 (WD-340-330-02 in [R21]); beside them are the eleven fibers, the beam-abort connector J6, the fuse F1 and the AC inlet J1. It terminates the three HVPS fibers, which run to the trigger interconnect boards of the HVPS controller in B118 (WD-340-330-29 in [R21]; [R82], [R83]): SCR ENABLE (lit to enable the phase-control triggers; while it is dark only B+ and B- keep firing) to the right-side board, KLYSTRON CROWBAR (lit for no crowbar) to the left-side board, and STATUS from the left-side board, which the panel receives as the HVPS beam abort.
- A programmable logic device on the panel (GAL22V10) forms SCR ENABLE, KLYSTRON CROWBAR and the beam abort from the HVPS on request, the VXI and HVPS beam aborts, the station online key switch and four lines from the PLC-5: the main and bucking solenoid interlocks, which the PLC-5 repeats on its outputs 032 and 033 from the supplies' dry contacts on its inputs 025 and 026 [R82], and the waveguide pressure and collector summaries. Two flip-flops latch the beam abort and the crowbar until reset. The beam abort leaves on a rear-panel BNC connector (J6), made for the PEP-II beam-abort system [R10]; at SPEAR3 J6 is not cabled (checked November 2026), and the SPEAR MPS takes no status from the RF in hardware. The equations of the logic are not documented. **[O6]**

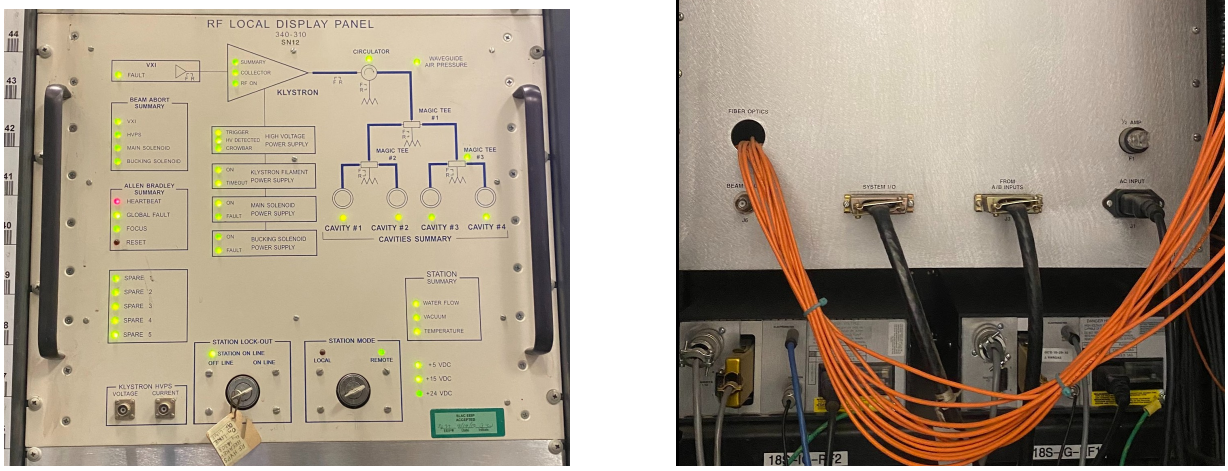


**(a)** Front **(b)** Rear

**Figure 44:** RF Local Display Panel 340-310 (serial 12) in rack B132-12. (a) Front: the station mimic and summary lamps, among them the five SPARE lamps, all lit; the STATION LOCK-OUT (online/offline) and STATION MODE (local/remote) key switches; the HVPS voltage and current monitor connectors. (b) Rear: the eleven orange fibers, the beam-abort BNC J6 (not cabled), J2 (SYSTEM I/O) and J3 (FROM A/B INPUTS) with their cables, the fuse F1 (1/2 A) and the AC inlet J1. The chassis above it is a spare Fast Interlock Chassis 340-307, a slightly different version of the 340-308 in service, not in use.

The Fast Interlock Chassis receives and summarizes hardware interlock signals; its installed sensor mappings, masks and hardware response require proof-test records:

- Arc detection inputs from the optical arc detectors, over fibers; those at the cavity windows are not in use [R87]
- Reflected power monitor inputs
- The RF MPS PLC's AB summary and heartbeat, returned over the RF Local Display Panel fibers; per-fault output actions require the trip truth table
- HVPS status, represented by `HVPSON` in AIM `FISTAT` [R60]. The STATUS fiber ends on the RF Local Display Panel, not on this chassis [R82], so the meaning of this bit must be verified against the installed logic.

The klystron-arc and transformer-arc triggers do not enter this chassis or the panel. They act on the trigger interconnect boards of the HVPS controller (§12.2) and reach the panel only as a dark STATUS fiber.

**RF inhibit versus HV shutdown**: The MPS shutoff interface drives `RF_FAULT` directly; the RFP then removes RF drive [R53]. IOC alarm summaries separately request `s_go_off`, which includes explicit shutdown waits [R16]. Loss of RF can raise collector dissipation, but the claimed 20–30 ms collector-overpower cascade has no measurement record in the cited originals and must not be relied on as a protection guarantee.

The Fast Interlock Chassis reports summarized interlock status to the VXI crate through the ARC/Interlock Module (AIM).

## 15.3 Complete Trip Chain

Figure 45 collects the protection interfaces described above and the supervisory actions they trigger.

Figures 46 and 47 show the front and rear panels of the Fast Interlock Chassis that implements the hardware layer.

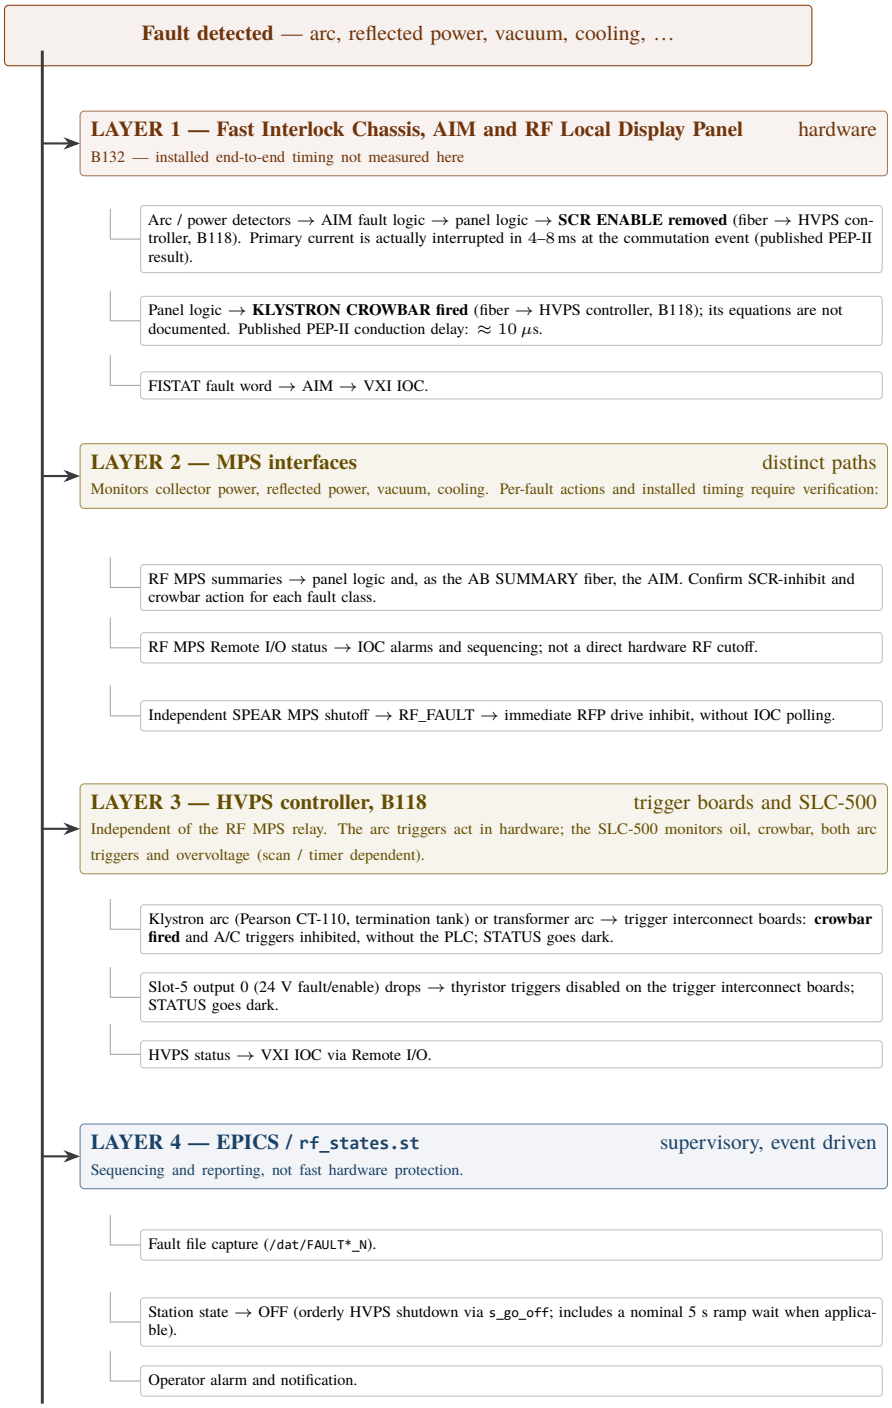



**Figure 45:** Protection interfaces and supervisory actions. The Layer 1 fibers run between the RF Local Display Panel in B132 and the HVPS controller in B118 (§15.2); the klystron-arc and transformer-arc triggers act on the controller's trigger boards (§12.2).




**Figure 46:** Fast Interlock Chassis 340-308 in B132: lamps for the six AIM commands and the twelve arc trip tests, channel monitor points, the spare-fault input and the J16 detected-klystron-power monitor output, which is not cabled.

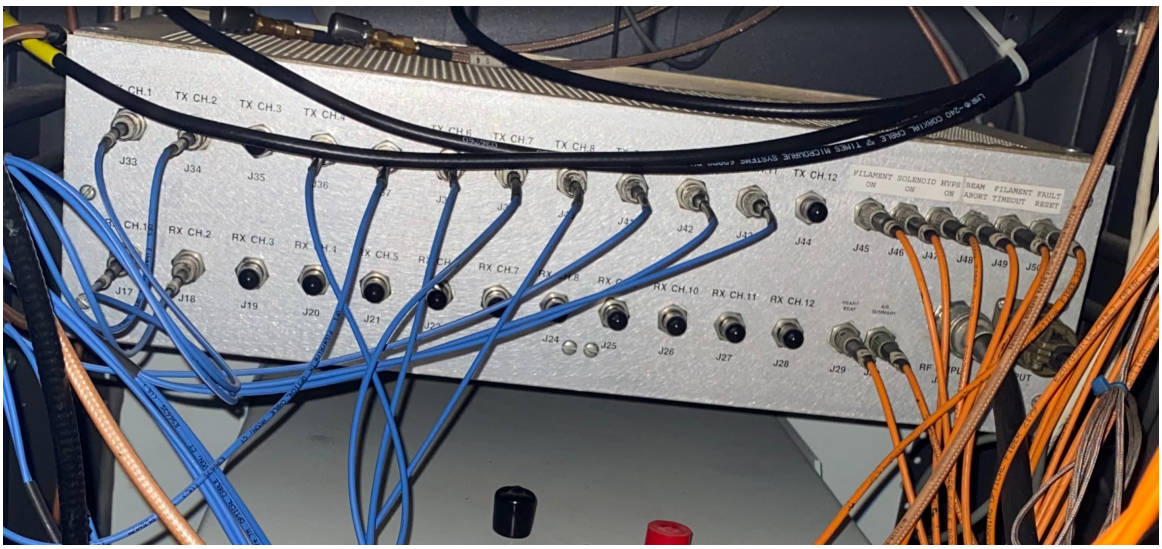



**Figure 47:** Rear of the Fast Interlock Chassis 340-308 in rack B132-11: the blue arc-detector fibers on the transmit (TX CH.1 to 12, J33 to J44) and receive (RX CH.1 to 12, J17 to J28) connectors; the six orange command fibers to the RF Local Display Panel (J45 to J50: FILAMENT ON, SOLENOID ON, HVPS ON, BEAM ABORT, FILAMENT TIMEOUT, FAULT RESET) and the two from it (J29 HEARTBEAT, J30 A/B SUMMARY); at the right, the RF amplitude output J31 and the RF input J32.

# Part V
# CONTROL SOFTWARE AND INSTRUMENTATION

## 16 EPICS IOC and SNL Software Architecture

### 16.1 IOC Platform

The VXI crate Slot 0 processor runs VxWorks RTOS with an EPICS IOC. The IOC hosts 6 SNL (State Notation Language) programs compiled into a single `rfSeq` library:

| Program | Lines | Instances | Authors | Function |
|---|---|---|---|---|
| `rf_states.st,v` | 2,227 | 1 | R.C. Sass, M. Laznovsky, S. Allison | Master station state machine |
| `rf_calib.st,v` | 3,345 | 1 | R. Claus | Calibration sequences |
| `rf_tuner_loop.st,v` | 555 | 4 (per cavity) | — | Cavity tuner motor control |
| `rf_hvps_loop.st,v` | 343 | 1 | — | HVPS supervisory control |
| `rf_dac_loop.st,v` | 290 | 1 | S. Allison | Drive/gap voltage DAC control |
| `rf_msgs.st,v` | 352 | 1 | — | Message logging, TAXI monitoring |

The total is **7,112 source lines**, including comments and blanks, recounted from the RCS head text. The boot script starts nine instances: four tuner instances and one of each other program [R60].

### 16.2 rf_states.st — Master Station State Machine

**Primary States**: OFF (0) → PARK (1) → TUNE (2) → ON_FM (3) → ON_CW (4)

SPEAR3 runs in OFF, TUNE and ON_CW. PARK was designed for PEP-II, for a station that was down, and ON_FM for processing the cavities after a vacuum incident; neither is used [R86].

**State architecture**: 3 concurrent state sets:

1. **`ss rf_states`** — 17 states: five operating states plus initialization and transition states
2. **`ss rf_statesLP`** — Five states for direct/comb loop switching, gain ramps and beam-abort coordination
3. **`ss rf_statesFF`** — One state for asynchronous fault-file export

**Total**: 23 states across 3 concurrent state sets.

**State transitions**:

- OFF → PARK: Parks the cavity tuners and coordinates beam-abort reset; initialization is handled separately
- PARK → TUNE: Selects tune mode and starts HVPS/drive sequencing
- TUNE → ON_FM: Loads the selected 400 Hz or 1 kHz modulation waveform files and enters FM processing mode
- TUNE → ON_CW: Selects operate-mode references and coordinates the requested loop states; it does not prescribe an RF power level
- Any → OFF: Fault or operator shutdown; orderly disengagement of all loops

### 16.3 rf_hvps_loop.st — HVPS Supervisory Control

States: `init` → `off` → `proc` (processing/conditioning) → `on`

**Processing mode** carefully ramps HVPS voltage while monitoring cavity vacuum. If vacuum exceeds limits, voltage is reduced. This is used during cavity conditioning and post-trip recovery.

The loop publishes software status codes for operating mode, invalid readbacks, limits and tolerances. These are sequencer-generated statuses, not raw status codes returned by the HVPS hardware [R17].

### 16.4 rf_tuner_loop.st — Cavity Tuner Control

Runs as 4 instances (one per cavity) via `CAV` macro substitution. Implements a slow feedback loop that maintains cavity resonant frequency by:

1. Reading cavity phase angle (from IQA module)
2. Comparing against setpoint (optimal detuning for current beam current)
3. Commanding stepper motor moves via AB 1746-HSTP1 controller

**5 SNL states**, 2 control algorithms (phase-feedback-based position tuning for resonance maintenance, and position homing for park/on transitions) plus a loop-off monitoring state.

### 16.5 rf_dac_loop.st — Drive/Gap Voltage DAC Control

Manages the RFP module's octal DACs that control drive power and gap voltage setpoints. The loop operates differently depending on whether the direct feedback loop is on or off, and transitions between TUNE and OPERATE modes.

The four states are `loop_init`, `loop_off`, `loop_tune` and `loop_on` [R77].

### 16.6 rf_calib.st — Calibration Sequences

The largest program, `P2RF_Calib` (3,345 lines), has 28 states *including* initialization, completion and abort handling. It calibrates RFP DAC offsets, multipliers, summing/gain stages and modulator/demodulator paths, with PEP-II comb branches retained [R19]. Cavity resonance, tuner-polynomial and station-response calibrations are separate expert/MATLAB procedures described in [R8]; they are not all implemented by this sequencer.

### 16.7 rf_msgs.st — Message Logging

Two state sets handle software messages and TAXI-link error monitoring (three states total). Log messages are not themselves proof that every associated PV is archived [R20].

## 17 Tuner Control System

### 17.1 Configuration Currently in Service

| Component | Detail |
|---|---|
| Controllers | Allen-Bradley 1746-HSTP1 stepper modules (4 units) in chassis 340-315, SN08 |
| Drivers | Superior Electric SLO-SYN SS2000MD4-M PWM step drive translators (one per motor) |

| Component | Detail |
|---|---|
| Motors | Superior Electric SLO-SYN M093-FC11 (NEMA 34D, 4 units) |
| Communication | Allen-Bradley Remote I/O, adapter (rack) 2, from the VXI 6008-SV1R scanner |
| Software | `rf_tuner_loop.st,v` (SNL, 4 instances, 2 Hz) |
| Position feedback | Linear potentiometer per tuner — indication only |

## 17.2 Planned Upgrade Configuration (not yet installed)

| Component | Detail |
|---|---|
| Controller | Galil DMC-4143 Rev 1.3h 4-axis motion controller in a new SLAC-built chassis |
| Motors | Same SLO-SYN M093-FC11 (retained) |
| Communication | Ethernet (with heartbeat monitoring) |
| Position Feedback | Linear potentiometers on each tuner (retained) |

**Status.** The Galil controller has been procured and developed on the bench. In August 2025 it was connected to the installed cavity tuner motors and successfully drove them [R34]; the session log records firmware `DMC4143 Rev 1.3h`, amplifier `AMP1 43547 Rev 4`, and a series of manual jog and speed tests. **It has not been installed as the operating controller and is not in the control loop.** It is expected to go online when the LLRF upgrade project completes. Until then the 1746-HSTP1 / SS2000MD4 chain in §17.1 is the system of record.

## 17.3 Tuner Motion Parameters

Values below are defaults in the archived EPICS `steppermotor` record, device type `AB-1746HSTP1`. Their units are established by the original record/device support [R78]. Live values may differ after restoration or operator changes.

| Parameter | Value | Record field |
|---|---|---|
| Step resolution | 0.003175 mm/step (1.27 mm/rev ÷ 400 steps/rev) | `DIST` |
| Slew velocity | 3 rev/s = 3.81 mm/s at 1.27 mm/rev | `VELO`; record conversion uses `MRES`=400 steps/rev |
| Time to slew velocity | 0.5 s | `ACCL` (not an acceleration in mm/s$^2$) |
| Upper travel limit | +18 mm | `DRVH` |
| Lower travel limit | −29.5 mm | `DRVL` |
| Retry deadband | 0.015875 mm (5 steps) | `RDBD` |
| Engineering units | mm | `EGU` |
| Loop rate | 2 Hz | `rf_tuner_loop.st,v` |

| Parameter | Value | Record field |
|---|---|---|
| Phase deadband (design) | 0.25° | `rf_cav.db,v` `INPB` (commented out in the DB source) |
| Phase-to-position conversion | 0.020 mm/° in the source comment | `INPC`; live restored value not supplied |
| Maximum move per cycle | 1 mm in the source comment | `INPD`; live restored value not supplied |

**Restore dependency**: The phase deadband, conversion factor, move clamp and outer-loop offset clamp are commented out in the archived database. Without restored nonzero values, the associated correction can be zero. The boot script loads saved records [R60], but their live contents are not supplied. Do not infer enabled/disabled loop behavior from either the comments or an absent default alone; verify against the deployed configuration [R78].

Figure 48 shows the adapter and stepper PLC modules. The motor driver chassis is shown in Figure 49.




**Figure 48:** Allen-Bradley Cavity Tuner Motor Driver chassis (SLAC 340-315, SN08) in the B132 electronics rack — showing the SLC adapter module (leftmost, with COMM FAULT indicator and STATUS showing RUN/fault) followed by four AB 1746-HSTP1 STEPPER modules (each with RUN, CCW, CW, ERR, FLT indicators; green RUN lights confirm active communication), plus one additional STEPPER module at far right. This chassis is the motion controller currently driving all four cavity tuners; it is to be replaced by the Galil DMC-4143 when the LLRF upgrade project completes




**Figure 49:** Cavity Tuner Motor Driver 340-315, SN08.

# 18 Diagnostics, Calibration and Monitoring

## 18.1 RF Signal Monitoring

The 24 logical IQA inputs are listed in §5.6. Their physical distribution is described in §7; the installed connector mapping remains open (O4). Upgrade assignments belong to Doc 0.

## 18.2 HVPS Monitoring

4 analog monitoring signals from B514 to B118 (see §9.4). Additionally, the PLC monitors:

- 8 thermocouple channels (4 actively scaled to engineering units)
- Oil level switches (main tank, phase tank, crowbar tank)
- Contactor and grounding switch status
- All fiber optic signal states

## 18.3 Fault Recording

**Configured exports**: The source defines 11 file families, in order: RfpSI, RfpSQ, RfpCI, RfpCQ, CmbI, CmbQ, Iqa1Amp, Iqa2Amp, Gvf, Aim and Iqa3Amp. The `CF2` compile-time branch substitutes Cf2I/Cf2Q for CmbI/CmbQ; the compiled branch must be checked against the deployed build, not inferred solely from the empty crate slots. `IQA3MACROS=R=SRF1` in the archived boot script enables the eleventh export request [R16], [R60].

Exports occur only when fault logging is enabled and `fault_detected` is set. `s_go_off` requests them after shutdown sequencing, including a 300-tick (nominally 5 s) voltage-ramp wait when the prior request exceeds 0.1 kV. Hardware histories may already have frozen at the trip. Absent comb/GVF hardware, export errors and timeouts can leave incomplete data; the configured file count is not a guarantee of valid waveforms.

The suffix `N` is the fault slot number, which cycles **1 to 15** (`NUMFAULTS = 15`) and is published as `{STN}:STN:FAULT:NUM`; the corresponding event timestamps are in `{STN}:STN:FAULT:TIME1` through `TIME15`. Capture works by temporarily redirecting each module's history-buffer filename and size records (`MODU.AHFS`,

MODU.AHSZ), triggering the dump (MODU.GAHS), waiting on the status field (MODU.ASTT), then restoring the previous filenames and sizes. These files preserve pre-fault waveforms for post-mortem analysis.

## 18.4 Calibration Data

Calibration data include RFP coefficients from rf_calib.st,v and separately obtained cavity/tuner parameters. The original feedback description [R8] identifies expert procedures for:

- RF signal amplitude and phase calibration against known references
- Klystron gain curve measurement
- Cavity detuning characterization
- Tuner motor step-to-frequency conversion factors

## 18.5 Fault Data Availability and Analysis

The source code describes acquisition capability, not a verified live diagnostic inventory. Four data sources capture fault event information at different time scales. Summary:

| Source | What It Captures | Storage Location | Access |
|---|---|---|---|
| **AIM hardware history** | Arc-channel/status history, depending on AIM hardware version and configuration | Module memory; export filename is a record setting | Distinguish latched channel bits from analog history; verify installed version and acquisition setup [R60] |
| **SNL fault files** (/dat/FAULT*_N) | Up to 11 configured module-history exports; absent modules and errors limit usable data | IOC-visible /dat/; slots 1–15 | Check file existence, timestamps and export status. Configured names are not evidence of valid data [R16] |
| **B118 oscilloscope** | Local voltage, current and monitor-winding measurements | Scope setup and saved traces | Confirm channel assignments, triggering and export method in the field; [R23] is a winding survey, not a scope setup record |
| **EPICS history service** | Selected PV histories, at configured rates | Controls-managed service | Obtain the channel list, retention and access method from controls. No complete archive configuration is supplied in the cited sources. |

**Key PVs to check after any fault event**:

| PV | Significance |
|---|---|
| {STN}:STN:AIM:ARCLTDSTT | Latched arc-channel word: an enabled channel reads 1 while clear and 0 once latched, so 0x71FB means nothing is latched with the enables of 11 November 2026 (bit 8 is External MPS). Decode using the installed sensor-to-channel map; a clear word does not exclude a missed, reset or unavailable arc indication. |
| {STN}:HVPSXFORM:ARC:LTCH | HV transformer internal arc |
| {STN}:HVPS:CROWBAR:LTCH | Crowbar fired |

| PV | Significance |
|---|---|
| {STN}:STN:MPS:LTCH | External MPS: the SPEAR MPS or orbit-interlock permit was lost (MPS Shutoff module, §5.5) |
| {STN}:HVPSSTN:SUMY:LTCH | Aggregated HVPS fault summary |
| {STN}:STN:FAULT:NUM | Fault file slot number (1–15) — use to locate /dat/FAULT*_N |
| {STN}:STN:FAULT:TIME1 … TIME15 | Timestamp of each stored fault event |

# Part VI
# INTEGRATION AND LEGACY CONSIDERATIONS

## 19 Cabling and Interconnections

### 19.1 Major Cable Runs

| Cable Run | Cable Type | Conductors | Route |
|---|---|---|---|
| B118 → Switchgear (Contactor) | Belden 83715 | 15C #16 Teflon | TS-5 to contactor controller |
| B118 → Termination Tank (Grounding) | Belden 83709 + Belden 83715 | 9C + 15C #16 Teflon | TS-6 to grounding tank |
| B118 → B514 (SCR triggers) | Electrical cable pairs | 12 pairs | Controller to Phase Tank thyristor stacks |
| B132 ↔ B118 (Fiber optic) | Fiber optic | SCR ENABLE, KLYSTRON CROWBAR, STATUS | RF Local Display Panel ↔ trigger interconnect boards of the HVPS controller |
| B132 → Tunnel (RF signals) | Coax cables | Forward, reflected, probe per cavity | LLRF inputs from cavities |
| B132 → Tunnel (Motor) | Multi-conductor | Stepper motor phase leads + linear potentiometer feedback per cavity | To tuner assemblies |

### 19.2 Connector Types

| Interface | Connector | Notes |
|---|---|---|
| PPS | Eight-pin circular connector; exact current type unconfirmed | Identify the installed part and mating/pin convention [R25]. |
| RF signals | SMA/N-type | 50 Ω coaxial |
| Fiber optic | HFBR series | Avago/Broadcom |
| PLC communication | Allen-Bradley Remote I/O (twinaxial ”blue hose”) | 6008-SV1R scanner to 1747-DCM / 1771-DCM adapters |
| Galil Ethernet | RJ-45 | Standard Ethernet |

## 20 Known Issues

### 20.1 Critical Issues

| Issue | Category | Impact | Details |
|---|---|---|---|
| PPS compliance | Safety | **Critical** | PLC in PPS chain; PPS wires exposed in HVPS controller enclosure |
| VXI crate obsolescence | Hardware | **Critical** | Custom SLAC modules (RFP, IQA, CLK, AIM) — no replacements available. The whole crate is superseded by two Dimtel LLRF9/476 units in the upgrade [R51], [R52] |
| SLC-500 PLC end-of-life | Hardware | **High** | Allen-Bradley discontinued; no vendor support |
| PLC-5 MPS platform | Hardware | **High** | Allen-Bradley discontinued; no vendor support |
| SLO-SYN driver obsolescence | Hardware | **Medium** | SS2000MD4-M discontinued |
| VxWorks/SNL software | Software | **High** | PEP-II era code (1997); unsupported OS; no modern development tools |

## 20.2 Operational Workarounds

The original sources establish the following operating constraints:

- Automatic reset/retry logic exists in `rf_states.st,v`, but recovery depends on fault class and configured retry limits [R16].
- In-situ automated FM processing is reported at SPEAR3 commissioning [R1]; the HVPS sequencer also implements vacuum-dependent processing [R17]. The separate off-line LabVIEW facility in [R49] is not the station controller. Current conditioning limits and procedures still require approval.
- PEP-II functions (comb filter, GVF/GAP) are absent from the SPEAR3 crate; the station reference is instead supplied by RFP-resident DACs driven by a slow EPICS loop (§5.8)
- Several tuner loop parameters are commented out in the database source and depend on autosave restore to be non-zero (§17.3)

# A Source Document Reference Index

References retain their established IDs and are grouped by source type.

## A.1 Published Papers and Conference Proceedings

| Ref | Citation |
|---|---|
| **[R1]** | McIntosh, P. et al., ”The SPEAR3 RF System,” SLAC-PUB-10983, EPAC 2004, pp. 1084–1086. Original proceedings copy: `llrf/documentation/legacyArchitecture/TUPKF061.pdf`. `https://www.osti.gov/biblio/839730` |
| **[R2]** | Corredoura, P., ”Architecture and Performance of the PEP-II Low-Level RF System,” SLAC-PUB-8124, PAC 1999. Original copy: `llrf/documentation/legacyArchitecture/architecture-and-performance-of-the-pep-ii-low-level-rf.pdf`. `https://www.osti.gov/biblio/10204` |
| **[R3]** | Corredoura, P., Allison, S., Ross, W., Sass, R., Tighe, R., ”Experience with the PEP-II RF System at High Beam Currents,” **SLAC-PUB-8498**, EPAC 2000, arXiv:physics/0007029. `https://arxiv.org/abs/physics/0007029` |
| **[R6]** | Cassel, R. and Nguyen, M.N., ”A Unique Power Supply for the PEP II Klystron at SLAC,” SLAC-PUB-7591, PAC 1997. Original: `hvps/architecture/originalDocuments/slac-pub-7591.pdf`. Published design/test results, not SPEAR3 acceptance data. `https://doi.org/10.1109/PAC.1997.753249` |
| **[R45]** | Rimmer, R.A., ”RF Cavity Development for the PEP-II B Factory,” LBL-33360, November 1992. *Cavity design basis for the four SPEAR3 cavities (§8.1).* `https://www.osti.gov/servlets/purl/7066243` |
| **[R46]** | Rimmer, R.A. et al., ”High-Power Testing of the First PEP-II RF Cavity,” UCRL-JC-126198, EPAC 1996, June 1996. Includes the prototype’s brief 150 kW test and tuner limitations. `https://www.osti.gov/servlets/purl/505666` |
| **[R49]** | McIntosh, P., Hill, A. and Schwarz, H., ”An Automated 476 MHz RF Cavity Processing Facility at SLAC,” SLAC-PUB-10083, PAC 2003. Off-line LabVIEW facility; see §20.2. `https://www.osti.gov/servlets/purl/815601` |

## A.2 Vendor and Companion References

| Ref | Citation |
|---|---|
| **[R51]** | Dimtel, Inc., ”LLRF9 Product Page.” *The replacement LLRF controller; cited here only to identify what supersedes the VXI system described in §5.* `https://www.dimtel.com/products/llrf9` |
| **[R52]** | Dimtel, Inc., ”LLRF9/500 Specifications.” Vendor-family context, not a specification of the SPEAR3 476 MHz installation. `https://www.dimtel.com/products/specs/llrf9_500` |

The companion project reference [R5] is located in the repository index below for navigation. It is not used as independent confirmation of a disputed original-source claim.

## A.3 Repository Source Index

| Ref | Document | Repository Path |
|---|---|---|
| **[R4]** | LLRF9 Commissioning Tests (J. Sebek, 2021) — source of the ~712 kV/cavity operating gap voltage | `llrf/tests/llrf9Tests.pdf`, `llrf/tests/llrf9Tests.tex` |
| **[R5]** | Project Physical Design Report R2 (28 April 2026); current companion Doc 0 is R4 (5 November 2026) | `Designs/docx/SPEAR3_LLRF_PDR_R2.docx`; `Designs/tex/doc0-system-design/0_system_design_report.pdf` |
| **[R7]** | PEP-II RF System Description (Schwarz, PS-340-330-51-R0) — cavity R_s, Q_0, $\beta$ | `llrf/documentation/legacyArchitecture/ps3403305100.pdf` |
| **[R8]** | LLRF Feedback Loop Description (Schwarz, PS-340-330-52-R0) | `llrf/documentation/legacyArchitecture/feedbackLoopDescriptionps3403305200.pdf` |
| **[R9]** | HVPS System Schematic (top-level) | `hvps/documentation/schematics/sd7307900101.pdf` |
| **[R10]** | LLRF Block Diagram (HER configuration) | `llrf/documentation/legacyArchitecture/bd3403300000.pdf` |
| **[R11]** | LLRF Block Diagram (alternative view) | `llrf/documentation/legacyArchitecture/bd3403300100.pdf` |
| **[R12]** | Analog Regulator Card Schematic | `hvps/documentation/schematics/sd2372301401.pdf` |
| **[R13]** | **Enerpro General Purpose 3-Phase Firing Circuit, PCB PN FCOG6100** — SLAC SD-237-230-12-R0 / Enerpro drawing E128, drawn W.C. Mitchell 9/29/87. *This file is **not** a voltage-divider drawing, despite having been catalogued as one; the dividers are on [R71].* | `hvps/documentation/schematics/sd2372301200.pdf` |
| **[R14]** | Interconnection: B118 ↔ Contactor ↔ Termination Tank | `hvps/documentation/wiringDiagrams/wd7307900103.pdf` |
| **[R15]** | Hoffman Box Internal Wiring | `hvps/documentation/wiringDiagrams/wd7307900206.pdf` |
| **[R16]** | Legacy SNL: rf_states.st (master state machine) | `spear-rf-code-legacy/rfApp/src/seq/rf_states.st,v` |
| **[R17]** | Legacy SNL: rf_hvps_loop.st (HVPS control) | `spear-rf-code-legacy/rfApp/src/seq/rf_hvps_loop.st,v` |
| **[R18]** | Legacy SNL: rf_tuner_loop.st (tuner control) | `spear-rf-code-legacy/rfApp/src/seq/rf_tuner_loop.st,v` |
| **[R19]** | Legacy SNL: rf_calib.st (calibration sequences) | `spear-rf-code-legacy/rfApp/src/seq/rf_calib.st,v` |
| **[R20]** | Legacy SNL: rf_msgs.st (message logging) | `spear-rf-code-legacy/rfApp/src/seq/rf_msgs.st,v` |
| **[R21]** | MPS Wiring Diagrams (33 drawings) | `llrf/documentation/mpsWiringDiagrams/wd3403300200.pdf` through `wd3403303400.pdf` |
| **[R22]** | PEP-II HVPS Technical Specification (PS-341-360-01-R2) | `hvps/architecture/originalDocuments/ps3413600102.pdf` |

| Ref | Document | Repository Path |
|---|---|---|
| **[R23]** | HVPS monitor-winding connection/resistance surveys, separate sheets for HVPS1 and HVPS2; not an oscilloscope setup record | `hvps/documentation/wiringDiagrams/hvpsMonitorConnections.xlsx` |
| **[R24]** | HVPS Measurements (March 2022) | `hvps/documentation/plc/hvpsMeasurements20220314.xlsx` |
| **[R25]** | PPS Wiring in Hoffman Box (J. Sebek) — terminal-by-terminal PPS trace, PLC rung analysis, switchgear theory of operation, K4/RR label finding | `pps/HoffmanBoxPPSWiring.docx` |
| **[R26]** | PLC Ladder Logic Printout (Cassel) | `hvps/documentation/plc/CasselPLCCode.pdf` |
| **[R27]** | PLC Symbol/Label Database (Cassel) | `hvps/documentation/plc/CasselSymbolDatabase.pdf` |
| **[R28]** | Enerpro Schematics and Manuals (12 PDFs) | `hvps/controls/enerpro/enerproDocuments/` |
| **[R29]** | SLO-SYN Stepper Drive Manual | `llrf/tuners/SLO-SYN_SS2000MD4M_Step_Drive_Translator_Manual.pdf` |
| **[R30]** | SLO-SYN Motor Specifications | `llrf/tuners/SLO-SYN.pdf` |
| **[R31]** | Galil DMC-41x3 series user manual (covers the DMC-4143) | `llrf/tuners/galil/dmc-4103-r13h-manual.pdf`; datasheet `llrf/tuners/galil/ds_41x3.pdf` |
| **[R32]** | Drive Amplifier Datasheet (KAW2051M12) | `llrf/driveAmp/KAW2051M12 (7-98-907-012A).pdf` |
| **[R33]** | Coaxial Cable Interconnection Diagram | `llrf/documentation/coaxCables/sd3403300100.pdf` |
| **[R34]** | Galil bench session log with the installed cavity motors (25 Aug 2025) — records firmware `DMC4143 Rev 1.3h`, `AMP1 43547 Rev 4` | `llrf/tuners/galil/functioningGalil20250825SwapABToManual.txt`; earlier session `firstMotion2024.txt` |
| **[R35]** | Galil Commissioning Documentation | `llrf/tuners/galil/GalilCommissioning.docx` |
| **[R36]** | Cavity Tuner Inspections (June 2023) | `llrf/tuners/cavityTunerInspections20230613.docx` |
| **[R37]** | PLC Operation Notes | `hvps/documentation/plc/plcNotesR1.docx` |
| **[R38]** | PLC Software Discussion | `hvps/documentation/plc/PLC software discusion 1.docx` |
| **[R39]** | PLC Label Database | `hvps/documentation/plc/hvpsPlcLabels.xlsx` |
| **[R40]** | Enerpro Modifications for SLAC HVPS (J. Sebek) — installed FCOG6100/FCOAUX60 identity and serial numbers, phase-reference measurements, SIG HI summing chain | `hvps/controls/enerpro/enerproBoardHvps.docx` |

| Ref | Document | Repository Path |
|---|---|---|
| **[R53]** | Dusatko, J., *The SPEAR3 Low Level RF System Description*, v1.2, 4 May 2004, updated 29 January 2016. Component/clock description; historical crate and ripple statements require the reconciliations in §5 | `llrf/documentation/legacyArchitecture/SP3_writeup_V1d2.pdf` |
| **[R54]** | Ross, W., *PEP-II/SPEAR3 LLRF System Clock Module Revision 2*, SLAC ESD Engineering Document, 1 September 2001 | Cited as reference 3 of [R53]; document not held in this repository |
| **[R56]** | Sebek, J., *SPEAR3 High Voltage Power Supply Hazards*. Source of operating snapshots and discharge models; Doc L corrects its T0-rating inference and output-energy sum | `hvps/documentation/procedures/spear3HvpsHazards.tex` |
| **[R58]** | Sebek, J., *Enerpro Phase Reference Adapter* — the upgrade adapter design (576 kΩ / 200 kΩ into FCOG1200 J7) | `hvps/controls/enerpro/enerproPhaseReferenceAdapter.docx` |
| **[R60]** | Legacy IOC boot and Remote I/O configuration | `spear-rf-code-legacy/iocBoot/b132-iocrf/st.cmd,v`, `config.ab,v`; `spear-rf-code-legacy/rfApp/DbIoc/srf1.substitutions,v`; `spear-rf-code-legacy/rfApp/Db/rf_ab_4CV.substitutions,v`; `spear-rf-code-legacy/rfApp/src/db/p2RfAimDef.h,v`; `spear-rf-code-legacy/rfApp/src/db/devP2RfAim.c,v`; `spear-rf-code-legacy/allenBradley/documentation/allenBradley.html,v`; `spear-rf-code-legacy/rfApp/Db/rf_digital_All.substitutions,v` |
| **[R61]** | SCR trigger, interlock and monitor board schematics (SD-730-793 series) — verified by direct reading of the scanned drawings, September 2026 | `hvps/documentation/schematics/sd7307930304.pdf`, `sd7307930402.pdf`, `sd7307930702.pdf`, `sd7307930801.pdf`, `sd7307931203.pdf`, `sd7307931301.pdf` |
| **[R62]** | Grounding Tank schematic, SD-730-790-05-C1 (R. Cassel, 2/13/03) — verified by direct reading, September 2026 | `hvps/documentation/schematics/sd7307900501.pdf` |
| **[R63]** | **Trigger Enclosure Wiring, WD-730-790-02-C6** (R. Cassel / W. Gorecki / S. Lowe; revisions C1–C6, 06/03 to 01/07) — master wiring diagram for the B118 trigger enclosure; verified by direct reading, September 2026 | `hvps/documentation/wiringDiagrams/wd7307900206.pdf` |
| **[R64]** | Grounding Tank Wiring, WD-730-794-06-C0 (R. Cassel / W. Gorecki 03/03/2000 / S. Lowe 4/3/00) — **test stand** configuration, no revisions recorded; verified by direct reading, September 2026 | `hvps/documentation/wiringDiagrams/wd7307940600.pdf` |

| Ref | Document | Repository Path |
|---|---|---|
| **[R65]** | Vacuum Contactor Controller Electrical Schematic, GP-439-704-02-C1 (redrawn to CAD per as-built, 09/25/06) — verified by direct reading, September 2026 | `hvps/documentation/switchgear/gp4397040201.pdf` |
| **[R66]** | Ross Engineering 713203 E-1, High Speed Vacuum Contactor Energy Storage Closing & Holding System Schematic (driver HCA-1-A P/N 820360; contactor HQ3 P/N 813203; last revision E, 2-2-83) — verified by direct reading, September 2026 | `hvps/documentation/switchgear/rossEngr713203.pdf` |
| **[R67]** | **Interconnection Wiring, WD-730-790-01-C3** (R. Cassel / W. Gorecki 03/02/2000 / S. Lowe; revisions C1–C3, 08/03 to 10/03) — system-level interconnection between the B118 Hoffman Box, Contactor Disconnect and Termination Tank; verified by direct reading, September 2026; the repository copy notes that the K-4 and RR coil labels are swapped (November 2026) | `hvps/documentation/wiringDiagrams/wd7307900103.pdf` |
| **[R68]** | **12.47 kV Vacuum Contactor Controller, Electrical Connection Wiring Diagram, ID-308-801-06-C1** (redrawn to CAD and resized D→E, revised per as-built, 09/25/06; supersedes ID-308-801-06 R0) — the connection-wiring companion to [R65]; verified by direct reading, September 2026 | `hvps/documentation/switchgear/id3088010601.pdf` |
| **[R69]** | **12.47 kV Outdoor Metal-Enclosed Combination Vacuum Contactor Controller — Schematic Diagram & General Arrangement, GP-308-500-01-R3** (Lawrence Berkeley Laboratory; A. Tseng / L. Johnson, 6-23-77, revisions 1–3) — the original PEP-era design drawing; authoritative source for the relay device legend; verified by direct reading, September 2026 | `hvps/documentation/switchgear/gp3085000103.pdf` |
| **[R70]** | **Klystron Power Supply Electrical Schematic, EI-730-790-00-C0 / NWL # 39308** (NWL Transformers, Bordentown NJ; SLAC issue R. Cassel / W. Gorecki 12/17/02 / J. Olszewski 1/21/03; NWL revisions A–F, 1996–2001) — the **transformer manufacturer's own schematic**; authoritative for transformer ratings, monitor windings and oil/pressure protection setpoints; verified by direct reading, September 2026 | `hvps/documentation/wiringDiagrams/ei7307900000.pdf` |

| Ref | Document | Repository Path |
|---|---|---|
| **[R71]** | **SCR Control Driver — Crowbar Interconnecting Cables, WD-730-794-04-C0** (R. Cassel 5/30/00 / W. Gorecki 03/03/2000 / S. Lowe 4/3/00) — contains the **"TRANSFORMER TANK WD-730-792-01"** section with both HVPS output voltage dividers, the crowbar trigger transformer T1 feeding SCR1–SCR4 over RG-220, and the CR1–CR4 driver board pinouts; verified by direct reading, September 2026 | `hvps/documentation/wiringDiagrams/wd7307940400.pdf` |
| **[R72]** | **Enerpro Voltage and Current Regulator Board Notes** — J. Sebek. Detailed circuit analysis of SD-237-230-14-C1: divider loading and transfer functions, error-amplifier pole/zero analysis, the diode minimum-select summing junction, and the finding that the AC current loop is saturated by design | `hvps/architecture/designNotes/EnerproVoltageandCurrentRegulatorBoardNotes.docx` |
| **[R75]** | **NWL transformer rating plate, SPEAR2 unit** — the manufacturer's nameplate on the transformer tank, photographed in place September 2026; primary source for the unit's own ratings and for the NWL model and drawing numbers | `Designs/tex/common/photos/SPEAR2_HVPS_Plate.jpg` |
| **[R76]** | Original IQA channel allocation, instantiated by the SPEAR3 station database | `spear-rf-code-legacy/rfApp/Db/rf_iqa_All.substitutions,v`; `spear-rf-code-legacy/rfApp/Db/rf_iqa_4CV.substitutions,v` |
| **[R77]** | Legacy DAC supervisory loop | `spear-rf-code-legacy/rfApp/src/seq/rf_dac_loop.st,v` |
| **[R78]** | Original tuner database, stepper record definition and conversion code, and AB device support | `spear-rf-code-legacy/rfApp/Db/rf_cav.db,v`; `spear-rf-code-legacy/stepper/stepper/steppermotorRecord.dbd,v`; `spear-rf-code-legacy/stepper/stepper/steppermotorRecord.c,v`; `spear-rf-code-legacy/allenBradley/allenBradleyApp/1746HSTP1Src/devSmAB1746HSTP1.c,v` |
| **[R79]** | Original Fast Interlock Chassis, receiver-board and interface-module schematics; drawing revision is not proof of installed configuration | `llrf/documentation/legacyInterfaceModules/SD-340-308-01-R1-1of1.pdf`; `llrf/documentation/legacyInterfaceModules/SD-340-308-02-R1.pdf`; `llrf/documentation/legacyInterfaceModules/sd3403090102.pdf` |

| Ref | Document | Repository Path |
|---|---|---|
| **[R80]** | **SCR Control Driver — Contactor Interconnecting Cables, WD-730-794-02-C0** (R. Cassel / W. Gorecki 03/03/2000 / S. Lowe 4/2/00) — the TS-5 conductor list and the contactor-disconnect terminal layout, including the MX, RR and K-4 coil connections; verified by direct reading, October 2026 | `hvps/documentation/wiringDiagrams/wd7307940200.pdf` |
| **[R81]** | Sebek, J., *LLRF Documentation Notes*, R2 — Remote I/O topology, the fibers between the Fast Interlock Chassis, the RF Local Display Panel and the HVPS controller, and the panel's cross-connects | `llrf/documentation/LLRFDocumentationNotesR2.docx` |
| **[R82]** | Sebek, J., fiber-optic connections between the LLRF system and the HVPS controller, Rev 3 — the three HVPS fibers and the meaning of their light states | `llrf/documentation/fiberOpticCableSignalControlRev3.docx` |
| **[R83]** | Sebek, J., fiber-optic connections between the RF system controllers (HVPS controller side) — slot-5 output 0 (24 V fault/enable) and the COMMANDS bus of the trigger interconnect boards | `hvps/architecture/designNotes/controllerFiberOpticConnections.docx` |
| **[R84]** | RF Local Display Panel drawings: drawing list DL-340-310-00, front and rear panels SI-340-310-05 and -02, schematic SD-340-311-01 ("PEP-II RF System Local Panel"); its fibers are on WD-340-330-29 and its cross-connects on WD-340-330-02 in [R21] | `llrf/documentation/localPanel/` |
| **[R85]** | Klystron filament control chassis schematic SD-340-311-00 Rev E2 ("PEP II RF Klystron Filament Schematic", P. Corredoura, 1996) — solid-state relay, motor-driven variac, voltmeter and ammeter with a 10:1 current transformer, control connector J1 | `llrf/documentation/filamentHeater/sd3403110002.pdf` |
| **[R86]** | Sebek, J., *SPEAR3 RF station operation* — station modes, turn-on sequence and tuner control | `llrf/documentation/LLRFOperation_jims.docx` |
| **[R87]** | Sebek, J., *RF system MPS requirements* — the five sources that disable the HVPS triggers, among them the klystron-arc and transformer-arc triggers, and the protection of the klystron and the cavities | `hvps/architecture/designNotes/RFSystemMPSRequirements.docx` |
| **[R88]** | Legacy SPEAR3 station database: the AIM arc channels, among them External MPS on the spare channel (`rf_stn_All.substitutions`,`v`, `rf_stn_4CVAll.substitutions`,`v`, `rf_interlock_arc.db`,`v`), and the SPEAR3 station MPS summary (`rf_sumy_stn_spr.db`,`v`) | `spear-rf-code-legacy/rfApp/Db/` |

| Ref | Document | Repository Path |
|---|---|---|
| **[R89]** | Sebek, J., *LLRF Interface Chassis specification* — the SPEAR MPS and the orbit interlock each give the LLRF a 24 V permit | `llrf/architecture/llrfInterfaceChassis.docx` |

# B Symbol and Notation Conventions

## B.1 Frequently Used Symbols

| Symbol | Definition | Typical Unit |
|---|---|---|
| $f_0$, $\omega_0$ | Cavity resonant frequency | MHz, rad/s |
| $f_{\text{RF}}$, $\omega_{\text{RF}}$ | RF operating frequency (~476.3 MHz, drifting — §4.1) | MHz, rad/s |
| $f_{\text{rev}}$, $\omega_{\text{rev}}$ | Revolution frequency (~1.2804 MHz) | MHz, rad/s |
| $f_s$, $\omega_s$ | Synchrotron frequency (~10.1 kHz) | kHz, rad/s |
| $Q_0$ | Unloaded quality factor (32,000) | dimensionless |
| $Q_L$ | PEP-II nominal loaded quality factor (~6,780) | dimensionless |
| $\beta$ | Coupling coefficient $= Q_0/Q_{\text{ext}}$ (PEP-II nominal 3.72) | dimensionless |
| $R_s$ | Shunt impedance (3.73 MΩ, linac convention) | MΩ |
| $V_{\text{gap}}$ | Gap voltage per cavity (~712 kV operating) | kV |
| $I_b$ | DC beam current (500 mA design) | mA or A |
| $V_{\text{HV}}$ | HVPS output voltage ($\approx -72$–$-75$ kV typical) | kV |
| $I_{\text{HV}}$ | HVPS output current ($\approx$ 19–22 A typical) | A |
| $\alpha$ | SCR firing angle | degrees |
| SIG HI | Enerpro firing-angle command voltage; calibrated mapping required | V |

## B.2 Abbreviations

| Abbreviation | Definition |
|---|---|
| AIM | Arc/Interlock Module (VXI slot 12, schematic SD-340-309-01) |
| CLK | Clock/RF Distribution module (VXI slot 2) |
| DCM | Direct Communication Module — an Allen-Bradley **Remote I/O adapter** (1747-DCM for SLC-500, 1771-DCM for PLC-5) |
| Fast IC | Fast Interlock Chassis (SLAC drawing 340-308) |
| GVF / GAP | Gap Voltage Feed-Forward (PEP-II only; module not installed in SPEAR3) |
| HER | High Energy Ring (PEP-II) |
| HOM | Higher-Order Mode |
| HVPS | High-Voltage Power Supply |
| IQA | IQ/Amplitude detector module (VXI slots 7, 9, 11) |
| LLRF | Low-Level RF |
| MPS | Machine Protection System (RF MPS = the station-level equipment protection PLC; SPEAR MPS = the facility system) |
| PPS | Personnel Protection System |
| RFP | RF Processor module (VXI slot 4) |
| RIO | Allen-Bradley Remote I/O — the serial link between the VXI 6008-SV1R scanner and the PLC adapters |

| Abbreviation | Definition |
|---|---|
| SCR | Silicon Controlled Rectifier (thyristor) |
| SNL | State Notation Language (EPICS) |

## B.3 Conventions

1. **Shunt impedance**: $R_s = V_{\text{gap,pk}}^2/(2P_{\text{wall}})$, approximately $3.73\,\text{M}\Omega$ in the PEP-II nominal table [R7]. McIntosh's $3.8\,\text{M}\Omega$ SPEAR3 value uses the same definition [R1]. The alternative $V_{\text{gap,pk}}^2/P_{\text{wall}}$ definition is twice as large.
2. **Phase convention**: Positive phase angles represent phase advance. The synchronous phase $\varphi_s$ is measured from the zero-crossing of the RF voltage.
3. **Frequency detuning**: $\Delta f = f_0 - f_{\text{RF}}$. Negative detuning ($\Delta f < 0$) means the cavity resonant frequency is below the RF frequency, which is the normal operating condition for beam loading compensation above transition.
4. **Reference tag format**: [Rn] for numbered references, [Wn] for web references.
   *End of Document*