



GPS 175 GNC 355 GNX 375

Pilot's Guide



COPYRIGHT & TRADEMARKS

© 2019-2023 Garmin International, Inc., or its subsidiaries. All rights reserved.

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin®, flyGarmin.com®, GDL®, GNC®, and SafeTaxi® are registered trademarks of Garmin International or its subsidiaries. Connex™, Garmin Pilot™, Garmin TxT™, GDU™, GNST™, GNXT™, GPS™, GTNT™, GTX™, G3X Touch™, and Smart Airspace™ are trademarks of Garmin International or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Other trademarks and trade names are those of their respective owners.

© 2023 SD® is a registered trademark of SD-3C, LLC. All rights reserved.

The term Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

All other marks and logos are property of their respective owners. All rights reserved.

SOFTWARE VERSION

This manual reflects the operation of system software v3.20. Some differences in operation may be observed when comparing the information in this manual to later software versions.

INFORMATION & SUPPORT

For information regarding the [Aviation Limited Warranty](#), refer to Garmin's website.

For aviation product support, visit [flyGarmin.com](#).



Warnings, Cautions & Notes



WARNING

Do not use terrain avoidance displays as the sole source of information for maintaining separation from terrain and obstacles. Garmin obtains terrain and obstacle data from third party sources and cannot independently verify the accuracy of the information.



WARNING

Do not rely solely upon Terrain Proximity data for terrain avoidance. Terrain Proximity is not a certified terrain awareness system. It is an aid to situational awareness only. Using Terrain Proximity data does not under any circumstances or conditions relieve the pilot's responsibility to see and avoid terrain or obstacles.



WARNING

Always refer to current aeronautical charts and NOTAMs for verification of displayed aeronautical information. Displayed aeronautical data may not incorporate the latest NOTAM information.



WARNING

Never use GPS altitude for vertical navigation. The altitude calculated by GPS receivers is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters (e.g., the output from the GDC 74A/B air data computer) or other altimeters in the aircraft. Always refer to the pressure altimeters in the aircraft for current pressure altitude.



WARNING

Never use expired databases. Update databases regularly to ensure currency. Use out of date database information at your own risk.



WARNING

Never use basemap information (land and water data) as the sole means of navigation. Basemap data is intended only to supplement other approved navigation data sources and should be considered only an aid to enhance situational awareness.



WARNING

Do not rely solely upon the display of traffic information to accurately depict all of the traffic within range of the aircraft. Due to lack of equipment, poor signal reception, and/or inaccurate information from aircraft or ground stations, traffic may be present that is not represented on the display.

Warnings, Cautions & Notes



WARNING

Never use datalink weather information for maneuvering in, near, or around areas of hazardous weather. Information contained within datalink weather products may not accurately depict current weather conditions.



WARNING

Do not use the indicated datalink weather product age to determine the age of the weather information shown by the datalink weather product. Due to time delays inherent in gathering and processing weather data for datalink transmission, the weather information shown by the datalink weather product may be older than the indicated weather product age.



WARNING

Do not rely solely upon Datalink services to provide TFR information. Always confirm TFR information through official sources such as flight service stations or air traffic control.



WARNING

Always refer to current aeronautical charts for appropriate minimum clearance altitudes. The displayed MSAs are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information.



WARNING

Do not use GPS to navigate to any active waypoint identified as a "NON WGS84 WPT" by a system message. "NON WGS84 WPT" waypoints are derived from an unknown map reference datum that may be incompatible with the map reference datum used by GPS (known as WGS84) and may be positioned in error as displayed.



WARNING

Do not rely solely upon the display of traffic information for collision avoidance maneuvering. The traffic display does not provide collision avoidance resolution advisories and does not under any circumstances or conditions relieve the pilot's responsibility to see and avoid other aircraft.



WARNING

Do not rely on the accuracy of attitude and heading indications in geographic areas where variation in the earth's magnetic field exists. This includes: North of 72° North latitude at all longitudes; South of 70° South latitude at all longitudes; North of 65° North latitude between longitude 75° W. and 120° W. (Northern Canada); North of 70° North latitude between longitude 70° W. and 128° W. (Northern Canada); North of 70° North latitude between longitude 85° E. and 114° E. (Northern Russia); South of 55° South latitude between longitude 120° E. and 165° E. (Region south of Australia and New Zealand).

Warnings, Cautions & Notes



WARNING

Do not learn operational procedures in the air. For safety reasons, thoroughly practice basic operation on the ground before actual use.



WARNING

Review and understand all aspects of this pilot's guide. Doing so reduces the risk of unsafe operation.



WARNING

Always resolve any discrepancies between the display and other navigation sources when they occur. During flight operations, compare display indications to information from other NAVAIDs, visual sightings, charts, and other available sources before continuing navigation.



CAUTION

Do not clean display surfaces with abrasive cloths or cleaners containing ammonia. They will harm the anti-reflective coating.



CAUTION

Ensure that any unit Repairs are made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and affect the airworthiness of the aircraft.



NOTE

The application supports channel tuning for both 8.33 kHz and 25 kHz channels within radio-frequency range. If flying in a region where 8.33 kHz channel spacing is available, set the COM radio to 8.33 kHz to prevent the loss of any stored or recently used frequencies.



NOTE

All visual depictions contained within this document, including screen images of the system panel and displays, are subject to change and may not reflect the most current system and aviation databases. Depictions of equipment may differ slightly from the actual equipment.



NOTE

The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the system utilize GPS as a precision electronic NAVAID. Therefore, as with all NAVAIDs, information presented by the system can be misused or misinterpreted and, therefore, become unsafe.

Warnings, Cautions & Notes



NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



NOTE

Interference from GPS repeaters operating inside nearby hangars can cause an intermittent loss of attitude and heading displays while the aircraft is on the ground. Moving the aircraft more than 100 yards away from the source of the interference should alleviate the condition.



NOTE

Use of polarized eye wear may cause the flight displays to appear dim or blank.



NOTE

This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our website at www.garmin.com/prop65.



NOTE

Operating the system in the vicinity of metal buildings, metal structures, or electromagnetic fields can cause sensor differences that may result in nuisance miscompare annunciations during start up, shut down, or while taxiing. If one or more of the sensed values are unavailable, the annunciation indicates no comparison is possible.



NOTE

The system responds to a terminal procedure based on data coded within that procedure in the Navigation Database. Differences in system operation may be observed among similar types of procedures due to differences in the Navigation Database coding specific to each procedure.



NOTE

Do not use SafeTaxi functions as the basis for ground maneuvering. SafeTaxi functions do not comply with the requirements of AC 120-76C and are not qualified for use as an airport moving map display. SafeTaxi is to be used for orientation purposes only.

Warnings, Cautions & Notes



NOTE

The FAA has asked Garmin to remind pilots who fly with Garmin database-dependent avionics of the following:

- *It is the pilot's responsibility to remain familiar with all FAA regulatory and advisory guidance and information related to the use of databases in the National Airspace System.*
- *Garmin equipment will only recognize and use databases that are obtained from Garmin or Jeppesen. Databases obtained from Garmin or Jeppesen that have a Type 2 LOA from the FAA are assured compliance with all data quality requirements (DQRs). A copy of the Type 2 LOA is available for each applicable database and can be viewed at flyGarmin.com by selecting "Aviation Database Declarations."*
- *Use of a current Garmin or Jeppesen database in your Garmin equipment is required for compliance with established FAA regulatory guidance, but does not constitute authorization to fly any and all terminal procedures that may be presented by the system. It is the pilot's responsibility to operate in accordance with established AFM(S) and regulatory guidance or limitations as applicable to the pilot, the aircraft, and installed equipment.*



NOTE

The pilot/operator must review and be familiar with Garmin's database exclusion list as discussed in SAIB CE-14-04 to determine what data may be incomplete. The database exclusion list can be viewed at flyGarmin.com by selecting "Aviation Database Declarations."



NOTE

The pilot/operator must have access to Garmin and Jeppesen database alerts and consider their impact on the intended aircraft operation. The database alerts can be viewed at flyGarmin.com by selecting "Aviation Database Alerts."



NOTE

If the pilot/operator wants or needs to adjust the database, contact Garmin Product Support.



NOTE

Garmin requests the flight crew report any observed discrepancies related to database information. These discrepancies could come in the form of an incorrect procedure; incorrectly identified terrain, obstacles and fixes; or any other displayed item used for navigation or communication in the air or on the ground. Visit flyGarmin.com and select "Aviation Data Error Report."



NOTE

The navigation databases used in Garmin navigation systems contain Special Procedures. Prior to flying these procedures, pilots must have specific FAA authorization, training, and possession of the corresponding current, and legitimately-sourced chart (approach plate, etc.). Inclusion of the Special Procedure in the navigation database DOES NOT imply specific FAA authorization to fly the procedure.

About This Guide

Record of Revision

REVISION	DATE	CHANGE DESCRIPTION
1	06.05.19	Experimental Release.
A	07.03.19	Production Release.
B	02.10.20	Updates for software v3.10.
C	01.24.23	Updates for software v3.20.

Available for Download

Electronic Pilot's Guide

A version of this guide saved in Adobe Acrobat. Available for viewing on your computer or portable device.

Upgrade Supplement

Details document changes for software enhancements.

Go to garmin.com/manuals.

About This Guide

Layout

SECTION	TITLE
1	System at a Glance
2	Get Started
3	Navigation
4	Planning
5	Hazard Awareness
6	Messages
7	Qualification
8	Glossary
9	Regulatory Information

The design and layout of this guide is intended to provide clear, concise sections written in the logical order of a pilot's flight instrument and systems scan.

Product Descriptions

This guide covers the operation of the following Garmin products.

- GPS 175
- GNC 355
- GNC 355A
- GNX 375

When you see product names separated by a forward slash (e.g., GNC 355/355A or GPS 175/GNX 375), it means that the information pertains to both products. When you see a product name in bold (e.g., **GNC 355A**), it means that the information pertains to that specific model only.

Unless otherwise stated, information pertaining to GNC 355 is also applicable to GNC 355A.

Reference Documentation

Reference Manuals

DOCUMENT	P/N
<i>GDL 88 ADS-B Transceiver Pilot's Guide</i>	190-01122-03
<i>GTX 335/345 All-In-One ADS-B Transponder Pilot's Guide</i>	190-01499-00

Reference Websites

WEBSITE	ADDRESS
ADS-B Academy	https://www.garmin.com/en-US/aviation/adsb/
Aviation Limited Warranty	https://www.garmin.com/en-US/legal/aviation-limited-warranty
Connex	http://www.garmin.com/connex
Database Concierge	Go to http://www.flygarmin.com/support and select Database Management.
FAA Dynamic Regulatory System	https://drs.faa.gov

Table of Contents

1 SYSTEM AT A GLANCE	1-1
Overview	1-2
Unit Configurations	1-3
Apps & Features	1-4
Pilot Interface	1-5
Bezel	1-5
SD Card Slot	1-6
Touchscreen	1-7
Keys	1-8
Menus	1-9
Tabs	1-10
Keypads	1-10
Control Knobs	1-11
Knob Functions	1-11
Page Navigation Labels	1-12
Knob Function Indicators	1-12
Knob Shortcuts	1-13
Screenshots	1-15
Color Conventions	1-16
Compatible Equipment	1-17
Line Replaceable Units	1-17
ADC & AHRS	1-18
Altitude Encoder	1-18
ADS-B In Data	1-19
2 GET STARTED	2-1
Power Up	2-2
Instrument Panel Self-Test	2-2
Preset Fuel Quantities	2-3
Power Off	2-3
Databases	2-4
Database Effective Cycles	2-5
Active and Standby Databases	2-7
Manual Updates	2-8
Database Updates Page	2-8
Automatic Updates	2-11
Database Concierge	2-12
Wi-Fi Setup	2-14
Database SYNC	2-15
Connectivity	2-17
Connext Setup	2-17
Bluetooth Setup	2-18
Enabling Bluetooth Functionality	2-18
Managing Paired Devices	2-19
Importing a Flight Plan	2-20
COM	2-21
COM Standby Control Panel	2-21
COM Volume Controls	2-22
COM Radio Setup	2-24
Channel Spacing Option	2-25

Table of Contents

Reverse Frequency Look-up	2-26
Sidetone Volume Offset	2-27
Tuning & Monitoring	2-28
Direct Tuning	2-29
Transfer Frequency to Active (Flip-Flop)	2-31
Monitor Mode	2-32
Frequency Selection	2-33
Search Tabs	2-33
Remote Frequency Selection	2-35
Emergency Frequency	2-35
Create User Frequencies	2-36
COM Alert	2-38
Stuck Microphone	2-38
XPDR	2-39
XPDR Control Panel	2-39
XPDR Setup	2-40
Displaying Data	2-40
Enabling Extended Squitter Transmissions	2-41
Assigning a Flight ID	2-41
XPDR Modes	2-42
Squawk Code Keys	2-43
VFR	2-44
XPDR Key	2-44
Remote Control	2-46
XPDR Alert	2-46
ADS-B Altitude Reporting	2-47
ADS-B Control Panel	2-47
ADS-B Key	2-48
Enabling Anonymous Mode	2-48
Assigning a Flight ID	2-49
GDL 88 Alert	2-49
Pilot Settings	2-50
CDI Scale	2-51
Horizontal Alarm Limits	2-52
CDI On Screen	2-53
Airport Runway Criteria	2-54
Runway Surface	2-54
Minimum Runway Length	2-54
Clocks & Timers	2-55
Timers	2-55
Clock	2-55
Page Shortcuts	2-56
Alerts Settings	2-57
Unit Selections	2-58
Display Brightness Control	2-59
Automatic Brightness Control	2-59
Manual Brightness Control	2-59
Scheduled Messages	2-60
Message Types	2-60

Table of Contents

Modifying Scheduled Messages	2-60
Crossfill	2-61
Crossfill Data	2-61
Status Indications	2-62
Alert Types	2-62
Alert Annunciations	2-63
Pop-up Alerts	2-64
Aural Alerts	2-65
System Status	2-66
GPS Status	2-66
Circle of Uncertainty	2-68
SBAS Providers	2-69
GPS Status Annunciations	2-69
GPS Alerts	2-70
ADS-B Status	2-71
Logs	2-73
Export to SD Card	2-73
3 NAVIGATION	3-1
Map	3-3
Map Setup	3-6
Configure User Fields	3-7
Map Orientation	3-10
North Up Above	3-10
Visual Approach	3-10
TOPO Scale	3-11
Range Ring	3-11
Track Vector	3-11
Ahead View	3-12
Map Detail	3-13
Map Interactions	3-16
Basic Interactions	3-16
Graphical Flight Plan Editing	3-19
Map Overlays	3-23
Overlay Controls	3-23
Overlay Status Icons	3-26
Smart Airspace	3-27
SafeTaxi	3-28
Active Flight Plan	3-30
Collapse All Airways	3-34
OBS	3-35
Dead Reckoning	3-36
Parallel Track	3-37
Edit Data Fields	3-39
Flight Plan Catalog	3-39
Catalog Route Options	3-40
Create a Flight Plan	3-42
Flight Plan Waypoint Options	3-43
Flight Plan Map Overlays	3-44
Leg Status Indications	3-44

Table of Contents

Flight Plan User Field	3-45
User Airport Symbol	3-46
Fly-over Waypoint Symbol	3-47
GPS NAV Status Key	3-48
Direct To	3-49
Direct To Basics	3-49
Direct To Search Tabs	3-49
Direct To Activation	3-51
Navigating Direct To	3-52
Removing a Direct-to Course	3-53
User Holds	3-54
Waypoints	3-55
Waypoint Information	3-55
Waypoint Selection	3-59
FastFind Predictive Waypoint Entry	3-59
Search Tabs	3-60
Create User Waypoints	3-62
Define Waypoint Criteria	3-64
Edit an Existing User Waypoint	3-66
Import User Waypoints	3-67
Nearest	3-69
Procedures	3-71
Flight Procedure Basics	3-72
GPS Flight Phase Annunciations	3-74
Departures	3-76
Flight Plan Departure Options	3-77
Arrivals	3-78
Flight Plan Arrival Options	3-79
Approaches	3-80
Flight Plan Approach Options	3-82
Missed Approach	3-83
Approach Hold	3-84
DME Arc	3-86
RF Legs	3-87
Vectors to Final	3-87
ILS Approach	3-88
RNAV Approaches	3-89
Visual Approach	3-95
Autopilot Outputs	3-97
4 PLANNING	4-1
Vertical Calculator	4-3
VCALC Page	4-3
VCALC Setup	4-4
Fuel Planning	4-5
Fuel Planning Page	4-5
Fuel Planning Modes	4-5
Computing Fuel Statistics	4-8
DALT/TAS/Wind Calculator	4-9
DALT/TAS/Wind Page	4-9

Table of Contents

Editing Input Data	4-9
Computing DAL/TAS/Wind Statistics	4-11
RAIM Prediction	4-12
RAIM Prediction Page	4-12
Calculating RAIM Status	4-13
RAIM Status Indications	4-13
5 HAZARD AWARENESS	5-1
Weather Awareness	5-3
Data Transmission Limitations	5-3
Line of Sight Reception	5-3
Per FAA TSO-C157b	5-4
NOTAM 30-Day Limitation	5-4
FIS-B Weather Display	5-5
FIS-B Weather Setup	5-7
FIS-B Weather Products	5-8
Product Status	5-9
Product Legends	5-9
Product Age	5-10
FIS-B NEXRAD	5-11
METARs and TAFs	5-13
Graphical AIRMETs	5-14
SIGMETs	5-16
PIREPs	5-16
Cloud Tops	5-17
Lightning	5-17
Center Weather Advisory	5-17
Winds/Temps Aloft	5-18
Icing	5-18
Turbulence	5-19
TFRs	5-19
Raw Text Reports	5-20
FIS-B Ground Reception Status	5-22
Traffic Awareness	5-23
Traffic Applications	5-23
Traffic Application Failures	5-24
Traffic Display	5-25
Traffic Setup	5-29
Motion Vectors	5-30
Altitude Filtering	5-30
Traffic Interactions	5-31
Traffic Annunciations	5-32
Traffic Alerting	5-33
Terrain Awareness	5-35
Terrain Configurations	5-35
GPS Altitude for Terrain	5-36
Database Limitations	5-37
Terrain Display	5-38
Terrain Setup	5-39
Terrain Proximity	5-40

Table of Contents

Terrain Elevation Depictions	5-40
Obstacle Elevation Depictions	5-41
Terrain Alerting	5-43
Alert Types	5-43
Alerting Thresholds	5-44
Inhibiting FLTA & PDA Alerts	5-45
FLTA & PDA Alerts	5-46
6 MESSAGES	6-1
 Advisory Messages	6-2
Message Key	6-2
Airspace Advisories	6-3
Database Advisories	6-4
Flight Plan Advisories	6-5
GPS/WAAS Advisories	6-7
Navigation Advisories	6-9
Pilot Specified Advisories	6-10
System Hardware Advisories	6-11
COM Radio Advisories, GNC 355	6-16
Terrain Advisories	6-17
Traffic System Advisories	6-18
Traffic Advisories, GPS 175 & GNC 355	6-18
Traffic Advisories, GNX 375	6-20
VCALC Advisories	6-21
Waypoint Advisories	6-21
7 QUALIFICATION	7-1
 Glove Qualification	7-2
8 GLOSSARY	8-1
9 REGULATORY INFORMATION	9-1
 Compliance	9-2
AC 90-100A Statement of Compliance	9-2
 Software License Agreement	9-3

System at a Glance

1 System at a Glance

OVERVIEW.....	1-2
PILOT INTERFACE	1-5
COMPATIBLE EQUIPMENT.....	1-17

System at a Glance

Overview

GPS 175, GNC 355/355A, and GNX 375 are the first 2" by 6.25" panel mount navigators to employ full color capacitive touchscreen technology.

GNC 355 shown as typical.



GPS 175 is a TSO-C146e compliant GPS/WAAS navigator with en route, terminal, and precision/non-precision approach capabilities.

GNC 355/355A combines the functionality of GPS 175 with a TSO-C169a compliant VHF radio communications transceiver. GNC 355 supports 25 kHz channel spacing, while GNC 355A provides tuning for both 25 kHz and 8.33 kHz channels.

Both GPS 175 and GNC 355 can receive ADS-B In weather and traffic when interfaced to either GNX 375, GTX 345, or GDL 88.

GNX 375 combines the functionality of GPS 175 with a TSO-C112e (Level 2els, Class 1) compliant mode S transponder that meets ADS-B Out requirements. A dual-link ADS-B In receiver provides the display of traffic and subscription-free weather.

Each unit is compatible with Bluetooth wireless technology, providing flight plan, traffic, weather, and position data to an available portable electronic device.

System at a Glance

Unit Configurations

GPS 175



GPS/MFD

GNC 355



GPS/MFD/COM

GNX 375



GPS/MFD/XPDR

COMPARISON TABLE

Unit	GPS/MFD	COM Radio	Mode S XPDR	Dual-link ADS-B In	1090 ES ADS-B Out
GPS 175	•				
GNC 355	•	•			
GNX 375	•		•	•	•

System at a Glance

Apps & Features

GPS 175 NAVIGATOR	GNC 355/355A NAVIGATOR W/VHF COM TRANSCEIVER	GNX 375 NAVIGATOR W/TRANSPONDER
<ul style="list-style-type: none"> • Moving Map • Terrain • Flight Plan • Graphical Flight Planning • Waypoint Information • Nearest • FastFind Predictive Waypoint Entry • FIS-B Weather Display ^{1,2} • ADS-B In Traffic Display ^{1,2} • Terrain Avoidance • System Advisories • Scheduled Messages • Clock • CDI • Internal GPS Receiver • Built-in Bluetooth Antenna • Database Concierge Access ⁴ 	<ul style="list-style-type: none"> • Moving Map • Terrain • Flight Plan • Graphical Flight Planning • Waypoint Information • Nearest • FastFind Predictive Waypoint Entry • FIS-B Weather Display ^{1,2} • ADS-B In Traffic Display ^{1,2} • VHF Radio Transceiver • Terrain Avoidance • System Advisories • Scheduled Messages • Clock • CDI • Internal GPS Receiver • Built-in Bluetooth Antenna • 8.33 kHz channel spacing ³ • Database Concierge Access ⁴ 	<ul style="list-style-type: none"> • Moving Map • Terrain • Flight Plan • Graphical Flight Planning • Waypoint Information • Nearest • FastFind Predictive Waypoint Entry • FIS-B Weather Receiver & Display ² • ADS-B In Traffic Receiver & Display ² • ADS-B Out on 1090 MHz Extended Squitter • Terrain Avoidance • System Advisories • Scheduled Messages • Clock • CDI • Internal GPS Receiver • Built-in Bluetooth Antenna • Mode S Transponder • Database Concierge Access ⁴

¹ Requires external ADS-B In product.

² ADS-B In via 1090 MHz (traffic) and 978 MHz UAT (traffic and weather).


³ For use during European operations. Available with GNC 355A only.

⁴ Requires Wi-Fi connection via Flight Stream 510.

System at a Glance

Pilot Interface

Bezel

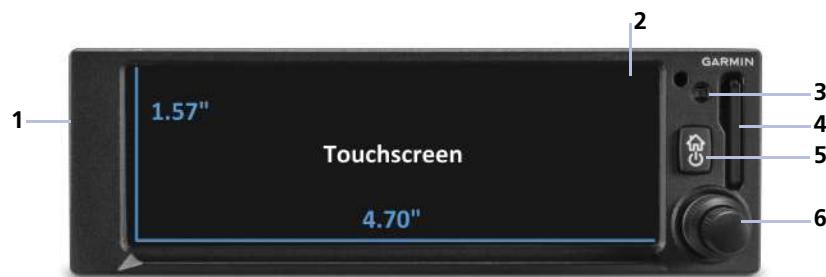

1	Bezel Includes the power key, mechanical knobs, photocell, and SD card slot. Ledges provide hand stability when performing data entry and making selections.
2	Touchscreen Multi-touch color display provides controls for unit operation.
3	Photocell Measures cockpit ambient light level to automatically adjust display brightness for day and night.
4	SD Card Slot Interface for loading database, exporting log files, and updating software. Compatibility with Flight Stream 510 allows wireless database transfer from the Garmin Pilot app via Database Concierge.
5	Power/Home Key Powers the unit on or off and provides direct access to the Home page.
6	Inner & Outer Knobs Multipurpose dual concentric knob allows data entry, list scrolling, map range control, page navigation, and COM volume and frequency tuning. ¹

¹ COM is a function of GNC 355/355A only.

System at a Glance

SD Card Slot



NOTE

Do not remove or insert an SD card while in flight. Always verify the system is powered off before inserting or removing an SD card.

FEATURE REQUIREMENTS

- SD card in the FAT32 format, with memory capacity between 8 GB and 32 GB

The navigator requires an SD card for the following tasks.

- | | |
|------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> • Exporting data logs • Capturing screen images • Upgrading software | <ul style="list-style-type: none"> • Saving system configurations • Enabling Flight Stream connectivity • Updating databases |
|------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|

INSERT AN SD CARD

When inserting an SD card:

1. Verify unit power is off and the slot is empty.
2. Hold card such that label faces left edge of display screen.
3. Ensure back edge of card is flush with display bezel after insertion.

EJECT AN SD CARD

1. Power off the unit.
2. Release the spring latch by pressing lightly on exposed edge of card.

For Mac Users

Do not use macOS to format an SD card or the Flight Stream 510 wireless transceiver if you plan to use either as a media storage device for updating databases.

In the event there is a file corruption problem with the SD card (including the wireless transceiver when used as a database storage device), it may be necessary to reformat the card. This can cause an issue when formatting the SD card using macOS, where the newly formatted card will not be recognized by the avionics system. When using a Macintosh computer to format the SD card, or the wireless transceiver, Garmin recommends using the SD Memory Card Formatter application available as a download from SDcard.org. When running the application, use the Quick Format option.

System at a Glance

Touchscreen

GESTURES

TAP

Touching the screen briefly with a single finger.

Use this gesture for:

- Opening a page or menu
- Activating a command key or data entry field
- Displaying map feature information
- Selecting an option within an application

TAP AND HOLD

Certain momentary controls (e.g., directional arrow keys) provide a secondary tap and hold function.

Tap the key and hold your finger in place until the desired action occurs.

Use this gesture for:

- Scrolling with arrow keys
- Increasing/decreasing values continuously

SWIPE

A smooth motion that involves touching an object, then sliding your finger across the screen and lifting up.

Use this gesture for:

- Accessing multiple panes (right or left swipes)
- Viewing and scrolling lists
- Panning across a map display

FLICK

Swiping the screen in a quick upward or downward motion. Information moves at a fast speed (faster than if holding the arrow key), then slows to a stop.

Use this gesture for:

- Scrolling an item list

PINCH & STRETCH

Touch any map with two fingers at the same time, then bring the fingers close together (pinch) or spread them apart (stretch). Just remember: stretch to zoom in and pinch to zoom out.

Use this gesture for:

- Magnifying map features

System at a Glance

Keys

COMMON COMMANDS



Open the system messages list. A flashing icon indicates unread messages.



Cancel an active function without inputting data.



Open a context menu.



Input a specified value.




Return to the previous page.



Select the corresponding item (e.g., database update). A checkmark confirms selection.

FUNCTION KEYS

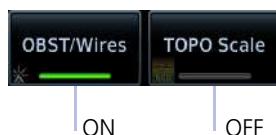

Toggle keys turn a specific function on or off. The current state of the function is indicated below the key label.

APP ICONS

Tapping one of these icons opens the corresponding application. Some apps provide additional icons for accessing functions on subpages (e.g., Utilities, System).



System at a Glance

Menus

Menus group related controls into an expandable pane, allowing access to multiple functions on a single page. Depending on the number of available functions, a menu may comprise more than one pane.



Active Pane




An indicator at the bottom of the menu shows which pane is active.

Multiple panes are accessible by way of a left/right swipe or inner knob turn.

Toggle keys either enable or disable list items. In some cases, **Settings** or **Range** keys provide access to selectable setting options.

POP-UP MENUS

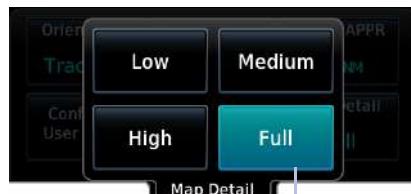

Pop-up menus open to the default or previously selected value.

Underlying Page Hidden

Default or Current Setting

LISTS

Scrollable lists group control keys related to a single function (e.g., FIS-B Weather). When scrolling, all keys in the list are inactive.

Message Call FBO	Remaining 02:58:49
Message Switch fuel tanks	Remaining 05:59:02
Message Close flight plan	Remaining 11:59:16


Scroll Bar

System at a Glance

Tabs

Tabs group information into individual panes. Content includes scrolling lists, data fields, function keys, or a combination of controls.

Tabs are located along the left and right sides of a pane.

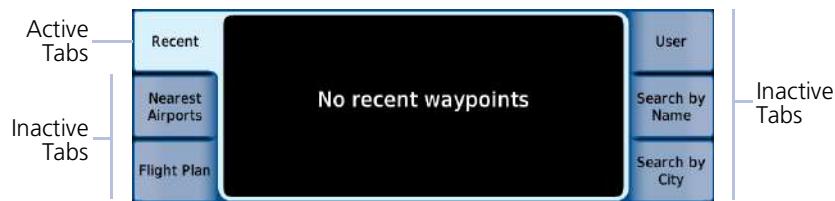

Keypads

The navigator employs multiple keypad types to serve specific settings and functions.

NUMERIC




Numeric keypads open on a single pane.

Backspace and **Enter** keys always appear at the right of the screen.

ALPHANUMERIC

Alphanumeric keypads comprise multiple keysets that are accessible by way of swipe or key selection.

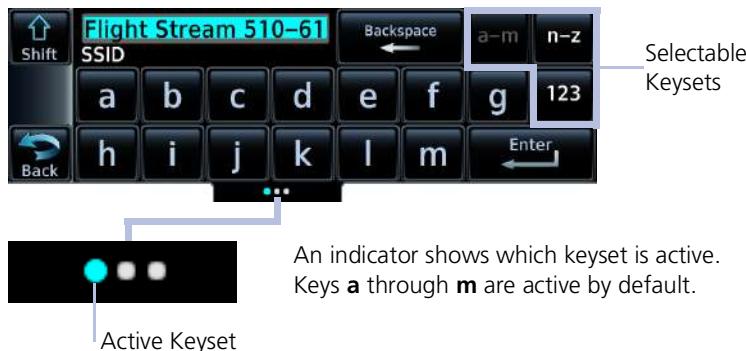

System at a Glance

Control Knobs



Inner and outer control knobs offer an alternative method for selecting and modifying data without the use of touch keys.

Knob Functions

GPS 175 & GNX 375

- | | |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Outer Knob | <ul style="list-style-type: none"> • Selecting a page shortcut • Cursor placement and initial field/page selections • Moving cursor forward or backward within data field |
| Inner Knob (Turn) | <ul style="list-style-type: none"> • Zooming, scrolling lists, and inputting data • Modifying individual characters in data entry field |
| Inner Knob (Push) | <ul style="list-style-type: none"> • Entering current or specified numerical value • Toggling Map user fields on or off • Accessing the Direct To function from the Home page |

GNC 355/355A

- | | |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Outer Knob | <ul style="list-style-type: none"> • Selecting a page shortcut • Cursor placement and initial field/page selections • Moving cursor forward or backward within data field • Tuning major frequency digits • Adjusting COM radio volume (coarse) |
| Inner Knob (Turn) | <ul style="list-style-type: none"> • Zooming, scrolling lists, and inputting data • Modifying individual characters in data entry field • Tuning minor frequency digits • Adjusting COM radio volume (fine) |
| Inner Knob (Push) | <ul style="list-style-type: none"> • Entering current or specified numerical value • Enabling standby frequency tuning mode from most pages • Enabling COM radio volume control (push twice) |

System at a Glance

Page Navigation Labels

A locator bar works in conjunction with the outer knob, providing quick access to the indicated page. Turning the outer knob clockwise or counter-clockwise moves the locator through the available shortcut options.



Slot 1 is a dedicated Map shortcut.
Slots 2 and 3 are customizable.
Selectable page options are dependent upon configuration.



A cyan background and border indicate active page and available shortcuts.

Knob Function Indicators

Icons to the right of the bar indicate available knob functions. Indications include, but are not limited to, the following.

GPS 175 & GNX 375

Map Active



Available functions:

- Map zoom
- Toggle user fields on or off

Flight Plan Active



Available functions:

- Flight plan scrolling

Home Page Active



Available functions:

- Page shortcut navigation
- Access Direct To window

Direct To Window Active



Available functions:

- Direct-to waypoint editing
- Activate direct-to course

System at a Glance

GNC 355/GNC355A

Knob focus defaults to page navigation when not in use.

Map Active

MAP FPL TERR  Psh COM

Available functions:

- Map zoom
- Set knob focus to standby frequency

STBY Frequency Tuning Active (via Knob Push)

Tune Freq  Push VOL

Available functions:

- Frequency tuning
- Activate volume control

Flight Plan Active

MAP FPL TERR  Psh COM

Available functions:

- Flight plan scrolling
- Set knob focus to standby frequency

COM Volume Page Active (via VOL Key)

Adjust Volume 

Available functions:

- Volume adjustment

Knob Shortcuts

For convenience, the unit allows you to access certain controls quickly via knob push.

GPS 175/GNX 375

From the Home page:

Pushing once opens the Direct To window. After a waypoint/fix is selected, pushing the knob again activates the direct-to fix.



System at a Glance

GNC 355/355A

From most pages:

Pushing once enables standby frequency tuning mode and opens the COM volume controls. Turn the inner and outer knobs to tune the standby frequency.



Pushing twice sets the knob focus to the volume slider. Turn the inner and outer knobs to adjust the volume percentage.



Pushing again closes the menu and returns to the previous view.



A cyan border indicates changes in knob focus. This is useful when transitioning through the different control modes: page navigation > STBY frequency tuning > COM radio volume adjustment > page navigation.

System at a Glance

Screenshots

FEATURE REQUIREMENTS

- SD card in the FAT32 format, with memory capacity between 8 GB and 32 GB

FEATURE LIMITATIONS

- Not available with Flight Stream 510

Save images to an SD card at any time using Screenshot. Images automatically save to the “print” folder in the SD card root directory.

1. Insert an SD card into the card slot.
2. Push and hold the control knob.
3. With knob depressed, push and release the **Home/Power** key.



A camera icon momentarily shows in the annunciator bar indicating the image is captured. To view saved images, remove the SD card and open the “print” folder on a computer.

System at a Glance

Color Conventions

**Red**

- Warning conditions

**Yellow**

- Cautionary conditions

**Green**

- Safe operating conditions
- Engaged modes
- Active COM frequency

**White**

- Scales and markings
- Current data and values
- Heading legs

**Magenta**

- GPS data
- Active flight plan legs
- Parallel track

**Cyan**

- Pilot-selectable references
- Standby COM frequency

**Gray**

- Missing or expired data
- Product unavailable

**Blue**

- Water

System at a Glance

Compatible Equipment

Line Replaceable Units

SYSTEM REQUIRED LRUs
GPS antenna
SYSTEM OPTIONAL LRUs
ADAHRS or ADC with AHRS
Audio panel
GAD 29 adapter
GAE 12 altitude encoder (GNX 375 only)
G3X Touch
G500/G600
G500/G600 TXi
GMX 200
MX 20
OPTIONAL INTERFACES
GDL 88/GTX 345/GNX 375 ADS-B transceiver (GPS 175 and GNC 355 only)

The system consists of multiple LRUs, which are installed behind the instrument panel or in a separate avionics bay. Their modular design aids system maintenance and unit replacement.

Optional LRUs may include compatible equipment from either Garmin or a third party manufacturer.

System at a Glance

ADC & AHRS

AHRS units have a magnetometer interface for determining magnetic heading.
 ADC units have a Pitot-static interface for measuring pressure altitude.

LRU	DISPLAY	FUNCTION
GDC 74 ADC	GNX	<ul style="list-style-type: none"> • Air temperature • Pressure altitude
G3X G500/G600	GPS GNC GNX	ADC <ul style="list-style-type: none"> • Air temperature • Pressure altitude
GSU 25/73 Integrated ADAHRS	GNX	AHRS <ul style="list-style-type: none"> • Heading
GRS 77 AHRS	GNX	<ul style="list-style-type: none"> • Heading
G5/GAD 29D	GPS GNC GNX	<ul style="list-style-type: none"> • Heading • Pressure altitude • Air temperature

Altitude Encoder

LRU	DISPLAY	FUNCTION
GAE 12 Provides pressure altitude information to the transponder.	GNX	Aircraft static pressure

System at a Glance

ADS-B In Data

LRU	DISPLAY	FUNCTION
GDL 88 GTX 345 GNX 375 Provides datalink traffic and weather.	GPS GNC	<p>Traffic Services</p> <ul style="list-style-type: none"> • ADS-B • TIS-B <p>Weather Services</p> <ul style="list-style-type: none"> • FIS-B <p>Weather Products</p> <p>Map & FIS-B Weather:</p> <ul style="list-style-type: none"> • Precip (NEXRAD) • METARs • TFRs • Lightning <p>FIS-B Weather only:</p> <ul style="list-style-type: none"> • Center Weather Advisory • Cloud Tops • G-AIRMET • Icing Potential • PIREP • SIGMET • TAF • Turbulence • Winds/Temps Aloft

INTENTIONALLY LEFT BLANK

Get Started

2 Get Started

POWER UP	2-2
DATABASES.....	2-4
CONNECTIVITY.....	2-17
COM.....	2-21
XPDR	2-39
ADS-B ALTITUDE REPORTING.....	2-47
PILOT SETTINGS.....	2-50
STATUS INDICATIONS	2-62
LOGS.....	2-73

Get Started

Power Up

The unit receives power directly from the aircraft's electrical system. Upon power-up, the bezel key backlight momentarily illuminates. System failure annunciations typically disappear within the first 30 seconds after power-up.

The start-up screen presents the unit software versions, the name and status of all installed databases, and the Database Updates page access key. These features are available only at power up.


Tapping **Continue** advances to the Instrument Panel Self-Test page.

If an instrument remains flagged after one minute, check the status of the associated LRU, then contact a Garmin dealer for support.

Instrument Panel Self-Test

To ensure safe operation, continuous built-in test features exercise the unit's processor, memory, external inputs, and outputs. The Instrument Panel Self-Test page displays the expected results of all external equipment checks performed by the unit.

Review this list to ensure that all CDI outputs and other displayed data are correct for the connected equipment.

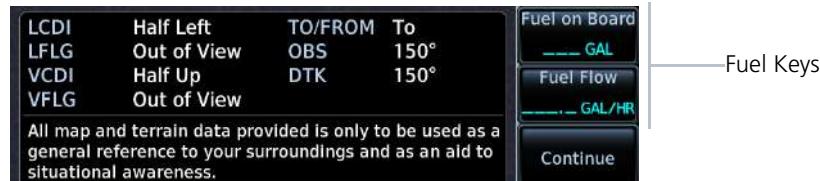

Instrument Panel Self-Test Page

Get Started

Preset Fuel Quantities



CAUTION

Ensure that estimated fuel quantity values are accurate before flight.

FEATURE LIMITATIONS

For the operating limitations of a specific aircraft, consult the POH.

The unit stores preset fuel amounts for estimated full and tab amounts. These settings may not be editable if the unit is interfaced with a digital fuel computer. Fuel setup keys reside on the start-up page or the Instrument Panel Self-Test page depending on unit configuration.



Fuel on Board

Specify the current fuel quantity.

Tapping this key opens a keypad. Preset keys for "full" and "tabs" aid in fuel data entry.

Initial value automatically reduces based on current fuel flow.



Fuel Flow

Set fuel flow amount.

Tapping this key opens a keypad.

Power Off



WARNING

Never attempt to power off the unit while airborne unless operational procedures dictate.

Pushing and holding the **Power** key for 0.5 seconds initiates the power off sequence. Shutdown occurs once the timer reaches zero.



Power off annunciation temporarily replaces the knob function indicator.

Hold ⌂ to power off

Get Started

Databases

**NOTE**

The navigator supports SD cards in the FAT32 format only, with capacities ranging between 8 GB and 32 GB.

Databases are stored in the unit's internal memory. To view update cycles, or to purchase individual databases or database packages, go to flyGarmin.com.

There are two methods for loading and updating databases. Do not attempt either of these while in flight (on ground only).

- **Load databases via SD card.** Once loading completes, you may power off the unit and remove the card.
- **Transfer databases from a Flight Stream 510 wireless transceiver.** This method requires the Garmin Pilot app on a portable electronic device.

SUPPORTED DATABASES

Basemap	Bodies of water, geopolitical boundary, and road information
Navigation	Airport, NAVAID, waypoint, and airspace information (Garmin or Jeppesen)
Obstacles	Obstacle and wire data
SafeTaxi	Airport surface diagrams
Terrain	Terrain elevation data

Aviation Database Errors


Visit flyGarmin.com to report any discrepancies in database information. These may include incorrect procedures, inaccurate depictions of terrain, obstacles and fixes, or errors with any other screen element used for navigation or communication purposes.

For information regarding third party navigation databases, go to jeppesen.com.

Get Started

Database Effective Cycles

Most databases expire at regular intervals. Exceptions include Basemap and Terrain, which neither expire nor update on a regular schedule.

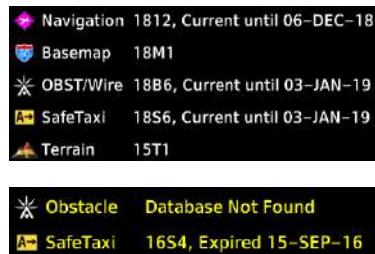

The start-up page lists all currently installed databases. Review this list for current database types, cycle numbers, and expiration dates.

Yellow text denotes when a database is:

- Not available
- Installed before its effective date
- Missing date information
- Past its expiration date

DATABASE EFFECTIVE STATUS

Databases with no effective date

- Effective upon release
- Transfer occurs prior to database verification at system start-up
- No automatic transfer if Flight Stream 510 is present
- Includes Basemap and Terrain
- No pilot confirmation or restart required

Databases with specified effective dates

- Effective during a specific period
- Unit determines database status using the current date and time from GPS
- Automatic activation occurs on the effective date

Overwriting SD card database files

When database files are loaded to the SD card, any previously loaded database files of the same type residing on the SD card will be overwritten. This includes loading a database of a different coverage area or data cycle than that currently residing on the SD card.

Get Started

DATABASE NOT FOUND

Notifications for databases not present or available also display in the form of system messages.



Tapping **Database Info** opens the Active Database Information page.

Basemap Database		
Cycle:	16M1	Created: 09-DEC-15
Obstacle Database		
Region:	-----	-----
Cycle:	-----	Part: -----
Effective:	-----	Expires: -----
SafeTaxi Database		
Cycle:	16S4	Effective: 21-MAR-16
Active DB Info		

Review this list to determine the status of the indicated database.

Database Not Present

Get Started

Active and Standby Databases

The navigator uses two types of databases: active and standby. Active databases are in use by the system. Standby databases have not reached the effective date.

Basemap Database		
Cycle:	18M1	Version: 5.15
Obstacle Database		
Region:	US/Canada/Europe Fixed-Wing	
Cycle:	18B5	Type: OBST/HOT
Effective:	13-SEP-18	Expires: 08-NOV-18
SafeTaxi Database		
Region:	US	Cycle: 18S5
Active DB Info		

During normal operation, information about all active and standby databases are viewable on the associated info page.

From the Home page, tap **System > System Status > Select Active or Standby**.

DB INFO PAGE	DISPLAYS
Active	<ul style="list-style-type: none"> Information about databases currently in use • View Copyrights key
Standby	<ul style="list-style-type: none"> Information about databases that are not yet effective

No standby databases found.

The Standby DB Info page notifies when no standby databases are available.

VIEW COPYRIGHTS

View Copyrights

Tapping this key displays copyright information for all installed databases.

Get Started

Manual Updates

FEATURE LIMITATIONS

The Database Updates page is available only when:

- The aircraft is on ground
- The start-up page is active (i.e., during power up)

Database Updates Page

Databases

This page presents a list of all available databases.
To open, tap the **Databases** key on the start-up page.

**DATABASE SOURCE INDICATION**

Connext Icon



A Connext icon indicates when a database is from Garmin Pilot via wireless transfer.

No indication means the database is either from an SD card or the unit's internal standby queue.

Get Started

SELECT ALL DATABASES




Select individual databases for transfer, or choose **Select All** if all listed databases require updating.



Basemap and Terrain update automatically and require no action.

After all selections are made, initiate the update process by tapping **Start**.

By default, this page displays only the databases recommended for update.



A message notifies when no such databases are available.




The unit automatically restarts once all updates are complete.

SHOW ALL DATABASES



Tapping **Show All** displays a complete list of all databases.

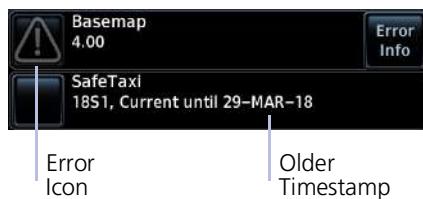

This list may include databases that are:


- Not yet effective
- Older than the currently active database(s)
- Unable to update due to an error

Get Started

ERROR INFORMATION



To determine the cause of a database error, tap **Error Info**.

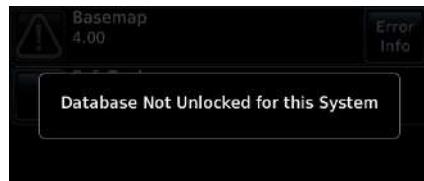

An information window provides details regarding the state of the database.

SELECT REGION



This key appears when two databases are of the same type and cycle, but pertain to different regions.

To specify a database region, tap **Select Region**, then select the appropriate menu option.

[Get Started](#)

Automatic Updates

Automatic updates occur when:

- A newer database is detected on the SD card or in the internal standby queue
- A newer database is within its effective dates
- The aircraft is on ground

When a newer database is available, follow the on-screen prompts to complete the update process.

A status page displays a progress bar and the name of each database as it uploads to the unit. Terrain databases may require up to 5 minutes for transfer. Total transfer time depends on the SD card type.

The unit automatically restarts once the update is complete. The update is indicated in the list of currently installed databases.

INSTALL OR UPDATE A DATABASE USING AN SD CARD

1. Download a database onto an SD card.
2. Insert the SD card with the most recent database(s) into the card slot.
3. Power on the unit.



Selecting **Update** opens the DB Updates page, where a list of the newest databases is available for review.

All newer databases (effective and expired) transfer from the SD card to the internal standby queue.

BASEMAP AND TERRAIN UPDATES


These databases automatically transfer from an SD card without any prompting or progress indications. They do not require pilot confirmation or a unit restart.

Get Started

Database Concierge

FEATURE REQUIREMENTS

- Flight Stream 510 wireless transceiver
- Garmin Pilot app on a mobile device
- The aircraft is on ground

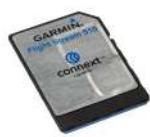

Database Concierge allows wireless transfer of databases from a mobile device while the aircraft is on ground.

A pilot selects and downloads databases inside the Garmin Pilot app. Transfers occur once Flight Stream 510 establishes a wireless connection inside the aircraft.


Database Concierge Transfer Function

- Provides automatic updates for databases with effective dates
- Preloads databases that are not yet effective by placing them in the internal standby queue
- Displays database type, cycle, effective date, and transfer progress
- Allows manual operation via **Start** key
- Requires pilot confirmation

TRANSFER A DATABASE USING DATABASE CONCIERGE


1. Purchase database(s) from flyGarmin.com.
2. Open Garmin Pilot and follow the download instructions.
3. Install Flight Stream 510 and then power on unit.
4. Connect to Wi-Fi.
5. Follow the on screen prompts.

Get Started

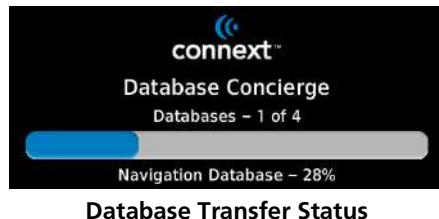

Database Concierge transfers databases from the app to Flight Stream 510.

A progress bar shows when this process is complete.

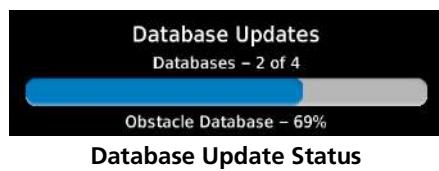

The unit either updates or preloads databases based on their effective date. A second progress bar indicates upload status. The unit automatically restarts upon database activation.

Skip

Tapping **Skip** cancels any unfinished wireless transfers and initiates the update process.

The unit activates any databases that completed transfer before the interruption. Previously selected databases on an SD card or in the internal standby update as well. The message "Transfers interrupted" displays if no databases are available.

Get Started

Wi-Fi Setup



Tapping **WiFi Info** opens an information page. This page is accessible from the Database Update and start-up pages.



Information includes:

- Database Concierge connection status
- Connected device name
- Database update availability and instructions
- Wi-Fi SSID and password

WI-FI INFO KEY STATUS ANNUNCiations


Wi-Fi connection status annunciates on the key label when the information page is not active.




Flight Stream 510 requires power up.



Wi-Fi is active, but the unit is waiting to connect with a device.



Connection complete. Flight Stream 510 requires Garmin Pilot to be opened in order for database transfer to commence.



Garmin Pilot opened and streaming to unit.


CONNECT TO WI-FI

Follow the onscreen prompts when connecting to the Wi-Fi network.

1. Install Flight Stream 510 and then power on unit. Observe Wi-Fi status changes from "Offline" to "Ready."
2. Tap **WiFi Info**.
3. Enter the required SSID and password using the provided keypads.
4. Enable Wi-Fi setting on the portable device. Wi-Fi status changes to "Open App" once pairing is complete.

Get Started

Database SYNC



Database SYNC minimizes database maintenance by synchronizing active and standby databases across all configured LRUs. Once a standby database becomes effective, each LRU automatically generates an update prompt.

FEATURE LIMITATIONS

- *Not applicable to Terrain database*
- *Database SYNC does not support Chart Streaming*

To toggle the feature on and off:

Home > **System** > **System Status** > **Menu** > **DB SYNC**

Database SYNC Compatibility

The Database SYNC function enables automatic database synchronization across all capable Garmin avionics:

- GPS 175
- GI 275
- GNC 355
- GNX 375
- GDU TXi running software version 3.10 and later (GDU 700(), GDU 1060) ¹
- GTN v6.72
- GTN Xi v20.20 and later

¹ Receive only. Airport directory and chart databases are not transmitted from GPS 175, GNX 375, or GNC 355.

For information regarding database packages, and individual database purchases, visit flyGarmin.com.

DUAL GPS 175, GNC 355, GNX 375 OR GTN INSTALLATIONS

To prevent crossfill errors after installing new databases, be sure to install matching databases on both navigation units and allow database synchronization to complete before departure.

Get Started

ACTIVE AND STANDBY DATABASES



The Database SYNC transfer function includes active and standby databases.

The function prompts a unit restart if a new database is effective and the aircraft is on ground.

To view active or standby databases:

Home > **System** > **System Status** > select **Active** or **Standby**

Get Started

Connectivity



Connext works via the Bluetooth data link to provide up-to-date, wireless information throughout the cockpit.

FEATURE LIMITATIONS

- *Unit allows pairing of up to 13 Bluetooth enabled devices, with two simultaneous device connections*
- *Auto reconnect function is not available for Android devices*

Connext Setup



The Connext interface allows communication with Garmin Pilot from a portable electronic device.

Connext Features

The following features are available on your portable electronic device.

- GPS position and velocity information
- Uncorrected barometric pressure altitude used by transponder and ADS-B ¹
- ADS-B In traffic data ²
- FIS-B weather and flight information ²
- AHRS data from built-in sensor ^{3, 4}

¹ GNX 375 only. ² GNX 375, or GPS 175 and GNC 355 with external ADS-B In source.

³ Attitude data does not output to other installed avionics.

⁴ The internal AHRS sensor is only for use with a portable electronic device. All internal AHRS functions are automatic and do not require pilot action.

Get Started

Bluetooth Setup

Bluetooth Wireless Features

- FIS-B weather ¹
- ADS-B traffic ¹
- GPS/WAAS position, velocity, and time
- Pressure altitude
- AHRS
- Magnetic heading
- Flight plan transfer

¹ GNX 375, or GPS 175/GNC 355 with external ADS-B In source.

The unit supports wireless pairing with up to 13 portable electronic devices via the Garmin Pilot app.

Bluetooth device management options reside on the Devices page. Opening this page automatically initiates device pairing.

Device information and pairing mode status display on the Connex page.

Enabling Bluetooth Functionality



Tapping **Bluetooth Enabled** toggles Bluetooth wireless functionality on or off.

All associated setting controls and features are unavailable when this function is inactive.

DEVICE NAME



This key allows you to enter the name of the Bluetooth enabled device. Use the keypad or control knobs to enter the device name.

Get Started**Managing Paired Devices**

To view a list of all paired devices and their connection status, tap **Paired Devices**.

To enable automatic connection between the unit and a paired device at power up, tap **Auto Reconnect**.

AUTO RECONNECT

Enables automatic connection between the unit and the paired device when the two are within range.

REMOVE

Removing a device from the list means it is no longer paired with the unit. This action requires pilot confirmation.

Be sure to remove pairing on both devices before attempting to pair them again.

CONNECTION STATUS

The device is configured and communicating properly.



The device is not available and is not configured or it is not communicating properly.


Get Started

Importing a Flight Plan



This feature allows the automatic import of flight plans via Bluetooth wireless technology.

It may be necessary to turn this function off if a portable device application makes repeated erroneous attempts to send flight plans to the unit.

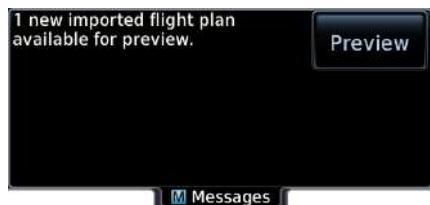

Once transfer is complete, an advisory message informs that a new flight plan is available for preview.


To view the flight plan, acknowledge the advisory and tap **Preview**.

[Get Started](#)

COM

AVAILABLE WITH:
GNC 355/355A

COM Standby Control Panel

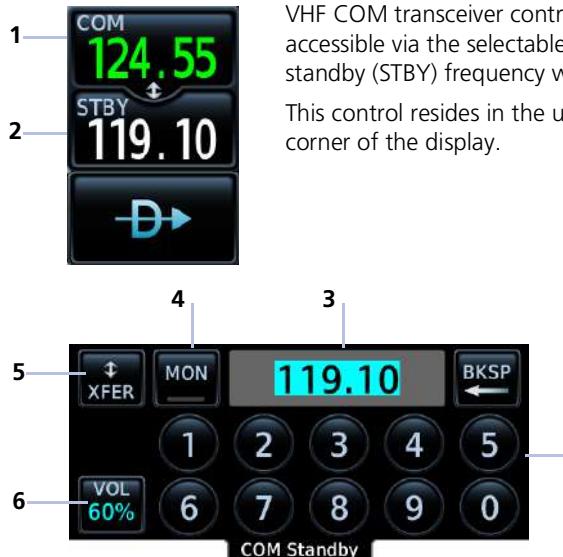

VHF COM transceiver controls are accessible via the selectable standby (STBY) frequency window. This control resides in the upper right corner of the display.


1	Active Frequency Window	5	Transfer (Flip-Flop) Key
2	Standby Frequency Window	6	COM Volume Access Key
3	Frequency Entry Field	7	Data Entry Keys
4 Monitor Key			

From the COM Standby control panel you can:

- Specify a standby frequency
- Swap active and standby frequency values
- Enable monitor mode
- Access radio volume controls

Get Started

COM Volume Controls

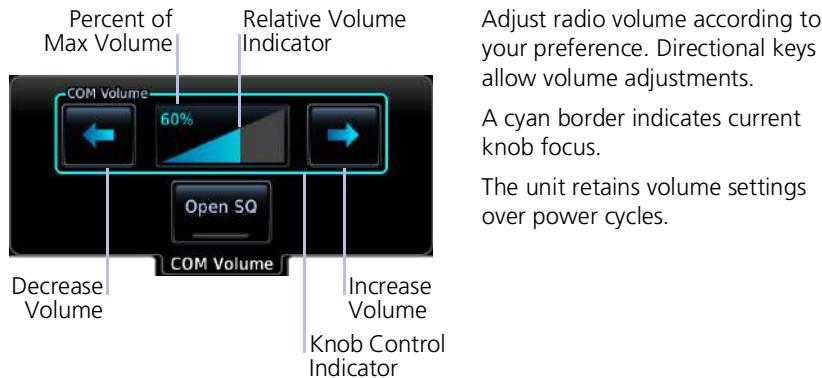

- For convenience, COM volume functions are accessible from most pages via inner knob push.
- Pushing once opens the COM Volume controls menu.
 - Pushing twice sets the knob focus to the volume slider. Turn the inner and outer knobs to adjust the volume percentage.
 - Pushing again closes the menu and returns to the previous view.

Get Started**OPEN SQUELCH**


Tap once to override the automatic squelch function. Tap again to return the squelch to automatic operation.



"SQ" annunciates in the COM active frequency window to show when the squelch is overridden (i.e., when the squelch is open).

The Open Squelch function is accessible from the COM Volume page and slide-out menu.

The automatic squelch function rejects many localized noise sources. Overriding this function may be helpful when listening to a distant station or setting the volume level.


Get Started**COM Radio Setup**

COM radio customization options reside in the System Setup app.

Setup options for GNC 355A shown as typical.



For COM radio selections, swipe to the end of the menu.

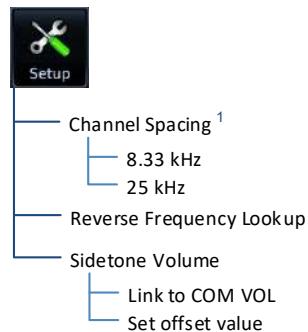

From here you can:

- Set transceiver channel spacing¹
- Enable reverse frequency look-up functionality
- Adjust sidetone volume offset


¹ GNC 355A only.

Get Started

Channel Spacing Option

AVAILABLE WITH: GNC 355A

The GNC 355A supports channel tuning for both 8.33 kHz and 25 kHz channels within radio-frequency range. The GNC 355 supports frequency-channel pairings for 25 kHz channels only.



Tapping this key toggles the transceiver channel spacing between 8.33 kHz and 25.0 kHz.

8.33 kHz



8.33 kHz step configuration is available for European operations.

On GNC 355A, channel spacing is set to 8.33 kHz by default.

25.0 kHz



COM radio operates in the aviation voice band, between 118.000 and 136.975 MHz, in 25.0 kHz steps.

If flying in a region where 8.33 kHz channel spacing is available, set the COM radio to 8.33 kHz to prevent the loss of any stored or recently used frequencies.

Get Started


Reverse Frequency Look-up

FEATURE REQUIREMENTS

- Valid position data
- Active navigation database

FEATURE LIMITATIONS

- Available only for the nearest stations in the database

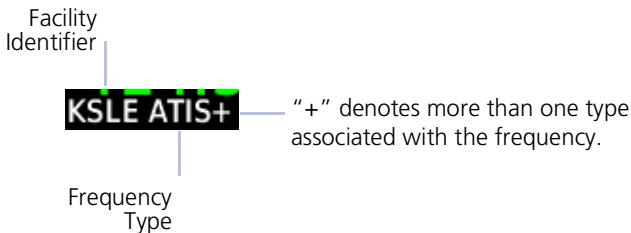

When frequency look-up is active, COM displays:

- Nearest facility identifier (if available)
- Multiple facility indication (if more than one)
- Frequency type
- Approach or Departure indications (if applicable)


When flying between airports that use the same frequency, it may take up to 2 minutes for look-up information to change after crossing the half way point.

Get Started

Sidetone Volume Offset


FEATURE LIMITATIONS

- Availability dependent upon configuration
- Offset range: +/-10% of total COM audio volume range

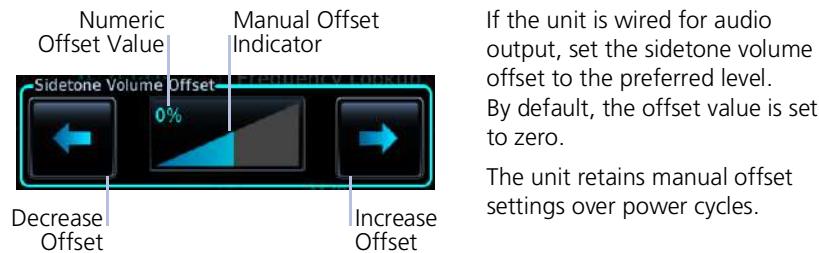

COM sidetone is audio spoken into the microphone that is played back in real time over the headset. The offset setting determines sidetone volume for the COM during radio transmission. Adjustments determine the amount that the sidetone volume level is offset from the COM receiver volume or the configured sidetone volume.

LINK TO COM VOLUME



Enabling this function allows you to adjust the amount that the sidetone volume level is offset from the COM receiver volume. These adjustments are dynamic in that they vary with the COM receiver volume level.

To adjust the offset from the COM receiver volume:

1. Enable **Link to COM VOL**.
2. Tap **Offset** and adjust as necessary.

To adjust the offset from the configured sidetone volume, disable **Link to COM VOL** and then adjust the offset as necessary. These adjustments are fixed as they are relative to the configured sidetone volume.

Get Started


Tuning & Monitoring



Communication frequencies are split between two selectable windows:
The upper window presents the active COM radio frequency. This is the frequency currently in use for transmit and receive operations.
The lower window presents the standby radio frequency. This frequency may be set and activated at any time.

COM STATUS INDICATIONS

Status annunciations denote active functions, modes, and frequency types.

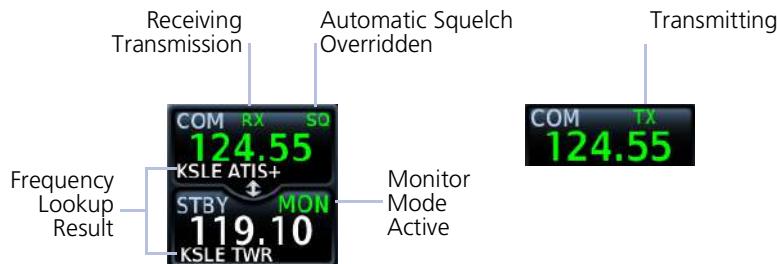

Transmitting



Receiving transmission



Monitor mode active



Automatic squelch is overridden (i.e., squelch is open)



Reverse frequency information (sample text)

[Get Started](#)

Direct Tuning



You may enter a standby frequency using the data entry keys on the COM Standby control panel or by pressing and turning the control knob.

Tapping **STBY** opens the control panel. From here you may specify a frequency or select one using the provided search options.

119.10

The current standby frequency value displays in the direct tuning field.

DATA ENTRY KEYS



Enter a new standby frequency using the provided data entry keys or by turning and pushing the control knob.

To cancel the entry and exit the control panel, tap **Back**.



Entering the new frequency value places it in standby.

FREQUENCY AUTOFILL

118.00

Matching Frequency

Numeric characters autofill the first valid frequency value based on each selected digit.

Autofill characters are muted and display from the cursor position to the right of the field.



Invalid Selection

Selecting a digit that is not valid for the cursor location results in no entry.

Get Started



Attempting to enter a frequency value after selecting an invalid digit generates a pop-up message.

Confirm the request by selecting **OK**.

Simplified Frequency Entry

The direct tuning field allows you the option of entering frequencies without typing the leading and/or trailing digits. For example:
To enter frequency 121.50, you need only tap **2**, **1**, and **5**.
The field autofills the leading "1" and trailing "0."

KNOB TUNING

The control knob allows you to enter a standby frequency without opening the control panel.



Pushing the control knob once activates frequency entry mode. The STBY window turns cyan to show it is active.



If no action occurs after 3 seconds, a cyan border appears around the window. This indicates that the function will be deselected in 10 seconds.



After 10 seconds, the window returns to an inactive state.

Get Started**Transfer Frequency to Active (Flip-Flop)****COM ACTIVE FREQUENCY WINDOW**

Tapping this window swaps the active frequency value with the standby frequency displayed in the lower window. Tap once to swap the displayed frequency values. Tap again to swap them back.



A transfer icon indicates that flip-flop functionality is available.

XFER KEY

Tapping this key on the COM Standby control panel performs the same function as tapping the COM active frequency window.

CONTROL KNOB

Pushing and holding the control knob for 0.5 seconds automatically flip-flops the active and standby frequency values.

- “Hold for flip-flop” control label appears in the annunciator bar
- Standby and active COM frequency values swap

Hold for flip-flop ►

Get Started

Frequency Autofill & Transfer

If you initiate a transfer before completing frequency entry, the direct tuning field autofills the remaining characters, enters the frequency into the standby field, and then swaps it with the active frequency.

Monitor Mode



Enabling monitor mode allows you to listen to the standby frequency while the unit continues monitoring the active COM channel.

When the COM active frequency receives a signal, the unit automatically switches back to the active frequency. Once activity on the COM active channel ceases, the unit returns to listening to the standby frequency.

Tower Transmission
(Active Frequency)

ATIS Broadcast
(Standby Frequency)




Monitor mode is useful when you want to listen to a recorded broadcast (e.g., ATIS) on the standby channel, but still receive control tower transmissions on the active channel.

[Get Started](#)

Frequency Selection

The unit provides multiple options for finding and selecting a standby frequency from the available database frequencies.

Search Tabs



The **Find** key provides access to multiple search tabs. Each tab displays a list of selectable identifiers based on specific criteria.



Nearest Airports

- Lists up to 25 airports within a 200 nm radius.

Nearest FSS & ARTCC

- List the distance, bearing, and frequency associated with the specified facility name.

Recent

- Lists up to 20 of the most recently tuned frequencies.

Flight Plan


- Lists all frequencies contained in the active flight plan.

User

- Lists up to 15 user-defined frequencies.

Get Started

TAB ENTRIES

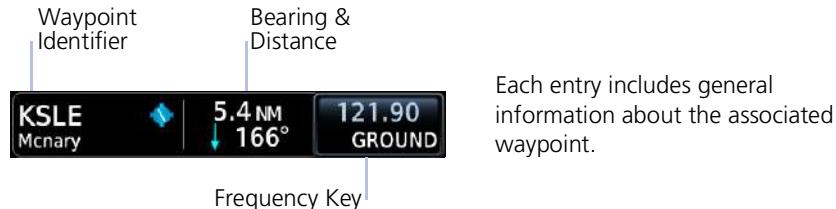

MULTIPLE FREQUENCIES



This key appears when more than one frequency is available at the indicated identifier.

Applicable to functions displaying information only (Nearest Airports, FSS, and ARTCC).



Tap **Multiple FREQ** and select a frequency from associated pop-up.

Get Started

Remote Frequency Selection

FEATURE LIMITATIONS

- Availability dependent upon configuration

On units configured for remote frequency recall, user frequencies are selectable via a remote switch.

- Pressing the switch once loads the next user frequency into the STBY window
- Pressing the switch repeatedly scrolls through the list of presets
- Some installations may have two dedicated recall switches: one to scroll up, one to scroll down
- Selections do not activate until transferred to active

Emergency Frequency

This function provides a quick method for remotely tuning the emergency frequency (121.50 MHz). This feature is available any time the unit is on, regardless of GPS or display status.

Remote COM Lock

If configured, pressing and holding the remote COM transfer key for two seconds locks the COM at 121.50 MHz, preventing further changes in frequency. A message informs of the change in status. To unlock, press and hold the remote key again.

If the radio loses communication with the system, the unit automatically tunes to 121.50 MHz for transmit and receive operations, regardless of the displayed frequency.


Get Started

Create User Frequencies

FEATURE LIMITATIONS

- Names may be up to seven characters in length
- Maximum number of 15 user frequencies

Edit Frequency

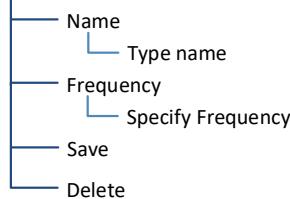

Create or edit user frequencies from the Edit Frequency pop-up menu.

Name	<ul style="list-style-type: none">• Assign the frequency a unique identifier.
Frequency	<ul style="list-style-type: none">• Specify a frequency value.
Save	<ul style="list-style-type: none">• Add the frequency to the user frequency list.
Delete	<ul style="list-style-type: none">• Remove the selected user frequency from the list.• Appears only for existing entries.


Get Started**ADD A USER FREQUENCY**

From the COM Standby page:

1. Tap **Find** > Select the **User** tab.
2. Tap **Add User Frequency**.
3. Specify the frequency name and value.
4. Tap **Save**.




A pop-up message informs when the user frequency list is full.

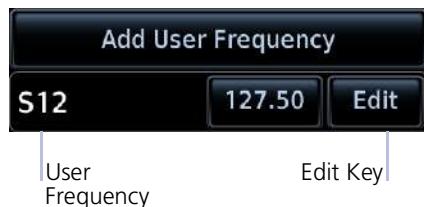EDIT USER FREQUENCY

Tapping the **Edit** key for an existing entry opens the same pop-up. From here you may modify the user frequency name and value.

Tapping **Save** stores all changes.

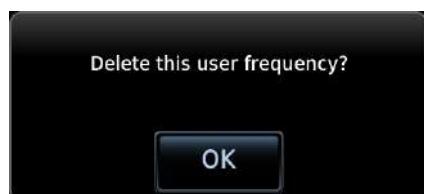

Tapping **Delete** removes the selected user frequency from the list. A pop-up message requests confirmation.

Get Started

COM Alert



If the radio fails:

- Red "X" displays over the COM key
- Advisory message alerts
- COM control page is not available

COM radio fail annunciations are designed to be immediately recognizable. If a failure occurs while the control page is active, the display automatically returns to the previous page.

UNIT	CONDITION
GNC 355	Invalid COM radio data.
GNC 355A	

For information regarding pilot response to a COM radio failure, consult the AFMS.

Stuck Microphone

The COM transmitter automatically times out after 30 seconds of continuous broadcasting. This may occur when:

- Push-to-talk key on the microphone is stuck or accidentally left in the keyed position
- Push-to-talk function continues to transmit after releasing the key

The advisory message "COM push-to-talk is stuck" alerts for as long as the condition exists.

[Get Started](#)

XPDR

AVAILABLE WITH: GNX 375

XPDR Control Panel



Transponder controls are accessible via the **XPDR** key.
This key is unavailable when the control panel is active.




1	Squawk Code Entry Field	4	Squawk Code Entry Keys
2	VFR Key	5	Data Field
3	XPDR Mode Key		

The XPDR key becomes available when you:

- Enter a squawk code
- Open the XPDR menu
- View a message
- Select the **Mode** key
- Leave the control panel

Get Started

XPDR Setup

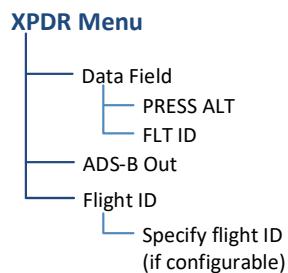

Tap **Menu** to access the transponder setup options. From here you can:

- Change the display of data
- Enable 1090 ES ADS-B Out functionality (if configured)
- Assign a unique flight ID

Displaying Data



Toggles the data field between pressure altitude and flight ID.

Pressure Altitude

Pressure ALT: 2297 FT

Displays the current pressure altitude.

Flight ID

Flight ID: FLY4GA

Displays the active Flight ID. Unless configured, the Flight ID is not editable.

[Get Started](#)

Enabling Extended Squitter Transmissions



Tapping **ADS-B Out** allows the transmission of ADS-B Out messages and position information.

The ON state indicates that ADS-B Out messages and position information are being transmitted.

Assigning a Flight ID

FEATURE LIMITATIONS

- Availability dependent on configuration



If the flight ID is editable, tap **Flight ID** and assign a unique identifier.

Flight IDs are alphanumeric (upper-case only) and have an eight character limit.

The active flight ID displays by default.

Get Started**XPDR Modes**

Tapping **Mode** opens a menu of the available transponder modes. Options include Standby, On, and Altitude Reporting.

MODE	FUNCTION
Standby	<ul style="list-style-type: none"> Transponder does not reply to interrogations or transmit ADS-B Out Bluetooth wireless functions remain operational Unit continues to receive ADS-B In information, but is not a TIS-B participant
On	<ul style="list-style-type: none"> Transponder replies to interrogations. Replies do not include pressure altitude Reply (R) symbol on the display indicates the transponder is responding Transmitted ADS-B Out does not include pressure altitude
Altitude Reporting	<ul style="list-style-type: none"> Transponder replies to identification and altitude interrogations Reply (R) symbol indicates the transponder is responding Transmitted ADS-B Out includes pressure altitude

During Altitude Reporting mode, all aircraft air/ground state transmissions are handled via the transponder and require no pilot action. Always use this mode while in the air and on the ground, unless otherwise requested by ATC.

Get Started

Squawk Code Keys

SPECIAL SQUAWK CODES	
1200	Default VFR code (USA)
7500	Hijacking
7600	Loss of communications
7700	Emergency

Eight squawk code entry keys (0 – 7) provide access to all ATCRBS codes. Tapping one of these keys begins the code selection sequence.

Use the **Backspace** key or outer control knob to move the cursor.



Digits that are not yet entered appear as underscores.



Active squawk codes remain in use until a new code is entered.

Get Started


VFR



Tapping this key once sets the squawk code to the preprogrammed VFR code.

This code is factory set to 1200, but may be changed during configuration.

XPDR Key

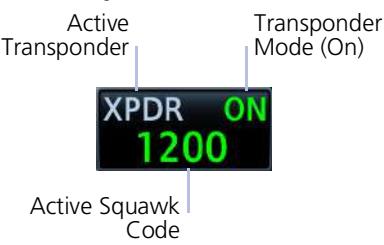

Tapping the **XPDR** key activates the IDENT function for 18 seconds. This signal distinguishes the transponder from others on the air traffic controller's screen.

Tapping this key when another page is active immediately opens the control panel.

Get Started**TRANSPOUNDER STATUS INDICATIONS****IDENT**

- Reply active
- IDENT function active
- No change to transponder code

Standby Mode

- Standby mode
- Current squawk code (inactive)

IDENT with New Squawk Code

- Reply active
- Transponder code modified

Altitude Reporting Mode

- Altitude reporting mode
- Reply active
- Identify function active
- VFR squawk code (active)

R

Reply active

ID

IDENT function active

ON

Transponder in operation

ALT

Altitude Reporting

STBY

Standby

IDENT

Tap to initiate the IDENT function (code unmodified)

ENT+ID

Tap to accept modified code and initiate IDENT function

Get Started

Remote Control

Transponder functions are controllable from a connected G3X Touch display.

Control features include:

- Squawk code
- IDENT
- Flight ID
- Transponder mode
- ADS-B transmission

For transponder control operation, consult the G3X Touch Pilot's Guide.

XPDR Alert



If the transponder fails:

- Red "X" displays over the IDENT key
- Advisory message alerts
- XPDR control page is not available

Transponder fail annunciations are designed to be immediately recognizable.

If a failure occurs while the control page is active, the display automatically returns to the previous page.

UNIT	CONDITION
GNX 375	ADS-B interboard communication failure.

For information regarding pilot response to a transponder failure, consult the AFMS.

[Get Started](#)

ADS-B Altitude Reporting

AVAILABLE WITH:
GPS 175 | GNC 355

FEATURE REQUIREMENTS

- GDL 88

FEATURE LIMITATIONS

- Display and control functionality dependent on GDL 88 configuration

ADS-B Control Panel



ADS-B Out controls are accessible via the **ADS-B** key. The location of this key varies by unit type. On GPS 175, it resides in the upper right corner of the display. On GNC 355, it resides on the GDL 88 Status page.



1	Altitude Reporting Status (from GDL 88)	3	Flight ID Key
2	Anonymous Mode Key		

GDL 88 Features

- Remote-mount ADS-B transceiver
- Transmits ADS-B Out messages to ATC and other aircraft
- Communicates ADS-B In data to panel-mounted avionics for the display of traffic and weather

When interfaced to a GDL 88 transceiver, GPS 175/GNC 355 allows control over some aspects of the ADS-B Out message and provides position information to the GDL 88.

Not all installations allow pilot control of ADS-B Out transmissions.


For more information, consult
*GDL 88 ADS-B Transceiver
Pilot's Guide*.

Get Started

ADS-B Key

FEATURE LIMITATIONS

- Functionality dependent upon GDL 88 configuration

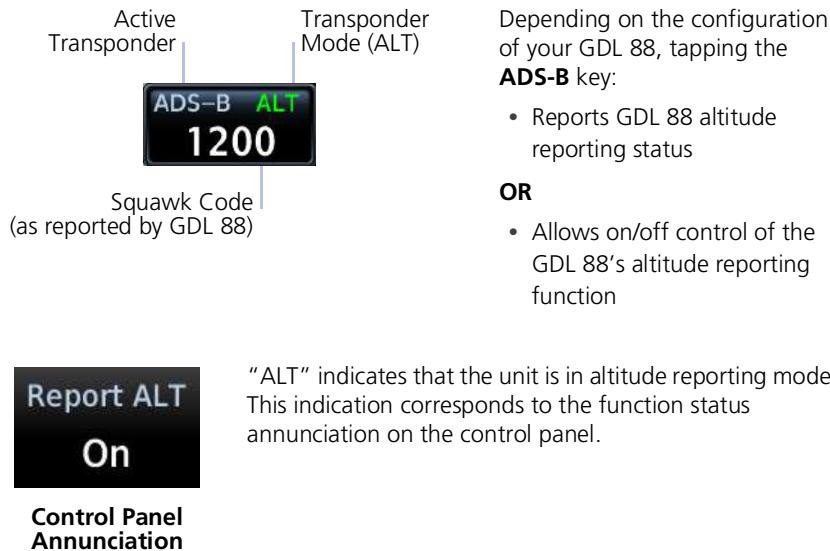


Enabling Anonymous Mode

FEATURE LIMITATIONS

- Availability dependent on GDL 88 configuration

During anonymous mode, the unit replaces identifying information in the ADS-B Out message with a temporary randomized number for privacy while providing position information. Instead of a flight ID, the unit transmits the call sign "VFR."



Tap **ADS-B > Anonymous**.

The key label changes from "Off" to "Armed."

Tapping **Anonymous** again toggles the mode off.

[Get Started](#)

Assigning a Flight ID

FEATURE LIMITATIONS

- Availability dependent on GDL 88 configuration



If the flight ID is editable, tap **Flight ID** and assign a unique identifier. This key is not selectable (read-only) when the ID is received from the GDL 88.

Flight IDs are alphanumeric (upper-case only) and have an eight character limit. The active flight ID displays by default.

GDL 88 Alert



If the GDL 88 fails:

- Red "X" displays over the IDENT key
- Advisory message alerts
- ADS-B reporting functions are not available


Failure annunciations are designed to be immediately recognizable. If a failure occurs while the control page is active, the display automatically returns to the previous page.

UNIT	CONDITION
GPS 175 GNC 355	GDL 88 failure.

For information regarding pilot response to ADS-B failures, consult the AFMS.

Get Started

Pilot Settings

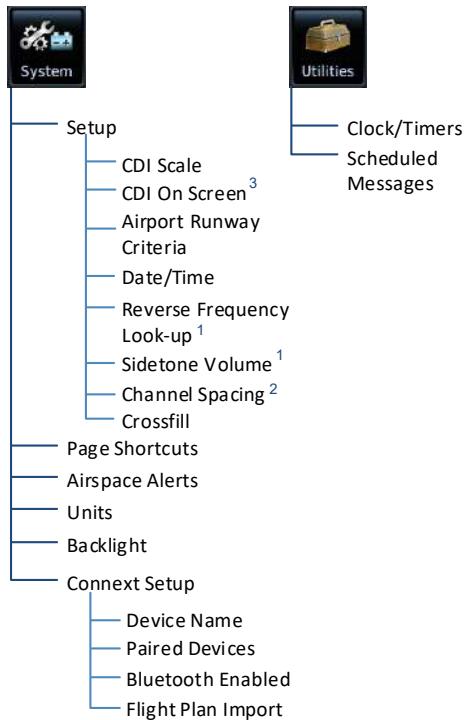

Unit customization options allow you to:

- Set the CDI scale
- Display the CDI on-screen³
- Specify runway criteria
- Set the date and time
- Specify COM radio settings¹
- Create shortcuts
- Set the display units
- Adjust display brightness

Other setup options allow you to monitor time in flight and create custom reminder messages. These settings reside in the System Utilities.

For details about COM radio settings and Connxet Setup options, refer to the respective section.


¹ GNC 355/355A only.

² GNC 355A only.

³ GPS 175 and GNX 375 only.

[Get Started](#)

CDI Scale

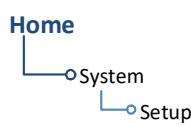

Set the scale for the course deviation indicator. Scale values represent full scale deflection for the CDI to either side.

Options: • 0.30 nm • 1.00 nm • 2.00 nm • Auto

Scale selections are reflected in the annunciator bar.

Auto Setting Annunciation



Manual Setting Annunciation



CDI scale is set to "Auto" (default). At the default setting, the scale sets to 2.0 nm during the en route phase of flight.

Aircraft is within 31 nm of the destination airport (i.e., terminal area). The scale linearly ramps down to 1.0 nm over a distance of 1 nm.

Aircraft is leaving the departure airport. The scale is set to 1.0 nm once the aircraft is over 30 nm from the departure airport. It begins to gradually ramp up to 2 nm when the flight phase changes from terminal (TERM) to en route (ENR).

During GPS approach operations, the scale gradually transitions down to an angular scale.

Aircraft is 2.0 nm before the final approach fix. Scaling tightens from 1.0 nm to the angular full-scale deflection defined for the approach (typically 2.0°).

Selecting a lower value (0.3 nm or 1.0 nm) prevents the selection of higher scale settings during ANY phase of flight. Example: If you select 1.0 nm, the unit uses this setting for en route and terminal phases, and ramps down further during approach.

Get Started

Horizontal Alarm Limits


Horizontal alarm limits (HAL) are used to compare against GPS position integrity. These protection limits follow the CDI scale, unless the corresponding flight phase requires a lower HAL. For example, the selected scale setting is 1.0 nm, but full-scale deflection during approach still follows the approach scale setting (0.30 nm).

FLIGHT PHASE	CDI SCALE	HORIZONTAL ALARM LIMIT
Approach	0.30 nm or Auto	0.30 nm
Terminal	1.00 nm or Auto	1.00 nm
En Route	2.00 nm or Auto	2.00 nm
Oceanic	Auto	2.00 nm

[Get Started](#)

CDI On Screen

AVAILABLE WITH:
GPS 175 | GNX 375



Toggling this setting displays the CDI scale on screen. When active, a CDI with lateral deviation indicator displays below the GPS NAV Status Indicator key.

CDI OFF

Only the Flight Plan page access key is available.

CDI ON

The CDI provides no indications without an active flight plan.

Lateral Deviation Indicator


Lateral deviation indications display when there is an active flight plan.

Visual Approach Guidance

Advisory horizontal guidance annunciations appear when a visual approach procedure is active.

Get Started

Airport Runway Criteria

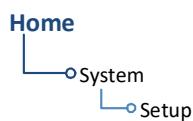

- Specify runway criteria from the System Setup app. Selections determine which airports are suitable when using the nearest airport search feature.
- During an approach, the terrain alerting algorithm uses airport runway settings to avoid nuisance alerts.

Runway Surface

Runway Surface Options

- Any • Hard Only
- Hard/Soft • Water

Tap **Runway Surface** and then select the runway surface type.

Selecting "Any" allows all surface types to appear in the nearest airport list and be considered for use by Terrain.

Minimum Runway Length

Specify a minimum runway length to:

- Exclude airports with shorter runways from the nearest airport list
- Inform the terrain function of which airports are available for use, so that terrain alerts do not generate when landing at one of these airports

Typing "0" allows runways of any length to appear in the nearest airport list and be considered for use by Terrain.

INCLUDE USER AIRPORTS

Include User Airports

You can include user-defined airports in your nearest airport search. Deselecting this key excludes user airports from the search criteria.

[Get Started](#)

Clocks & Timers

Timers



Monitor time in flight using three available timer types.

Home



Timer settings are accessible via the Utilities menu page. Toggle between timer types using the provided display key.

Clock/Generic Timer



Stopwatch style counter.
Count up or count down.
Specify countdown time
using the preset function.

Controls:

- **Direction** (Up, Down)
- **Start • Stop • Timer Preset**

Trip/Departure Timers



Measure elapsed airborne time
since the last ground-to-air
transition. Set timer to start at
unit power up or once the
aircraft is in air.

Controls:

- **Criteria** (Power On, In Air)
- **Reset Timer**

Clock

Home



Specify the time format and local offset. Settings
reside in System Setup.

Format options include 12 hour, 24 hour, and UTC.

If a 12 hour or 24 hour clock is selected:

Tap **Local Offset** > Specify the appropriate offset value from UTC.

Get Started

Page Shortcuts



A knob shortcut option allows you to customize slots 2 and 3 of the locater bar. Slot one is reserved for the Map page.

Tap a slot key and assign a page to that slot.

Page Shortcut Options

- Traffic
- Terrain
- Weather
- Nearest
- Airport
- Flight Plan

Depending on configuration, Traffic and Weather shortcuts may not be available.

Verify shortcut operation once complete.

Restore
Defaults

Tapping **Restore Defaults** returns both slots to their default settings (Terrain for Slot 2, Nearest Airport for Slot 3).

Get Started

Alerts Settings



Airspace alerts generate a message. They rely on three-dimensional data (altitude, latitude, and longitude) to avoid nuisance alerts.

FEATURE LIMITATIONS

- Alert altitudes are dependent on aircraft and airspace altitudes and the pilot-specified altitude buffer value*



Control keys allow you to select which airspace boundaries generate an alert annunciation upon entry.

Airspace Alert Options

- Class B/TMA
- Class C/TMA
- Class D
- Restricted
- MOA (Military)
- Alt Buffer
 - Specify buffer value
- Other

Alert boundaries for controlled airspace are sectorized to provide complete information on any nearby airspace.

Alert settings do not alter the depiction of airspace, nor do they change Smart Airspace settings on the Map page.

With the exception of Altitude Buffer, airspace alert options are on/off only.

Airspace alerts for Prohibited airspace cannot be disabled.

Get Started**Unit Selections**

Customize the display of unit settings. Tapping a parameter key opens a menu of the available unit types.

PARAMETER	SETTINGS
Distance/Speed	<ul style="list-style-type: none"> Nautical Miles (nm/kt) Statute Miles (sm/mph)
Fuel	<ul style="list-style-type: none"> Gallons (gal) Imperial Gallons (lg) Kilograms (kg) Liters (lt) Pounds (lb)
Temperature	<ul style="list-style-type: none"> Celsius (°C) Fahrenheit (°F)
NAV Angle	<ul style="list-style-type: none"> Magnetic (°) True (°T) User (°U)
Magnetic Variation	<ul style="list-style-type: none"> Specify number of degrees for east or west (°E, °W) Available only when "User (°U)" is the active NAV angle

SPECIFY UNIT TYPE

1. Review the current unit selections.
2. Tap the applicable parameter key.
3. Select a unit type.

[Get Started](#)


Display Brightness Control



Depending on configuration, display brightness is controlled using inputs from the built in photocell, aircraft dimmer bus, or both.

Automatic Brightness Control

Dimming is limited to prevent on screen indications from becoming unreadable. The built in photocell automatically controls display brightness based on ambient light levels.

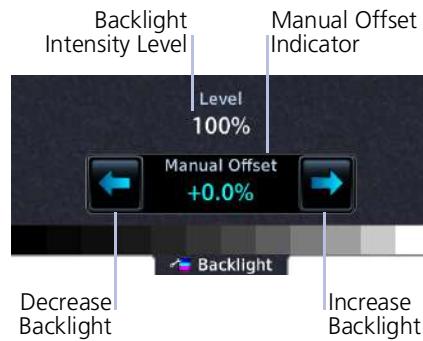

During automatic control, the pilot may still adjust brightness using the manual offset controls in the Backlight page.

The unit retains manual offset settings over power cycles.

Manual Brightness Control

Optionally, the unit is configurable to use an aircraft dimming bus for display brightness control. Upon reaching minimum input level, display brightness reverts to the photocell. This prevents the display from going black in the event of a dimmer input failure.

Installer configured curves determine the amount of change in brightness that occurs in response to a control adjustment. If brightness control is not satisfactory, contact a Garmin dealer to adjust the lighting curves.

Get Started

Scheduled Messages



Create custom reminder messages and set when they will display.
Allows one time, periodic, and event-based message types.

Home



Active reminders appear at the top of the scheduled message list. This list is accessible via the Utilities menu page.

Examples: • “Call FBO” • “Close flight plan” • “Switch fuel tanks”

CREATE A REMINDER MESSAGE

1. Tap **Create Scheduled Message**.
2. Specify the message type, content, and countdown timer value.

Message Types

TYPE	DISPLAYS...
One time	When the timer expires, or following each power cycle until message deletion.
Periodic	After a specified duration of time. Countdown repeats once the message displays.
Event	According to a specified date and time. Message timer not applicable.

Modifying Scheduled Messages

Once created, these messages may be modified at any time. Selecting a scheduled message opens an options menu.

EDIT MESSAGE

This function is accessible from either the Scheduled Messages page or the system message list.

RESET TIMER

Restarts the countdown timer.

DELETE MESSAGE

Confirming this request removes the selected message from the list.

Get Started

Crossfill

**NOTE**

GPS 175/GNC 355(A)/GNX 375 units are not compatible that have GTN units with Search and Rescue enabled for crossfill.

FEATURE REQUIREMENTS

- Dual Garmin GPS navigator configuration
- GTN Xi software v20.30 or later (if crossfilling to GTN Xi unit)

Enable the crossfilling of information between two GPS 175, GNC 355(A), GNX 375 units or one GPS 175, GNC 355(A), GNX 375 and one GTN unit.

Crossfill Features

- Enabling this function on one unit automatically enables it on the other
- Some types of data crossfill regardless of the current setting

Crossfill Data

Alerts:

- Traffic pop-up acknowledgment
- Missed approach waypoint pop-up acknowledgment
- Altitude leg pop-up acknowledgment

Flight Plan Catalog

System Setup:

- Date/Time Offset
- Nearest airport criteria
- Units (Nav angle, Fuel, and Temperature)
- User-defined COM frequencies (GNC 355(A)/GTN only)
- CDI Scale setting

User waypoints

Includes active flight plan navigation data if you turn on the crossfill function.

If a Cross-Side navigator is configured, a system message alerts you when the function is off (i.e., flight plans are not crossfilling).

To enable or disable crossfilling:

Home > **System** > **Setup** > **Crossfill** > **OK**

Get Started

Status Indications

Alert Types

The unit generates annunciations in response to various conditions that may occur. These abbreviated messages are grouped according to the level of urgency and required response. They display in order of priority, from highest to lowest.

1. Warnings
2. Cautions
3. Mode & function advisories

WARNINGS & CAUTIONS


Warnings require immediate attention. Cautions indicate the presence of an abnormal condition that may require pilot action. A warning may follow a caution if no attempt is made to correct the condition (e.g., altering the aircraft's path toward the alerted terrain or obstacle).

MODE & FUNCTION ADVISORIES

Advisories provide status and operating information.

System advisories. These display on a dedicated message list. Depending on the number of advisories, this list may be scrollable.

Function or mode specific advisories. These appear as unobstructed annunciations in the annunciator bar.

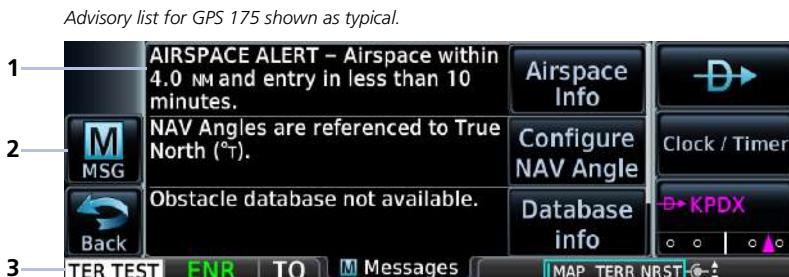**Advisory Messages & Annunciations**

1	System Messages List	3	Mode Advisory Annunciation
2	Message Key		

For a complete list of all system-related advisories, refer to *System Hardware Advisories*.

Get Started

Alert Annunciations

Alert annunciations are abbreviated messages that indicate an alerted function or mode. The color of the annunciation depends on the alert type.


ALERT COLORS
WARNING
CAUTION
ADVISORY

- Warnings display in white text on red background
- Cautions display in black text on amber background
- Function or mode specific advisories display in black text on white background

When an alert is triggered, the annunciation flashes by alternating text and background colors. It turns solid after five seconds. All annunciations remain active (solid) until the condition is resolved or no longer a threat.

ANNUNCIATION LOCATION

Alerts and informational advisories annunciate in the annunciator bar along the bottom of the screen.

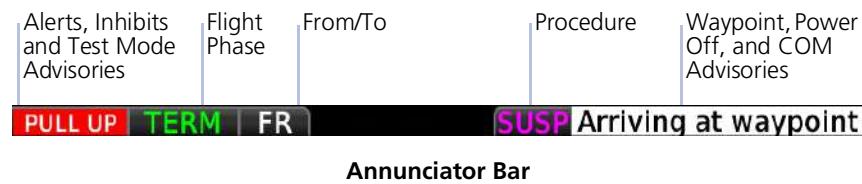

Get Started

Pop-up Alerts

If a warning or caution relating to terrain or traffic occurs, a pop-up window may display. These pop-ups only appear if the alerted function's associated page is not active.

Pop-up Alert Priority

In the event of simultaneous alerts, pop-up windows display in the following order:

1. Terrain alerts
2. Traffic alerts

Each pop-up alert provides:

- Threat indication
- Alert annunciation
- Option to inhibit or mute the alert
- Control for closing the pop-up window
- Direct access to the associated page



1	Threat Indication	4	Alert Inhibit Key
2	Close Pop-up Window Key	5	Go to <Page> Key
3 Alert Annunciation			

To open the indicated page, tap **Go to <Page>**.

To acknowledge the alert and return to previous page view, tap **Close**.

Get Started

Aural Alerts

FEATURE LIMITATIONS

- GNX 375 only (traffic alerts)¹
- Mute alert function is applicable only to the active aural alert (does not mute future alerts)

Traffic alerts are accompanied by an aural voice message. Voice gender is configured during installation.



Tapping **Mute Alert** silences the active traffic alert voice message.

¹ Aural alerts are available for GPS 175/GNC 355 systems interfaced to a traffic system (GDL 88, GTX 345, or GNX 375). They are provided directly from the traffic system LRU to the audio panel.

Get Started

System Status



View information specific to the unit and its software. Refer here when contacting customer service.

System Info

- Serial number
- System ID
- Main software version
- GPS/WAAS software version
- COM board software version (GNC 355/355A only)
- Transponder software version (GNX 375 only)

Controls

Database Info access keys:

- **Active**
- **Standby**

For more about active and standby databases, refer to *Databases*.

GPS Status



Monitor GPS receiver performance, establish a baseline for normal system operation, and troubleshoot weak or missing signal issues.

This page provides a visual reference of GPS receiver functions, including:

- Current satellite coverage
- Phase of flight
- Present position (latitude and longitude)
- GPS solution and receiver status
- Position accuracy

SKY VIEW DISPLAY



- Depicts satellites currently in view as well as their respective positions
- Outer circle represents the horizon (with north at the top of the circle)
- Inner circle represents 45° above the horizon
- Center point shows the position directly overhead


Get Started**SIGNAL STRENGTH INDICATIONS****Satellite SVIDs**

Each bar is labeled with the SVID of the corresponding satellite. Numbers vary according to satellite type.

- GPS: 1 to 31
- SBAS: 120 to 138

A graph shows GPS signal strength for up to 15 satellites. As the GPS receiver locks onto satellites, a signal strength bar appears for each satellite in view.

Graph symbols depict the progress of satellite acquisition. Some data may not display until the unit has acquired enough satellites for a fix.

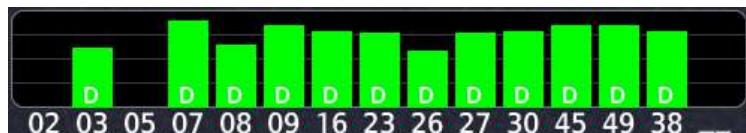

SYMBOL	CONDITION
Not present	Receiver is searching for the indicated satellites.
Gray bar, empty	Satellite located.
Gray bar, solid	Satellite located, receiver is collecting data.
Yellow bar, solid	Data collected, but satellite is excluded from position solution (i.e., it is not in use).
Cyan bar, cross-hatch	Satellite located, but FDE excludes it for being a faulty satellite.
Cyan bar, solid	Data collected, but receiver is not using satellite in the position solution.
Green bar, solid	Data collected, satellite in use in the current position solution.
D (inside bar)	Differential corrections are in use (e.g., SBAS, WAAS).

If the unit has not been in operation for more than six months, acquiring satellite data to establish almanac and satellite orbit information may take 5 to 10 minutes.

Get Started

POSITION ACCURACY FIELDS

LABEL	POSITION DATA
EPU	Estimated Position Uncertainty
HDOP	Horizontal Dilution of Precision
HFOM	Horizontal Figure of Merit
VFOM	Vertical Figure of Merit

EPU is the horizontal position error estimated by the fault detection and exclusion (FDE) algorithm, in feet or meters.

Information fields indicate the accuracy of the position fix.

HFOM and VFOM values represent 95% confidence levels in horizontal and vertical accuracy.

Lower values mean higher accuracy. Higher values are the least accurate.



NOTE

Under 14 CFR parts 91, 121, 125, and 135, the FDE availability prediction program must be used prior to all oceanic or remote area flights using GPS 175/GNX 375/GNC 355 as a primary means of navigation.

Circle of Uncertainty

FEATURE LIMITATIONS

- Available only when the aircraft is on ground
- Displays only on the Map page



- Depicts area surrounding the ownship when GPS cannot accurately determine aircraft location
- Expands as GPS horizontal accuracy degrades
- Shrinks as accuracy improves
- Translucent with minor shading so as not to obstruct other features

Get Started**SBAS Providers****NOTE**

Operating with SBAS active outside of the service area may cause elevated EPU values to display on the status page. Regardless of the EPU value displayed, the LOI annunciation is the controlling indication for determining the integrity of the GPS navigation solution.



SBAS supports wide area or regional augmentation through the use of additional satellite broadcast messages.

Tap this key and select from the list of providers.

PROVIDER	SERVICE AREAS
EGNOS	Most of Europe and parts of North Africa.
GAGAN	India only.
MSAS	Japan only.
WAAS	Alaska, Canada, the 48 contiguous states, and most of Central America.

GPS Status Annunciations

Once the GPS receiver determines the aircraft's position, the unit displays position, altitude, track, and ground speed data. GPS status annunciates under the following conditions.

ANNUNCIATION	CONDITION
Acquiring	GPS receiver uses last known position and satellite orbital data (collected continuously from satellites) to determine which satellites should be in view.
3D Nav	3-D navigation mode. GPS receiver computes altitude using satellite data.
3D Diff Nav	3-D navigation mode. Differential corrections from SBAS provider are in use.
LOI	Satellite coverage is insufficient to pass built-in integrity monitoring tests.

Get Started

GPS Alerts

The following alert conditions can affect GPS accuracy.

INDICATIONS	FAULT TYPE	CONDITION
Yellow "LOI" annunciation.	Loss of Integrity	Integrity of the GPS position does not meet the requirements for the current phase of flight. Occurs before the final approach fix (if an approach is active).
Unit invalidates active course guidance. Annunciation is specific to cause.	Loss of Navigation	Aircraft is after the final approach fix and GPS integrity does not meet the active approach requirements.
		Insufficient number of satellites supporting aircraft position (i.e., more than 5 seconds pass without adequate satellites to compute a position).
		GPS sensor detects an excessive position error or failure that cannot be excluded within the time to alert.
		On-board hardware failure.
Yellow "No GPS Position" annunciation. Ownship icon not present	Loss of Position	Unit cannot determine a GPS position solution.

[Get Started](#)

ADS-B Status

FEATURE REQUIREMENTS

- GDL 88 or GTX 345 ADS-B transceiver (GPS 175 and GNC 355/355A only)

OR

- GNX 375

STATUS PAGE ACCESS KEY

Tap this key to view last uplink time and GPS source information.

GPS 175/GNC 355/355A: Key label reflects the configured ADS-B source.

ADS-B Source: GDL 88



ADS-B Source: GTX 345



GNX 375: Key label reads "ADS-B Status."

UPLINK TIME

TEXT COLOR	MINUTES SINCE LAST UPLINK
Green	< 5
Yellow	5 to 15
	> 15

This field displays the number of minutes since last uplink. Digital values may change color depending on duration.

"> 15" displays when the time exceeds 15 minutes.

Dashes indicate when valid uplink data is unavailable (e.g., the device is offline).

Get Started

FIS-B WX STATUS

**FIS-B WX
Status**

Tap this key to view the status of FIS-B weather products.
This page is also accessible from the FIS-B Weather setup menu.

TRAFFIC APPLICATION STATUS

**Traffic App
Status**

Tap this key to view the status of the three traffic applications: • AIRB • SURF • ATAS (airborne alerts)

ANNUNCIATION	DESCRIPTION
On	Application is running. Required ownership data is available and meets the performance criteria.
Available to Run	Application is configured. Required input data is available and meets the performance criteria.
Unavailable to Run	Required input data is not available due to a failure (e.g., aircraft surveillance application process failed).
Unavailable - Fault	Required input data is available, but does not meet the performance criteria or is not available due to non-computed data conditions.

[Get Started](#)

Logs

Export to SD Card




A logging function stores WAAS diagnostic and ADS-B traffic data (GNX 375 only) in the unit's internal memory. This information is available for export to an SD card for later analysis.

FEATURE REQUIREMENTS

- SD card

FEATURE LIMITATIONS

- ADS-B traffic data logging available on GNX 375 only

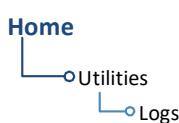

To export a diagnostic log:

1. Insert an SD card.
2. Tap **Utilities > Logs**.
3. Select **WAAS Diagnostic Log** or **ADS-B Log**.

If no log files are present, these keys are not available.

WAAS Diagnostic Log Functions

- Generates log files automatically upon unit power-up
- Overwrites oldest file when the internal log reaches capacity
- Exports to the “log_files” folder on the SD card

ADS-B Log Functions (GNX 375 only)

- Generates log files automatically upon unit power-up
- Overwrites oldest file when the internal log reaches capacity
- Exports to the “log_files” folder on the SD card

ADS-B log files may take several minutes to export.

INTENTIONALLY LEFT BLANK

Navigation


3 Navigation

MAP.....	3-3
ACTIVE FLIGHT PLAN.....	3-30
DIRECT TO.....	3-49
WAYPOINTS.....	3-55
PROCEDURES.....	3-71

Navigation

NAVIGATION APPS & FUNCTIONS

Menu selections vary based on features and optional equipment installed with Garmin avionics.

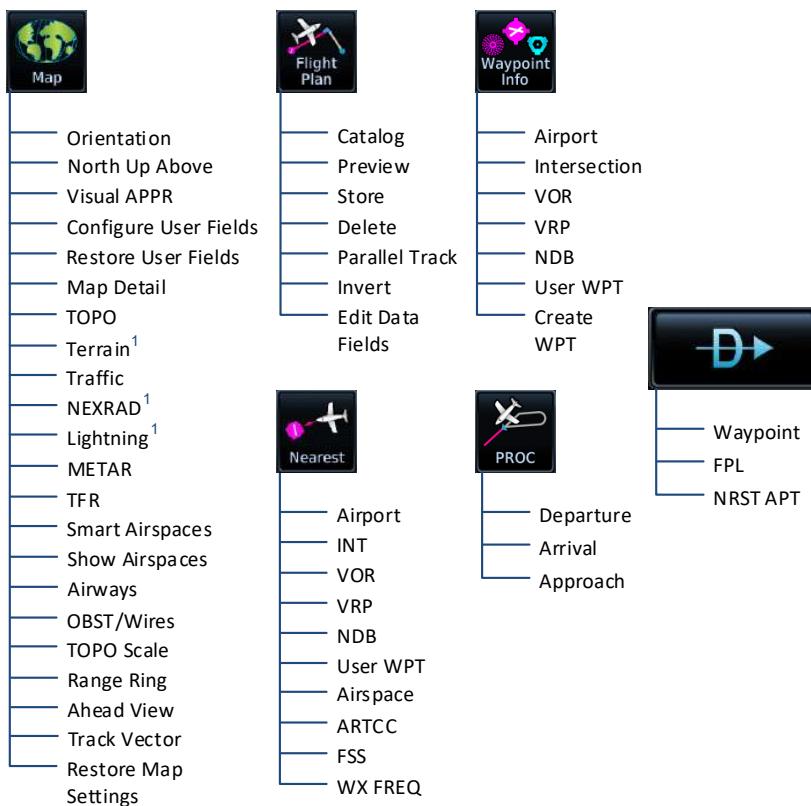

¹ NEXRAD, Lightning, and Terrain overlays are mutually exclusive.

Navigation

Map



To increase situational awareness, Map depicts the aircraft's current position relative to land, aeronautical, weather, and traffic information.

FEATURE REQUIREMENTS

- Active GPS source (aircraft position symbol)
- UAT receiver (FIS-B weather)

FEATURE LIMITATIONS

NEXRAD, Lightning, and Terrain overlay functions are mutually exclusive. Enabling one automatically disables the other.

GNC 355 shown as typical.



Default Map Features

1 Aircraft Symbol Depicts current aircraft position and orientation.
2 Track Vector Current ground track indication.
3 Basemap Presents a graphical depiction of land and water data.

Navigation

	User Field Customizable data field appearing in each corner of the map. Default user fields are as follows.
4	GPS 175/GNX 375: • distance • ground speed • desired track and track • distance/bearing from destination airport GNC 355/355A: • distance • ground speed • desired track and track • from, to, and next waypoints
5	NAV Range Ring Displays current direction of travel on a rotating compass. Orientation: Magnetic north
6	Map Range Indicator Displays current map range in the upper left quadrant of the range ring (i.e., the distance from the aircraft to the range ring).
7	North Indicator Indicates True north.
8	Page Orientation Label • North Up orients map to True north. • Heading Up orients map to current aircraft heading (requires heading data source interface). • Track Up orients map to current aircraft GPS track.
9	Map Overlay Icons Indicates status of overlays at the current map range. Includes: METAR, NEXRAD, obstacles, power lines, TFR, precipitation, Terrain, Lightning, and Traffic.

AUTOMATIC ZOOM

AIRCRAFT STATE	DEFAULT ZOOM
Ground	0.50 nm
Air	10.0 nm

Map remembers the last zoom range for each aircraft state, and automatically resumes this view when the aircraft transitions between air and ground states.

FEATURE LABELS

To maintain readability, map feature labels remain uniform at all zoom levels.

TRAFFIC UNITS

System Units page selections do not affect the display of traffic on Map.

Navigation

LAND AND WATER DEPICTIONS

Land and water data are for general reference only. Data accuracy is not suitable for use as a primary navigation source. The information is intended to supplement and not replace official government charts and notices.


DATA DRAWING ORDER

The electronic map draws data in order of priority, from highest (1) to lowest (25), with higher priority features drawn atop those of lower priority.

LEVEL	FEATURE	LEVEL	FEATURE
1	Traffic	17	G-AIRMET
2	Ownship	18	PIREP
3	Flight Plan Labels	19	Airspace
4	Highlighted Record	21	User Waypoints
5	Flight Plan	21	Waypoints
6	TAWS Alerts	22	Airways
7	Remaining labels	23	Turbulence
8	Persistent Item	24	Icing
9	Point Obstacles	25	NEXRAD (FIS-B)
10	Line Obstacles	26	Cloud Tops
11	TFR	27	SafeTaxi
12	Lightning	28	Runways
13	Graphical METAR	29	Terrain
14	Winds Aloft	30	Basemap Labels
15	SIGMETs	31	Basemap
16	Center Weather Advisory	32	TOPO

Navigation

Map Setup

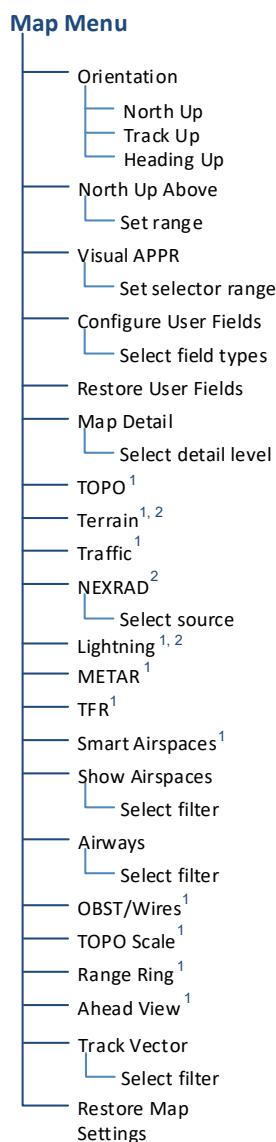

Map setup options allow you to customize the display of aeronautical information.

Tap **Menu** when you need to:

- Change map orientation settings
- Configure user fields
- Adjust the map detail level
- Enable map overlays
- Select a NEXRAD source
- Filter airspace data according to altitude
- Specify airway types and range values
- Expand the forward-looking view for improved situational awareness

RESTORE MAP SETTINGS

With the exception of user fields, this key restores all original factory map settings.

¹ On/off functionality only.

² NEXRAD, Lightning, and Terrain overlays are mutually exclusive.

Navigation**Configure User Fields****Default User Fields**

- DIS - Distance
- GS - Ground Speed
- DTK/TRK - Desired Track/Track
- Flight Plan - From/To/Next¹

¹ GNC 355/355A only

Displays Map in configuration mode, allowing you to customize the display of data in each corner of the page.

User fields are useful during time sensitive and work load intense phases of flight.



In configuration mode:

- All four data fields change to selectable keys
- All other map elements are inactive



Tap any key and select from the list of available data types.
Displayed units change based on selection.

Navigation



Selecting "OFF" removes the corresponding user field from the map page.



Tapping **Restore User Fields** returns all fields to their default settings and removes the TOPO scale if present.



GPS 175/GNX 375:

For convenience, Map user fields may be toggled on and off by pushing the control knob.

Fields remain hidden when you use the knob shortcut to move between Map and the Active FPL page. They reappear in their respective corners when you return to the Home page or use the knob to move between Map and any other application.¹

¹ This functionality is not available on GNC 355/355A.

Navigation**USER FIELD OPTIONS**

LABEL	FIELD TYPE	LABEL	FIELD TYPE
BRG	Bearing to waypoint	GS	GPS ground speed
DIS/BRG APT	Distance/bearing from destination airport (i.e., the straight line distance)	GSL	GPS altitude
DIS	Distance to waypoint	MSA	Minimum safe altitude
DIS to Dest	Distance to destination (i.e., the distance along the flight plan)	OAT (static)	Outside static air temperature
DTK	Desired track	OAT (total)	Outside total air temperature
DTK, TRK	Desired track and track	Time	Current time
ESA	En route safe altitude	Time to TOD	Time to top of descent
ETA	Estimated time of arrival	TKE	Track angle error
ETA at Dest	ETA at destination	Trip Timer	Timer display
ETE	Estimated time en route	TRK	Track
ETE to Dest	ETE to destination	VSR	Vertical speed required
	From, to, and next waypoints ¹	Wind	Wind speed and direction
Fuel Flow	Total fuel flow ²	XTK	Cross track error
Generic Timer	Timer display	OFF	Do not display data field

¹ GNC 355/355A only. ² Available when a fuel sensor is present.

"Destination" refers to the missed approach point (if an approach is loaded) or the final airport in the flight plan.

Navigation

Map Orientation



Sets the orientation of the map display.
Options include North Up, Track Up, or Heading Up.
Label below the North indicator shows the current orientation.



This label is absent when the info banner is active.


North Up is useful when zoomed out to view the entire route or a frontal system on a NEXRAD display.

North Up Above

Sets the range at which map orientation changes to North Up.

Using the North Up Above feature causes the screen to switch at certain zoom levels. This is useful as a shortcut to quickly increase situational awareness.

Visual Approach

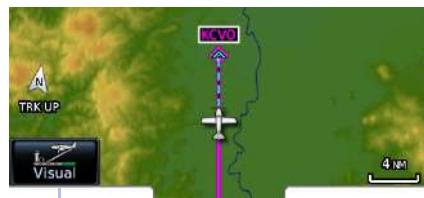

Sets the distance from the destination airport at which the **Visual Approach** selector key becomes active.



To reduce page clutter, the key moves to the upper left corner of the display when the info banner is active.

Navigation

TOPO Scale



Displays a topographical elevation scale. To remove the scale:

- Toggle **TOPO Scale** off

OR

- Tap **Restore User Fields**

Range Ring



Provides a more precise indication of distance between the aircraft and map objects.

Track Vector

FEATURE LIMITATIONS

- *Indication absent when aircraft velocity is < 30 kt*



Indicates the current ground track.

Arrow tip represents aircraft position at the specified time interval (if the aircraft maintains current ground track during that time).

Track vector length options display as a dashed line and arrow extending from the aircraft icon, showing current track and distance the aircraft will travel in the selected time.


If the track vector is placed over a point on the map, and no data is entered into the system, the unit indicates a wind-corrected GPS track to that point. This is useful for intercepting airways and radials, making small but positive lateral corrections during approaches, and in setting up for arrivals in the terminal area.

Navigation

Ahead View

FEATURE LIMITATIONS

- Not available when page orientation is North Up

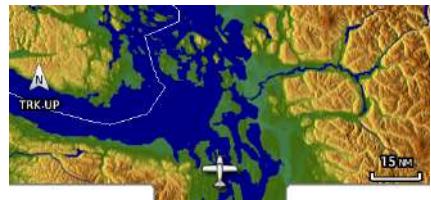

Repositions ownship near the bottom of the page to expand the view ahead.

Navigation**Map Detail**

Changes to the map detail level take effect immediately. Options include full, high, medium, and low.

FEATURE	FULL	HIGH	MEDIUM	LOW
Small Cities	•			
Medium Cities	•			
Large Cities	•			
Freeways	•			
Highways	•			
Roads	•			
Railroads	•			
Basemap Labels	•			
VORs	•	•		
NDBs	•	•		
Line Obstacles	•	•		
Point Obstacles	•	•		
Airspheres that are not prohibited or restricted	•	•		
Waypoints	•	•	•	
SafeTaxi	•	•	•	
Restricted Airspaces	•	•	•	
Prohibited Airspaces	•	•	•	•

Present



Removed



Navigation

AVIATION DATA SYMBOLS

	Non-towered, non-serviced airport ¹		Non-towered, serviced airport ¹
	Towered, non-serviced airport ¹		Towered, serviced airport ¹
	Soft surface, non-serviced airport		Soft surface, serviced airport
	Restricted (private) airport		Unknown airport
	Heliport		ILS/DME or DME only
	Intersection		LOM
	NDB		TACAN
	VOR		VOR/DME
	VORTAC		VRP
	Runway extension		User Airport
	Fly-over Waypoint ²		User Waypoint

¹ Symbol depicts orientation of longest runway.

² Available with system software v3.20 and later.

Navigation**LAND DATA SYMBOLS**

Railroad



National Highway



River/Lake



Freeway



State/Province Border



Small City



Local Road



Medium City



Local Highway



Large City

Navigation

Map Interactions

Basic Interactions

Typical map interactions include zoom, pan, and object selection.

PAN & ZOOM

Panning allows movement of the map in any direction without change to the current zoom setting. Zooming adjusts the current magnification level between pre-defined range parameters.



Before flight, consider which map scales are best for achieving the desired level of detail and map information.

Generally, use smaller map scales in and around terminal areas and whenever precise navigation is required (e.g., airway or radial intercepts).

During cruise flight, increase the map scale to better balance navigation, situational awareness, and decision making.

Navigation

OBJECT SELECTION


Tapping any object or location on the map displays a map pointer and an information banner.

MAP POINTER



This symbol indicates point of contact on the map. A gray circle highlights any selected waypoint or obstacle.

MAP INFO

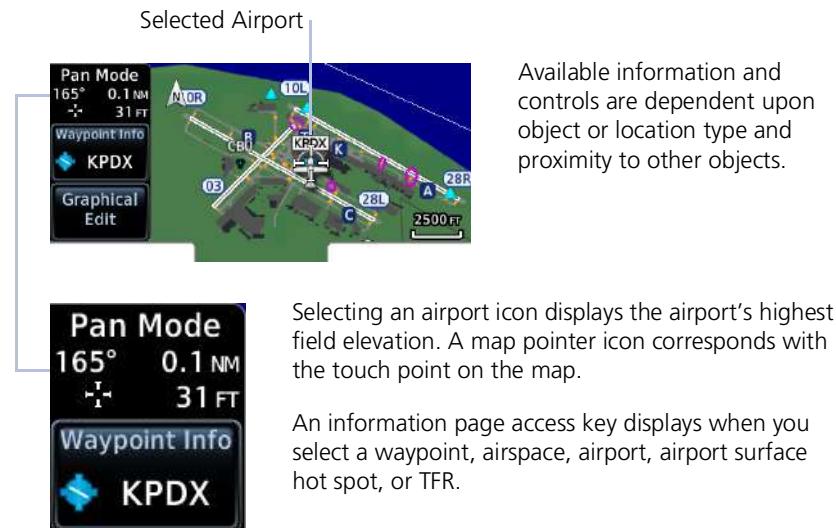

Info

- Pan mode annunciation
- Bearing and distance from current aircraft position to map pointer
- Location elevation
- Maximum altitude AGL and MSL for obstacles

Controls

- **Map Pointer/Create Waypoint**
- **Graphical Edit**
- **Next** (for stacked objects)
- Associated information page access key, if applicable

Navigation

STACKED OBJECTS


Next

To move the selector through each object in proximity of the map pointer, select an object and tap **Next**.




Overlapping objects may be difficult to identify at a given zoom level.

AIRSPACE INFO

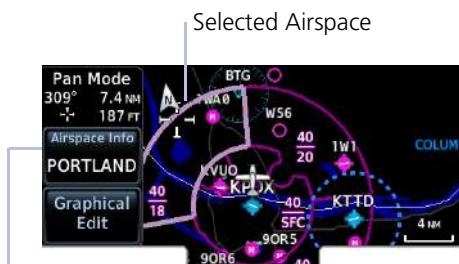

When selected, active airspace boundaries change color.

Tapping **Airspace Info** opens the associated information page.

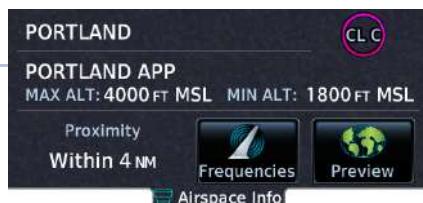

Data fields display information specific to the selected airspace.

Available controls reside along the bottom of the page.

Info

- Airspace name and type icon
- ATC entity responsible for the airspace, if applicable
- Floor and ceiling altitudes
- Proximity to airspace

Controls

- **Frequencies:** View a list of all related radio frequencies
- **Preview:** View the airspace boundary and a 2-D map of the surrounding area

Navigation

Graphical Flight Plan Editing

FEATURE LIMITATIONS

- Parallel track offsets do not apply to the temporary flight plan



Graphical editing allows quick changes to the active flight plan from the map display.



Map provides identifier keys for selecting waypoints that are stacked or in close proximity. If the displayed options are not preferred, tap away or select **Cancel**.

TEMPORARY FLIGHT PLAN BANNER

An information banner displays waypoint selections made during graphical edit mode. All selections become active once you tap **Done**.



Lists up to four waypoint identifiers

Ellipse indicates additional waypoints

Initial waypoint in flight plan always appears first



Tapping **Undo** reverses the last edit. You may undo up to nine of the most recent actions.

On the map, dragging and releasing the leg away from any waypoints removes it from the temporary flight plan.

To exit edit mode without saving changes, tap **Cancel**.

Navigation

ADD WAYPOINT TO AN EXISTING LEG



You can edit, add, or omit flight plan legs by tapping or dragging your finger directly on the map.

Existing Leg



1. Tap any location on the map.
2. Tap **Graphical Edit**.



3. Tap and drag the leg to a new waypoint or airway, then release.

The temporary flight plan adjusts to show the new route.

If no other edits are necessary, tap **Done**.

Done



Navigation

	DTK	DIS	CUM
KPDX Portland Intl	DTK		
KSLE Mcnary	203°	44.2 NM	44.2 NM
KEUG Mahlon Sweet	191°	47.9 NM	92.2 NM

Active FPL

The new waypoint now appears in the active flight plan.



GPS 175 & GNX 375:

Active route identifiers also appear on the **GPS NAV Status** indicator key in the lower right corner of the display.

GNC 355/355A:

If configured, a user field shows active route identifiers on Map.

Delete any existing flight plan before attempting to graphically edit a direct-to waypoint. Map does not allow the addition of an intermediate waypoint between the current position and a direct-to waypoint unless the waypoint is in the flight plan.

Navigation


REMOVE WAYPOINT FROM FLIGHT PLAN



You can tap and drag any leg to another waypoint or airway, or release it away from any waypoint if an alternate destination is not preferred.



CREATE LEGS WITHOUT AN EXISTING FLIGHT PLAN



If an active flight plan does not exist, you can graphically create one without ever leaving the Map page.

1. Tap any location on the map > **Graphical Edit**.
2. Begin tapping waypoints to add them to the temporary flight plan.
3. Tap **Done**.

Navigation

Map Overlays

Overlay Selections


- TOPO
- Terrain
- Traffic
- NEXRAD
- METAR
- Lightning
- TFR
- Airspaces
- Airways
- Obstacles & Wires

Overlay data controls reside in the Map menu. Changes to an overlay setting take effect immediately.

NEXRAD, Terrain, and Lightning overlays are mutually exclusive. Enabling one automatically disables the other.

Weather product and traffic overlays are optional on GPS 175 and GNC 355. They are available only when configured for ADS-B In equipment.

Overlay Controls



Control keys enable the specified overlay function only and do not activate interfaced equipment. Control keys remain active even in the absence of required data.


Overlay controls reside in the Map menu.

TOPO



- Overlays topographical data and ground elevation scale
- Depictions are similar to a VFR sectional
- Pilot-selectable topographical elevation scale available

TERRAIN

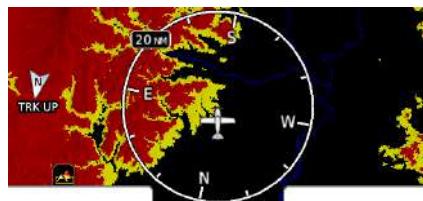

- Overlays terrain map data
- Color shading depicts terrain elevation relative to the aircraft's altitude

Navigation

TRAFFIC



- Overlays traffic information
- Filter selection on the Traffic page determines altitude range
- Feature optional for GPS 175 and GNC 355

NEXRAD




- Overlays datalink precipitation weather information
- Options include: CONUS, Regional, or off (none)
- Feature optional for GPS 175 and GNC 355

LIGHTNING



- Overlays lightning information
- Lightning strikes display as a lightning bolt or a cluster of bolts

METAR

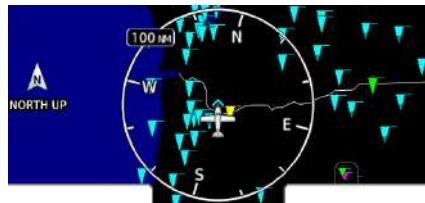

- Overlays graphical METARs
- Tapping flag icon displays information on current and forecast conditions
- Available only in areas covered by the active navigation database
- Feature optional for GPS 175 and GNC 355

Navigation

TFR



- Overlays graphical TFRs
- Tapping this airspace symbol displays details regarding the restricted area
- Feature optional for GPS 175 and GNC 355

AIRSPACES



- Overlays airspace boundaries with altitude labels
- Filter selection determines altitude range

AIRWAYS



- Overlays the selected airway type(s) with identifier labels
- Options include: low, high, all, or off (none)
- High altitude airways are green, low altitude airways are gray

OBSTACLES & WIRES



- Overlays obstacle and wire data
- Color shading depicts an object's elevation relative to the aircraft's altitude


Navigation

Overlay Status Icons

Icons indicate which overlays are present at the current map range.

The absence of an overlay icon means one of two possible conditions:

1. Overlay not present at the current detail level or zoom setting.
2. Overlay control is off.

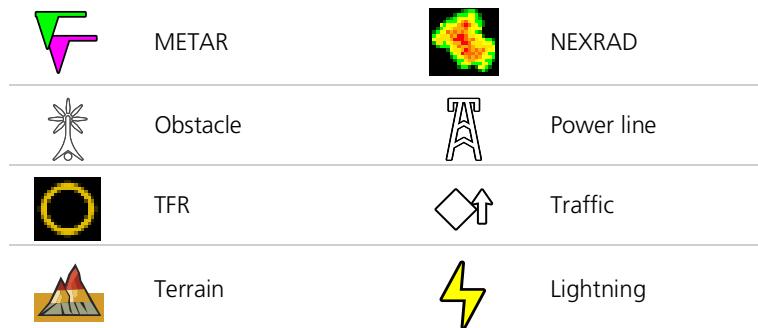

Data Not Available

This icon means the overlay is active, but data is unavailable due to a failure, test, or standby condition (where relevant).



Stale Data

This icon means overlay data is not current but remains displayed.

Navigation

Smart Airspace



Smart Airspace Off

Garmin's Smart Airspace feature automatically de-emphasizes non-pertinent airspace away from the aircraft's current altitude.

When an airspace's vertical proximity to the aircraft is >1,000 ft:

- Its boundary becomes transparent
- All associated altitude labels turn gray



Smart Airspace On

This range increases linearly to 2,000 ft as the aircraft ascends to 10,000 ft.

SMART AIRSPACE CRITERIA	
AIRCRAFT ALTITUDE	AIRSPACE PROXIMITY TO AIRCRAFT ¹
Sea level	>1,000 ft
>10,000 ft	2,000 ft


¹ Vertical distance above and below aircraft altitude.

AIRSPACE DATA SYMBOLS

	Class B Altitude Label (ceiling/floor)		Class C/TCA
	Class C Altitude Label (ceiling/floor)		Class D
	Class D Altitude Label (ceiling only)		Restricted/Prohibited
	TFR		MIL
	Class B/TMA		Other/ADIZ

Navigation

SafeTaxi

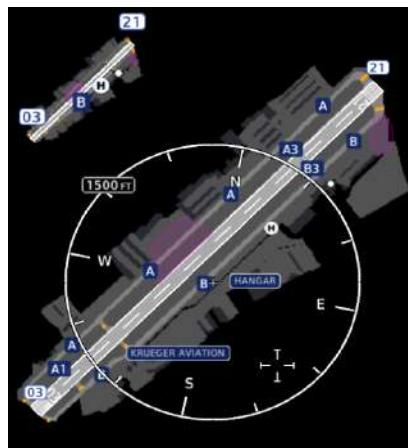

SafeTaxi provides greater map detail and higher image resolution at lower zoom levels.

Feature labels denote:

- Runways
- Taxiways
- Airport landmarks

SafeTaxi Features

- Airport diagram overlay that includes hot spot information
- Aircraft position relative to taxiways, runways, and airport landmarks
- Pilot selectable range options

SAFETAXI DATA SYMBOLS



Runway



Taxiway



Helipad



Construction Area



Airport Beacon



Unpaved Parking

Navigation

HOT SPOTS



SafeTaxi hot spots identify locations on an airport surface where positional confusion or runway incursions are likely to occur. These known problem areas require heightened attention by pilots.




Selecting the border of a hot spot displays a brief summary of the indicated hazard and an information key.

TAXIWAY HOLD POSITION




Tapping this key provides additional location information. Numbering corresponds to a list on the airport diagram.

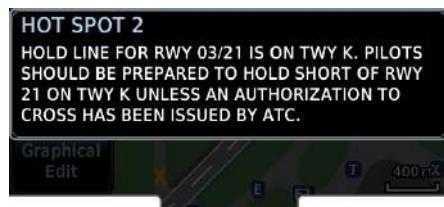

The following airport features may be deemed hot spots by aviation authorities.

- Intersecting taxiways and runways
- Complex ramp areas
- Directional limitations
- Limited wing-tip clearance
- Overflight risk


CONSTRUCTION SPOTS

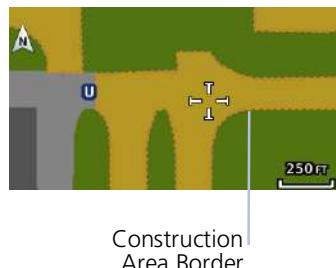

There are no expanded detail keys or notes associated with construction areas.

Navigation

Active Flight Plan



Current flight plan information displays as a scrolling list on the Active Flight Plan (FPL) page.

FEATURE REQUIREMENTS

- Active flight plan

FEATURE LIMITATIONS

- Displays up to 100 waypoints for an active flight plan



1	Selectable Data Field Columns	5	Add Waypoint Key
2	Waypoint Identifier Column	6	Leg Data
3	Active Leg Indicator	7	Waypoint Type Icon
4	Current Waypoint		

Navigation

WAYPOINT COLOR

FLIGHT PLAN STATUS	COLOR
Active	Magenta
Past & Future	White
Transition	Gray

A waypoint's color indicates whether it is active, past, future, or a transition.



Transition Waypoints

Certain procedures require a transition waypoint to complete the procedure; however, that waypoint may not be navigable due to the geometry of the procedure. In such cases, the waypoint will be gray to indicate that it is a transition. No special pilot actions are required to navigate these procedures.

Navigation

AIRPORT INFO



For convenience, airport information is directly accessible from the procedure header. This includes airports specified in active approaches, arrivals, and departures.

Tap **Airport Info** to open the corresponding information page.

FIX TYPE INDICATIONS

LABEL	FIX TYPE
iaf	Initial Approach Fix
faf	Final Approach Fix
map	Missed Approach Point
mahp	Missed Approach Hold Point
-p	Parallel Track (no fix)

When applicable, labels indicate the fix type associated with an identifier.

Navigation

ACTIVE LEG STATUS INDICATIONS

Magenta symbols denote active leg status on from/to/next waypoint indications. Fix type symbols (e.g., FAF, MAP) correspond with labels appearing on the flight plan.

	IAF		Arc Left
	FAF		Holding Pattern (Right Turns)
	MAP		Holding Pattern (Left Turns)
	MAHP		Active Leg Arrow
	Parallel Track		Direct To
	Arc Right		

GNC 355/355A:

Activating a direct-to course displays the corresponding fix symbol and waypoint identifier in two locations:

Map User Field



If configured, a user field shows the active waypoint identifier and fix type on Map.

Active Direct To Fix Indicator



Direct To key changes to show the active waypoint identifier and fix type.

Navigation

Collapse All Airways

Airways automatically display as flight plan legs. A single airway may contain numerous legs. Airways without an active leg collapse for simplification. This does not affect airway legs shown on the external navigator(s).



Navigation

OBS



The Omni Bearing Selector (OBS) allows you to select between manual or automatic sequencing of waypoints.

When active, this function allows you to set the desired course To/From a waypoint using the provided controls or with an external OBS selector on HSI or CDI.



1. Tap **OBS**.
 2. Specify a heading course.
- CDI indicates the OBS heading. The mode displays on the annunciator bar.

GNX 375 shown as typical.



The unit retains the active To waypoint as a navigation reference even after passing the waypoint (i.e., prevents sequencing to the next waypoint).

Tapping the key again resumes automatic sequencing of waypoints (normal mode).

SUSPEND/UNSUSPEND

SUSP



This key displays for leg types that do not support OBS.

UNSUSP



This key displays for legs that auto suspend (e.g., leg holds, missed approaches).

Navigation

Dead Reckoning



WARNING

Do not use projected position data as the only means of navigation.

Points About Dead Reckoning

- Provides limited navigation using the last known position and speed following the loss of GPS navigation while on an active flight plan
- Becomes active after a loss of GPS position while navigating using an active flight plan and the flight phase is either En Route or Oceanic
- Allowed only during en route and oceanic phases of flight

When dead reckoning mode is active:

- Map reports "No GPS Position"; overlays are not available
- DR mode annunciation replaces ENR or OCN
- Terrain functionality is not available
- Traffic displays on its dedicated page only
- CDI is not available

Dead reckoning mode ends once GPS position is restored.

Navigation

Parallel Track



Create a parallel course offset relative to the current flight plan. Setup controls provide offset distance and direction setting (left of track or right of track).

FEATURE REQUIREMENTS

- Active flight plan

FEATURE LIMITATIONS


- Function not available when Direct-to is active
- Graphical editing of the active leg cancels the parallel track function
- Offset range: 1 nm to 99 nm
- Large offset values combined with certain leg types (e.g., approach) or leg geometries (i.e., changes in track >120°) do not support parallel track

TRACK	COLOR
Offset	Magenta
Original	Gray

Once activated, a new track line appears to the left or right of the original course line at the specified distance. The aircraft navigates to the offset track with external CDI/HSI guidance now driven from the parallel track.



A graphical depiction overlays on the map.

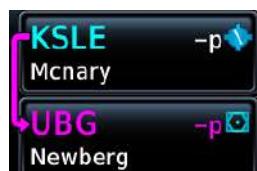Map

Corresponding fix symbols on the flight plan indicate when the active leg is on a parallel track.


**GPS 175 & GNX 375:**

Active route identifiers also appear on the **GPS NAV Status** indicator key in the lower right corner of the display.

GNC 355/355A:

If configured, a user field shows active route identifiers on Map.

Navigation

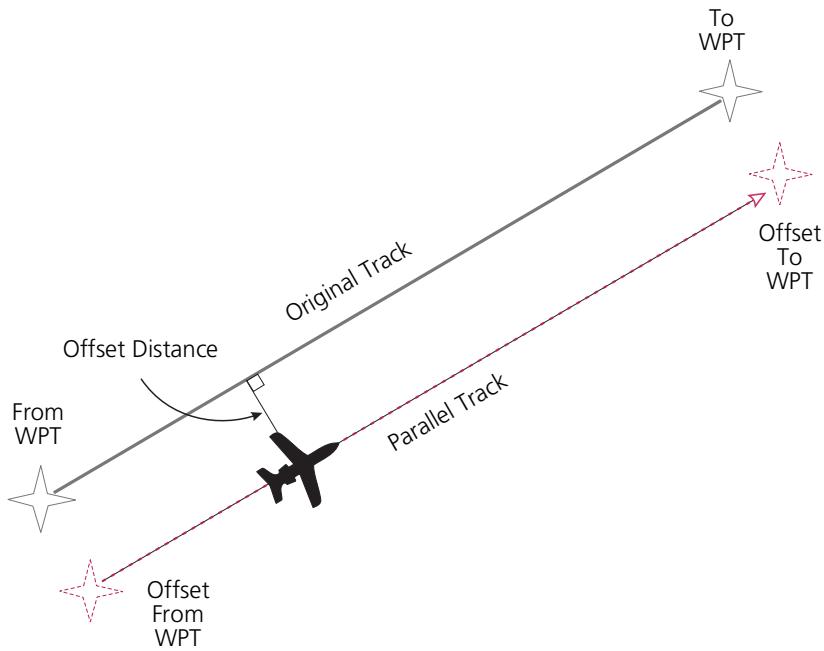

ACTIVATE A PARALLEL TRACK



1. Tap **Menu > Parallel Track.**
2. Tap **Offset** and specify a distance between 1 nm and 99 nm.
3. Tap **Direction** and select left of track or right of track.
4. Tap **Activate.**

To deactivate parallel track, tap **Menu > Deactivate PTK.**

Navigation

Edit Data Fields



To select a flight plan data column, tap **Edit Data Fields**. Columns are arranged in numerical order (1 - 3).

To restore columns to default display settings, tap **Restore Defaults**.

DATA FIELD SELECTIONS	
CUM	Cumulative Distance
DIS	Distance
DTK	Desired Track
ESA	En Route Safe Altitude
ETA	Est. Time of Arrival
ETE	Est. Time En Route

Selections are identical for each column. By default, flight plan information fields display:

Column 1: DTK

Column 2: DIS

Column 3: CUM

Flight Plan Catalog



Create, activate, edit, copy, and delete flight plans within the catalog.

FEATURE LIMITATIONS

- Stores up to 99 flight plans with a maximum of 100 waypoints each



Each catalog entry includes a route identifier, the route distance, and en route safe altitude.

The identifiers of the departure and destination waypoints comprise the route identifier.

Navigation

Catalog Route Options

Route Options

- Activate
- Invert & Activate
- Preview
- Edit
- Copy
- Delete

Selecting a flight plan opens a menu. Changes to the active flight plan take effect immediately.

- Activate the selected flight plan (replacing the active flight plan)
- Reverse and activate the selected flight plan
- Preview a selected flight plan
- Make changes to a flight plan
- Copy the flight plan and modify it to create a similar one
- Remove individual or multiple flight plans

ACTIVATE

Activating a stored flight plan overwrites the active flight plan.

INVERT & ACTIVATE

Reverse and activate the selected flight plan for guidance back to your original departure point. The inverted flight plan is a copy. Changes do not affect the original flight plan, which remains stored in the catalog.

PREVIEW



View the flight plan route as it will appear on Map and on the Active FPL page.

Options include **Store**, **Edit**, and **ACTV (Activate)**.

EDIT

Modify the selected flight plan on the Edit Catalog Flight Plan page.

COPY

Create a copy of the selected flight plan. A copy may be used as a starting point for creating a similar flight plan. Select the copy and tap Edit to make modifications.

Navigation

DELETE A FLIGHT PLAN

Deleting the active flight plan does not delete the stored flight plan in the catalog.

From the FPL menu:

1. Tap **Menu > Delete**.
2. Confirm the request.

From the catalog:

1. Select a flight plan.
2. Tap **Delete**.
3. Confirm the request to delete all waypoints.

DELETE ALL CATALOGED FLIGHT PLANS

To remove all flight plans from the catalog:

1. Open the catalog.
2. Tap **Menu > Delete All**.
3. Confirm the request to clear the catalog.
4. Tap **Delete Pending**.
5. Confirm the request to remove all flight plans pending preview.

Navigation

Create a Flight Plan



NOTE

The unit cannot verify the accuracy of cataloged flight plans with modified procedures.

There are three methods for creating a new flight plan.

CREATE FROM THE ACTIVE FLIGHT PLAN PAGE

1. Tap **Flight Plan**.
2. Delete the existing flight plan if necessary (**Menu > Delete**).
3. Tap **Add Waypoint**.
4. Select an identifier using the provided search options.
5. Repeat steps 3 - 4 for each waypoint in the route.

CREATE FROM MAP

Build a flight plan by selecting waypoints directly on the map using the Graphical Edit feature. For more about this method, read *Graphical Flight Plan Editing*.

CREATE FROM THE FLIGHT PLAN CATALOG

1. Tap **Flight Plan > Menu > Catalog**.
2. Scroll to the end of the flight plan list.
3. Tap **Create New Catalog Route > Add Waypoint**.
4. Add waypoints using the provided search options.
5. Tap **Menu > Preview > Store** or **ACTV (Activate)**.

As a general practice, never save flight plans with modified procedures in the catalog.

Navigation**Flight Plan Waypoint Options****Options Menu**

- Insert Before
- Insert After
- Load PROC
- Load Airway
- Activate Leg
- Hold at WPT
- WPT Info
- Remove

- Selecting a waypoint identifier opens a menu. Changes to the active flight plan take effect immediately.
- Insert a new waypoint into a flight plan
 - Add an airway or procedure
 - Change the active leg
 - Remove a selected waypoint
 - Add a holding pattern to an existing waypoint
 - View information about a waypoint

Insert Before	Insert a new waypoint before the selected waypoint.
Insert After	Insert a new waypoint after the selected waypoint.
Load PROC	Open the Procedures app to specify a departure, arrival, or approach for loading. Available controls are dependent upon the relative position of the aircraft to the active flight plan. Options may include: <ul style="list-style-type: none"> • Activate Approach • Vectors to Final • Activate Missed Approach
Load Airway	Assign an airway and exit waypoint to the selected entry waypoint (e.g., intersection, VOR).
Activate Leg	Designate any TO waypoint as the active flight plan leg. Requires an active catalog flight plan.
Hold at WPT	Create a user-defined hold at the selected waypoint. Specify hold parameters and preview holding patterns from a dedicated menu page.
WPT Info	Open the dedicated information page for the selected waypoint.
Remove	Remove the selected waypoint or hold from the active flight plan.

You may also set a direct-to course to any existing waypoint in the active flight plan. Select an identifier and tap the **Direct To** key.

For details about Direct To features, refer to *Direct To Basics*.


Navigation

Flight Plan Map Overlays

Leg Status Indications

LEG STATUS	COLOR
Active	Magenta
Next & Future	White
Past or Inactive	Gray

Active, next, and previous flight plan legs overlay on the Map page and are display only.

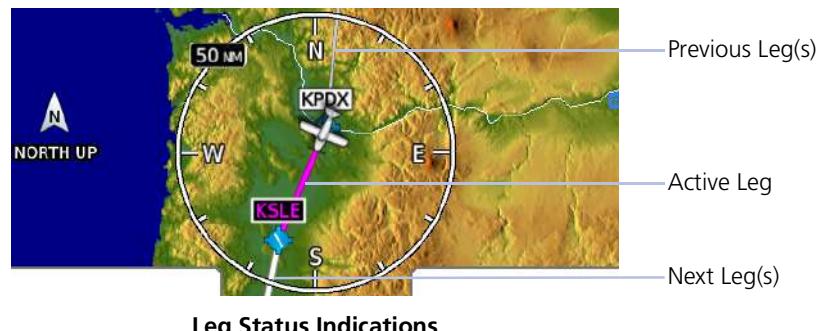**Leg Status Indications**

Navigation

Flight Plan User Field

**AVAILABLE WITH:
GNC 355/355A**

FEATURE REQUIREMENTS

- Active flight plan for from-to-next route information



If configured, a user field shows active route identifiers (from-to-next) on Map.

From, To, and Next Identifiers

Map User Fields**No Flight Plan Exists**

Underscores denote the absence of an active leg.

Active Route Display

Field shows active route identifiers (from-to-next) and leg types when a flight plan exists.

Navigation

User Airport Symbol





A dedicated icon indicates user created airport waypoints. User airport indications display on Active Flight Plan and Map.

When selected, the user identifier annunciates in the info banner.

FEATURE REQUIREMENTS

- System software v3.20 or later

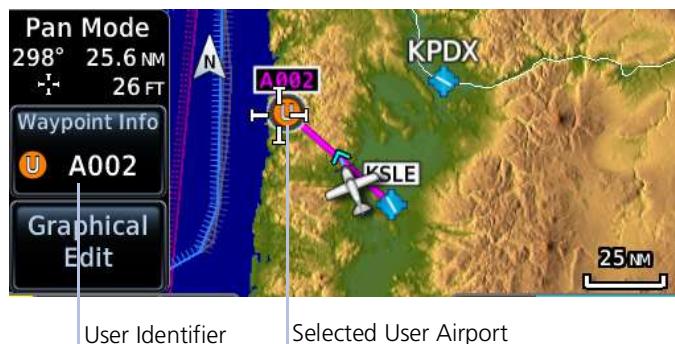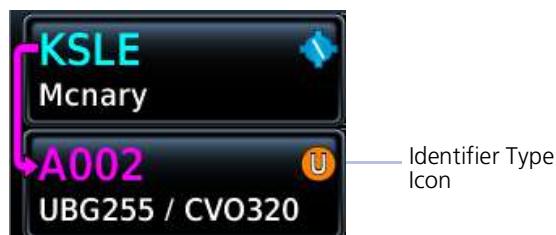

Navigation

Fly-over Waypoint Symbol



This symbol appears on instrument procedures when a waypoint is coded as a *fly-over* in the navigation database.

FEATURE REQUIREMENTS

- System software v3.20 or later

The unit automatically creates a course that takes into account the waypoint type: fly-over or fly-by.



For information about fly-over and fly-by waypoints, consult the AIM.

Navigation**GPS NAV Status Key**

AVAILABLE WITH:
GPS 175 | GNX 375

Located in the lower right corner of the display, the **GPS NAV Status** indicator key displays from-to-next route information when an active flight plan exists. Indications change based on active leg status.

No Flight Plan Exists

Tap for direct access to the active flight plan.

Page icon means an active flight plan does not exist.

Route Indicator Only

Once the page is open, the indicator is display only.

Underscores denote the absence of an active leg.

Active Route Display

Label changes to show active route identifiers (from-to-next) and leg types.

CDI Scale Active

Only from-to waypoints display when the CDI scale is active. This function is controlled via the System Setup screen.

Navigation

Direct To



Tapping this key opens the Direct To function. Search tabs provide three different methods of waypoint selection.

FEATURE LIMITATIONS

- Not all flight plan entries are selectable using Direct To (e.g., holds, course reversals)

Direct To Basics

Direct To is useful for quickly navigating to:

- New waypoints
- An existing waypoint in the active flight plan
- Nearby airports
- Map waypoints
- An off-route course
- User-defined holds

Set a course to any waypoint using Direct To.

Selecting an identifier automatically displays information about the waypoint.

When navigating to a single waypoint (e.g., a nearby airport), the Direct To function provides a quicker alternative to using the active flight plan.

Direct To Search Tabs

Search tabs include: Waypoint, FPL, and NRST APT



Direct To Window

Navigation

WAYPOINT

Similar to an information page, but with course and hold options. This tab is active by default.

Info

- Distance and bearing from current aircraft position
- Applicable city, state, country and/or region (e.g., "NW USA")
- Identifier and type icon

Controls

- **Waypoint Identifier** key with access to multiple search tabs
- **Course To** key for specifying the course angle for the navigation path
- **Hold** key for creating, loading, and activating user-defined holds

FPL & NRST APT

FPL and NRST APT tabs provide a list of selectable identifiers. These tabs have a uniform layout.

FPL: Lists all waypoints contained in the active flight plan.

NRST APT: Lists up to 25 waypoints within a 200 nm radius. The closest airport appears at the top of the list.

Navigation

Direct To Activation



Activating a direct-to course establishes a point-to-point line from the aircraft's present position to the selected destination. The unit provides course guidance until you remove the direct-to waypoint, or replace it with a new direct-to course or flight plan.



Upon activation, Map automatically opens to show a graphical representation of the active direct-to leg.

GPS 175 & GNX 375



GPS NAV Status key changes to show active leg status.

GNC 355/355A



Direct To key changes to show the active direct-to fix. Indication includes the corresponding fix symbol and waypoint identifier. If configured, a user field shows the active waypoint identifier and fix type on Map.



GPS 175/GNX 375:

For convenience, you may activate a direct to course using the control knob. This option is available only when the Home page is active.

Push the knob once to access the Direct To function. After selecting a waypoint, push the knob again to activate the direct-to course.

The window closes and Map opens to show the active leg.

Navigation

Navigating Direct To

While most direct-to operations follow the same basic steps, the method for selecting a waypoint may vary.

DIRECT TO A NEW WAYPOINT

1. Tap **Direct To**.
2. Select a waypoint identifier.
3. Tap **Course** and specify the course heading (if a specific course is necessary).
4. Activate the selection.

DIRECT TO A FLIGHT PLAN WAYPOINT

Flight Plan Waypoints

If a flight plan exists, waypoint sequencing resumes once you reach the direct-to waypoint. If the waypoint is not in the flight plan, the flight plan is no longer active but remains available.

Direct To options are not available for all flight plan entries. Some entries include holds and course reversals which are not selectable using Direct To.

1. Tap **Direct To**.
2. Select **FPL** tab.
3. Select a flight plan leg.
4. Activate the selection.

DIRECT TO THE NEAREST AIRPORT

1. Tap **Direct To**.
2. Select **NRST APT** tab.
3. Select an airport.
4. Activate the selection.

DIRECT TO A MAP WAYPOINT

MAPWPT

For map locations without an existing name, Direct To assigns the "MAPWPT" identifier. Bearing, distance, and map coordinates display on the Waypoint tab.

Apply a direct-to course to any location on the map.

1. Tap a location on Map.
2. Tap **Direct To**.
3. Activate the selection.

You can modify direct-to routes on Map using the **Graphical Edit** function the same as you would a flight plan.

Navigation**DIRECT TO AN OFF-ROUTE COURSE**

You may activate an off-route course using any of the described direct-to methods.

Activating an off-route direct-to course automatically deactivates the current leg of the active flight plan.

**Direct To &
Procedure Fixes**

Approach guidance is not available for procedure fixes. An example would be activating a direct-to course to a waypoint between the final approach fix and missed approach point. Upon arriving at the waypoint, approach guidance does not become active.

Removing a Direct-to Course

To cancel the current direct-to course, tap **Remove**.

Removing a direct-to course:

- Reactivates the original active flight plan
- Assigns the leg nearest to the aircraft's position as the active leg
- Resumes waypoint sequencing

If no active flight plan exists, the aircraft continues on its current heading without any navigation guidance.

Navigation

User Holds

You may define a holding pattern for any direct to waypoint. User holds suspend automatic waypoint sequencing until they expire or are removed.



Tapping **Hold** displays available hold options.



Load Hold	Accept the specified hold parameters and return to the Direct To window.
Hold Activate	Activate the loaded holding pattern.
Course	Specify the course angle.
Direction	Select between Inbound or Outbound.
Turn	Select between Left Turn or Right Turn.
Leg Type	Select Time or Distance.
Leg Time	Specify the leg time in minutes and seconds (MM:SS).
Leg Distance	Specify the leg distance.
EFC	Specify a time for the Expect Further Clearance reminder.
Preview	View the defined holding pattern as it will appear on Map and on the Active FPL page.

CREATE & ACTIVATE A HOLD



Create a hold for a direct-to waypoint. From the Waypoint tab:

1. Tap **Hold**.
2. Specify hold parameters.
3. Tap **Load Hold > Hold Activate**.

Navigation

Waypoints

There are two types of waypoints: database and user.



Database waypoints (i.e., waypoints contained in the navigation database) are organized into the following groups.


- Airport (APT)
- Intersection (INT)
- Very High Frequency Omni-directional Range (VOR)
- Visual Reporting Point (VRP)
- Non-Directional Beacon (NDB)

The Airport page is a great place to start when performing an approach brief, checking weather, or considering a diversion.



You also have the ability to define any point in space and store it. Unlike database waypoints, these "user" waypoints are editable.

Waypoint Information



Dedicated information pages provide waypoint search functions and details not available on the Map page.

FEATURE REQUIREMENTS


- *FIS-B* (viewing NOTAMs)
- Navigation database containing VRP waypoint data

FEATURE LIMITATIONS

- 2-D maps provide zoom functionality only
- *FIS-B* transmits distant and FDC NOTAMs within 100 nm of radio station position

Navigation

Intersection, VOR, VRP, and NDB information pages have a uniform layout.

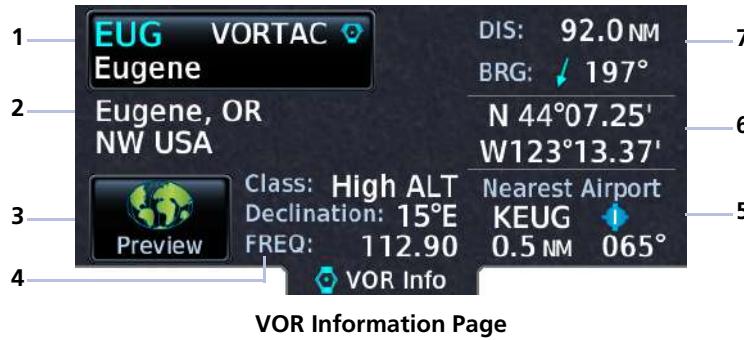

1	Waypoint Identifier key	5	Nearest NAVAID information
2	Location Information	6	Waypoint coordinates
3	Preview key	7	Waypoint distance and bearing
4	Waypoint specific information (e.g., class, station declination, frequency)		

COMMON PAGE FEATURES

All waypoint information pages share the following features.

Data

- Distance and bearing from current aircraft position
- Latitude and longitude
- Applicable city, state, country and/or region (e.g., "NW USA")
- Identifier and type icon

Controls

- Waypoint Identifier** key with access to multiple search tabs
- Preview** key for displaying a 2-D map of the surrounding area (includes SafeTaxi airport depictions)

As you approach an airport, use the Preview function to orient yourself for such things as pattern entry or runway alignment.

Navigation

WAYPOINT SPECIFIC PAGE FEATURES

Features listed here are unique to the corresponding waypoint.


Airport

Selectable abs:

Info: Airport location, elevation, time zone, and fuel availability.

Procedures: Available approach procedures.

Runways: Identifiers, size, surface type, and traffic pattern direction.



Runway
13 / 31

Tapping **Runway** opens a list of available runways.

Frequencies: Available communication and localizer frequencies. The “c” symbol denotes frequencies that function as the CTAF.

View additional frequency information by tapping **More Information**, if available.

WX Data: Applicable METARs, city forecasts, and TAF weather information.

NOTAMs: Applicable distant and FDC NOTAMs.

VRPs: Nearest VRPs.

Intersection

Data fields:

- Nearest VOR (identifier, type icon, bearing, and distance)



Very High Frequency Omni-directional Range

Data fields:

- Frequency
- Nearest airport (identifier, type icon, bearing, and distance)
- Station declination
- VOR class



Visual Reporting Point

Data fields:

- Nearest VRP (identifier, type icon, bearing, and distance)



Non-Directional Beacon

Data fields:

- Frequency
- Nearest airport (identifier, type icon, bearing, and distance)
- Marker description

Navigation

User Waypoint

Selectable functions:

Edit: Opens the Create User Waypoint page for editing purposes.

View List: Displays a list of all user waypoint identifiers.



Delete: Removes the selected user waypoint from the list.

Delete All: Removes all user waypoints from the list.

All deletions require user confirmation.

User waypoints in the active flight plan cannot be edited or deleted.

Data fields:

- Reference position or nearest waypoint (identifier, type icon, radial, and distance), whichever is applicable
- Number of waypoints used out of 1,000

The User WPT page is the only page that allows you to view an entire list of all user waypoints created and saved in the database.

Navigation

Waypoint Selection




The **Waypoint Identifier** key provides access to different waypoint search options. Enter a specific identifier or select one from the available search tabs.

FastFind Predictive Waypoint Entry



FastFind predicts a waypoint based on the characters you select. As you type, the key label changes to reflect the identifier of the nearest matching entry.

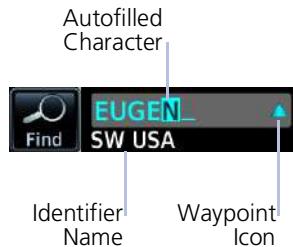

Autofill characters are cyan and display from the cursor position to the right of the field.

Tap to select the predicted waypoint and open the corresponding information page.

Because it relies on your GPS position, FastFind can make predictions based on a single key press.

"No matches found" and "Duplicate found" annunciate when applicable. If no matches are found, "No suggestion" annunciates and the key is not selectable.

FastFind & Flight Plan

For convenience, use FastFind when creating your flight plan. The unit will search for waypoints closest to the current GPS position.

- If inserting a waypoint in the middle of the flight plan, the unit searches for waypoints between the next and previous waypoints.
- If adding a waypoint to the end, the unit searches for waypoints closest to the last waypoint in the flight plan.

FastFind is a convenient shortcut when you are adding waypoints to a flight plan or trying to find a waypoint in a hurry.

Navigation


Search Tabs



The **Find** key provides access to multiple search tabs. Each tab displays a list of selectable identifiers based on specific criteria.

Recent	KSLE Mcnary	469 NM ↑ 357°	User
Nearest Airports	EUGEN SW USA	0.0 NM ↑ 360°	Search by Name
Flight Plan	KLAX Los Angeles Intl	273 NM ↙ 132°	Search by City

Waypoint Search Tabs

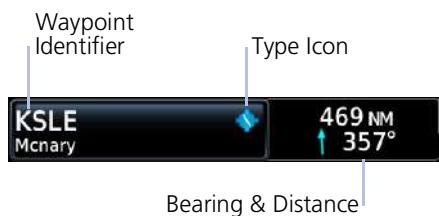

Each entry includes general information about the associated waypoint.

Bearing & Distance

RECENT

Lists up to 20 of the most recently viewed waypoints.

NEAREST

Lists up to 25 waypoints within a 200 nm radius.



Tap **Filter** and select from the available filter options. Only waypoints belonging to the selected class appear in the list.



To list all classes, select **All**.

FLIGHT PLAN

Lists all waypoints contained in the active flight plan.

Navigation

USER

Lists up to 1,000 user-defined waypoints.


SEARCH BY NAME



Lists all airports, NDBs, and VORs associated with the specified facility name.

Tap **Search Facility Name** to begin search.

SEARCH BY CITY

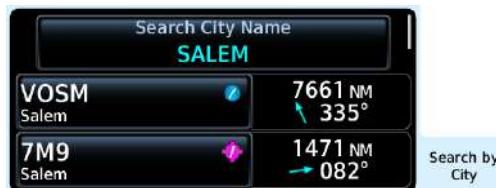

Lists all airports, NDBs, and VORs found in proximity of the city.

Tap **Search City Name** to begin search.

Navigation

Create User Waypoints



Create and store up to 1,000 user defined waypoints.

FEATURE LIMITATIONS

- *Duplicate user waypoint identifiers are not allowed*
- *Names may be up to six characters in length*
- *Comment may be up to 25 characters*
- *Maximum waypoint limit: 1,000*

Home



Access this page from one of two places:

- Waypoint Info page
- Map page

MAP POINTER KEY



Tapping any location on the map that is not a existing waypoint displays the Create Waypoint access key.

Navigation

USER WAYPOINT IDENTIFIER

USR020
Waypoint Identifier

Assign a unique identifier or keep the unit generated identifier. By default, the identifier format is "USR" followed by a sequential three digit number.

USR000
UBG162 / 21

User Waypoint

By default, the identifier format is "USR" followed by a sequential three digit number.

A001
U


User Airport

Identifier format is "A" followed by a sequential three digit number.

User waypoints are helpful when ATC requests that you fly one radial to intercept another. While the point is often defined by an intersection in the navigation database, this is not always the case. The Create User Waypoint function allows you to define the new intersection and insert it into the flight plan in advance, as opposed to using the NAV radio to tune each VOR and specify the radials to fly inbound and outbound.

Navigation

Define Waypoint Criteria

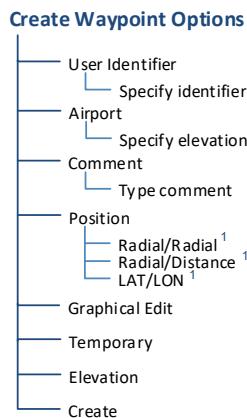

Active user waypoints already existing in a flight plan are not editable.

When creating a user waypoint, you have the option to:

- Create a user waypoint
- Assign a unique identifier
- Set the waypoint as temporary
- Enter a comment
- Set the waypoint position
- Edit the waypoint graphically
- Specify elevation (user airports only)

¹ Waypoint position options are mutually exclusive.
Enabling one disables the other.

User Identifier	Assign a unique identifier.
Airport	Label the user waypoint as a user airport. Inhibits terrain alerting in the vicinity of that waypoint.
Comment	Type a comment regarding the new waypoint.
Position	Set the waypoint position.
Graphical Edit	Open a preview map for graphical editing purposes. User waypoint icon remains stationary as you move the surrounding map to the new location.
Temporary	Assign the waypoint a temporary status. Identifier remains available until the next unit power cycle.
Elevation	Specify the elevation of the user airport. Available only when the Airport key is active.
Create	Add the new identifier to the used waypoints list. The associated information page opens automatically for viewing and editing purposes.

Navigation

COMMENT FORMAT

Default comments display in a specific format for each reference type.

LAT/LON



<LAT> <LON>

Radial/Distance



<Waypoint><Radial> / <Distance>

Radial/Radial



<Waypoint 1><Radial 1> / <Waypoint 2><Radial 2>

POSITION OPTIONS

Set the Waypoint Position using one of the following options.

Radial/Radial:

Specify a waypoint and radial for each of the two reference points.

Radial/Distance:

Specify the reference waypoint, radial, and distance.

LAT/LON:

Specify the point's latitude and longitude.

Navigation

Edit an Existing User Waypoint

FEATURE LIMITATIONS

- *User waypoints that are part of a flight plan are not editable*

OPEN EDIT WAYPOINT PAGE

You can access the edit function multiple ways.

From the dedicated information page:

Home > **Waypoint Info** > **User WPT** > Specify an identifier, or tap **View List** and select an identifier from the used waypoints list > **Edit**

From the Nearest page:

Home > **Nearest** > **User WPT** > Select an identifier from the list (e.g., USR001) > **Edit**

From the Active FPL page:

Home > **Flight Plan** > Select the identifier from the flight plan > **WPT Info** > **Edit**

MODIFY POSITION VALUES

From the Edit WPT page, you can modify a user waypoint's position one of two ways:

1. Tap **Position** > **Latitude/Longitude** > Specify the waypoint's coordinates > **Save**.

OR

1. Tap **Graphical Edit**.
2. Hold and drag the basemap until the user waypoint icon appears over the desired location.
3. Tap **Enter** > **Save**.

Navigation

Import User Waypoints



The **Import Waypoints** key appears when the unit detects a user waypoint on the datacard.

FEATURE LIMITATIONS

- User waypoint file size must not exceed 8 GB

**NOTE**

The import function overwrites any existing user waypoint of the same name.

CREATE USER WAYPOINT FILE

You may create a list of new user waypoints using any spreadsheet program. Read "User Waypoint File Considerations" for limitations and formatting specifications. Organize columns as follows.

A	B	C	D
Waypoint Name	Comment	Latitude	Longitude

	A	B	C	D
1	MTHOOD	MT HOOD PEAK	45.3723	-121.69783
2	CRTRLK	CRATER LAKE	42.94683	-122.11083
3	EIFFEL	EIFFEL TOWER	48.858151	2.294384
4	OCEAN		32.68735672	-51.45543634

User Waypoint File

Navigation

User Waypoint File Considerations

- Limit one waypoint per row
- Names may be up to six characters in length
- Comments may be up to 25 characters
- All letters must be upper case
- Latitude: two digits left of decimal; up to nine digits right of decimal
- Longitude: three digits left of decimal; up to eight digits right of decimal
- (-) indicates southern latitudes (column C) or western longitudes
- Express latitude and longitude coordinates in decimal degrees

Save the file in the .csv format under the name "user.csv." Change the file extension to ".wpt" before copying the file to a blank SD card.

IMPORT USER WAYPOINTS

1. Ensure that the unit power is off.
2. Insert datacard containing user waypoints.
3. Power on unit.
4. From the Home page, tap **Waypoint Info > Import Waypoints**.
5. Acknowledge the pop-up message.


The import function executes in the background. Once the import is complete, an advisory message informs: "User waypoints were imported successfully."

The waypoints are now available for use. You may power down the unit and remove the SD card.

If an imported waypoint is within 0.0001 degree (latitude and longitude) of an existing user waypoint, the existing waypoint and name will remain in use.

Navigation

Nearest




View a list of the nearest waypoints, frequencies, or facilities within 200 nm of the aircraft's position.

From the Home page:

1. Tap **Nearest** > Select a waypoint or frequency icon.
2. Scroll through the list of entries.

Information varies according to the selected waypoint or frequency type. Nearest waypoints provide an identifier key for accessing the associated information page.

**Nearest Airport**

- Identifier • symbol • distance • bearing • approach type
- length of longest runway

**Nearest Intersection**

- Identifier • symbol • distance • bearing

**Nearest Very High Frequency Omni-directional Range**

- Identifier • symbol • distance • bearing • frequency

**Nearest Visual Reporting Point**

- Identifier • symbol • distance • bearing

**Nearest Non-Directional Beacon**

- Identifier • symbol • distance • bearing • frequency

**Nearest User Waypoint**

- Identifier • symbol • distance • bearing

**Nearest Airspace**

- Identifier • symbol • proximity

Navigation



Nearest Air Route Traffic Control Center

- Facility name • distance • bearing • frequency



Nearest Flight Service Station

- Facility name • distance • bearing • frequency
("RX" denotes receive-only frequencies)



Nearest Weather Frequency

- Facility name • distance • bearing
- frequency of nearest ATIS, ASOS, and AWOS

ENTRY LIMITS

NEAREST LIST	ENTRY LIMIT
ARTCC, FSS	05
Airspace	20
Airport, Intersection, VOR, VRP, NDB, User, Weather FREQ	25

The number of entries displayed varies according to item type.

Entries are ordered from closest to farthest.

UPDATE INTERVALS

With the exception of nearest airspace, all lists update every 30 seconds. The nearest airspace list updates once per second.

MULTIPLE FREQUENCIES



This key displays when more than one frequency is available at the indicated range.

Applicable to functions displaying information only (ARTCC, FSS, and WX FREQ).

Navigation

Procedures



Lateral and vertical guidance is available for visual and GPS/RNAV approaches. The published instrument approach procedures allow precision and non-precision approaches to airports and are directly accessible from the Procedures (PROC) icon.

FEATURE REQUIREMENTS

- Baro-corrected altitude source (automatic sequencing of altitude leg types)

In the absence of baro-corrected altitude data, altitude leg types require manual sequencing.

FEATURE LIMITATIONS

- The flight plan allows only one procedure to be loaded at a time. Adding a new procedure overwrites any existing procedure

LOAD A PROCEDURE



Select a procedure type, then define the criteria for that procedure on the corresponding setup page.

By default, these keys display underscores.



Upon completion, the specified airport and procedure appear on the associated key.

When loading a procedure, always remember to check the runway, transition, and all waypoints.

COMMON PAGE CONTROLS

All procedure pages provide the following setup controls.

Airport: Select an airport for the procedure.

Transition: Select a transition.

Runway: Select a runway for the selected airport.

Preview: View a 2-D map of the surrounding area (includes SafeTaxi airport depictions).

For page specific controls, refer to the appropriate procedure description.

Navigation

Flight Procedure Basics



NOTE

Advisory climb altitudes for SIDs may not match charted altitudes. Do not rely solely on advisory altitudes.

- Always check the runway, transition, and waypoints for all procedures.
- Heading legs indicate in white as "HDG XXX°" on flight plans.
- The unit provides lateral and, when appropriate, vertical guidance for visual and GPS/RNAV approaches.
- Use Map as an aid to situational awareness during ILS, VOR, NDB, and non-precision localizer-based approaches. A magenta line depicts the active leg (or the portion of the approach currently in use).
- Always use the appropriate radio navigational aid for primary approach course guidance during non-GPS approaches.
- Check the annunciator bar for the current phase of flight.
- Many non-precision approaches have GPS overlays, improving accuracy so that approaches do not require overflying a VOR or NDB.
- The unit guides you through complex overlay approaches, automatically sequencing each leg up to the missed approach point.
- Fly approaches as published with the full transition using any published feeder route or initial approach fix, or with a vectors-to-final transition.
- While not required under TSO-C146e, an optional baro-corrected altitude source is recommended for automatic sequencing of altitude leg types.

When adding procedures to a flight plan:

- Arrange procedures around the existing flight plan as follows:
Departure, En route, Arrival, Approach
- Insert departure waypoints before en route waypoints
- Insert arrival waypoints between en route and approach waypoints
- Always verify that the transition waypoints between each phase are correct

Map complements your printed approach plates by improving situational awareness during the approach. It does not replace printed approach plates.

Always fly an approach as it appears on the approach plate.

Navigation**Roll Steering Autopilots**

Roll steering terminates when approach mode is selected on the autopilot. It becomes available once you initiate the missed approach.

TO/FROM LEGS ON CDI**TO Legs**


On these legs, the FROM/TO flag on the CDI indicates "TO" and the Distance field on the flight plan decreases as you navigate the leg.

Most legs are this type.

FROM Legs

On these legs, the FROM/TO flag on the CDI indicates "FROM" and the Distance field on the flight plan increases as you navigate the leg.

From legs are typically found on procedure turns and on some missed approach procedures.

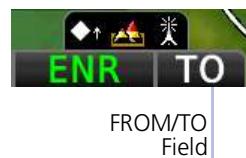

Composite CDI. When interfaced to a composite type CDI, the composite CDI flag shows only "TO" indications. Always refer to the FROM/TO field on the annunciator bar when using composite CDI.

Navigation

GPS Flight Phase Annunciations

Flight Phase
(Caution)

LPV | TO

Check the annunciator bar for current phase of flight.

Under normal conditions, these annunciations are green. They turn yellow when cautionary conditions exist.

Phase of flight annunciations are a direct indication of the current CDI behavior for the selected navigation source.

Not all annunciations are available for every navigator.

ANNUNCIATION	FLIGHT PHASE
0.30 NM	<ul style="list-style-type: none"> • 0.3 nm CDI scale • Based on pilot selection
1.00 NM	<ul style="list-style-type: none"> • 1.0 nm CDI scale • Based on pilot selection
DPRT	<p>Departure</p> <ul style="list-style-type: none"> • Terminal level with departure procedure as the active navigation • System using non-precision approach integrity • CDI full-scale deflection: 0.30 nm
DR	<p>Dead reckoning</p> <ul style="list-style-type: none"> • CDI not available
ENR	<p>En route</p> <ul style="list-style-type: none"> • CDI full-scale deflection: 2.0 nm or current CDI scale selection, whichever is smaller
LNAV	<p>Lateral Navigation Approach</p> <ul style="list-style-type: none"> • Fly to published LNAV minimums
LNAV+V	<p>Lateral Navigation Approach with Advisory Vertical Guidance</p> <ul style="list-style-type: none"> • Fly to published LNAV minimums
L/VNAV	<p>Lateral and Vertical Navigation Approach</p> <ul style="list-style-type: none"> • Fly to published LNAV/VNAV minimums
LOW ALT	<p>Low Altitude</p> <ul style="list-style-type: none"> • Aircraft's estimated height is lower than the final approach waypoint height by approximately 50 meters • For LNAV+V, LNAV/VNAV, or LPV approaches • Not active when Terrain is operational

Navigation

ANNUNCIATION	FLIGHT PHASE
LP	Localizer Performance Approach <ul style="list-style-type: none">• Fly to published LP minimums
LP +V	Localizer Performance Approach with Advisory Vertical Guidance <ul style="list-style-type: none">• Fly to published LP minimums
LPV	Localizer Performance with Vertical Guidance Approach <ul style="list-style-type: none">• Fly to LPV minimums
MAPR	Missed Approach <ul style="list-style-type: none">• System using missed approach integrity• CDI full-scale deflection: ± 0.30 nm
OCN	Oceanic <ul style="list-style-type: none">• CDI full-scale deflection: 2.0 nm
TERM	Terminal <ul style="list-style-type: none">• CDI full-scale deflection: 2.0 nm or current CDI scale selection, whichever is smaller
VISUAL	Visual Approach <ul style="list-style-type: none">• Vertical guidance based on advisory terrain avoidance calculations• CDI scaling is identical to LPV approaches

Navigation

Departures

Loading a Departure into Flight Plan

- Always load the departure at the departure airport in the flight plan
- Flight plans allow only one departure procedure at a time
- Loading a departure when one is already present will replace the existing entry
- Selecting a departure, transition waypoint, and runway defines the route

FEATURE LIMITATIONS

- Vector-only departures are not available in the Procedures database*

PAGE SPECIFIC CONTROLS



Load Departure: Loads departure procedure into the active flight plan.


Activate Departure: Activates the loaded departure procedure.

Remove Departure: Removes the loaded departure procedure.

SELECT A DEPARTURE

From the Home page:

- Tap **PROC > Departure**.
- Confirm the selected airport. If necessary, tap **Airport** and choose an airport using the provided search options.
- Tap **Departure** > Select a departure from the list.
- Tap **Transition** > Select a transition.
- Tap **Runway** > Select a runway.
- Tap **Preview** > Review the departure diagram and sequence list.
- Tap **Load Departure**. The Active FPL page opens.
- Scroll the flight plan to view all departure waypoints.

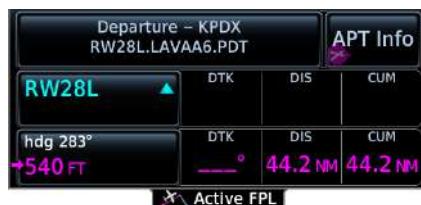

To change or remove the departure:

- Tap the existing flight plan departure
- Select a different one.

OR

- Tap **Remove Departure**.

Navigation

Flight Plan Departure Options

Departure Options

- Select Departure
- Remove Departure

Selecting a departure on the flight plan opens a menu. Changes to the active flight plan take effect immediately.

- Select a new departure
- Remove the selected departure from the flight plan

Navigation

Arrivals

Loading an Arrival into Flight Plan

- Load a Standard Terminal Arrival (STAR) at any airport with a published arrival procedure
- Flight plans allow only one arrival procedure at a time
- Loading an arrival when one is already present will replace the existing entry
- Selecting an arrival, transition waypoint, and runway defines the route

PAGE SPECIFIC CONTROLS



Load Arrival: Loads arrival procedure into the active flight plan.

Activate Arrival: Activates the loaded arrival procedure.

Remove Arrival: Removes the loaded arrival procedure.

SELECT AN ARRIVAL

From the Home page:

1. Tap **PROC > Arrival**.
2. Confirm the selected airport. If necessary, tap **Airport** and choose an airport using the provided search options.
3. Tap **Arrival** > Select an arrival from the list.
4. Tap **Transition** > Select a transition.
5. Tap **Runway** > Select a runway.
6. Tap **Preview** > Review the arrival diagram and sequence list.
7. Tap **Load Arrival**. The Active FPL page opens.
8. Scroll the flight plan to view all arrival waypoints.



To change or remove the arrival:

- Tap the existing flight plan arrival.
- Select a different one.

OR

- Tap **Remove Arrival**.

Navigation

Flight Plan Arrival Options

Arrival Options

- Select Arrival
- Remove Arrival

Selecting an arrival on the flight plan opens a menu. Changes to the active flight plan take effect immediately.

- Select a new arrival
- Remove the selected arrival from the flight plan

Navigation

Approaches

Loading an Approach into Flight Plan

- Always check the runway, transition, and all waypoints
- Flight plans allow only one approach procedure at a time
- You may load an alternate approach during a missed approach procedure (flight plan retains all missed approaches)
- Loading an approach when one is already present will replace the existing entry
- Selecting an approach, transition waypoint, and runway defines the route

PAGE SPECIFIC CONTROLS



Load Approach: Loads approach procedure into the active flight plan.

Activate Approach: Activates the loaded approach procedure.

Remove Approach: Removes the loaded approach procedure.

Channel/ID: Loads an SBAS approach based on the specified channel.

SELECT AN APPROACH

From the Home page:

1. Tap **PROC > Approach**.
2. Confirm the selected airport. If necessary, tap **Airport** and choose an airport using the provided search options.
3. Tap **Approach** > Select an approach from the list.
4. Tap **Transition** > Select a transition.
5. Tap **Runway** > Select a runway.
6. Tap **Preview** > Review the approach diagram and sequence list.
7. Tap **Load Approach**. The Active FPL page opens.
8. Scroll the flight plan to view all approach waypoints.

Navigation



To change or remove the approach:

- Tap the existing flight plan approach.
 - Select a different one.
- OR**
- Tap **Remove Approach**.

SBAS APPROACHES

Channel ID Key

- Select the channel ID for an SBAS approach to the current destination
- Provides an alternate means of loading an approach.
- IDs are available from an approved approach chart
- In the case of duplicate numbers, select an approach from the provided list

To load an SBAS approach:

1. Tap **Channel/ID**.
2. Specify an approach channel.

If present, both channel and ID load automatically.

SUSPENDED APPROACH PROCEDURE ANNUNCIATION

"SUSP" indicates that automatic sequencing of approach waypoints is suspended on the active leg. This annunciation appears in the procedure field of the annunciator bar.

Suspended approaches typically occur during:

- Holding patterns
- Crossing the missed approach point
- Climb to altitude legs
- Hold to altitude legs

Navigation

PROCEDURE TURNS

Roll Steering & Procedure Turns

The steering provided for a procedure turn does not guarantee that the aircraft will stay within the charted procedure turn boundaries. Always be sure to fly within the confines of the charted procedure.

A procedure turn is stored as another approach leg. It does not require any special operations other than flying the procedure itself.

Roll steering is available for aircraft with a compatible autopilot.

Flight Plan Approach Options

Approach Options

- Activate Approach
- Activate Vectors to Final
- Activate Missed Approach
- Select Approach
- Remove Approach

Selecting an approach on the flight plan opens a menu. Changes to the active flight plan take effect immediately.

- Activate the selected approach
- Activate vectors to final for the selected approach
- Activate a missed approach
- Select a new approach
- Remove the selected approach from the flight plan

Navigation

Missed Approach

The method for activating a missed approach depends on your position in relation to the missed approach point.

BEFORE MISSED APPROACH POINT

Select **Activate Missed Approach**. This function is available in two applications:

Active FPL:

Home > **Flight Plan** > Select the approach > **Activate Missed Approach**

OR

Procedures:

Home > **Procedures** > **Activate Missed Approach**

Once selected, guidance continues along an extension of the final approach course (i.e., final approach fix to missed approach point).

The unit automatically sequences to the first leg of the missed approach. This allows you to execute the missed approach prior to reaching the missed approach point.

AFTER MISSED APPROACH POINT

Upon reaching the missed approach point, a pop-up presents two options.



To continue with sequencing suspended, tap **Remain Suspended**.

To receive guidance to the missed approach hold point, tap **Activate GPS Missed Approach**.

Navigation

Approach Hold

Hold Options

- Activate Hold
- Insert After
- Edit Hold
- Exit Hold
- Remove

Selecting an approach hold on the flight plan opens a menu. Changes to the active flight plan take effect immediately.

- Activate the selected hold
- Insert a waypoint after the hold
- Edit hold details
- Exit the holding pattern before the timer expires
- Remove the selected hold from the flight plan

ACTIVATE HOLD




1. Select the hold.
2. Tap **Activate Hold**.
3. Confirm the request.

REMOVE HOLDING PATTERN



1. Select the hold.
2. Tap **Remove**.
3. Confirm the request.

EXIT HOLDING PATTERN

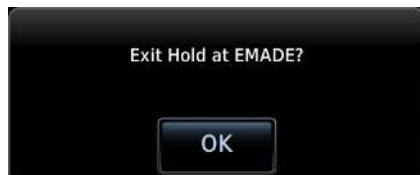

1. Tap **SUSP**.
2. Select the hold.
3. Tap **Exit Hold**.
4. Confirm the request.


Navigation

NON-REQUIRED HOLDING PATTERNS



Upon activating an RNP GPS approach, decide whether to skip non-required holding patterns during the initial transitions of the approach.

A pop-up presents two options.

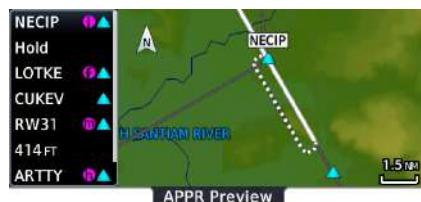

Selecting **Yes** adds the hold to the flight plan.

Preview shows the hold in white.



Selecting **No** means the hold is not included in the flight plan.

Preview shows the hold in gray.

Timer/Distance field displays on the active flight plan (refer here when flying the outbound portion of the holding pattern). Holding pattern appears on Map with the active flight plan leg indication.

CROSSING MISSED APPROACH POINT

When crossing the missed approach point:

- “SUSP” annunciation indicates that approach waypoint sequencing is suspended at the missed approach point
- FROM/TO flag on the CDI indicates “From” for non-composite CDIs
- FROM/TO field on the annunciator bar indicates “FR”
- Course guidance continues along the final approach course

If you need to go around the holding pattern again to lose extra altitude or speed, tap **SUSP** to manually suspend waypoint sequencing before crossing the holding waypoint the second time.

If you have already passed the waypoint, re-activate the holding pattern.

Navigation


DME Arc

DME Arc Approaches

- Left/right guidance relative to the arc
- Manual arc leg activation once aircraft is near the arc

The unit supports approaches containing DME arcs.

To manually activate DME Arc, the aircraft must be within the shaded area.

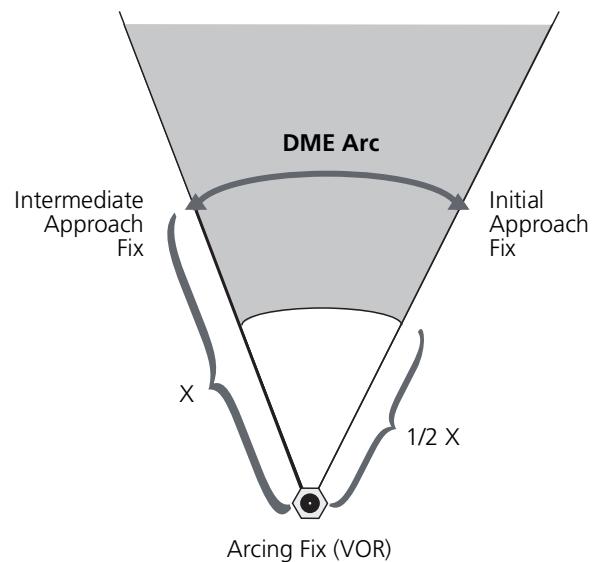

Navigation

RF Legs

AC 90-101A - RF Legs

AC 90-101A defines RF leg as "A constant radius circular path, around a defined turn center, that starts and terminates at a fix. An RF leg may be published as part of a procedure."

The unit supports radius-to-fix (RF) legs associated with RNAV RNP 0.3 non-AR approaches, when approved by the installation.

Flying a radius-to-fix approach is similar to flying a DME arc approach (status indications are identical).

Unlike DME arcs, however, RF legs are not based on a VOR. They may have varying radii, making them larger or smaller than arc legs.

For details regarding RF legs for specific aircraft, consult the AFMS.

Vectors to Final



Activating the approach with vectors to final displays an extension of the final approach course on Map.



Magenta depicts the active leg of the flight plan.



CDI needle remains off center until you are established on the final approach course. As a reminder, "vtf" annunciates as part of the active leg on the GPS Nav status key.

Activating vectors-to-final while on the From side of the final approach fix suspends automatic waypoint sequencing. "SUSP" annunciates at the bottom of the screen. Sequencing resumes once the aircraft is on the To side of the final approach fix and within full-scale deflection.

Navigation

ILS Approach



NOTE

ILS and LOC approaches are not approved for GPS. GPS guidance is for monitoring purposes only.



Selecting an ILS or LOC approach results in a pop-up message. Activate the approach or select a different one.

Do not attempt to use the unit as the primary navigation source during ILS approach.

Navigation

RNAV Approaches

Fly RNAV approaches according to the published chart. Supported approaches include:

- LNAV/VNAV • LNAV+V • LP
- LNAV • LPV • LP+V


LNAV APPROACH

RNAV non-precision lateral navigation approach.

LNAV+V APPROACH

RNAV non-precision LNAV approach with advisory vertical guidance.

The glidepath is a light dashed line on the vertical profile (Jeppesen charts only) with an associated glidepath angle (usually in the 3.00 degree range) to assist in maintaining a constant vertical glidepath, similar to an ILS glideslope.

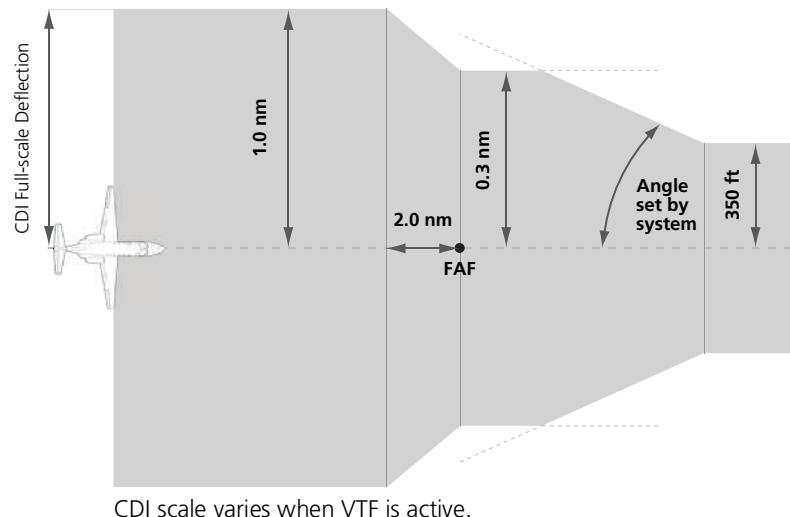

Navigation

LPV APPROACH

Localizer performance with vertical guidance. Similar to flying the standard ILS approach.

This segment describes a typical LPV approach sequence and the necessary pilot actions.

Within 31 nm of destination:

- Mode switches from En Route to Terminal
- CDI scale transitions from 2.0 nm to 1.0 nm, full-scale deflection

Approaching initial approach fix:

- Waypoint message annunciates
- Time to Turn advisory annunciates and 10 second timer counts down as the distance approaches zero

Approaching final approach fix:


- Mode switches from Terminal to LPV

2.0 nm from final approach fix:

- CDI scaling tightens from 1 nm to the approach-defined angular full-scale deflection

60 seconds before final approach fix:

- System verifies GPS position integrity is within approach limits

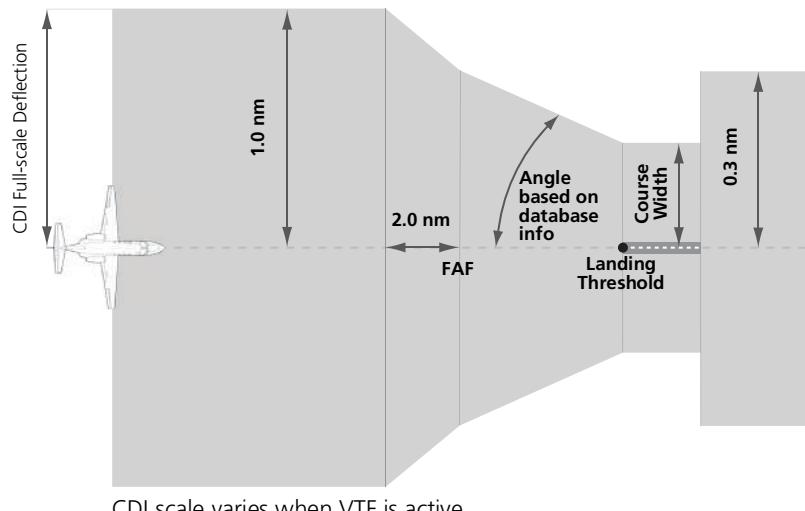

Navigation

If GPS integrity exceeds the horizontal and/or vertical alarm limits:

- Approach downgrades to non-precision
- "LNAV" appears in the annunciator bar to inform of the change if there are LNAV minimums for the approach
- Advisory message: "GPS approach downgraded. Use LNAV minima."
- Glideslope indication disappears
- Pilot continues approach using LNAV non-precision minimums, if applicable

If GPS integrity does not meet the non-precision horizontal alarm limits:

- Advisory message: "Abort Approach. GPS approach is no longer available."
- Pilot acknowledges message
- Unit reverts to terminal limits of 1 nm to support navigation to the missed approach

After the aircraft passes final approach fix:

- Approach aborts due to a loss of WAAS integrity
- Pilot captures the glideslope (method is same as for ILS glideslope)

When crossing the final approach fix:

- Waypoint sequences to the missed approach point (e.g., RW31, the runway threshold)
- Pilot flies toward missed approach point, keeping the needle on the external CDI (or HSI) at center, and observing published altitude minimums
- Final course segment becomes the active flight plan leg

Approaching missed approach point:

- Advisory message: "Arriving at Waypoint."

Crossing missed approach point:

- Sequencing suspends
- Pop-up message: "Missed Approach Waypoint Reached"
- Pilot decides whether to remain suspended or activate the missed approach
 - Tapping **Remain Suspended** allows you to continue with sequencing suspended
 - Tapping **Activate GPS Missed Approach** allows you to continue with guidance to the missed approach hold point

Prepare aircraft for missed approach operation:

- Pilot taps **UNSUSP** (sequences missed approach), then follows the unit provided guidance to the missed approach hold point and holds

Navigation

LP APPROACH

Points About LP Approaches

- Use SBAS accuracy, making them similar to an LNAV approach but more precise
- Combine the lateral accuracy of an LPV approach with the angular scaling of a localizer approach
- Often contain step-down altitudes
- Always result in a minimum descent altitude and missed approach point

This segment describes a typical LP approach sequence and the necessary pilot actions.

Within 30 nm of destination:

- Mode switches from En Route to Terminal
- CDI scale transitions from 2.0 nm to 1.0 nm, full-scale deflection

Approaching initial approach fix:

- Turn direction message annunciates
- Time to Turn advisory annunciates and 10 second timer counts down as the distance approaches zero

Approaching final approach fix:

- Unit begins to automatically rescale in an angular fashion, allowing you to fly as you would a standard localizer approach

2.0 nm from final approach fix:

- CDI scaling tightens from 2 degrees or 0.3 nm full-scale deflection, whichever is smaller

60 seconds before final approach fix:

- System verifies GPS integrity is within the horizontal limits to complete the LP non-precision approach

Navigation

If GPS integrity exceeds the horizontal alarm limits:

- Approach downgrades to non-precision
- "LNAV" annunciates to inform of the change
- Advisory message: "GPS approach downgraded. Use LNAV minima."
- Pilot continues approach using LNAV non-precision minimums, if applicable

If GPS integrity does not meet the non-precision horizontal alarm limits:

- Advisory message: "Abort Approach. GPS approach is no longer available."
- Pilot acknowledges message
- Unit reverts to terminal limits of 1 nm to support navigation to the missed approach

If the approach indicates "LP+V," then advisory vertical guidance may be removed without annunciation. This is due to the vertical guidance not being within tolerances.

This does not constitute a downgrade. You may still fly the approach to LP minimums.

When crossing the final approach fix:

- Waypoint sequences to the missed approach point (e.g., RW31, the runway threshold)
- Pilot flies toward missed approach point, keeping the needle on the external CDI (or HSI) at center, observing published altitude minimums
- Final course segment becomes the active flight plan leg

Approaching missed approach point:

- Advisory message: "Arriving at Waypoint."

At the missed approach point:

- Pilot initiates missed approach, if necessary

Navigation

Crossing missed approach point:

- Sequencing suspends
- Pop-up message: "Missed Approach Waypoint Reached"
- Pilot decides whether to remain suspended or activate the missed approach
 - Tapping **Remain Suspended** allows you to continue with sequencing suspended
 - Tapping **Activate GPS Missed Approach** allows you to continue with guidance to the missed approach hold point

Prepare aircraft for missed approach operation:

- Pilot taps **UNSUSP** (sequences missed approach)

NOTE: For missed approaches with heading legs, fly manually until you reach the first active course leg.

- Pilot follows the unit provided guidance to the missed approach hold point and holds

LP+V

Flying an LP approach with advisory vertical guidance (LP+V) does not change how the approach should be flown. The pilot is still responsible for descending to the correct altitude at each step down.

The result is still an MDA and missed approach point.

Navigation

Visual Approach

Points About Visual Approaches

- Provide advisory horizontal and optional vertical guidance for the selected runway
- Lateral guidance is always provided for visual approaches
- Helps stabilize the runway approach
- Three methods for loading and activation

FEATURE REQUIREMENTS

- *Valid terrain database*

FEATURE LIMITATIONS

- *Not all airports in the database support visual approaches*
- *Only external CDI/VDI displays provide vertical deviation indications*

Published data is used to determine the visual approach GPA and threshold crossing height (TCH) for the selected runway. If no published data is available, the default is 3 degrees GPA and 50 ft TCH.

You may load and activate a visual approach from the following apps.

- Map
- Procedures
- Waypoint Info



Upon loading the visual approach, a pop-up informs when vertical guidance is available.

If available, the pop-up contains the glidepath angle (GPA) and threshold crossing (TCH).

If unavailable, it reads: "NO VERTICAL GUIDANCE"

Terrain and obstacle obstructions along the approach path determine the availability of vertical guidance advisories for visual approaches.

- If no known obstructions are within the approach path, vertical guidance is provided to a maximum distance of 28 nm from the runway.
- If there are known obstructions further than 3 nm, but within the 28 nm maximum distance from the runway along the approach, vertical guidance is limited to the approach path after crossing the known obstructions. After loading the approach, a shortened magenta line shows on the map.

If obstructions are within 3 nm to the runway, along the approach path, advisory vertical guidance is not available.

Navigation

LOAD A VISUAL APPROACH FROM MAP

When the aircraft is within 10 nm of the destination airport, the **Visual Approach** selector key becomes active. This key may appear in one of two places:

On the map or at the left of the screen if the supporting airport is selected.

1. Select the airport icon.
2. Tap **Visual**.
3. Select from the list of available visual approaches.

Once selected, the visual approach immediately loads and activates.

For more about **Visual Approach** key configuration, refer to *Visual Approach*.

LOAD A VISUAL APPROACH FROM PROCEDURES

Two methods:

Home > **PROC** > **Approach**

OR

Home > **Waypoint Info** > **Airport** > **PROC** > Select an approach (similar to published instrument approaches)

Navigation

Autopilot Outputs



CAUTION

Engage the autopilot heading mode and set the heading bug appropriately to use the autopilot on heading legs using the autopilot's NAV, GPSS, or APR mode. Not all autopilots follow guidance on these leg types. Some revert to a roll only or wings level mode.

FEATURE REQUIREMENTS

- Availability dependent upon configuration


FEATURE LIMITATIONS

- Applicable to King KAP 140 and KFC 225 autopilots

Outputs for the King KAP 140/KFC 225 autopilot units require manual activation.

If configured, this function prompts you to enable autopilot outputs during the approach procedure.

GNX 375 shown as typical.

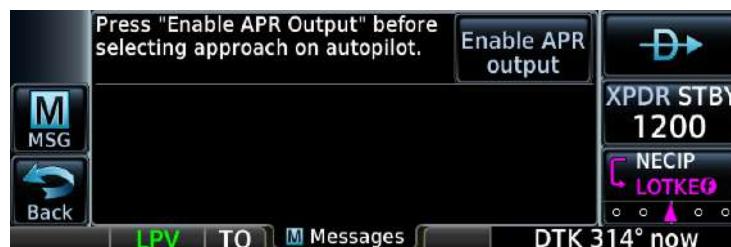

Enable APR Output Advisory

Once enabled, the unit provides guidance information consistent with what the autopilot expects (i.e., angular CDI scaling and glideslope capture for LPV or other vertically guided GPS approaches).

ENABLE AUTOPILOT OUTPUTS

1. Acknowledge the advisory message.
2. Tap **Enable APR Output**.
3. Follow the unit provided guidance.

INTENTIONALLY LEFT BLANK

Planning

4 Planning

VERTICAL CALCULATOR	4-3
FUEL PLANNING	4-5
DALT/TAS/WIND CALCULATOR	4-9
RAIM PREDICTION.....	4-12





Planning

PLANNING APPS & FUNCTIONS



This section describes features that make flight planning easier and more efficient.

Planning apps and setup functions reside in the System Utilities.

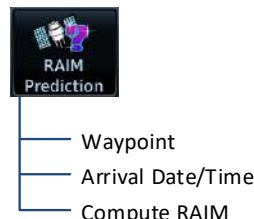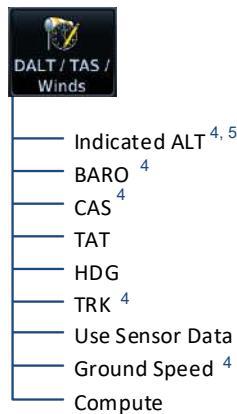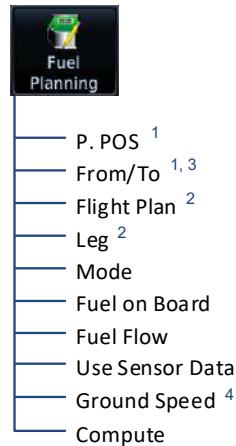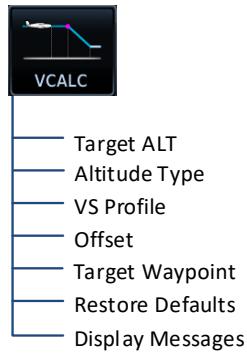

¹ Point-to-Point mode only. ² Flight Plan mode only.

³ From key not selectable when Present Position (P.POS) function is active.

⁴ Function not selectable when sensor data in use. ⁵ Indicates pressure altitude when sensor data in use.

Planning

Vertical Calculator



Calculate time to TOD and vertical speed required to reach target altitude at the specified location.

**WARNING**


Do not rely on VCALC messages as the only means of either avoiding terrain/obstacles or following ATC guidance. VCALC provides advisory information only and must be used in concert with all other available navigation data sources.

FEATURE LIMITATIONS

This feature is inhibited when:


- Groundspeed is < 35 knots
- No active flight plan or direct-to destination is available
- One of the following modes is active: SUSP, Vectors-to-Final, OBS
- Navigating to a waypoint after the FAF

VCALC Page



The Vertical Calculator (VCALC) feature is helpful when you want to descend to a certain altitude near an airport.

Create a 3-D profile to guide you from your present position and altitude to a final (target) altitude at a specified location. Once defined, you may configure message alerts and additional data on the Map page to stay informed of your progress.

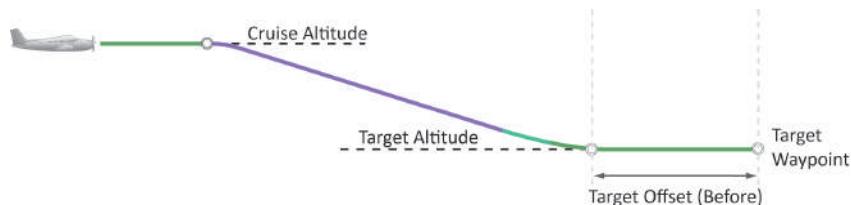

Planning

Target ALT	<ul style="list-style-type: none"> Specify the final (target) altitude for the course Altitude reference used for VCALC calculations
Altitude Type	<ul style="list-style-type: none"> Toggles between "MSL" and "Above WPT" Above WPT is available for airports only
VS Profile	<ul style="list-style-type: none"> Specify the vertical speed value
Offset	<ul style="list-style-type: none"> Distance value representing the geographical location at the target altitude Distance is measured from the target waypoint
Before/After	<ul style="list-style-type: none"> Indicates whether the offset distance defines a point before or after reaching the target waypoint "After" indication not available for the last destination in flight plan
Target Waypoint	<ul style="list-style-type: none"> Reference location specified in the flight plan or active direct-to that will be used for planning a descent When using a flight plan, the target waypoint is a reference that can be specified from the waypoints in the flight plan Last waypoint in the flight plan is the default target setting

STATUS

VCALC status messages display here.

VS REQUIRED

Displays the vertical speed required to reach the target altitude at the specified offset.

VCALC Setup



Tap **Menu** to access controls for:

- Restoring default page settings
- Displaying VCALC related advisory messages

RESTORE DEFAULTS

Resets VCALC page settings to their default values. Excludes Target Waypoint.

DISPLAY MESSAGES

Allows VCALC related advisory messages to display on the Messages page.

Planning

Fuel Planning



View fuel conditions along any flight plan (active or programmed) or between two waypoints (including the active direct-to).

Home


↳ Utilities

↳ Fuel Planning

The fuel planning feature computes fuel conditions based on route, ground speed, fuel on board, and fuel flow.

Input values may be entered manually or supplied by sensors, if connected.

Fuel Planning Page



Tapping **Mode** toggles the active fuel planning mode between Point to Point and Flight Plan. Point to Point is the default mode setting.

Point-to-Point Mode

Calculate fuel between two waypoints in the database, or between the aircraft's present position and a selected waypoint.

Flight Plan Mode

Calculate fuel for a specific flight plan leg, or for the cumulative flight plan.

Use the mode specific controls to define the flight path (leg or route). Required input values are dependent upon mode selection.

Fuel on board, fuel flow, and ground speed data are required independent of mode selection.

P.POS	From N 44°54.43' W122°59.69'	To _____
Mode Point to Point	Fuel on Board ____ GAL	Fuel Flow ____ GAL/HR
Use Sensor Data _____	Ground Speed 0 KT	Compute

Point-to-Point Mode Controls

Flight Plan Active FPL	Leg P.POS → KCVO	
Mode Flight Plan	Fuel on Board 50.0 GAL	Fuel Flow 8.0 GAL/HR
Use Sensor Data _____	Ground Speed 0 KT	Compute

Flight Plan Mode Controls

Planning

For Planning Purposes Only

- When interfaced with a Garmin EIS or certain fuel computers, Fuel on Board and Fuel Flow values are supplied by EIS or the fuel computer. If an EIS or fuel computer is not present, or if the Use Sensor Data function is not active, these values are specified by the pilot and are not an indication of actual fuel on board or fuel flow.
- Fuel Required to <destination> is a calculated prediction. It is not a direct indication of actual fuel quantity once the aircraft reaches its destination.
- All data entries on this page are used exclusively by the Fuel Planning app.
- Fuel computations are for planning purposes only.

Adjust fuel on board and fuel flow values as necessary to account for changes in performance.

Planning

MODE	SELECTION	DESCRIPTION
Point-to-Point	P. Position	<ul style="list-style-type: none"> Enters the current aircraft coordinates as the departure location (or From waypoint) Aircraft latitude and longitude fields replace the From waypoint key
	From	<ul style="list-style-type: none"> Specify a waypoint from the database as the departure location (or From waypoint) Not available when P. Position is active
	To	<ul style="list-style-type: none"> Specify a waypoint from the database as the destination (or To waypoint)
Flight Plan	Flight Plan	<ul style="list-style-type: none"> Opens a list of available flight plans Options include the active flight plan or one from the catalog Defaults to the active flight plan if no selection is made
	Leg	<ul style="list-style-type: none"> Options dependent on flight plan selection Defaults to cumulative leg option if no selection is made
Both	Fuel on Board	<ul style="list-style-type: none"> Specify the amount of fuel on board (gallons) This amount decreases once per second based on the specified fuel flow value or sensor data
	Fuel Flow	<ul style="list-style-type: none"> Specify the current fuel flow rate (gallons per hour)
	Use Sensor Data	<ul style="list-style-type: none"> Toggle on to utilize current GPS ground speed data and fuel sensor data (if available) When available, the unit displays fuel flow and fuel on board data from TXi, GI 275, or the fuel computer
	Ground Speed	<ul style="list-style-type: none"> Behavior based on state of Use Sensor Data Use Sensor Data key inactive: <ul style="list-style-type: none"> Function selectable Specify ground speed Use Sensor Data key active: <ul style="list-style-type: none"> Function not selectable Displays current GPS ground speed when the Use Sensor Data key is active This value is used to calculate fuel statistics when you press the Compute key

Planning**Computing Fuel Statistics****Compute**

Compute and display fuel data based on the selected fuel planning mode and specified input values.

FOR PLANNING PURPOSES ONLY		
From	To (CUM)	Next
Prev OG64	KEUG	Next
Fuel Req for Leg 7.1 GAL	Fuel after Leg 92.8 GAL	RSV after Leg 09:16:59
Range 1299 NM	Efficiency 13.0 NM/GAL	Endurance 09:59:19
Computed Fuel		

Statistics for the selected leg or route display on a dedicated data page. **This information is for planning purposes only.**

Tap **Next** or **Prev** to view statistics for other legs in the flight plan (if applicable).

Statistics include:

- Fuel required for leg
- Fuel after leg
- Reserve after leg
- Range
- Efficiency
- Endurance

COMPUTE FUEL STATISTICS

1. Select a fuel planning mode.
2. Define a leg or route.
 - If "Flight Plan" is set, select the flight plan and leg. Selecting the active flight plan sets the starting waypoint at the aircraft's current position.
 - If "Point to Point" is set, select From and To waypoints, or use the aircraft's current position as the From waypoint.
3. Specify the amount of fuel on board and average fuel flow rate.
4. Specify ground speed or elect to use sensor data.
5. Tap **Compute**.

Planning

DALT/TAS/Wind Calculator



Calculate density altitude, true airspeed, and winds.

FEATURE REQUIREMENTS

- Fuel/air data computer (*pressure altitude*)
- Valid sensor data

DALT/TAS/Wind Page

Home**DALT/TAS/Winds**

This feature indicates the theoretical altitude at which the aircraft performs based on several input variables.

Editing Input Data

Available selections are dependent on sensor data use. TAT and HDG may also be available via an external data source.

Default
Indicated ALT
BARO
CAS
TAT
HDG
TRK
Ground Speed

Use Sensor Data Active
Pressure ALT
BARO
CAS
TAT
HDG
TRK
Ground Speed

Not Selectable



Planning

	<ul style="list-style-type: none"> Specify indicated altitude value^{1,2}
Indicated ALT	<ul style="list-style-type: none"> Use +/- keys to indicate above or below sea level Mutually exclusive with Pressure ALT
BARO	<ul style="list-style-type: none"> Specify barometric pressure value³
CAS	<ul style="list-style-type: none"> Specify calibrated air speed value²
TAT	<ul style="list-style-type: none"> Specify true air temperature Use +/- keys to indicate above or below 0°
HDG	<ul style="list-style-type: none"> Specify heading value
TRK	<ul style="list-style-type: none"> Specify track angle value²
Use Sensor Data	<ul style="list-style-type: none"> Inputs reference values (internal or received from air data computer) Replaces indicated altitude with pressure altitude received from fuel/air data computer Excludes TAT and HDG
Ground Speed	<ul style="list-style-type: none"> Specify ground speed²

¹ Toggles to Pressure ALT indication when sensor data in use.

² Not selectable when sensor data in use. ³ This field is absent when sensor data is in use.

Planning**Computing DALT/TAS/Wind Statistics****Compute**

Compute and display density altitude and current wind conditions. Calculations are based on current input values.

FOR PLANNING PURPOSES ONLY	
Density ALT	TAS
2229 FT	206 KT
Wind Direction	Wind Speed
021°	7 KT
Head Wind Component	
6 KT	
Computed Data	

Statistics display on a dedicated data page. This information is for planning purposes only.

Dashes indicate when input values are invalid.

Density Altitude

- Pressure altitude corrected for nonstandard temperature
- Units display in increments of ten

Wind Data

- Wind direction and speed
- Headwind
- Tailwind
- True air speed

Density altitude and true airspeed calculations are dependent on indicated altitude, barometric pressure, and total air temperature.

Wind data calculations are dependent on true airspeed, aircraft heading, and ground speed.

Wind direction is dependent on the NAV Angle system unit setting.

If wind speed is zero, wind direction displays as dashes.

Planning

RAIM Prediction



Determine GPS coverage availability for the current location or a specified waypoint at any time and date. RAIM performs checks to ensure the navigator has adequate satellite geometry during flight.

**NOTE**

RAIM availability prediction is for use in areas where WAAS coverage is not available. It is not required in areas where WAAS coverage is available.

FEATURE REQUIREMENTS

- Active flight plan and off-route direct-to waypoint (arrival date and time)

FEATURE LIMITATIONS

FAA's TSO requirements for non-precision approaches specify significantly greater satellite coverage than is required during other phases of flight. As a result, RAIM may not be available for all approaches.

RAIM prediction results are valid for up to 90 days from the current date. Arrival dates beyond 90 days, or in the past, may not provide accurate results.

This feature predicts the availability of fault detection integrity. It cannot predict the availability of LPV or LNAV approaches.

Use a non-GPS based approach when RAIM is not available. To determine WAAS availability, including for LPV approaches, visit the FAA's NOTAM service.

RAIM Prediction Page

Home

The RAIM feature can help you plan for a pending flight by confirming GPS operation before an approach.

RAIM Features

- Automatically monitors RAIM during approach operations and warns when RAIM is not available
- Near 100% availability in Oceanic, En route, and Terminal phases of flight
- **Waypoint Identifier**, **Arrival Date**, and **Arrival Time** setup keys
- **Compute RAIM** key

Planning

Calculating RAIM Status

**Compute
RAIM**

Calculate RAIM availability for the specified waypoint, date, and time. Prediction results annunciate once the calculation is complete.

WAYPOINT SEARCH OPTIONS

A **Waypoint Identifier** key allows you to specify a destination airport using multiple search options.

ARRIVAL DATE & TIME

These setup controls allow you to set the expected date and time of arrival at the specified airport. Values default to the current date and time in the absence of an active flight plan and off-route direct-to waypoint.

CHECK RAIM AVAILABILITY

1. Specify a destination waypoint.
2. Specify the expected arrival date and time.
3. Tap **Compute RAIM**.

RAIM Status Indications

Dashes indicate when the destination waypoint is invalid.

ANNUNCIATION	DESCRIPTION
Computing	Status is pending.
RAIM Available	RAIM is available at the specified waypoint.
RAIM Unavailable	RAIM is not available at the specified waypoint.

INTENTIONALLY LEFT BLANK

Hazard Awareness

5 Hazard Awareness

WEATHER AWARENESS	5-3
TRAFFIC AWARENESS	5-23
TERRAIN AWARENESS.....	5-35

Hazard Awareness

HAZARD AWARENESS APPS & FUNCTIONS

Menu selections vary based on features and optional equipment installed with Garmin avionics.



FIS-B Weather

- Orientation
- Legend
- FIS-B Status
- NEXRAD
- Cloud Tops
- Lightning
- Icing
- Winds/Temps Aloft
- PIREP
- Turbulence
- METAR
- SIGMET
- Center WX Advisory
- G-AIRMETS
- TFR



Traffic

- ADS-B Display
- Test
- Motion Vector
- Vector Duration
- Altitude Filter
- Traffic Grouping



Terrain

- Terrain Inhibit
- View
- Flight Plan
- Legend

¹ GPS 175/GNC 355: Feature availability dependent upon unit configuration. Requires external ADS-B In product (GDL 88, GTX 345, GNX 375) and FIS-B.

Hazard Awareness

Weather Awareness



WARNING

Do not rely solely on datalink weather for weather information. Datalink weather provides a snapshot in time. It may not accurately reflect the current weather situation.



NOTE

Datalink weather is not intended to replace weather briefings or in-flight weather reports from AFSS or ATC.

FEATURE REQUIREMENTS

- GPS 175/GNC 355 with UAT receiver (GDL 88, GTX 345, GNX 375) and FIS-B
- OR
- GNX 375 and FIS-B

The FAA provides FIS-B as a Surveillance and Broadcast Service operating on the UAT (978 MHz) frequency band. FIS-B uses a network of FAA-operated ground-based transceivers to transmit weather datalink information to the aircraft's receiver on a scheduled continuous basis.

The Flight Information Service-Broadcast (FIS-B) Weather service is freely available for aircraft equipped with a capable datalink universal access transceiver (UAT). Ground stations provide uninterrupted services for the majority of the contiguous U.S., Hawaii, Guam, Puerto Rico, and parts of Alaska. No weather subscription service is required. For the latest FAA ground station coverage information, visit: www.faa.gov/nextgen/programs/adsb/

Data Transmission Limitations

FIS-B broadcasts provide weather data in a repeating cycle which may take several minutes to completely transmit all available weather data. Therefore, not all weather data may be immediately present upon initial FIS-B signal acquisition.

Line of Sight Reception

To receive FIS-B weather information, the aircraft's datalink receiver must be within range and line-of-sight of an operating ground-based transceiver. Reception may be affected by altitude, terrain, and other factors. Per the FAA, much of the United States has FIS-B In airborne coverage at and above 3,000 feet AGL. Terminal coverage is available at altitudes below 3,000 feet AGL and is available when flying near approximately 235 major U.S. airports. Surface coverage allows FIS-B ground reception at approximately 36 major U.S. airports.

Hazard Awareness

Per FAA TSO-C157b

FIS-B information may be used for pilot planning decisions focused on updating the pilot's awareness of the dynamic flight environment; including avoiding areas of inclement weather that are beyond visual range and pilot near-term decisions where poor visibility precludes visual acquisition of inclement weather. FIS-B weather and NAS status information may be used as follows:

- a. To promote pilot awareness of ownship location with respect to reported weather, including hazardous meteorological conditions; NAS status indicators to enhance pilot planning decisions; and pilot near-term decision-making.
- b. To cue the pilot to communicate with Air Traffic Control, Flight Service Station specialist, operator dispatch, or airline operations control center for general and mission critical meteorological information, NAS status conditions, or both. FIS-B information, including weather information, NOTAMs, and TFR areas, are intended for the sole purpose of assisting in long-/near-term planning and decision making. The system lacks sufficient resolution and updating capability necessary for aerial maneuvering associated with immediate decisions. In extreme scenarios, the oldest weather radar data on the display can be up to 15 to 20 minutes older than the display's age indication for that weather radar data. Therefore, do not attempt to use FIS-B weather information to maneuver the aircraft at minimum safe distances from hazardous weather.
FIS-B information must not be used in lieu of a standard preflight briefing.
- c. FIS-B uplink is a subscription-free FIS broadcast managed by FAA SBS. It provides an FAA approved source for METAR, TAF, WINDS, PIREPs, NEXRAD, AIRMET, SIGMET, and TFR information, and is subject to the broadcast range limits for these products.
FIS-B uplink is not an FAA approved source for NOTAMs.

NOTAM 30-Day Limitation

NOTAMs received via FIS-B may not be a complete listing. Active NOTAMs are removed from the FIS-B data stream 30 days after issuance. Before flight, review all necessary aeronautical and meteorological information from official sources.

For more information, consult AC 00-63A or latest revision.

Hazard Awareness

FIS-B Weather Display



FIS-B weather data displays on the dedicated weather page and as overlays on Map. No pilot action is required to receive FIS-B weather information.

Example of NEXRAD precipitation data overlaying land and water basemap data.



FIS-B WX Page

1	Aircraft Symbol Depicts current aircraft position and orientation.
2	North Indicator Indicates True north.
3	Page Orientation Label Reflects the selected page orientation.
4	Basemap Presents a graphical depiction of land and water data.
5	NEXRAD Controls Includes source key and animation control. Source options include CONUS, Regional, or Combined.
6	Zoom Scale Value adjusts with changes to the current magnification.
7	Product Timestamp Displays: <ul style="list-style-type: none"> • Approximate time of data collection for observation products (i.e. the product age) • Approximate time of applicability for forecast products

Hazard Awareness

WX INFO BANNER

Tapping any weather icon displays an information banner. When applicable, a pop-up window displays additional data.

WX Info Banner



Banner Information:

- Pan mode symbol
- Bearing and distance to map pointer from aircraft's current position

WX DISPLAY ORIENTATION

The weather app allows you to set the orientation of the weather display.

Tap **Menu > Orientation**, and select from the following options.

North Up

Orients page to True north.

Track Up

Orients page to current aircraft GPS track.

Heading Up

Orients page to current aircraft heading (requires heading data source interface).

Page orientation label changes to reflect the selected orientation.

Aircraft Symbol Position & Orientation

- The tip represents actual aircraft location
- Symbol type is dependent upon configuration
- This feature is absent if a GPS source is not available

Hazard Awareness

FIS-B Weather Setup

FIS-B Weather Menu

- Orientation
 - North Up
 - Track Up
 - Heading Up
- Legend
- FIS-B Status
 - FIS-B WX Product Status
 - Raw Text Reports
 - Radio Stations
- NEXRAD
 - CONUS
 - Regional
 - Combined
- Cloud Tops
- Lightning
- Icing
- Winds/Temps Aloft
- PIREP
- Turbulence
- METAR
- SIGMET
- Center WX Advisory
- G-AIRMET
 - FRZ Level
 - Icing
 - IFR
 - LL WNDSHR
 - MTN OBSCR
 - SRFC Winds
 - Turb
- TFR

Tap **Menu** to access weather setup options. This page also provides access to the FIS-B Status page for viewing raw text reports and checking ground reception status reside.

Map WX Overlays

Overlay controls reside in the Map setup menu.

Home > **Map** > **Menu** > Select from **NEXRAD**, **METAR**, **Lightning**, and **TFR**.

Hazard Awareness**FIS-B Weather Products**

When available, FIS-B weather products display as follows.

FIS-B WEATHER PRODUCT	WEATHER DISPLAY				RAW TEXT REPORT
	FIS-B WX PAGE	WX POP-UP TEXT	MAP PAGE	APT INFO	
METAR w/Decoding	•	•	•	•	•
NEXRAD	•		•		
NOTAM-D				•	•
NOTAM-FDC				•	•
PIREP	•	•			•
Cloud Tops	•				
Lightning	•		•		
Graphical AIRMETs	•	•			
Center Weather Advisory	•	•			•
SIGMET	•	•			•
TAF		•		•	•
TFR	•	•	•		•
Winds/Temps Aloft	•				•
Icing	•				
Turbulence	•				

Product Present: •

Hazard Awareness

Product Status



View the status of all FIS-B weather products. States include:

- Unavailable
- Awaiting Data
- Data Available

From the FIS-B menu, tap **FIS-B Status**.

This page is also accessible from the ADS-B Status page.

Product Legends

A scrollable legend provides relevant product colors and symbols. Definitions are organized by product function.



1. Tap **Menu > Legend**.
2. Use the inner knob to view the available product legends.

Hazard Awareness

Product Age



NOTE

Data contained within a composite weather product may be older than its weather product age and should never be considered current.

A timestamp identifies the approximate time of data collection for each weather product. For quick reference, the age of each active weather product is calculated and shown in a color-coded side bar on the FIS-B Weather page.

TIMESTAMP COLOR DEFINITIONS



Yellow

Weather product considered stale. Its age is older than half its expiration time.

A weather product may be amber when its issue date and time occurs in the future by more than the complete expiration time for the requested weather product (e.g., some TFRs).

Green

Weather product considered current. Its age is newer than half its expiration time.

Tapping timestamp window displays the time for all green colored weather products.

Gray

Weather product data is one of the following:

- Expired
- Not received
- Not supported at the selected altitude

"No Data" or "ALT UNAVBL" displays next to the weather product title.

FIS-B weather product update and transmission intervals are published in the SBS Description Document associated with TSO-C157b. This information is available electronically at the FAA's Dynamic Regulatory System:

<https://drs.faa.gov>

Hazard Awareness

FIS-B NEXRAD




WARNING

Never use NEXRAD weather for maneuvering in, near, or around areas of hazardous weather. NEXRAD images are snapshots of past weather data. They are not safe for use as real time depictions of nearby weather activity.



CONUS NEXRAD

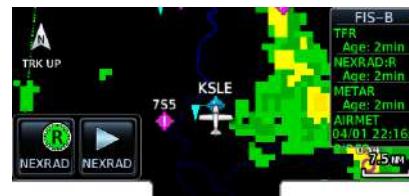


Regional NEXRAD

NEXRAD weather radar displays a mosaic of precipitation data, colored according to reflectivity. Composite reflectivity images depict the highest radar energy received from multiple antenna tilt angles at various altitudes. Base reflectivity images depict radar returns from the lowest antenna tilt angle. Per AC 00-63A, FIS-B CONUS and Regional NEXRAD are composite reflectivity images.

The precipitation intensity level reflected by each pixel represents the highest level of composite radar reflectivity data sampled in that location.

A clear understanding of ground-based Doppler weather radar capabilities will allow you to interpret the NEXRAD weather imagery in the safest way possible. The National Oceanic and Atmospheric Administration hosts a description of the technology on its website: https://www.weather.gov/jetstream/doppler_intro

RADAR DATA ANIMATIONS




To depict trending weather movements over time, an animation function stitches the last three to six received radar images together in sequence, from oldest to newest, and replays them on a continuous loop.

Play and stop controls are active when three or more NEXRAD images are available for playback.

Hazard Awareness

CONUS & REGIONAL NEXRAD

FIS-B NEXRAD is uplinked to the aircraft as two separate weather products: CONUS and Regional NEXRAD. Both products display individually or simultaneously, separated by a white hash-marked boundary, based on source selection.

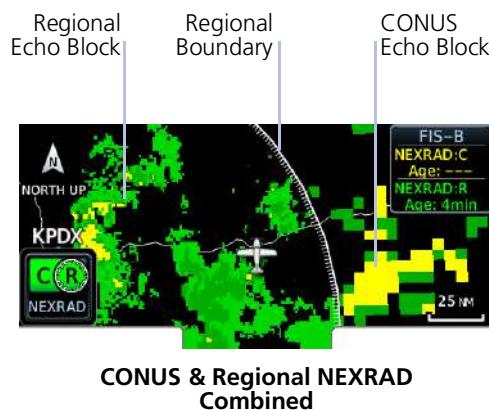

Depending on the locations of received FIS-B ground stations, Regional NEXRAD coverage can extend as far as 250 nm around an aircraft's position. Aircraft flying at higher altitudes typically receive data from more ground stations than aircraft flying at low altitudes.

Turbulence, Icing, Lightning, and Cloud Tops are regional with a rectangular border. Any areas lacking data within the border are masked.

FIS-B NEXRAD does not differentiate between liquid and frozen precipitation types.

Source options are selectable from the weather setup menu or the NEXRAD key at the bottom left of the FIS-B Weather page. The key label changes to reflect the active source.



CONUS



Regional



Combined

- | | |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CONUS <ul style="list-style-type: none"> Large, low-resolution weather image for the entire continental U.S. Pixels are 7.5 min (7.5 nm = 13.89 km) wide by 5 min (5 nm = 9.26 km) wide | Regional <ul style="list-style-type: none"> High-resolution weather image with limited range, centered around each broadcasting ground station Pixels are 1.5 min (1.5 nm = 2.78 km) wide by 1 min (1 nm = 1.852 km) tall Each weather pixel varies with latitude. Above 60° latitude, pixel block width doubles to 3 min/nm for regional maps |
| Combined <ul style="list-style-type: none"> Both CONUS and Regional NEXRAD images display simultaneously White hash mark indicates regional boundary | |

Hazard Awareness

METARs and TAFs

METAR and TAF reports provide information on current and forecast conditions. Colored METAR flags display when a METAR reporting station is matched with a corresponding navigation database identifier.

When selected, the METAR is decoded and displayed above the original METAR text. METARs are provided only in areas covered by the navigation database currently loaded.



METAR SYMBOLS



VFR

Ceiling greater than 3000 ft AGL and visibility greater than five miles.



Marginal VFR

Ceiling 1000 to 3000 ft AGL and/or visibility three to five miles.



IFR

Ceiling 500 to 1000 ft AGL and/or visibility one to three miles.



Low IFR

Ceiling below 500 ft AGL and/or visibility less than one mile.



Unknown

Ceiling and/or visibility data unavailable.

Hazard Awareness

Graphical AIRMETs

Graphical AIRMETs (G-AIRMETs) display more weather phenomena than textual AIRMETs, while eliminating the need to interpret raw text. Updates occur four times daily.

Select any G-AIRMET line to view details.



G-AIRMET SETTINGS



Filtering options allow you to mitigate page clutter. Forecast and filter selections are accessible from the FIS-B Weather menu.

Forecast Settings:

Current (Auto)

Displays active graphical records based on the current UTC.
Function automatically switches from 0 hr to 3 hr forecasts.

All Forecasts

Displays the most recent, non-expired graphical records.

Forecast periods include 0 hr, 3 hr, and 6 hr.

Hazard Awareness

G-AIRMET FILTERS

	Freezing Level		Mountain Obscuration
	Icing		Surface Winds
	IFR		Turbulence
			Low-level Wind Shear

To enable graphical AIRMETS:

1. Home > **FIS-B Weather > Menu.**
2. Toggle **G-AIRMET** on.
3. Tap **Settings**.
4. Select one or more filters.
5. Select between **Current (Auto)** and **All Forecasts**.
6. Return to the FIS-B Weather page.

Hazard Awareness

SIGMETs

The SIGMET overlay draws the geographical boundaries of received SIGMETs on the dedicated weather page. Convective and non-convective SIGnificant METerological Information combine in a textual report and display graphically for the observed or forecast region.

Tapping a SIGMET opens a detailed report.



PIREPs

PIREPs are pilot-generated weather reports that may contain non-forecast adverse weather conditions, such as low in-flight visibility, icing conditions, wind shear, and turbulence.



PIREP SYMBOLS



Routine (UA)



Urgent (UUA)




Route

PIREPs are issued as either Routine (UA) or Urgent (UUA). Tapping a PIREP symbol displays textual details.

Hazard Awareness

Cloud Tops

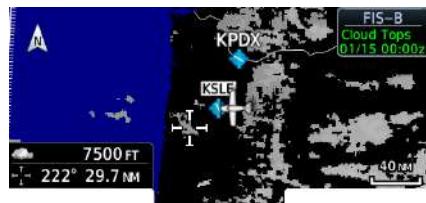

Indicates the altitude of the highest visible portions of a cloud at the time of forecast.

Cloud top data is generated by a computer model and has limited accuracy compared to actual conditions.

Lightning

Strike location is an estimate of its center. Lightning strikes display as a lightning bolt.




Center Weather Advisory

These advisories communicate en route and terminal weather conditions expected to occur within the next two hours. Information is valid for up to 2 hours.



Hazard Awareness

Winds/Temps Aloft

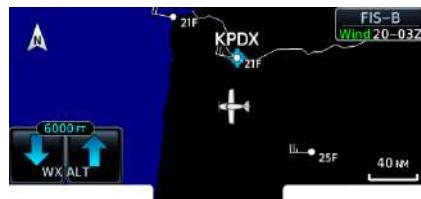

Indicates wind speed and direction, and temperature forecast for the specified altitude.

The wind barb extends outward from the reporting location dot in the direction of wind origination.



Up and down arrow keys adjust altitude for altitude-based weather products.

Altitude Range:

Surface to 45,000 ft

Not all altitudes provide winds/temps aloft forecasts for all regions.

Icing



NOTE

Due to the incremental and overlapping nature of the FIS broadcast, timestamps, regional coverage, and map data availability may vary with altitude for computer generated FIS-B icing forecasts.

Icing potential is not a forecast, but a presentation of icing potential at the time of analysis. The icing timestamp shows the valid time in UTC.

Supercooled Large Droplet (SLD) icing conditions are characterized by the presence of relatively large, super cooled water droplets indicative of freezing drizzle and freezing rain aloft. SLD threat areas are depicted as black and pink blocks over the icing colors.



The Icing potential shows a graphic view of the current icing conditions. Categories are Trace, Light, Moderate, and Heavy.

Altitude Range:

2,000 to 24,000 ft (at 2,000 ft intervals)

Hazard Awareness

Turbulence



NOTE

Due to the incremental and overlapping nature of the FIS broadcast, timestamps, regional coverage, and map data availability may vary with altitude for FIS-B turbulence forecasts.



Turbulence is classified as light, moderate, severe or extreme. Turbulence data is intended to supplement G-AIRMETs and SIGMETs.

The turbulence timestamp shows the valid time in UTC.

Altitude Range:

2,000 to 24,000 ft (at 2,000 ft intervals)

TFRs



WARNING

Do not exclusively use datalink services for TFR information. TFR Depictions may not be a complete listing and may vary between cockpit devices. Always confirm TFR information with official sources such as Flight Service Stations or Air Traffic Control.

TFRs identify areas of airspace where aircraft are temporarily restricted from operating. They are routinely issued for occurrences such as dignitary visits, military activities, and forest fires.

Tapping a TFR displays textual details.




Hazard Awareness

Raw Text Reports



View raw textual data for a FIS-B product.


1. Open the FIS-B WX Status page.
2. Tap **Raw Text Reports**.
3. Select a weather product.

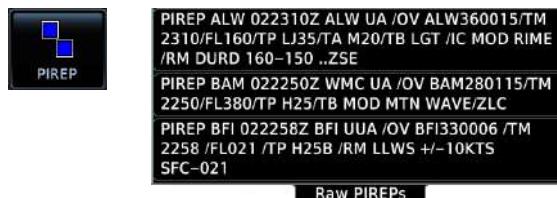

The latest uploaded data for the product displays on a dedicated page.



Multiple reporting stations appear in a list. Tapping **View** displays raw text for the corresponding identifier.

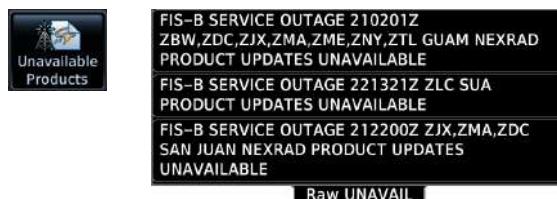

To view information about products not available due to a service outage, select **Unavailable Products**.

Hazard Awareness

READING WINDS/TEMPS ALOFT REPORTS

Tapping **Winds/Temps Aloft** displays a forecast of winds and temperatures for different altitudes. Temperature forecasts are not included for altitudes below 2,500 ft AGL.

On the raw text report, altitude values do not align with the corresponding forecast. Match the color of the altitude and forecast to interpret the information.

Color markings are for reference only.



ALTITUDE (FT)									
3,000	6,000	9,000	12,000	18,000	24,000	30,000	34,000	39,000	
2118	2327+01	2526-02	2628-07	2633-08	2533-29	274245	284756	286265	

Hazard Awareness


FIS-B Ground Reception Status

FEATURE REQUIREMENTS

- UAT transceiver (powered)



Monitor FIS-B ground station transmission status from the FIS-B Reception page. A current report lists completeness of NOTAM-TFR, G-AIRMET, CWA, and SIGMET data for all received ground stations.

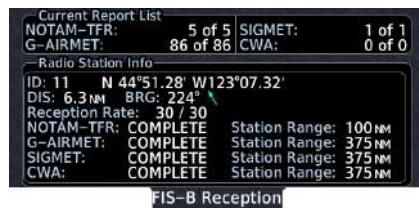

For the received ground station, the station range field indicates complete/incomplete status only for those products within the ground station's range.

1. Open the FIS-B WX Status page.
2. Tap **Radio Stations**.

Hazard Awareness

Traffic Awareness

FEATURE REQUIREMENTS

- GPS 175/GNC 355 with external ADS-B In product (GDL 88, GTX 345, or GNX 375)

OR

- GNX 375

FEATURE LIMITATIONS

- Available functions and alerting features are dependent upon the ADS-B traffic system source

ADS-B Features

- Runway and taxiway depiction during SURF mode (< 2 nm range scale)
- Selectable traffic icons display intruder and vector information
- Customizable motion vectors (type, duration)

Traffic Applications

FEATURE REQUIREMENTS

- Aviation database (SURF only)

FEATURE LIMITATIONS

- ATAS does not alert to traffic on ground

ADS-B In traffic support three applications:

AIRB: Basic Airborne Application

ATAS: ADS-B Traffic Advisory System

SURF: Surface Situation Awareness

AIRB is considered the fundamental airborne traffic application. ATAS provides alerts when airborne traffic trajectories pose a potential collision risk. SURF provides additional situational awareness when you are on ground or within the terminal environment.

Hazard Awareness

TRAFFIC APPLICATIONS

AIRB & ATAS

- Both active when ADS-B is "On" (airborne traffic indications are available; ATAS arms to provide airborne alerts)
- Alerts occur when potential collision risks are determined based on current airborne position and trajectory and the position and trajectories of other airborne traffic
- Airborne traffic alerts only (no alerts on ground or for traffic on the ground)
- Nominally allow 20 to 40 seconds for flight crew response
- Provide aural alerting when traffic alerts occur


SURF

- Active on ground or within the terminal environment (<5 nm and <1,500 ft above field elevation)
- Traffic on ground may display when SURF is active
- Runway and taxiway depictions when the zoom scale is <2 nm (Traffic page only)
- Depicts only traffic and ground vehicles equipped with ADS-B Out

Traffic Application Failures


During normal operation, the "ADS: On" status annunciation means that both AIRB and ATAS applications are active. In the rare event of an application failure, it is possible that only one of the applications may be active. The unit provides indications to reflect which application is no longer operational.

- ADS field indicates "On"
- If AIRB is active and ATAS is failed, the unit displays the system message: "ADS-B traffic alerting function inoperative"
- If AIRB is failed and ATAS is active (and still capable of providing a no-bearing aural alert), "Unavailable" annunciates across the traffic display

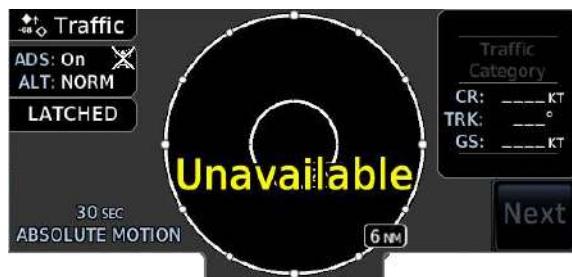


Hazard Awareness

Traffic Display



Collision avoidance and traffic surveillance data display on the dedicated Traffic page and as overlays on Map.

The Traffic page displays intruding traffic in relation to the current position and altitude of the aircraft without clutter from other data.

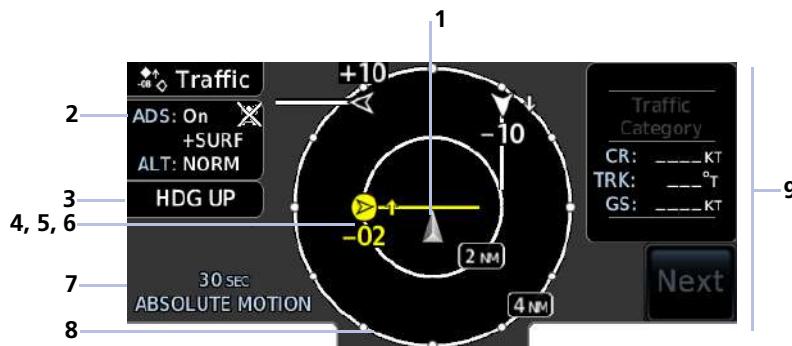**Traffic Page**

1	Ownship Icon Depicts current aircraft position. <ul style="list-style-type: none"> Nose of the ownship is the actual ownship location Unlike the configured aircraft symbol on map displays, ownship icon is always a directional arrow
2	ADS-B Status & Active Applications <ul style="list-style-type: none"> ADS-B indications: <ul style="list-style-type: none"> On means the AIRB and ATAS traffic applications are active Off means that air and ground applications are inactive Test means the traffic test function is active Fail means that ADS-B reports a failure Ground station transmitter status icon +SURF means that ground targets displays in addition to airborne targets Altitude filter setting (NORM, ABV, BLW, UNR)
3	Page Orientation Label <ul style="list-style-type: none"> Track Up orients page to current aircraft GPS track Heading Up orients page to current aircraft heading (requires heading data source interface)

Hazard Awareness

4 Intruding Aircraft Symbol Actual intruder location varies according to symbol type.
5 Altitude Separation Value Indicates when an intruder is above or below the ownship.
6 Vertical Trend Arrow Active when an intruder is climbing or descending at a vertical speed greater than 500 fpm.
7 Selected Vector Type and Duration Types: Absolute and Relative For more about motion vectors, read <i>Motion Vectors</i> .
8 Range Ring Outer ring represents selected range Range options vary according to traffic application
9 Selected Traffic Information Window & Next Key Select and view aircraft information for multiple traffic symbols. For more about traffic interactions, read <i>Traffic Setup</i> .

GROUND STATION TRANSMITTER STATUS ICON



TIS-B ground station transmitter is providing a traffic picture specific to the ownship aircraft.



Traffic picture may be incomplete in the vicinity of the ownship. A partial traffic picture may be available due to:

- aircraft-to-aircraft ADS-B and/or
- traffic pictures from the ground station customized for other nearby aircraft

Hazard Awareness

TRAFFIC UNITS

PARAMETER	UNITS
Altitude	ft
Distance	nm

Traffic units are always uniform.
Selections on the System Units page do not affect the traffic display.

ADS-B TRAFFIC SYMBOLS

Traffic Information is for advisory use only. The pilot is responsible for identifying and avoiding traffic conflict.

	Basic Directional		Proximate Directional
	Basic Non-directional		Proximate Non-directional
	Basic Off-scale Selected		Proximate Off-scale Selected
	Directional (On-Ground)		Non-directional Alerted
	Non-directional (On-Ground)		Off-scale Non-directional Alerted Traffic
	Proximate Directional (On-Ground)		Directional Alerted Traffic
	Proximate Non-directional (On-Ground)		Off-scale Directional Alerted Traffic
	Directional Surface Vehicle		Non-directional Surface Vehicle

TRAFFIC GROUPS

When the Traffic Grouping function is active, traffic within close proximity of each other may display as a group.



- Asterisk indicates that the target belongs to a group
- Relative proximity of the closest target determines color
- Depiction is of the most immediate threat

Hazard Awareness

OFF SCALE TRAFFIC ALERTS



Off scale (out of range) traffic alerts are depicted as half yellow symbols on the outermost range ring at the correct bearing.

TRAFFIC OVERLAY STATUS ICON (MAP ONLY)



This icon appears on Map when the traffic overlay is active. It is absent when the overlay function is off.




Map Traffic Overlay

An "X" appears over the icon when the overlay is on but unavailable.

Hazard Awareness

Traffic Setup

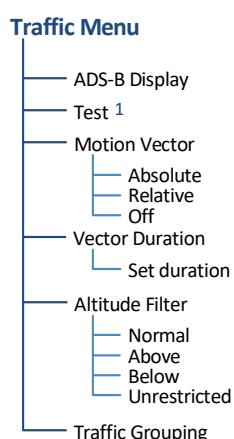

Tap **Menu** to access pilot selectable settings as well as the self-test and ADS-B display functions.

Map Traffic Overlay

The overlay control resides in the Map setup menu.

Home > **Map** > **Menu** > Select **Traffic**.

ADS-B Display	Enable AIRB/ATAS. Depending on the state of the aircraft, the system may additionally select SURF. Selecting Off disables the ADS-B In function.
Test	Initiate a test of the traffic system. A test pattern displays on the page. System returns to normal operating mode once the test is complete. ¹
Motion Vector	Select motion vector type. Selecting Off removes all motion vectors from the display. Options: • Absolute • Relative • Off
Vector Duration	Select the amount of time represented by the endpoint. Options range from 30 seconds to 5 minutes. A longer duration results in a longer vector.
Altitude Filter	Select filter range. Options: • Normal • Above • Below • Unrestricted
Traffic Grouping	Show targets in close proximity as a group. When active, the highest priority target is displayed. Asterisk indicates one or more targets are decluttered by grouping.

¹ Available only when aircraft is on ground (i.e., standby mode) and **ADS-B Display** is off.

Hazard Awareness

Motion Vectors

FEATURE LIMITATIONS

- Motion vectors display on the Traffic page only

A motion vector is a line extending from the nose of an intruder icon. Its orientation represents the intruder's direction and movement.

A yellow vector indicates when traffic meets intruding TA criteria (i.e., closing rate, distance, vertical separation).

MOTION VECTOR TYPES

- | | |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Absolute | <ul style="list-style-type: none"> • White vector • Depicts intruder ground track • Calculations based on intruder direction and ground speed • Endpoint depicts intruder's position over the ground at the end of the selected duration • Airborne and ground functionality |
| Relative | <ul style="list-style-type: none"> • Green vector • Depicts intruder movement relative to the ownship • Calculations based on track and ground speed of both intruder and ownship • Endpoint depicts intruder's location relative to the ownship at the end of the selected duration • Airborne functionality only • "Relative Motion - Unavailable" annunciates during ground operations |

Altitude Filtering

Pilot selectable filters limit the display of traffic to a specific altitude range relative to the altitude of the ownship.

Filter selections apply to both the Traffic page and the traffic overlay on Map.

SELECTION	LABEL	ALTITUDE RANGE
Normal	NORM	-2,700 ft to 2,700 ft
Above	ABV	-2,700 ft to 9,900 ft
Below	BLW	-9,900 ft to 2,700 ft
Unrestricted	UNR	-9,900 ft to 9,900 ft

Hazard Awareness

Traffic Interactions

Selected Traffic Information


- Registration/call sign
- Vehicle type
- Closure rate
- Track
- Ground speed

Selecting a traffic symbol displays information about the aircraft in the upper right corner of the page.

Selections remain active through altitude filtering, zoom scale, and page changes.



Tapping **Next** repeatedly steps through multiple symbols spaced closely together.

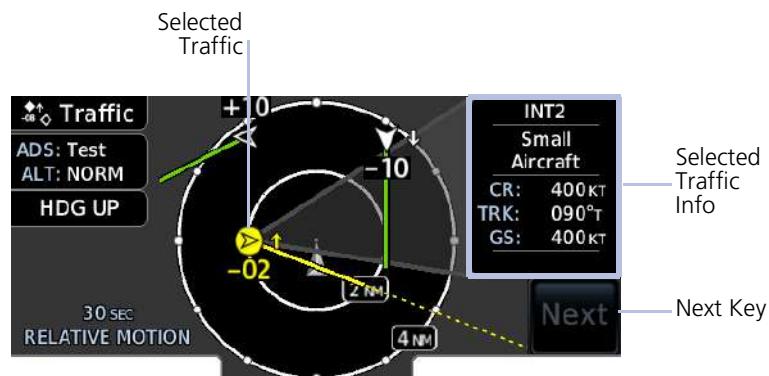

When a traffic alert occurs, the **Mute Alert** option temporarily replaces the **Next** key.

Hazard Awareness**Traffic Annunciations**

ANNUNCIATION	DESCRIPTION
Absolute Motion - XX SEC/MIN	Active motion vector type is absolute and vector time is XX seconds/minutes.
Failed	ADS data failure.
No Data	Unit is not receiving valid traffic data.
No GPS Position	ADS-B LRU detects that GPS is initializing.
Relative Motion - XX SEC/MIN	Active motion vector type is relative.
Relative Motion - UNAVAILABLE	Aircraft is not airborne and the active motion vector type is relative.
Unavailable	Necessary traffic data not available.

Hazard Awareness

Traffic Alerting

Traffic Alert Types

- Textual annunciations at the bottom of the screen
- Color-coded target icons on Traffic page
- Pop-up window when another page is active

Traffic alerts occur anytime there is an increase in the number of traffic advisories. They remain active until the area is clear of all TAs.

FEATURE LIMITATIONS

- Aural traffic alerts available on GNX 375 only*
- Mute alert function is applicable only to the active aural alert (does not mute future alerts)*



Traffic Pop-up



Traffic Alert Annunciation

ANNUNCIATION	ALERT TYPE POP-UP CONDITION VOICE MESSAGE
TRAFFIC	<p>Alert Type: Caution</p> <p>Pop-up Alert: Yes</p> <p>Condition:</p> <ul style="list-style-type: none"> Traffic reports a traffic advisory <p>Voice Message:</p> <ul style="list-style-type: none"> Message content depends on current traffic system configuration

To silence the active traffic alert voice message, tap **Mute Alert**.

Hazard Awareness

ALERTING PARAMETERS

Alerting Parameter Considerations

- Altitude separation and trend
- Angle
- Speed
- Closure rate of each aircraft (ownship and target)

Traffic alerting parameters consider several factors in order to allow you enough time to acquire the target and maneuver the aircraft away from conflicting traffic.

To minimize nuisance alerts, traffic alerting sensitivity is adaptive, based on altitude above ground level. No aural alerts are given below 500 ft.

Hazard Awareness

Terrain Awareness



WARNING

*Do not use Terrain and obstacle data to navigate or maneuver around terrain.
They are an aid to situational awareness only.*

FEATURE REQUIREMENTS

All terrain functions require the following components to operate properly.

- Valid 3-D GPS position for terrain and obstacle data display
- Valid terrain/obstacle database

FEATURE LIMITATIONS

- Alerting functions are dependent upon the configured terrain alerting options
- Terrain Alerting functions do not provide aural alerts

Terrain Configurations

Available Terrain Modes

- Terrain Proximity
- Terrain Alerting (FLTA/PDA)

Terrain Proximity displays relative elevations on moving map depictions (Terrain page, Map). It does not provide visual alerts.

Terrain Alerting adds Forward Looking Terrain Alert (FLTA) and Premature Descent Alert (PDA) functions. These include visual alerts when the aircraft flies below an alerting threshold.

Hazard Awareness

GPS Altitude for Terrain

FEATURE REQUIREMENTS

GPS altitude is derived from satellite measurements. To acquire an accurate 3-D fix (latitude, longitude, altitude), a minimum of four operating satellites must be in view of the GPS receiver antenna.

The terrain system uses GPS altitude and position data to:

- Create a 2-D image of surrounding terrain and obstacles relative to the aircraft's position and altitude
- Calculate the aircraft's flight path in relation to surrounding terrain and obstacles
- Predict hazardous terrain conditions and issue alerts

GSL ALTITUDE & INDICATED ALTITUDE

The unit converts GPS altitude data to GSL altitude (i.e., the geometric altitude relative to MSL) for use in terrain functions. All Terrain page depictions and elevation indications are in GSL.

Variations between GSL altitude and the aircraft's corrected barometric altitude (or indicated altitude) are common. As a result, Terrain page altitude data may differ from current altimeter readings. Both GSL altitude and indicated altitude represent height above MSL, but differ in accuracy and reliability.

GSL ALTITUDE	INDICATED ALTITUDE
<ul style="list-style-type: none"> • Highly accurate and reliable geometric altitude source • Does not require local altimeter settings to determine height above MSL • Not subject to pressure and temperature variations • Affected primarily by satellite geometry 	<ul style="list-style-type: none"> • Barometric altitude source corrected for pressure variations • Requires frequent altimeter setting adjustment to determine height above MSL • Subject to local atmospheric conditions • Affected by variations in pressure, temperature, and lapse rate

Hazard Awareness

Database Limitations

**NOTE**

Garmin cross-validates terrain and obstacle data in accordance with TSO-C151c. However, the information should never be considered all-inclusive. Database inaccuracies or omissions may exist.

Terrain and obstacle data are not available when the aircraft is operating outside of the installed database coverage area.


Garmin obtains terrain and obstacle data from government sources and cannot independently verify the accuracy and completeness of the information. Pilots must familiarize themselves with the appropriate charts and other data for safe flight.

DATABASE	LIMITATION
Terrain	<ul style="list-style-type: none"> Not available north of 89° N latitude and south of 89° S latitude
Obstacle	<ul style="list-style-type: none"> Coverage areas vary according to database type Power line indications for the contiguous United States and small parts of Canada and Mexico Regional definitions may change without notice May not contain uncharted obstacles May include power lines or only HOT lines depending on database type¹

¹ HOT lines are power lines that share location with other obstacles identified by the FAA.

Hazard Awareness**Terrain Display**

Terrain, obstacle, and wire data display as overlays on the dedicated Terrain page and as overlays on Map.

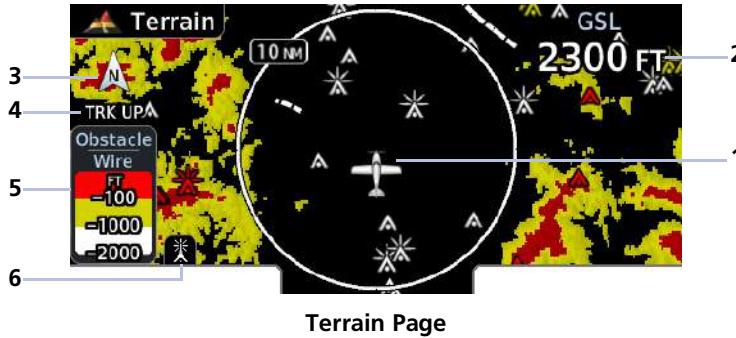


Terrain Page

1	Ownship Icon Depicts current aircraft position.
2	GSL Altitude Displays current GPS height above mean sea level.
3	North Indicator Indicates True north.
4	Page Orientation Label <ul style="list-style-type: none"> • Track Up orients page to current aircraft GPS track • Heading Up orients page to current aircraft heading (requires heading data source interface) Heading Up takes priority over Track Up when both orientation inputs are available.
5	Legend Shows color designations for terrain and obstacle relative altitude ranges.
6	Terrain Overlay Icon Indicates power line or obstacle overlay presence at the current zoom scale.

Hazard Awareness

AUTOMATIC ZOOM

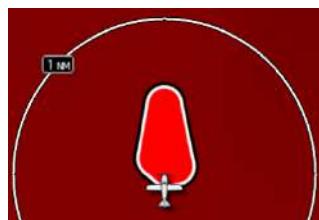

In the event an alert occurs, the page automatically zooms to provide the best depiction of that alerted terrain, obstacle, or power line.


AUTOMATIC DATA REMOVAL



Automatic removal of obstacle and power line data occurs at range scales greater than 10 nm.

Terrain Setup

Terrain Page Menu

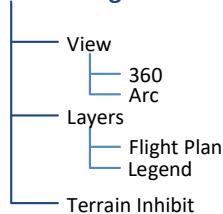

Tap **Menu** to access pilot selectable settings as well as self-test and alert inhibit functions.

Map Terrain Overlays

Overlay controls reside in the Map setup menu.

Home > **Map** > **Menu** > Select from **Terrain** and **OBST/Wires**.

Terrain Inhibit

- Inhibits visual alerts for terrain, obstacles, and power lines

View

- **360** changes view format to a 360° ring encircling the aircraft (default view)
- **Arc** changes view format to a forward-looking 120° arc

Flight Plan

- Toggles the active flight plan overlay on or off (Terrain page only)

Legend

- Toggles the Terrain and Obstacle/Wire legend on or off

Hazard Awareness

Terrain Proximity

FEATURE LIMITATIONS

- Terrain and obstacle depictions are relative to aircraft altitude
- Obstacle depictions are dependent upon database
- Does not provide visual or aural alerts



View color depictions of terrain and obstacle elevations relative to your current position and altitude.

Terrain Proximity Features

- Non-TSO C151c certified terrain display system
- 2-D graphical representation of surrounding terrain, obstacles, and power lines relative to aircraft position and altitude
- Declutter automatically removes obstacle and power line data at large ranges
- Continuous monitoring of database validity, GPS and hardware status
- Displays when higher level terrain functions are active

Terrain Elevation Depictions

Color shading depicts terrain elevations relative to the aircraft's position and altitude. Colors automatically adjust as the aircraft's altitude changes.

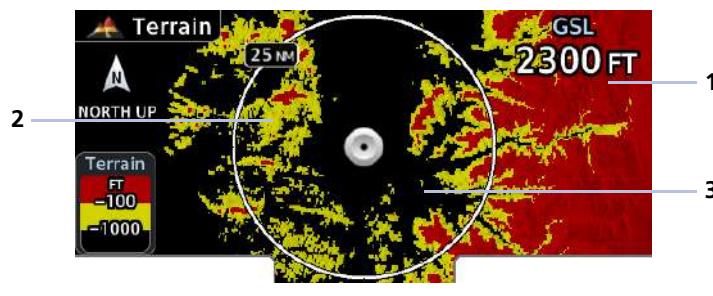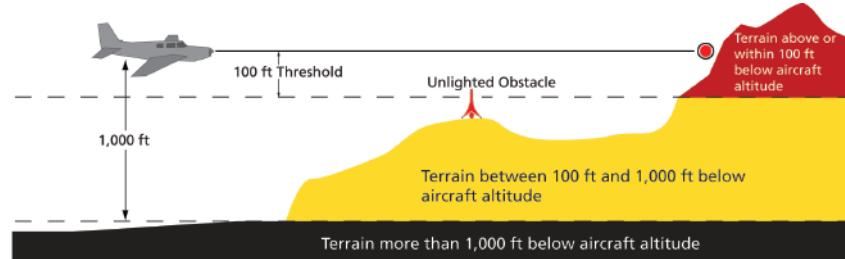

Terrain Shading

1	Red	2	Yellow	3	Black
----------	-----	----------	--------	----------	-------

Hazard Awareness**Obstacle Elevation Depictions****FEATURE LIMITATIONS**

- Obstacles more than 2,000 ft below current altitude do not display

TOWER OBSTACLES

UNLIGHTED OBSTACLE		LIGHTED OBSTACLE		OBSTACLE LOCATION
<1000' AGL	>1000' AGL	<1000' AGL	>1000' AGL	
				Red obstacle is above or within 100 ft below current altitude.
				Yellow obstacle is between 100 ft and 1000 ft below current altitude.
				White obstacle is between 1,000 ft and 2,000 ft below current altitude.

WIND TURBINE OBSTACLES

UNLIGHTED WIND TURBINE OBSTACLE		LIGHTED WIND TURBINE OBSTACLE		OBSTACLE LOCATION
<1000' AGL	>1000' AGL	<1000' AGL	>1000' AGL	
				Red obstacle is above or within 100 ft below current altitude.
				Yellow obstacle is between 100 ft and 1,000 ft below current altitude.
				White obstacle is between 1,000 ft and 2,000 ft below current altitude.

Hazard Awareness

POWER LINE OBSTACLES

OBSTACLE	POWER LINE OBSTACLE LOCATION
	Red power line is above or within 100 ft below current altitude.
	Yellow power line is between 100 ft and 1,000 ft below current altitude.
	White power line is between 1,000 ft and 2,000 ft below current altitude.

OBSTACLE GROUPS



An asterisk indicates when the obstacle database contains only a single latitude and longitude for a group of obstacles. This occurrence is rare.

Hazard Awareness

Terrain Alerting

Receive visual alerts for potential flight path conflicts involving terrain, obstacles, or power lines. Alerting behavior is determined at installation.

Terrain Alerting Features

- Non-TSO C151c certified terrain alerting system
- FLTA functions: RTC, RLC, ROC, ITI, ILL, and IOI
- Premature Descent alerts
- Terrain depictions and display overlays
- Cautions and warnings indicate alert severity and threat type
- Textual annunciations
- Pop-up alerts
- Threat location indication on Terrain page and Map
- Self-test and alert inhibit functionality

Alert Types

Available alerting functions depend on the installed terrain system.

ALERT TYPE	CONDITION
Imminent Impact¹	Aircraft reaches the minimum clearance altitude of any obstacle (IOI), terrain (ITI), or power line (ILL) in the projected flight path.
Reduced Clearance¹	Aircraft's vertical flight path is projected to be within the minimum clearance altitude of an obstacle (ROC), terrain (RTC), or power line (RLC).
Premature Descent²	Aircraft is significantly below the normal approach path for the nearest runway. <ul style="list-style-type: none"> • Altitude is <700 ft above terrain • Distance from destination airport is 15 nm or less

¹ Alerting inhibited <200 ft AGL within 0.5 nm of approach runway or <125 ft AGL within 1.0 nm of runway threshold.


² Alerting inhibited within 0.5 nm of approach runway or <125 ft AGL within 1.0 nm of runway threshold. Alerting thresholds for final descent are based on current position, speed, and flight path data.

Hazard Awareness

Alerting Thresholds


FLIGHT PHASE	MINIMUM CLEARANCE ALTITUDE	
	LEVEL FLIGHT	DESCENDING
En Route	700 ft	500 ft
Terminal	350 ft	300 ft
Approach	150 ft	100 ft
Departure	100 ft	100 ft

PDA THRESHOLD

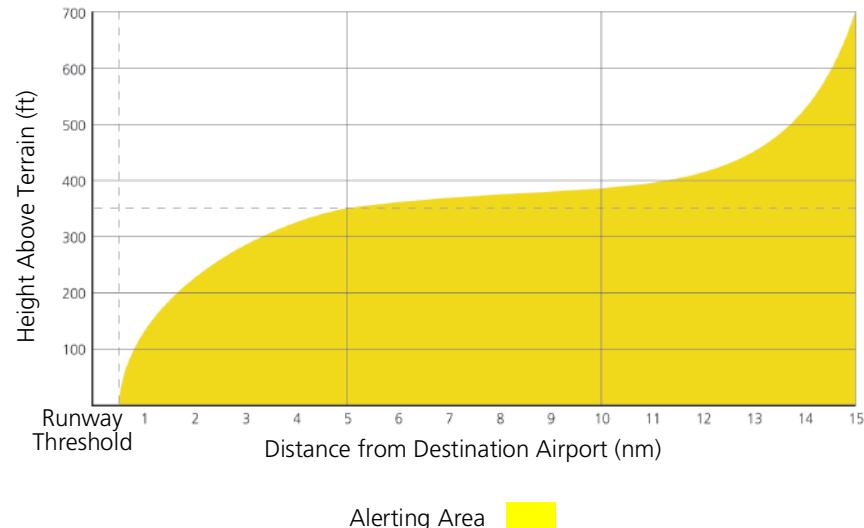

Hazard Awareness**Inhibiting FLTA & PDA Alerts****NOTE**

Always use discretion when inhibiting FLTA or PDA alerts. Re-activate the alert function when appropriate.

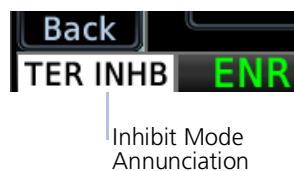

The **Terrain Inhibit** control is accessible via the terrain pop-up alert or Terrain page menu.

Runway surface and minimum length settings impact the terrain alerting criteria when considering potential runways.

INHIBITS	FUNCTION
INHIBIT	Manually inhibits FLTA or PDA visual alerts for low altitude approaches.
AUTOMATIC INHIBIT	Automatically inhibits FLTA alerts when the aircraft meets the following approach criteria. <ul style="list-style-type: none"> • Altitude <200 ft above runway elevation • Position <0.5 nm off approach end or between each runway end (includes user airports)



Tapping **Terrain Inhibit** generates a pop-up. Confirm the request to inhibit terrain alerts.

Hazard Awareness

FLTA & PDA Alerts

Terrain Alert Types

- Textual annunciations at the bottom of the screen
- Color-coded graphics on Terrain page and Map
- Pop-up window when another page is active



Terrain Pop-up



Terrain Alert Annunciation

ANNUNCIATION	ALERT TYPE POP-UP CONDITION
TER FAIL	<p>Alert Type: Caution</p> <p>Pop-up Alert: N/A</p> <p>Condition:</p> <ul style="list-style-type: none"> • Terrain reports a system failure • The database is missing or corrupt
TER INHB	<p>Alert Type: Advisory</p> <p>Pop-up Alert: N/A</p> <p>Condition:</p> <ul style="list-style-type: none"> • Terrain reports alert inhibit mode active
TER N/A	<p>Alert Type: Caution</p> <p>Pop-up Alert: N/A</p> <p>Condition:</p> <ul style="list-style-type: none"> • No GPS position • Degraded GPS signal • Aircraft is outside of the terrain database regional coverage

Hazard Awareness

ANNUNCIATION	ALERT TYPE POP-UP CONDITION
TERRAIN	<p>Alert Type: Caution</p> <p>Pop-up Alert: Yes</p> <p>Condition:</p> <ul style="list-style-type: none"> • Reduced Required Terrain Clearance • Imminent Terrain Impact • Premature Descent
TER TEST	<p>Alert Type: Advisory</p> <p>Pop-up Alert: N/A</p> <p>Condition:</p> <ul style="list-style-type: none"> • Terrain system test is in progress
OBSTACLE	<p>Alert Type: Caution</p> <p>Pop-up Alert: Yes</p> <p>Condition:</p> <ul style="list-style-type: none"> • Reduced Obstacle Clearance • Imminent Obstacle Impact
PULL UP	<p>Alert Type: Warning</p> <p>Pop-up Alert: Yes</p> <p>Condition:</p> <ul style="list-style-type: none"> • Reduced Required Terrain Clearance • Imminent Terrain Impact • Reduced Obstacle Clearance • Imminent Obstacle Impact • Reduced Line Clearance • Imminent Line Impact
WIRE	<p>Alert Type: Caution</p> <p>Pop-up Alert: Yes</p> <p>Condition:</p> <ul style="list-style-type: none"> • Reduced Line Clearance • Imminent Line Impact

INTENTIONALLY LEFT BLANK

Messages

6 Messages

ADVISORY MESSAGES.....6-2

Messages

Advisory Messages

Advisories are system-related messages relative to the display.



- Most recent advisories appear at the top of list
- View-once advisories remain in queue until viewed by the pilot
- Persistent (or conditional) advisories remain active until the indicated condition is resolved

All advisories are logged in the unit's internal storage. This log may be exported to an SD card.

Dual Navigator Installations

Advisory messages are not crossfilled between navigator units. Each unit displays messages based on the data it receives. This may result in duplicate messages between units.

Always view the messages on both navigators to ensure that all information is received.

Message Key



This key displays at the left edge of the screen when an advisory condition is present. Tapping the key once displays an advisory list. Tapping it again acknowledges all active advisories and closes the list.

- Flashes when a new advisory is present
- Turns solid once all active advisories are acknowledged
- No longer displays after all active advisories are cleared

Messages

Airspace Advisories

Alerted airspace types are based on pilot settings in the Airspace Alerts page. These advisories are informational only. No action is necessary.

ADVISORY	CONDITION
AIRSPACE ALERT - Inside airspace.	Aircraft is inside the airspace.
AIRSPACE ALERT - Airspace within 4 nm and entry in less than 10 minutes.	Airspace is within 4nm of the path and projected to enter in less than 10 minutes.
AIRSPACE ALERT - Airspace entry in less than 10 minutes.	Aircraft is projected to enter the airspace in less than 10 minutes.
AIRSPACE ALERT - Within 4 nm of airspace.	Airspace is less than 4 nm from the aircraft. May not be projected to enter the airspace.

Messages

Database Advisories

ADVISORY	CONDITION	CORRECTIVE ACTION
<Terrain/Obstacle> database not available.	The indicated database is unavailable or corrupt.	Re-download and install the indicated database. Contact a Garmin dealer for support.
Terrain display unavailable for current location.	Terrain database cannot provide elevation at the current GPS position. Aircraft is outside the database coverage area.	Load appropriate coverage area onto the external datacard.
Verify user-modified procedures in stored flight plans are correct.	Navigation database updates and the stored flight plan contains user-modified procedures.	Verify the procedures are correct.
Verify airways in stored flight plan are correct.	The stored flight plan contains an airway that is inconsistent with the current navigation database.	Verify all airways are correct. If necessary, reload airways to the stored flight plan routes.
A procedure has been modified in a catalogued flight plan.	Database update causes flight plan to exceed 100 waypoint limit. Procedure is removed or truncated as a result.	Verify catalogued flight plan and procedures are correct. If necessary, reload procedures to the stored flight plan routes.
Aircraft in area with large mag var. Verify all course angles.	Magnetic variation flagged as unreliable in the MagVar database. Typically occurs when operating at high latitudes that do not support a magnetic NAV angle.	Verify that the geographical region supports navigation based on magnetic variation.
Database SYNC in progress.	Database Sync transfer in progress.	View System Status page for more info.
LRU Navigation DB mismatch.	Navigation databases do not match between crossfill navigators, resulting in a loss of communication between the two units.	Verify that the database version specified by both crossfill navigators is up to date. Update the database if necessary.

Messages

Flight Plan Advisories

ADVISORY	CONDITION	CORRECTIVE ACTION
Flight plan import failed.	Unit unable to decode flight plan contents. Wireless import of the requested flight plan not possible.	Check for proper operation of all necessary components. If the problem persists, contact dealer for service.
Flight plan import failed. Catalog is full.	The flight plan catalog is full. Wireless import of the requested flight plan not possible.	Delete any unnecessary flight plans from the catalog.
<#> new imported flight plan(s) available for preview.	Unit receives the specified number of flight plans via the import function. They are available for viewing on the Preview page.	No action necessary.
Stored flight plan waypoint is not in current navigation database.	Current navigation database no longer contains a stored flight plan waypoint.	Verify all stored cataloged flight plans and procedures. Modify stored flight plans as necessary to include waypoints that are in the current navigation database.
Stored flight plan waypoint has changed location.	A waypoint in a stored flight plan moved by more than 0.33 arc minutes from its previous position.	Verify stored cataloged flight plans and procedures. Modify stored flight plans as necessary to include waypoints that are in the current navigation database.
Steep turn. Aircraft may overshoot course during turn.	The flight plan contains an acute course change ahead. Following the guidance requires a bank in excess of normal. If coupled, the autopilot may not be able to execute the steep turn.	Slowing the aircraft may shallow the turn.
Changes to active route are disabled.	Unit receives a flight plan from G3X Touch, but the External FPL Crossfill function is off.	Enable the External FPL Crossfill function. Home > System > Setup > External FPL Crossfill .

Messages

ADVISORY	CONDITION	CORRECTIVE ACTION
GDU disconnected. External flight plan crossfill inoperative.	Communication with the G3X Touch is lost.	Verify that the GDU is on. Contact dealer for service.

Messages**GPS/WAAS Advisories**

ADVISORY	CONDITION	CORRECTIVE ACTION
<Unit> GPS receiver has failed. Check GPS coax for electrical short.	Internal communication to the WAAS board is inoperative.	Use a different GPS receiver or a non-GPS based source of navigation. Contact dealer for service.
GPS loss of integrity (LOI). Verify GPS position with other navigation equipment.	GPS/WAAS board reports LOI. Antenna may be shaded from satellites.	Ensure the aircraft is clear of hangars, buildings, trees, etc. Use a different GPS receiver or a non-GPS based source of navigation. If the problem persists, contact dealer for service.
GPS navigation lost due to insufficient satellites. Use other navigation source.	GPS position lost due to lack of satellites.	Wait for GPS satellite geometry to improve. Ensure the aircraft has a clear view of the sky. Use a different GPS receiver or a non-GPS based source of navigation. Contact dealer for service.
GPS navigation lost and may have erroneous position. Use other navigation source.	GPS position lost due to erroneous position.	Use a different GPS receiver or a non-GPS based source of navigation. Contact dealer for service.
Abort Approach. GPS approach is no longer available.	GPS approach not available. GPS unable to provide approach level of service (i.e., LPV, LNAV, LNAV+V, or L/VNAV).	Initiate a climb to the MSA or other published safe altitude, abort the approach, and execute a non-GPS based approach.
Approach not active. Approach guidance not available.	GPS approach could not transition to active (e.g., the unit remains in TERM as it does not have the required HPL/VPL for LNAV).	Abort the approach and then execute a non-GPS based approach.
GPS approach downgraded. Use LNAV minima.	Approach downgraded from LPV or LNAV/VNAV to an LNAV approach. Vertical guidance no longer available.	Continue to fly the approach using published LNAV minimums.

Messages

ADVISORY	CONDITION	CORRECTIVE ACTION
GPS searching sky. Ensure GPS antenna has unobstructed view of the sky.	WAAS board is acquiring position and may take longer than normal. Typically occurs when the unit is powered on after installation or being off for several weeks.	No action necessary.
Low internal GPS clock battery.	WAAS board indicates that its clock battery is low. May experience delay when attempting to acquire GPS position. Almanac data may be lost.	Contact dealer for service.
GPS receiver needs service.	WAAS board is reporting that it requires service. GPS module may continue to function.	Use a different GPS receiver or a non-GPS based source of navigation. Contact dealer for service.

Messages

Navigation Advisories

ADVISORY	CONDITION	CORRECTIVE ACTION
Set Course on CDI/HSI to <current DTK>.	The selected course on the CDI/HSI does not match the current desired track. NOTE: This advisory is not provided when interfaced to a composite type CDI.	Set the CDI/HSI selected course to the current desired track.
Holding EFC time has expired.	It is past the specified Expected Further Clearance time for the user-defined hold.	No action necessary. Consider contacting ATC as appropriate.
True north approach. Verify NAV angles are referenced to True north ($^{\circ}\text{T}$).	The loaded procedure references true north and the active leg has a published true north reference.	Verify the NAV angle is set to True north.
Magnetic north approach. Verify NAV angles are referenced to Magnetic north.	The loaded approach is magnetic, but the NAV angle reference is not.	Change NAV angle setting to Magnetic.
NAV angles are referenced to True north ($^{\circ}\text{T}$).	NAV angle is set to True.	No action necessary.
NAV angles are referenced to a user set value ($^{\circ}\text{U}$).	NAV angle is set to User.	No action necessary.
Non-WGS84 Waypoint. See pilot's guide. Location may be different than where surveyed for <WPT>.	The active waypoint does not reference the WGS84 datum.	No action necessary. For more information, read "Points About Non-WGS84 Waypoints" in this section.

Messages

Points About Non-WGS84 Waypoints

- There are several types of geodetic datums that a waypoint can reference.
- TSO-C146 requires that all waypoints reference the WGS84 datum, but allows for navigation to coordinates not compliant with this standard as long as the pilot is notified of the potential difference in location.
- Not all waypoints in the navigation database reference the WGS84 datum. For some of these coordinates the reference datum is unknown. In such cases, the “Non-WGS84 Waypoint” advisory displays.
- Garmin cannot determine the exact proximity of a non-compliant waypoint to the WGS84 datum in use by the system. Typically, the distance is < 2 nm.
- Most non-WGS84 waypoints are outside of the United States.

Pilot Specified Advisories

These advisories display when the associated timer expires or reaches a preset value. They are informational only. No action is necessary.

ADVISORY	CONDITION	CORRECTIVE ACTION
SCHEDULED MESSAGE - <Text>.	The custom message timer expired.	Acknowledge message. Edit Message key provides direct access to scheduled message options.
Timer has expired.	The generic timer is past its preset value.	Acknowledge message. Timers key provides direct access to the generic clock/timer function.

Messages**System Hardware Advisories**

ADVISORY	CONDITION	CORRECTIVE ACTION
<Unit> knob-push stuck.	Dual concentric inner knob is stuck.	<ol style="list-style-type: none"> Push the inner knob again. If it remains stuck, use the corresponding touchscreen controls. Contact dealer if the problem persists.
<Unit> cooling fan failed.	<ul style="list-style-type: none"> Unit detects a cooling fan fault. Coloration may be incorrect. Backlight may dim to reduce power and heat. 	Extended operation at high temperatures is not recommended as damage to the unit may occur. Contact dealer for service.
<Unit> over temp. Reducing backlight brightness.	Unit temperature exceeds the over temperature threshold. Backlight dims to reduce power and heat.	Decrease cabin temperature and increase cabin airflow near the unit. If the problem persists, contact dealer for service.
<Unit> under temp.	Unit temperature is below the normal operating temperature threshold.	If the problem persists, contact dealer for service.
Pilot stored data was lost. Recheck settings.	<p>An error occurred in the pilot stored data. The following user settings may be lost.</p> <ul style="list-style-type: none"> Map menu settings User waypoints Catalog flight plans User field settings Unit convention selection 	Recheck settings.
Remote Go Around key is stuck.	System detects the remote go around key/switch depressed for at least 30 seconds. It will now ignore this input.	Press the key/switch again. If it remains stuck, contact dealer for service.

Messages

ADVISORY	CONDITION	CORRECTIVE ACTION
Transponder 1/2 overtemp.	GTX 345 1/2 reports that its internal temperature exceeds the over temperature threshold (GPS 175 & GNC 355 only).	Decrease cabin temperature and increase cabin airflow near the transponder. If the problem persists, contact dealer for service.
Transponder 1/2 under temp.	GTX 345 1/2 reports that its internal temperature is below the normal operating threshold (GPS 175 & GNC 355 only).	If the problem persists, contact dealer for service.
<Unit> needs service.	<p>Loss of calibration data. GPS175/GNC 355 cannot communicate with its configuration module or other hardware.</p> <p>GNX 375 experiences a fault related to one of the following.</p> <ul style="list-style-type: none"> • ADS-B/Nav communication • Altitude encoder calibration • Audio ROM • Configuration module • Non-volatile memory • Suppression bus 	Contact dealer for service.
<Unit> SD card is invalid or failed.	<p>The SD card is unreadable or corrupt (i.e., data is unavailable).</p> <p>User ejects Flight Stream 510 wireless transceiver. Network connection is lost.</p>	<ol style="list-style-type: none"> 1. Reformat the SD card using an external computer. 2. Re-insert the SD card in the slot. 3. Contact dealer if the problem persists. <p>Restart unit to reconnect.</p>

Messages

ADVISORY	CONDITION	CORRECTIVE ACTION
<Name> log encountered an error when exporting.	Export failure. May occur for WAAS or traffic logs.	<ol style="list-style-type: none"> Reformat the SD card using an external computer. Re-insert the SD card in the slot. Contact dealer if the problem persists.
<Name> log has exported successfully.	Export to SD card successful. May occur for WAAS or traffic logs.	No action necessary.
Heading source inoperative or connection lost.	<Unit> is not receiving heading information from any source. Heading up map orientation not available.	Contact dealer for service.
Pressure altitude source inoperative or connection lost.	<Unit> is not receiving pressure altitude data from any source.	<p>For installations not connected to a pressure altitude source, this message may be turned off via the Altitude Source Input configuration setting. Contact dealer to update this setting if preferred.</p> <p>This option is available only on GPS 175 and GNC 355 units with Main software version 3.10 and later.</p>
Press "Enable APR Output" before selecting APR on autopilot.	Approach guidance is available from the connected KAP 140/KFC 225 autopilot.	Before engaging approach mode on the autopilot, tap the Enable APR Output key.
ADS-B Out fault. Pressure altitude source inoperative or connection lost.	For GNX 375, or GPS 175/GNC 355 configured to receive ADS-B In data from GTX 345: Transponder loses communication with the pressure altitude source.	Contact dealer for service.

Messages

ADVISORY	CONDITION	CORRECTIVE ACTION
Transponder has failed.	<p>For GNX 375, or GPS 175/GNC 355 configured to receive ADS-B In data from GTX 345:</p> <p>Transponder detects an internal failure. Functionality may be unavailable.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> • 1090ES ADS-B Out failure • Transponder failure • Communication with the transponder is lost 	Contact dealer for service.
Transponder is operating in ground test mode.	<p>For GNX 375, or GPS 175/GNC 355 configured to receive ADS-B In data from GTX 345:</p> <p>Transponder is being forced airborne for ground test.</p>	Cycle power to the GNX 375 once ground test completes.
ADS-B is not transmitting position.	For GNX 375: Transponder is not receiving a valid GPS position.	If the problem persists, contact dealer for service.
<Unit> demo mode.	The unit is in demo mode. Do not use for navigation.	Power cycle the unit to exit demo mode.
LRU Software mismatch.	Crossfill function is on but not working due to a software mismatch.	Contact dealer for software update.
Crossfill is inoperative.	<p>The unit lost communication with the other crossfill navigator.</p> <p>One navigator requires service.</p>	Contact dealer for service.

Messages

ADVISORY	CONDITION	CORRECTIVE ACTION
Crossfill is turned off.	Crossfill function is off.	No action necessary. To re-enable, open the System Setup page and toggle the associated function key on.

Messages

COM Radio Advisories, GNC 355

ADVISORY	CONDITION	CORRECTIVE ACTION
COM radio needs service.	COM radio is reporting that it requires service. Radio may continue to function.	Cycle radio power. Contact dealer for service.
COM radio may be inoperative.	COM radio is not communicating with the unit.	Push and hold the external COM remote transfer switch (if installed) to force the radio to 121.5 MHz. Contact dealer for service.
COM push-to-talk key is stuck. COM remote transfer key is stuck. COM remote frequency increment key is stuck.	Unit detects the specified key in the pressed position for 30 seconds. The input is ignored as a result. Radio stops transmitting.	Verify that the key is not stuck. Contact dealer for service if message persists.
COM remote frequency decrement key is stuck.		
COM overtemp or undervoltage. Reducing transmitter power.	COM radio is in overtemp or undervoltage mode. Transmitting power automatically reduces to prevent damage to the COM radio. Radio range is reduced as a result.	<ul style="list-style-type: none"> • Decrease length of COM transmissions. • Decrease cabin temperature and increase cabin airflow, especially near the unit. • Check aircraft voltage and reduce electrical load as necessary. • Contact dealer for service if message persists.
COM locked to 121.5 MHz. Hold remote COM transfer key to exit.	COM radio is locked to 121.5 MHz via the external COM remote transfer switch.	Hold remote transfer switch for two seconds to exit mode.

Messages

Terrain Advisories

ADVISORY	CONDITION	CORRECTIVE ACTION
Terrain alerts are inhibited. Re-enable alerts in the Terrain menu.	Pilot enables terrain alert inhibit function.	Open Terrain menu and deselect Terrain Inhibit .

Messages

Traffic System Advisories

Traffic Advisories, GPS 175 & GNC 355

ADVISORY	CONDITION	CORRECTIVE ACTION
1090ES traffic receiver fault.	ADS-B LRU unable to receive 1090 Extended Squitter traffic.	Service required. Contact dealer for support.
ADS-B Out fault. Check transponder is in correct mode.	GDL 88 reports a control panel input failure.	Verify transponder is in the correct mode. Contact dealer if message persists.
ADS-B failure. Unable to transmit ADS-B messages.	GDL 88 is unable to transmit ADS-B messages due to a failure occurring with one of the following: <ul style="list-style-type: none">• GPS position• ICAO address verification• UAT transmitter• UAT broadcast• Bottom antenna• Bottom and top antenna (GDL 88D only)	Service required. Contact dealer for support.
ADS-B fault. GDL 88 needs service.	ADS-B LRU reports one of the following conditions. <ul style="list-style-type: none">• Low battery• Fan fault• GDL 88D fault with only one antenna operational	
ADS-B traffic alerting function inoperative.	ADS-B LRU reports a CSA or TSAA/ATAS failure.	

Messages

ADVISORY	CONDITION	CORRECTIVE ACTION
ADS-B traffic function inoperative.	ADS-B LRU reports a failure with the ADS-B Traffic input.	
Traffic/FIS-B functions inoperative.	ADS-B LRU reports a critical fault and is inoperative.	Service required. Contact dealer for support.
	Communication with the ADS-B LRU is lost.	
UAT traffic/FIS-B receiver fault.	ADS-B LRU unable to receive UAT traffic and FIS-B data.	
GDL 88 configuration module needs service.	GDL 88 cannot communicate with its configuration module.	

Messages

Traffic Advisories, GNX 375

ADVISORY	CONDITION	CORRECTIVE ACTION
1090ES traffic receiver fault.	Unit is unable to receive 1090 Extended Squitter traffic.	
ADS-B traffic alerting function inoperative.	TSAA application reports it is unavailable to run.	
ADS-B traffic function inoperative.	Unit reports a failure with the ADS-B Traffic input. Possible causes: <ul style="list-style-type: none">• ADS-B/ADS-R/TIS-B input fault• ADS-B In electrical fault• All installed traffic applications report as "Unavailable to Run" or "Unavailable - Fault"	Service required. Contact dealer for support.
Traffic/FIS-B functions inoperative.	ADS-B In configuration data fault (configuration parameters are invalid).	
UAT traffic/FIS-B receiver fault.	Unit unable to receive UAT traffic and FIS-B data.	

Messages**VCALC Advisories**

ADVISORY	CONDITION	CORRECTIVE ACTION
Approaching top of descent.	User configured a vertical descent calculation, and the aircraft is within 60 seconds of the calculated top of descent.	No action necessary.
Arriving at VCALC target altitude.	User configured a vertical descent calculation, and the aircraft is approaching target altitude.	No action necessary.

Waypoint Advisories

ADVISORY	CONDITION	CORRECTIVE ACTION
User waypoint import failed.	User waypoint import failed due to improper file format.	Ensure media has the correct file format. If the problem persists, contact dealer for service.
User waypoint import failed. User waypoint database is full.	User waypoint catalog is full. Import of the requested user waypoints could not complete.	Delete any unnecessary user waypoints from the catalog and try again.
User waypoints were imported successfully.	User waypoint import successful.	No action necessary.
User waypoints imported successfully - existing waypoints reused.	User waypoint import successful. Import function reuses existing user waypoints instead of creating duplicates.	No action necessary.

INTENTIONALLY LEFT BLANK

Qualification

7 Qualification

GLOVE QUALIFICATION7-2



NOTE

*The procedures described in this section are not authorized for completion during flight.
All tasks must be performed while the aircraft is on the ground.*

Qualification

Glove Qualification

The touchscreen uses capacitive touch technology to sense the proximity of skin to the display. A glove creates a barrier between the skin and the display glass, potentially reducing the ability of the display to detect touches.

This procedure qualifies a specific glove for use with the touchscreen. Due to differences in finger size and glove size, the qualification procedure is specific to the pilot/glove combination. Multiple units must be evaluated individually.

GLOVE SELECTION CONSIDERATIONS

- Thinner gloves perform better than thicker gloves.
- Leather gloves, and gloves designed specifically for use with capacitive touchscreen devices, are often found to be acceptable.
- To improve touchscreen sensitivity while wearing gloves, use the pad of your finger instead of the tip during touch interactions.

GLOVE QUALIFICATION GUIDANCE

- Checklist 1 contains the tasks required to qualify a glove.
- Checklist 2 contains tasks that are not required to qualify a glove, but may limit how some functions are accessed while wearing a glove.

Qualification

GLOVE QUALIFICATION STEPS

Complete only the tasks for the capabilities relevant to the installed navigator.

1. Sitting in the pilot's seat, start the unit in normal mode.
2. Perform the tasks listed in each checklist, tapping the specified keys with a non-gloved finger. It is not necessary to record any results for this step.
3. Repeat step 3 using a gloved hand.
4. For each task, determine whether the touchscreen response is the same or worse than without the glove.
5. Record the results in the applicable column. Items that may cause the operation to be worse include, but are not limited to:
 - Multiple attempts to select a key
 - Unintentional selection of adjacent key(s)
 - Excessive force on the touchscreen to select a key
6. If all applicable tasks produce the same response with and without a glove, you may use the glove in flight.

GLOVE QUALIFICATION PROCEDURE

Pilot: _____

Glove Description: _____

Circle the applicable navigator.

GPS 175 GNC 355 GNC 355A GNX 375

Qualification

CHECKLIST 1 REQUIRED TASKS

TASK	OPERATION WITH GLOVE (CIRCLE ONE)	
Starting from the Home page:		
Waypoint	Same	Worse
Type the airport identifier "KSLE."	Same	Worse
Enter	Same	Worse
Return to the Home page.		
Flight Plan	Same	Worse
Add Waypoint	Same	Worse
Type the airport identifier "KSLE."	Same	Worse
Enter	Same	Worse
Add each of the following waypoints in the same manner.		
KMMV	Same	Worse
KONP	Same	Worse
BTG	Same	Worse
Select BTG .	Same	Worse
Load Airway	Same	Worse
V23	Same	Worse
ALFOR	Same	Worse
Load	Same	Worse
Scroll the list of flight plan waypoints up and down.	Same	Worse
Back	Same	Worse

Qualification**CHECKLIST 2
NON-REQUIRED TASKS**

TASK	OPERATION WITH GLOVE (CIRCLE ONE)	
Open the Active Flight Plan page.	Same	Worse
With one finger on the page, drag the waypoint list up and down.	Same	Worse
With one finger, swipe the list up and down.	Same	Worse
Back	Same	Worse
Open the Map page.		
Graphically Edit FPL	Same	Worse
Drag KONP to an empty area of the map, panning and zooming as necessary. Observe that KONP is removed from the flight plan.	Same	Worse
Drag the leg between KMMV and BTG to KSPB. Observe that KSPB is added to the flight plan.	Same	Worse

INTENTIONALLY LEFT BLANK

Glossary

8 Glossary

A

ACT	Altitude Compensated Tilt
ADAHRS	Air Data/Attitude & Heading Reference System
ADC	Air Data Computer
ADIZ	Air Defense Identification Zone
ADS-B	Automatic Dependent Surveillance Broadcast
AFM	Aircraft Flight Manual
AFMS	Aircraft Flight Manual Supplement
AGL	Above Ground Level
AHRS	Attitude Heading Reference System
AIM	Airman's Information Manual
AIRB	Basic Airborne Application
ALT	Altitude Hold
AP	Autopilot
ARTCC	Air Route Traffic Control Center
AR	Approval Required
ASOS	Automated Service Observing System
ATAS	ADS-B Traffic Advisory System
ATC	Air Traffic Control
ATIS	Automatic Terminal Information Service
ATK	Along Track
AWOS	Automated Weather Observing Station

Glossary

C

CDI	Course Deviation Indicator
CDU	Control and Display Unit
CRS	Course
CTAF	Common Traffic Advisory Frequency
CWA	Central Weather Advisory

D

DG	Directional Gyro
DME	Distance Measuring Equipment

E

EDR	Excessive Descent Rate
EFC	Expected Further Clearance
ENR	En Route
ESP	Electronic Stability and Protection

F

FAF	Final Approach Fix
FDC	Flight Data Center
FIS-B	Flight Information Services Broadcast
FLTA	Forward Looking Terrain Avoidance
FMS	Flight Management System
FPL	Flight Plan
FPM	Feet Per Minute
FSS	Flight Service Station

G

GCS	Ground Clutter Suppression
GDC	Garmin Air Data Computer
GDL	Garmin Data Link
GDU	Garmin Display Unit
GFC	Garmin Flight Controller

Glossary

GP	Glidepath
GPS	Global Positioning System
GPSS	Global Positioning System Steering
GRS	Garmin Reference System
GS	Glideslope
GSL	Geometric Sea Level
GSU	Garmin Sensing Unit
GTP	Garmin Temperature Probe

H

HDG	Heading
HOT	Hazardous Obstacle Transmission
HPL	Horizontal Protection Level
HSDB	High Speed Data Bus

I

IAF	Initial Approach Fix
IAS	Indicated Airspeed
IAT	Induction Air Temperature
IFR	Instrument Flight Rules
IGRF	International Geomagnetic Reference Field
ILI	Imminent Line Impact
ILS	Instrument Landing System
INT	Intersection
IOI	Imminent Obstacle Impact
ISA	International Standard Atmosphere
ITI	Imminent Terrain Impact

Glossary

K

KIAS Knots Indicated Airspeed

L

LDI Lateral Deviation Indicator

LOA Letter of Authorization

LOC Localizer

LRU Line Replaceable Unit

M

MAP Missed Approach Point

MAHP Missed Approach Holding Point

MDA Minimum Descent Altitude

METAR Meteorological Terminal Aviation Routine Weather Report

MOA Military Operations Area

MSL Mean Sea Level

N

NAVAID Navigation Aid

NCR Negative Climb Rate

NDB Non-Directional Beacon

NEXRAD Next-Generation Radar

NOTAM Notice to Air Missions

O

OAT Outside Air Temperature

OBS Omni Bearing Selector

OCN Oceanic

Glossary

P

PCL	Pilot Controlled Lighting
PDA	Premature Descent Alert
PRF	Pulse Repetition Frequency
PVT	Position, Velocity, and Time

R

RAIM	Receiver Autonomous Integrity Monitoring
RF	Radius to Fix
RLC	Reduced Line Clearance
RNAV	Area Navigation
RNP	Required Navigation Performance
ROC	Reduced Required Obstacle Clearance
RTC	Reduced Required Terrain Clearance

S

SAT	Static Air Temperature
SBAS	Satellite-Based Augmentation System
SBS	Surveillance and Broadcast Services
SD	Secure Datacard
SSID	Service Set Identifier
STAR	Standard Terminal Arrival
STBY	Standby
SURF	Surface Situation Awareness
SVID	Satellite-Vehicle Identification

T

TA	Traffic Advisory
TAF	Terminal Aerodrome Forecast
TAS	Traffic Advisory System
TAT	Total Air Temperature
TCAD	Traffic Alert and Collision Avoidance Devices

Glossary

TCAS Traffic Alert and Collision Avoidance System

TCH Threshold Crossing Height

TERM Terminal

TFR Temporary Flight Restriction

TIS Traffic Information Service

TSAA Traffic Situational Awareness with Alerting

TSO Technical Standard Order

U

UTC Universal Time Coordinated

V

VCALC Vertical Calculator

VDI Vertical Deviation Indicator

VFR Visual Flight Rules

VLOC VOR/Localizer

VNAV Vertical Navigation

VOR Very High Frequency Omni-directional Range

VPL Vertical Protection Level

VRP Visual Reporting Point

VS Vertical Speed

W

WAAS Wide Area Augmentation System

WPT Waypoint

X

XPDR Transponder

Regulatory Information

9 Regulatory Information

COMPLIANCE.....	9-2
SOFTWARE LICENSE AGREEMENT	9-3

Regulatory Information

Compliance

AC 90-100A Statement of Compliance

The Garmin navigational unit meets the performance and functional requirements of FAA Advisory Circular (AC) 90-100A, *U.S. Terminal and En Route Area Navigation (RNAV) Operations*.

Regulatory Information

Software License Agreement

BY USING THE DEVICE, COMPONENT OR SYSTEM MANUFACTURED OR SOLD BY GARMIN ("THE GARMIN PRODUCT"), YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY. Garmin Ltd. and its subsidiaries ("Garmin") grants you a limited license to use the software embedded in the Garmin Product (the "Software") in binary executable form in the normal operation of the Garmin Product. Title, ownership rights, and intellectual property rights in and to the Software remain with Garmin and/or its third-party providers. You acknowledge that the Software is the property of Garmin and/or its third-party providers and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of Garmin and/or its third-party providers and that the Software in source code form remains a valuable trade secret of Garmin and/or its third-party providers. You agree not to reproduce, decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

INTENTIONALLY LEFT BLANK



190-02488-01 Rev. C