# ARMSTRONG
## SMART DIGITAL CABINET LOCK
## User Mamual

## SDWC-001W

### *SPECIFICATIONS*

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| **Operation Frequency:** | **125kHZ** | | **Antenna Gain(Peak):** | **125KHZ** | | Temperature: | **-2° C~40° C** |
| **Modulation Type:** | **Internal switch** | | Output Power: | **DC4.5V** | | Humidety: | **20%~80%** |

### *FUNCTIONS AND SETTINGS*

- **Auto-close mode: Press button"A"（"beep,beep"sound）**
- **Manual-close mode: Press button"A"("beep"sound)**
- **Single card mode: Use an user card to touch open the lock**
- **BL-Card mode:Use an user card along with a service card to touch open within 8 seconds,It can not be used without the other card**

### *SET UP A MANAGEMENT CARD*

Press "B" button at the back of the lock for 6 seconds ⇨ "Beep beep beep"sound+ blue light on ⇨ Take a management card to touch the lock ⇨ "Beep"sound+ blue and red light on again ⇨ Set up done

### *SET UP AN USER CARD*

Take a management card to touch the lock ⇨ A"beep"sound+blue light on, the lock is open ⇨ Take a blank(user)card to touch the lock.A "beep" sound ⇨ User card set up done when the light is goes off

### *SET UP A SERVICE CARD*

Take a management card to touch the lock twice ⇨ "Beep beep"sound+red flash and plunger goes in ⇨ Take another blank card to touch the lock. A"beep"sound ⇨ A service card set up done when the light is goes off

### *DELETE AN INDIVIDUAL USER CARD*

Take a management card to touch the lock ⇨ A"beep"sound+blue light on, the lock is open ⇨ Take the user card to touch the lock.A "beep" sound ⇨ The user card is deleted when the light is off

### *DELETE AN INDIVIDUAL SERVICE CARD*

Take a management card to touch the lock twice ⇨ "Beep beep"sound+red flash and plunger goes in ⇨ Take the service card to touch the lock.A "beep" sound ⇨ The service card is deleted when the light is off

### *DELETE ALL SERVICE AND USER CARDS*

Take a management card to touch the lock 3 times ⇨ Red&blue lights flash ⇨ If an user/service cards were to touch to the sensor, all the service/user cards would be deleted ⇨ A long "beep" sound+plunger comes out ⇨ Deleting service/user card is done

### *DELETE ALL SERVICE AND USER CARDS*

Take a management card to touch the lock 4 times ⇨ A long "beep" sound+plunger comes out ⇨ All user and service cards are deleted

## *LOW VOLTAGE ALARM*

**--If there is a long "beep beep" sound with red light flash twice, it means the battery is low. Please change new batteries( 3pcs 1.5V alkaline batteries)**

## *WARNING*

**--Input voltage can not be greater than 6V**

**--Risk of suffocation from small parts and packing materials!**

**Screws, small parts and packing materials can be deadly playthings for children.**

**> Do not leave the packing materials and the contents lying around carelessly, and keep away from children and babies.**

**> Keep children away from the installation site during installation.**

**--Risk of fatality due to failures or faults in electromagnetically sensitive devices!**

**The electromagnetic radiation of the product can cause faults in sensi-tive parts (e.g. in medical equipment). The functionality thereof will be adversely affected.**

**> Do not mount product close to electromagnetically sensitive devices.**

**> Pay attention to the safety instructions for the electromagnetically sensitive devices.**

**> If you have any doubts regarding compatibility, please contact the manufacturer.**

## *INSTALLATION*

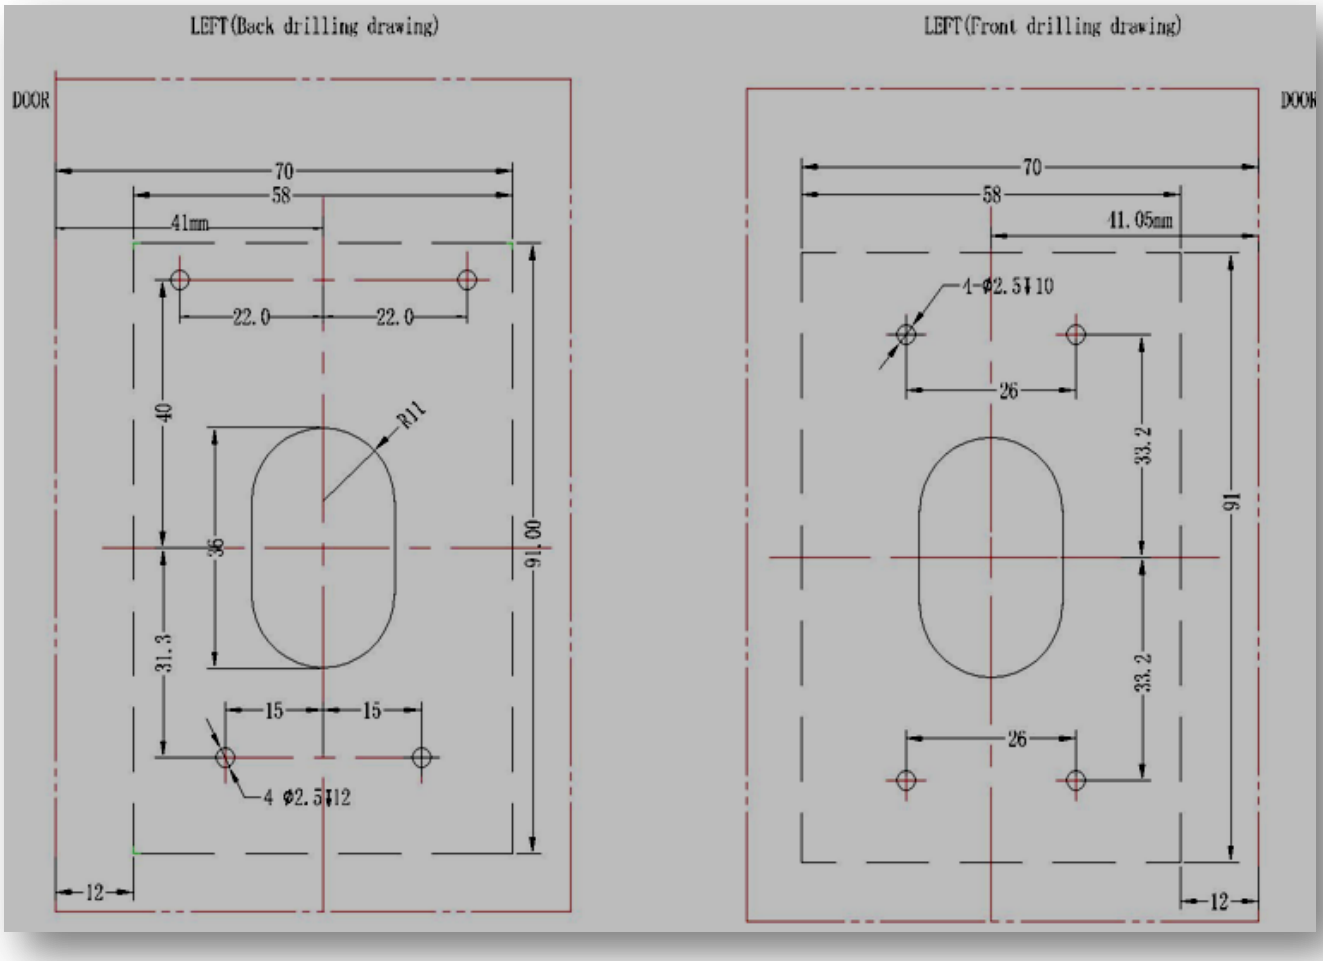

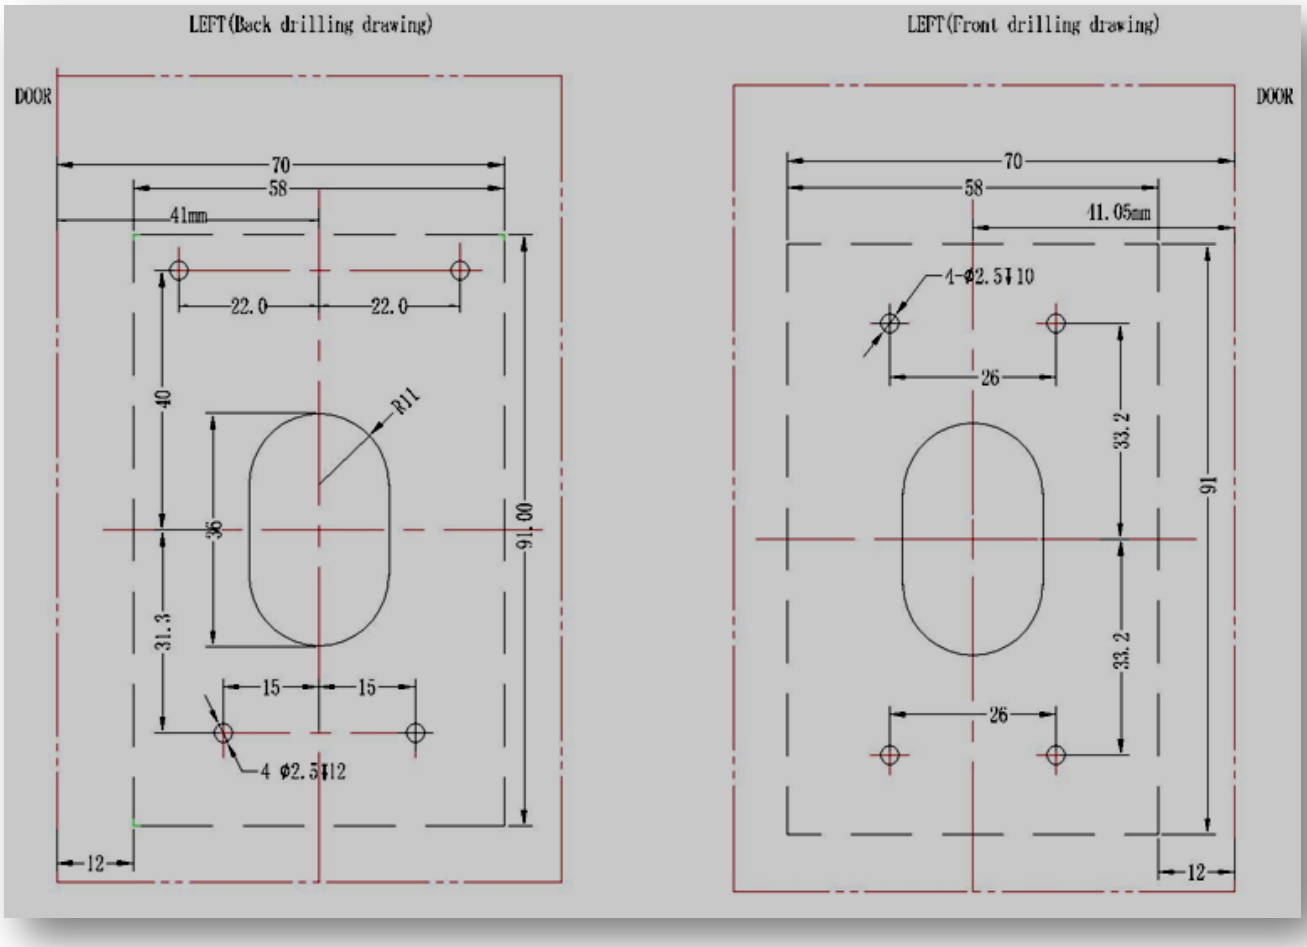


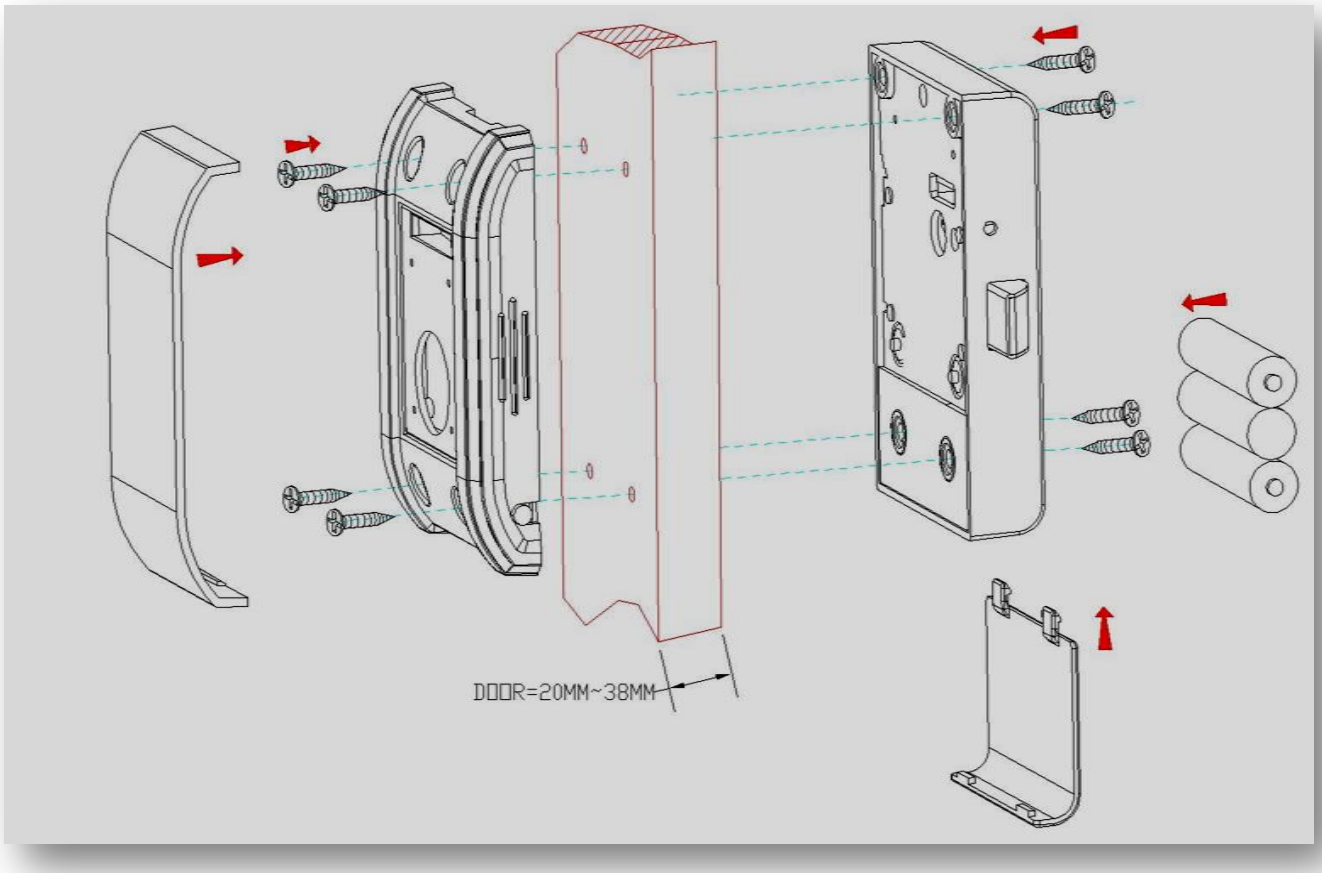


**--- If parts are missing or damaged, contact the manufacturer.**