**Tablet PC** 


T4301

**User Manual** 

# **Specification**

Display	4.3 inch TFT LCD, Resolution 480*272
OS	Android 4.2
CPU	ARM Cortex-A8 A13, 1.2GHz
Camera	Front:0.3MP, Rear:2.0MP
G-sensor	Support G-sensor
Network	WIFI
Audio Format	MP3,OGG,AAC,M4A,AMR,MID,WAV, etc.
Video Format	MPEG, 3GP, MKV, MP4, etc.
Image Format	JPG, JPEG, GIF, BMP, PNG, etc.
External micro SD	Up to 32G
Battery	1200mAh/3.7V

# **Chapter 1. Introduction of Tablet**

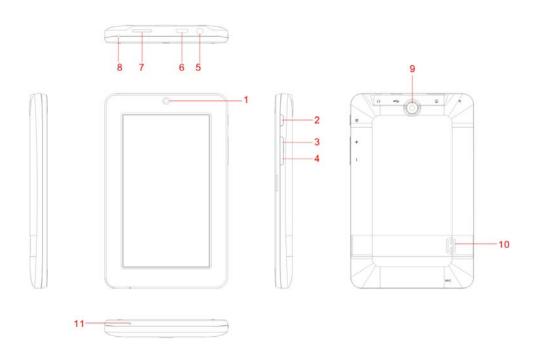

## Appearance.

Front camera
POWER
Volume+
Volume+
Earphone jack
USB port
TF card
Rear camera
Speaker
Mic

# 2. Basic Operation

## 1). Charging & Battery Management

It is suggested to fully charge the battery before use. The best state for the battery is after charged and discharged two or three times. Charging method: connect the power adapter one end to your tablet, and plug the other end of power adapter to the electrical outlet.

## 2). Turn on/off

- (1).Turn on: Press & hold the power switch for about 3 seconds to turn on the device. Screen lock will show after starting up.
- (2).Turn off: Press & hold the power switch for around 3 seconds and the system will popup out power off option, tap on it to turn the tablet off.

## 3. Standby & Unlock

- 1). Automatic Standby: there are no any operation to the device under the system default or in set time state, device will shutdown screen, and enter standby state automatically.
- **2). Manual Standby:** press power button "" about one second, device will enter into standby state.
- 3). Unlock: Under standby state, press power button "O" one second to light up the screen. Then press "o" icon, scratch this aperture to "G", namely unlock.

#### 4. Reset

When the tablet crashes or does not start up due to wrong operation or other reasons, you can use a pin to press reset, then restart is ok.

## 5. Custom Homepage Interface

There are one interface, sliding to left or right to switch.

Google: enter into searching.

#### 6. G-sensor

Under opening G-sensor function state, when you rotate the tablet, the screen will automatically change the display direction.

On the quick guide settings, slide auto-rotate screen key left or right to open or close G-sensor.

## 7. Switch of Input

When inputting text, click the keyboard icon of status bar. It will pop up an Input menu options, Click on the input method you need is ok. Or enter setting interface, click the "language &input" to set.

[Remarks]

When using PC format to store, please select the FAT32 format.

### 8. Connection with PC

Use the USB cable provided to connect the tablet with PC. User can choose the files and directories of

tablet through the PC.

- 1). under the tablet main interface, use the USB cable provided to connect the tablet with PC, device will pop up the USB connection window, click" Turn on USB storage" to connect to PC, In the connection mode, you can read the data of the tablet on the PC.
- 2). Please don't change the name of root directory, in case of causing a file to read error by application programs.
- 3). Be sure to keep the tablet power is sufficient, in case it is unable to identify when connected with computer.

# **Chapter 3 Basic Settings**

### 1. Wireless

**Using Wi-Fi:** You can connect WI-FI network for high-speed Internet access.

- (1). Click Wi-Fi, sliding close button to the right, open the Wi-Fi network. All available WI-FI will be listed.
- (2). Choose the network you need to connect, such as the encryption password will pop up window, input the password, click on the "connect" is ok.

## [Reminder]

- ① Click "**①**"→pls click router Wi-Fi protective settings button. Click"+", it can make Wi-Fi network to be added manually.
- ② Click right corner in the interface icon "■"→"scan" it can make Wi-Fi network to manual scanning.

③ click"₫"→advanced, for more Wi-Fi settings.

#### 2. Device

Include: Sound, Display, Storage, Battery and Apps.

### 3. Personal

Include: location services, Security, Language &input, Backup &reset. When device has a significant error or forgets password to unlock, user can perform the "Factory data reset". Please make sure to back up your personal data before performing this function.

### 4. Account

**Account& sync:** user can manager and add Google account.

## 5. System

Include: Date&time, time settings, accessibility, developer options, about tablet.

#### FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

#### 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC RF warning** statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.