USER'S GUIDE

Get started

Before using the headset H200, you must to charge the battery and pair the headset with a compatible mobile devices. The speaker of the headser are magnetic. Metallic materials maybe attracted to the headset. Please do not place credit cards or other magnetic storage media near the headset, because information on them be erased.

Charge the battery

The headset has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device, as you may damage the device.

- Connect the usb cable to a computer or charger into an outlet.
- Connect the micro usb cable to the headset connector(1), The indicator light(6) is on of the red light while charging, it may take a while before charging starts. If charging does not start, disconnect the usb or charger, plug it in again and retry. Charging the battery fully may take up to 2 hours.
 - When the battery is fully charged, the indicator light will change to on of the blue light, disconnect the usb or charger from the headset and computert and or outlet. When battery power is low, the indicator light quickly

Page 1 of 8

flashes twice about every 3 seconds.

Switch the headset on or pairing or off.

- 1. To switch on, press and hold the multifunction key(2) for second until the blue indicator light is flashed.
- 2. To switch pairing, press and hold the multifunction key(2) for 6 seconds until the indicator light is flash of red and blue light at same time.
- 3. To switch off, press and hold the multifunction key for 3 seconds. The red indicator light will be flash briefly for 3

AIRVIEW

(1)charger connector
(2)multifuction key Pause/Play

(4)vulme control(-) / //Next song //Next song

times and off.

Pair the headset

You can try to connect bluetooth devices and the bluetooth headset H200.

1. Ensure the bluetooth of your device is switched on and the

- headset is switched off.
- Press and hold the multifunction button(2) for 6 seconds until the indicator light starts to flash of red and blue quickly.
- Select search the bluetooth device from your bluetooth device, you can find there display the H200 or H200i or H200c in the found list of bluetooth devices.
 - 4. Select the headset H200 from the list of found devices list and to pair it.
- 5. Enter the passcode "0000" to pair and connect the headset to your device.

If the pairing is successful, the headset will be appears in the menu where you can view the currently paired bluetooth devices. When the indicator light flashes twice every 5 seconds, the headset is connected with your bluetooth device and ready for use.

Multi-point connect

If done the paired with the first bluetooth device with the headset.

- Please turn off bluetooth of first bluetooth device and power off the headset H200 also.
- Press and hold the multi-function key until to pair status again.

Page 3 of

- Take out your second bluetooth device and turn on the the bluetooth.
- 4. Pair the second bluetooth device with the headset H200 according to the first device operation.
- 5. If connected the your second bluetooth device with headset H200 successfully, please power off the headset H200 again.
- Turn on the bluetooth from your first bluetooth device of connected device.
- 7. Power on the headset H200, press and hold the vulme control key (+) and (-) at same time, the speaker will be ring di di di four sound, the multi-point connect was turn on.

 8. Wait for around 10 seconds, the bluetooth headset will be
 - connected with the first device and second device automatically, you can find they are connected with the devices from your paired list of bluetooth devices.

You can make a trial call by 2 devices respectively also. Then it is done the multi-point connect.

Basic use

(7) speaker

Wear the headset

- 1. Take the headset and insert the earpices leg (8) to you ear hole, until the earpices leg cannot move in the ear hole;
 - 2. Then insert the whole earpices speaker(7) in ear.
- Adjust the microphone to your mouth and adjust the site of earpices leg to comfortable fit in the ear.

Playing/Pause Music


You can play the music directly from your mobile or Tablet or computer etc...

Page 4 of

of

2

Page

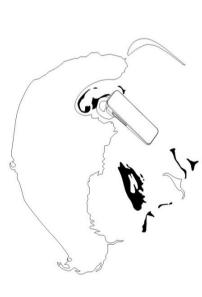

Press the multi-function key one time to pause the misic play if you want to stop the music (fit to H200s, H200 is not support pause function).

Previons song

you can short press the prev song key (3) to chose the previons song if you are playing a song (only H200s is supported).

Next Song

you can short press the next song key (4) to chose the next song for enjoy if you are playing the a song (only H200s is supported)

Adjust the volume

Please long press the key volume control(+) key (4) and the volume control (-) key (3) to adjust the speaker volume.

Automatic Connection

When the headset off the connection with device for out of

∞ of 2 Page

the working range or power off or return on the bluetooth device. You just need close the headset with device or turn on the bluetooth and device. They will be done the connection automatically.

the headset and to return on the headset again, The headset headset. Reset the headset to charge the headset or turn off will be delete the all of record of memory to done the reset. If the headset is system halted. Then you have to reset the

Care and maintenance

your device is a product of superior design and craftsmanship and should be treated with care.

The following suggestions will help you protect your warranty coverage.

- 1. Keep the device dry. Precipitation, humidity, and all types corrode electronic circuits. if your device does get wet, of liquids or moisture can contain minerals that will
- moving parts and electronic components can be damaged. Do not use or store the device in dusty, dirty areas. Its allow it to dry completely.
 - Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage
 - inside the device and damage electronic circuit boards. Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form batteries, and warp or melt certain plastics.
- 5. Do not attempt to open the device. 6. Do not drop, knock or shake the device. Rough handling can break internal circuit boards and fine mechanics.

- 7. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- 8. Do not paint the device. Pain can clog the moving parts an prevent proper operation.

battery, charger, or any enhancement. If any device is not All of the above suggestions apply equally to your device, working properly, take it tohearest authorized service facility for service.

FCC Warning

is subject to the following two conditions: (1) This device may accept any interference received, including interference that This device complies with part 15 of the FCC Rules. Operation not cause harmful interference, and (2) this device must may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply encouraged to try to correct the interference by one or more used in accordance with the instructions, may cause harmful with the limits for a Class C digital device, pursuant to part 15 interference to radio communications. However, there is no residential installation. This equipment generates, uses and determined by turning the equipment off and on, the user is can radiate radio frequency energy and, if not installed and interference to radio or television reception, which can be guarantee that interference will not occur in a particular reasonable protection against harmful interference in a of the FCC Rules. These limits are designed to provide installation. If this equipment does cause harmful of the following measures:

Increase the separation between the equipment and Reorient or relocate the receiving antenna.

Page 7 of

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for

expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE 2: Any changes or modifications to this unit not

Battery information

battery can be charged and discharged hundreds of times, Your device is powered by a rechargeable battery. The but it will eventually wear out.

Recharge your battery only with the standard chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since over charging may shorted battery will lose its charge over time.

Never use any charger that is damaged.

car in summer or winter conditions, will reduce the capacity Leaving the device in hot or cold places, such ad in a closed and lifetime of the battery.

Battery performance is particularly limited in temperatures 15-25, A device with a hot or cold battery may not work tem Always try to keep the battery between the tempreture porarily, even when the battery is fully charged.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if Damaged.

well below freezing.

Page

Page 6 of