Romantic lighting Bluetooth speaker



User Manual

Thank you for choosing us. Please read this user manual before using the speaker.

Packing list







The speaker

user manual

USB data

cable

Specifications:

Name: Romantic lighting Bluetooth

speaker

• Model NO. : LV700

• Charging Input: DC5V-- 1000mAh

Battery Capacity: Polymer Lithium Battery,

3.7V/1800mAh

• Charging Time: 2.5-4 Hours

Speaker Specifications: Φ40*18mm(Power: 4Ω3W)

• Frequency Range: 70Hz-20KHz

• Distortion: ≤0.5%

Whole Signal to Noise Ratio: ≥65dB

Main Material: ABS/Silicone


● Size: Ф118×128mm

• Weight: About 270G

Playing time: 11 hours (playing Bluetooth music

only)

 Lighting time: 7 hours on high brightness. 15 hours on low brightness (Note: battery life will be less when speaker and light are both turned on at the same time).

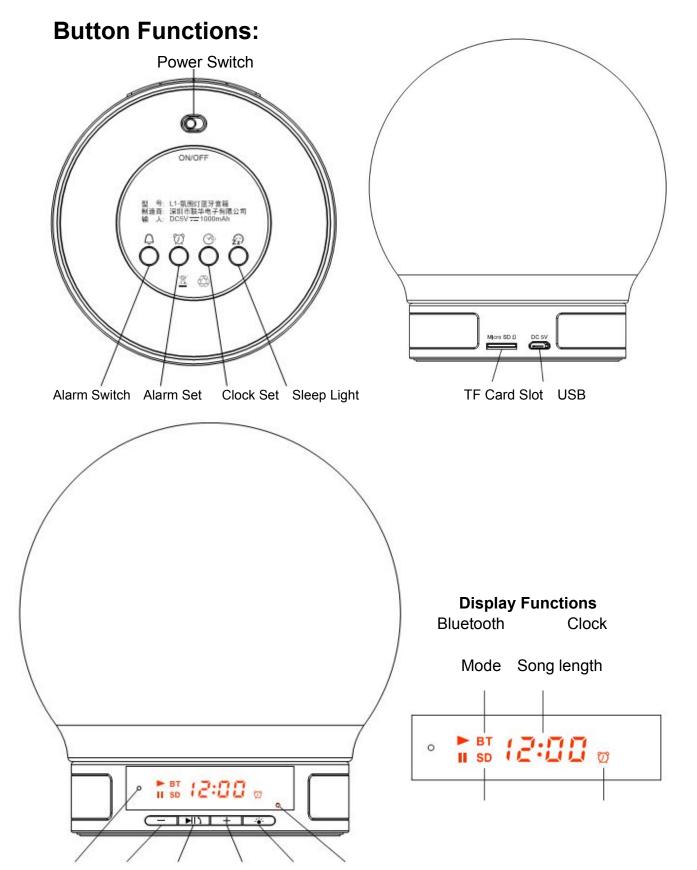

Mic Volume Down Bluetooth Switch Volume Up Light Switch Charging Indicator

Previous Mode Switch Next Brightness Adjust

Play/Pause Answer/Hang up

Button Icon

► II.7	Long press: Bluetooth Switch Short press: Play/Pause	SET	Calendar, clock setting
+	Volume up/Next Clock time setting Setting mode	M	Alarm setting
	Volume Down/Previous Clock time setting Time setting mode	Ç	Alarm switch
-\-	Long press: Light Switch Short press: Dimming	Ð	Sleep Light. Delay 20mins to turn off

Charging

Please make sure the speaker is fully charged in first use. The light and display will

Flash, indicating that the speaker needs to be recharged. Charge the speaker with the provided USB cable which is compatible with any computer or cell phone charger.

The charge indicator light will be red while charging, then when the battery is fully charged it will turn off.


Switch

Slide the switch on the speaker base to turn it on or off. When the speaker is first turned on the dome light will be on its lowest light level. You can toggle through various light brightness levels.

Notice: The clock and alarm function are only available once the speaker is

Calendar and clock setting

Click the clock setting buttor on the bottom to activate the calendar and clock settings. The display will flash indicating the current option being set in the order of: year, month, day, and time. In each case "+" "-" to adjust the right number. Pi" (\checkmark) " to exit after setting each option.

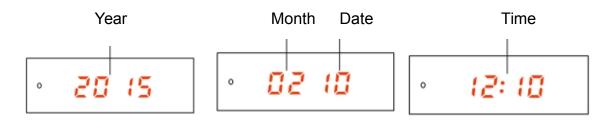

Alarm Setting

Click the alarm setting buttor " " on the bottom to active the alarm. The display will flicker to show which numbers are being chan " + " " - " to adjust the clock number you want to set, cli " " , turn to the minute setting, then adjust the minute number you want, cli " " , then the alarm setting is finished.



Alarm on/off switch

Press the alarm switch butto " \mathbb{Q} " on the bottom to turn on the alarm. The alarm symbol on the lower right corner will light up showing that the alarm is active. Pressing the button once more will deactivate the alarm.

Speaker function:

Bluetooth Mode:

First turn on the speaker. Then press and hold tl" >II \" button for 3 seconds to enter bluetooth detect mode. The Bluetooth indicate cl" BT" er will flash rapidly when in bluetooth detect mode for 10 minutes. During this time you should connect the bluetooth speaker to your bluetooth enabled device.

Bluetooth connection:

Step 1: Open the Bluetooth setting on your phone or tablet and click "search device". Iphones will search for Bluetooth devices automatically.

Step 2: You have found the Bluetooth speaker when the screen displays the character "Lightspeaker1", click on it in your device to pair the connection.

Step 3: Enter "0000" and click OK if there's a prompt that requires you to enter a password.

Step 4: The phone or tablet will indicate when the pairing is successfu" BT": character on the display of the speaker will stop flickering.

Music Playing

Open the player device when the connection is successful. Click to play music, and the Bluetooth speaker will play the music.

You can operate the player with the buttons on the Bluetooth speaker:

Short pres: "►II')" to play/pause.

Short press "+" to play the next song and long press to volume up.

Short press "—" to play the previous song and long press to volume down.

Bluetooth Hands free Call

Answer and hang up the phone:

There will be an alert sound from the speaker when there is a phone call ">|| \]" to answer the call, and clic ">|| \]" again to hang up.

In Bluetooth mode, when you long pre "▶||`\", it will be switched to the TF card mode.

TF Card Mode

Insert the TF card when the speaker is turned on. The speaker will enter itself into the TF card mode. It can play the music (MP3/WMA/APE format) from your TF card.

You can operate the player with the buttons on the Bluetooth speaker: short press ">II > " to play/pause .

Short press "+" to play the next song and long press to volume up.

Short press "-" to play the previous song and long press to volume down.

In TF mode, the display can only show the playing time of songs but not the clock.

Bluetooth pairing and connection

- 1. If the speak has been connected with Bluetooth devices before, it will connect with the last Bluetooth device automatically once it is turned on.
- 2.Other phones or tablets can not be connected with the Bluetooth speaker when the speaker is being connected with a phone or tablet.
- 3. The phone or tablet can not be connected with the Bluetooth speaker if it is connected with other Bluetooth devices. You should turn off your Bluetooth connection and connect your phone with the Bluetooth speaker again.

Lamp Function

Slide the switch of the speaker on the bottom. Turn on the speaker, and the lamp will light on in the dimmest grade. The brightness can be adjusted by clicking "" button . The brightness has four grades: micro brightness, low brightness,

intermediate brightness, and high brightness. Long pi " to turn on or off the lamp.

Sleep Light Function

When the lamp is on, click the butt " ??" on the bottom. The lamp will blink twice, and the sleep light function will be activated. The light will go out after 20 minutes.

Frequently Asked Questions

Questions	Solutions	
Unsuccessful pairing and connection repeatedly	1.Check the speaker and make sure it is in the searching state or reboot the speaker.	
	2. Connection is difficult when there are too	
	many Bluetooth devices nearby. Turn off other Bluetooth devices.	
	3.Turn off the Bluetooth device that was	
	connected with the Bluetooth speaker last time, and reconnect the speaker.	
Muted or distorted sound	1.Check the volume of your phone or the	
	speaker, and adjust the volume.	
	2.The battery is low. Please charge it.	
Choppy music play	Check if the device is beyond the effective	
	connection distance.	
	2. Check if there is any obstacle between the	
	speaker and your device.	
The indicator not shining	1.The battery is low. Please charge it.	
in Bluetooth mode	2.Please reboot the speaker.	

Precautions

- 1.Please store and use the product in room temperature environment.
- 2.Do not expose this product in rain or wet conditions.
- 3.Do not drop or bump this product.
- 4.Do not disassemble, repair, or modify the product.
- 5. Please use the power charge with rated voltage for the speaker.
- 6.It may cause hearing damage if playing music in high volume for

a long time. Consider avoiding excessively high volume when playing music for a long time.

7.Disassemble this product will invalidate the warranty.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation