



Clear and Simple Quick Start Guide

alcatel
STREAK™



More information

On the web

Detailed support information, including device specifications and a full user's manual, is available at www.cricketwireless.com/support/devices

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your cell phone.

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.


Product meets FCC Radio Frequency Exposure Guidelines-FCC ID 2ACCJB039. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. © 2016 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC. which lets you mix both local and streaming tracks to save and share with your friends. Alcatel is a trademark of Alcatel-Lucent and is used under license by TCL Communication Ltd. © Copyright 2016 TCL Communication Ltd. All rights reserved. TCL Communication Ltd. reserves the right to alter material or technical specification without prior notice. All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).

Getting to know your Alcatel STREAK™



Phone setup

- Remove the back cover by lifting from the bottom left corner.
- Remove the battery.
- To insert the SIM, turn the SIM card so the gold contacts face downward.
- To insert a microSD card (sold separately), turn the microSD card so the gold contact face downward and slide it into the microSD slot. Make sure that it is correctly inserted.
- Install the battery.
- Install the back cover.

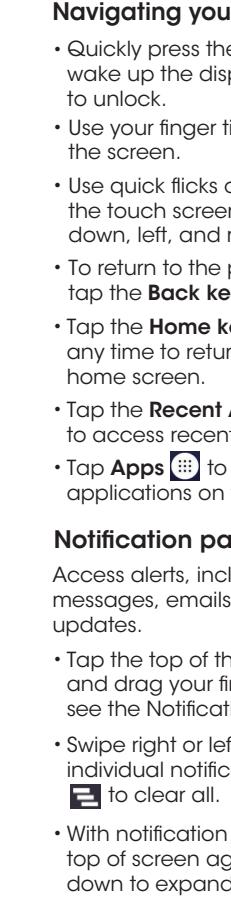

WARNING!

To avoid damage to the phone, only use the SIM included in the box or provided to you by Cricket.

Touch screen

Navigating your phone

- Quickly press the power key to wake up the display and swipe to unlock.
- Use your finger tip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- To return to the previous screen, tap the **Back key** .
- Tap the **Home key** at any time to return to the main home screen.
- Tap the **Recent Apps key** to access recently viewed apps.
- Tap **Apps** to access applications on your phone.



Notification panel

Access alerts, including new messages, emails and software updates.

- Tap the top of the home screen and drag your finger down to see the Notifications panel.
- Swipe right or left to clear individual notifications or tap to clear all.
- With notification panel open, tap top of screen again and drag down to expand the quick settings menu.
- Tap to access the settings menu.

Personalize

Set wallpaper

- To change your home or lock screen wallpaper, press and hold a blank part of the home screen and tap **WALLPAPERS**.
- Select a wallpaper and tap to set it. You can also tap **Pick image** for additional options.
- Dialer** : Manually enter a phone number.
- Speed dial** : Choose from frequently called contacts.
- Call log** : Choose from a list of people who you have called or have recently called you.
- CONTACTS** : Call from your contacts list.



Add to home screen

- To add app shortcuts, tap **Apps** , press and hold the desired app, and drag it to the home screen.
- To add widgets, press and hold a blank part of the screen and tap **WIDGETS**, press and hold the desired widget and drag it to the home screen.




Check voicemail

- From the home screen, tap **Call** , then tap .



- Press and hold the **1** key .



Calls and voicemail

Make a call

- From the home screen, tap **Call** .
- Type a name or phone number, or select one of the following options:



Add to home screen

Send a text message

- From the home screen, tap **Messaging** .
- Tap **New message** to start a new text message.
- In the **To** field, enter a number or a contact name or tap **Contacts** to access your contacts.
- Tap the **Type message** field and enter your message.
- Tap **Send** to send the message.

