Qianglong Furniture Co., Ltd.



ITEM NO.: 400-12-00K Gaming Chair manual

● THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



● DO NOT RETURN TO THE STORE IF PARTS ARE MISSING OR DAMAGED.

FOR PARTS REPLACEMENTS AND INQUIRIES, PLEASE CALL US TOLL-FREE 1-800-257-0815

EASTERN STANDARD TIME:

MONDAY - FRIDAY 8:00 A.M. - 8:00 P.M.

LOT NUMBER:

DATE OF PURCHASE:

CUSTOMER SERVICE

Your complete satisfaction is our #1 priority. Our products is designed and manufactured to meet the highest quality standards.

In the event you have assembly questions, or parts are missing or damaged, please do not return the product to the store.

Our Customer Service Department would appreciate the opportunity to provide information regarding assembly and to provide any necessary parts.

CONTACT CUSTOMER SERVICE DIRECTLY AT:

PHONE TOLL FREE 1-800-257-0815

CUSTOMER SERVICE HOURS

EASTERN STANDARD TIME:

MONDAY - FRIDAY 8:00 A.M. - 8:00 P.M.

Please Visit us 24 hours a day online at www.americancustomerservice.com



Cautions! Please read below statements before beginning assembly:

- 1. Assemble on soft surfaces to prevent damage to the product finish.
- 2. Assembly should take place in the secured environment, not on the wet floor, for example.
- 3. Assembly can be done by one person, but two persons are recommended.
- 4. Allen key available for assembly.
- 5. Please check and ensure that all the parts and components are located (from the next page) before beginning assembly.
- 6. Now enjoy the fun of assembly!!!

Congratulations on your new set Gaming chair. You're now the proud owner of the most innovative, stylish and acoustically gaming chair available today. We're glad to be able to extend these gaming chair systems on to you. Thank you for choosing, Enjoy!


SAFETY WARNINGS


WARNING: The gaming chair is intended for indoor use only. TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- Do not expose to direct sunlight or extreme temperatures.
- Adult supervision is required for set-up.
- Use only with the supplied power adapter. The power adapter is not a toy.
- Excessive use of audio equipment at high volume may lead to hearing loss. Listen responsibly and use common sense.
- Children under 13 should not use this product without parental supervision.
- DO NOT wash or soak the Chair with water. If cover becomes wet, disconnect power immediately and don't use until totally dry.
- To avoid injury or death from electrical shock, NEVER open the electrical cabinet or remove the cover.


PACKAGE CONTENTS

Take unit out of box. Check to make sure you have all the parts shown below and that all items are in good condition.





HARDWARE

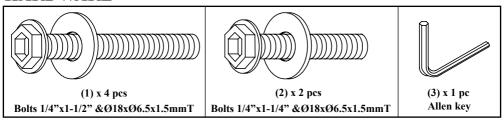


ASSEMBLY INSTRUCTIONS

STEP 1:

Unfold the top portion of the chair until the backrest is flush with the seat portion, see the below picture 1.

Align the hinges A and secure with pin B. Cover the hinge with the flap and fasten the velcro strip.

For storage remove the pin, fold and store.

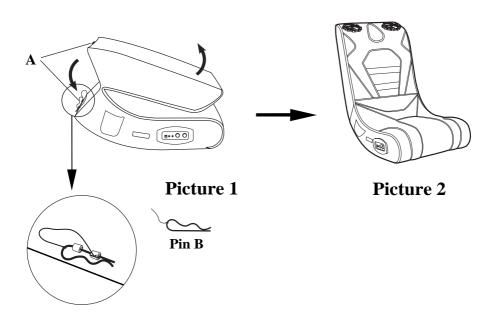

ASSEMBLY INSTRUCTIONS

STEP 2:

Pull open the zipper from chair bottom.

Attach each arm (E-R and E-L) to the cushion (D) with allen key (3) and 4 1/4"x1-1/2" & Ø18xØ6.5x1.5mmT bolts (1) and 2 1/4"x1-1/4" & Ø18xØ6.5x1.5mmT bolts (2).


Do not fully tighten until all bolts have been hand tightened.

Then tighten all bolts securely using the supplied allen key (3).


HINT: Please do not tighten all the bolts,

until all the bolts are attached and barely tightened first.

This makes assembly easier!

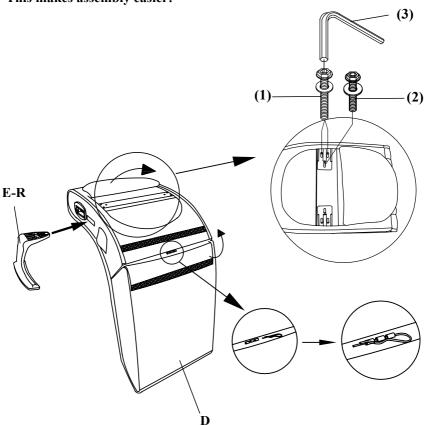


PRODUCT DESCRIPTION

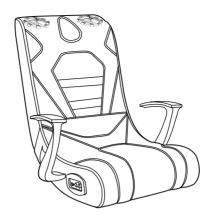

CONTROL PANEL

- (1) Power DC port 12V=1.0A
- (2) Audio in ports
- (3) Audio out port
- (4) Treble
- (5) Bluetooth indicator /Power
- (6) Volume/on/off

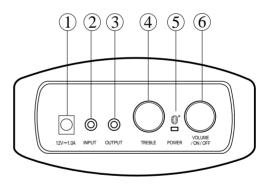

NOTE:

During shipment the gaming chair has been packed carefully to arrive in a safe condition.


A cardboard sheet has been placed between the seat and backrest to protect the mesh and the speakers.

CAUTION:

While storing in your home always replace the cardboard to protect the speakers and the seat fabric.

- 1) Connect the 12-volt DC power adapter to the electrical outlet and then to the power DC port on the control panel.
- 2) Twist the volume knob clockwise to turn the power On.
- 3) Check the control panel to ensure it is lit up. Twist the volume knob anti-clockwise to switch the power Off the Gaming chair and then proceed to the connection method shown overleaf for your audio/video device.

CONNECTION METHODS

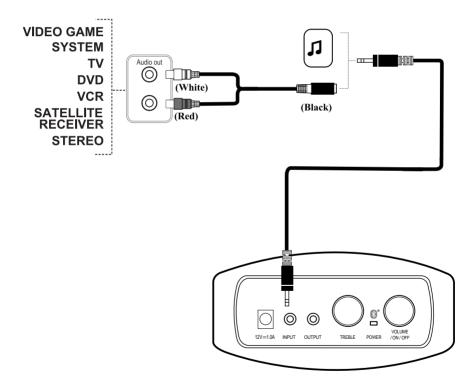

Note: Earphone hasn't included in the accessories, please purchase from electronic retailer.


BLUETOOTH CONNECTION TIPS

Before using bluetooth, make sure the audio cord is disconnected from input socket Locate Bluetooth Settingson your device and turn on Bluetooth connection.

On your device list, locate the name "GAMING CHAIR" and select for pairing. If you do not see "GAMING CHAIR" on you list make sure the chair is plugged in and powered on.

The Bluetooth light will be flashing when searching for a device. Once paired the blue light will stay on.

If prompted for a passcode enter "0000" then pair.

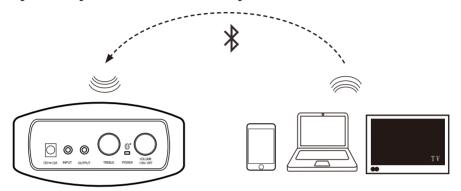

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC ID:2ACQB4001200

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY INFORMATION

This warranty is enforceable only one year warranty by the original purchaser. ALL DAMAGED OR MISSING PARTS MUST BE REPORTED WITHIN 14 DAYS OF PURCHASE. This warranty covers all defects in materials and workmanship, but DOES NOT COVER the following:

- 1. Damage, deterioration or malfunction resulting from:
- a. Acts of God, accident, misuse, abuse, negligence, improper installation, maintenance or operation, or failure to follow the instructions contained in this manual.
- b. Any shipment of the product (claims must be presented to the carrier).
- c. Repair, attempted repair or modification by anyone other than the American customer Service.
- 2. Any unit which has been altered or on which the serial number has been defaced, modified or removed.
- 3. Any unit used for industrial or commercial purposes.
- 4. Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries).
- 5. Customer installation, set up, adjustments or signal reception problems.

Some states differ on exclusion of incidental or consequential damage, so the stated limitations may not apply to you. This warranty gives you speci have other rights which vary from state to state.