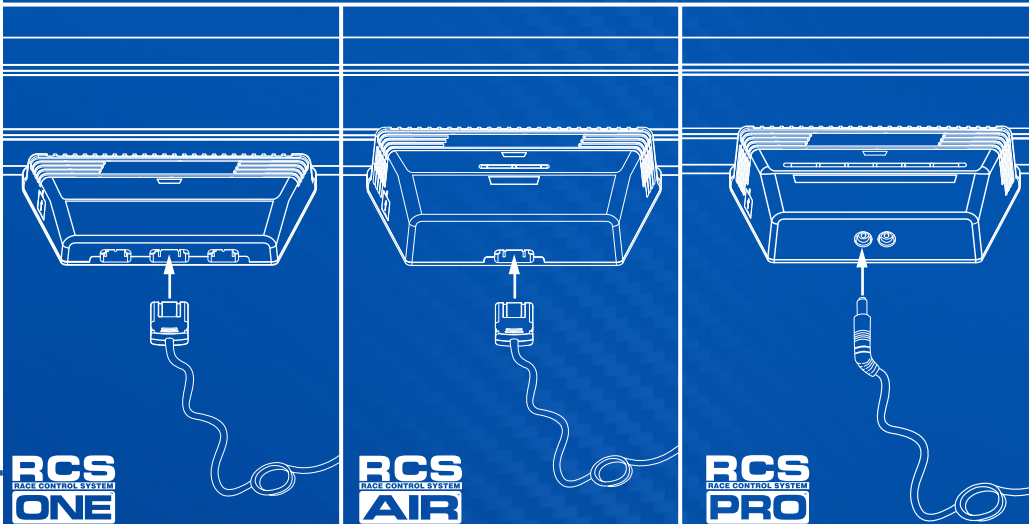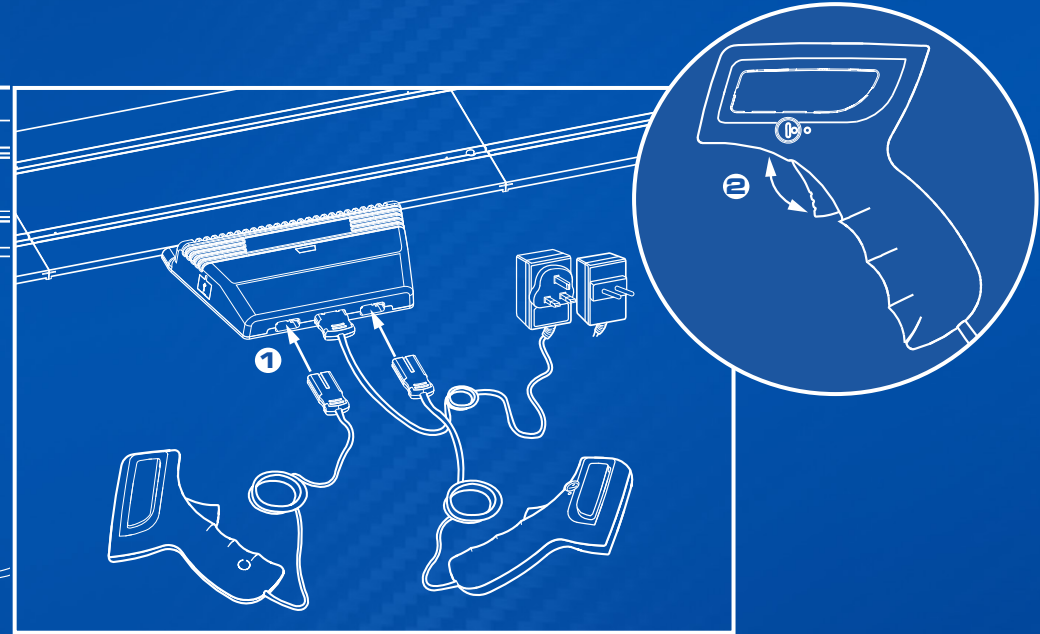❶ Insert the rectangular plug or jack plug(s) into the Powerbase.

❷ Plug the transformer(s) into the wall and turn on.

❸ The powerbase power / Bluetooth LED will flash orange.
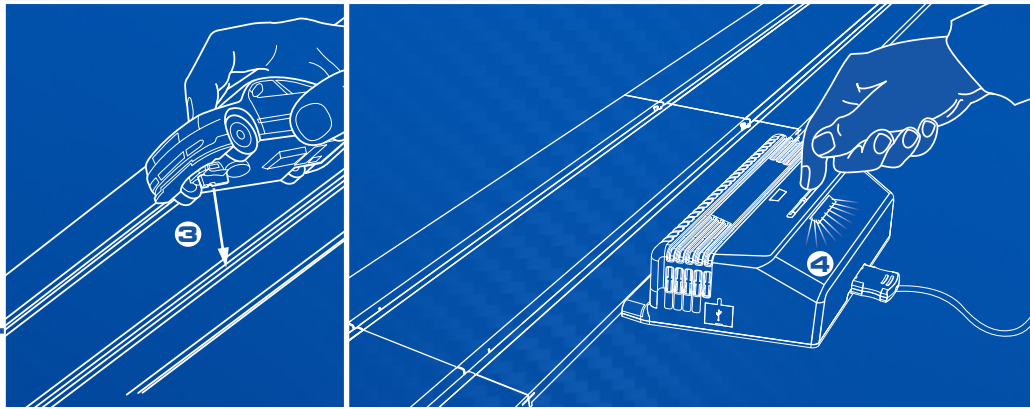
Wired Controllers **RCS ONE** RACE CONTROL SYSTEM

❶ Plug both controllers into the ports on the Powerbase.

❷ Test you have control of your cars by pressing the trigger.

RCS RACE CONTROL SYSTEM **ONE**

RCS RACE CONTROL SYSTEM **AIR**

RCS RACE CONTROL SYSTEM **PRO**

CONNECT CONTROLLER -

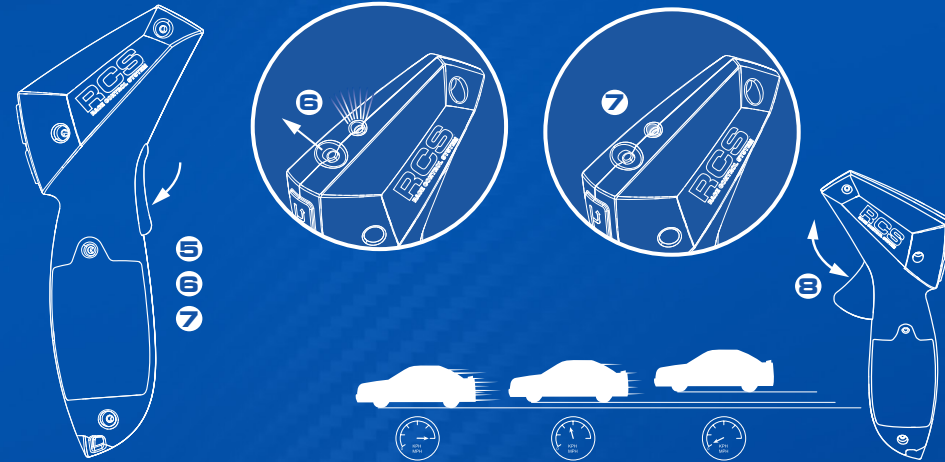- CONNECT CONTROLLER

Wireless Controllers **RCS AIR** **RCS PRO**

❶ Insert batteries (2 x AA) and check the hand controller powers on (green LED will flash when turned on for the first time).
❷ Turn off the controllers.
❸ Place only the car you want to assign to this controller on the track.
❹ Press binding button on the powerbase for the port you wish to connect to – LED will flash green to indicate binding mode.
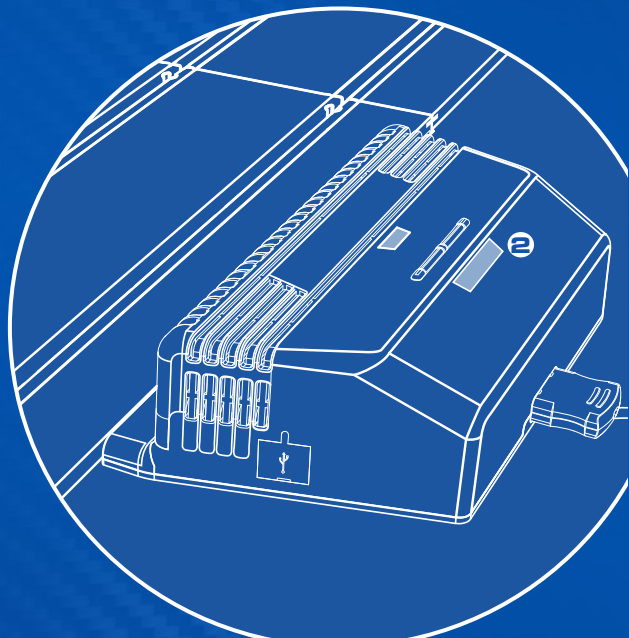

Wireless Controllers **RCS AIR** **RCS PRO**

❺ Fully depress and hold the trigger.
❻ Continue to hold the trigger, turn on the hand controller (LED will flash green)
❼ Continue to hold the trigger until LEDs on both devices go solid green.
❽ Release trigger and test you have control of your car.

❶ Open the App on your smart device and follow the on-screen instrucƟons.
❷ When the power/bluetooth LED on the powerbase goes solid green, you are ready to race.

App FuncƟonality	ONE	AIR	PRO
Racing modes			
Quick start mode	✓	✓	✓
Drag racing	✓	✓	✓
Arcade mode		✓	✓
PracƟce	✓	✓	✓
Qualifying	✓	✓	✓
Tournament	✓	✓	✓
Grand Prix	✓	✓	✓
Endurance	✓	✓	✓
Pursuit game		✓	✓
In-race gameplay			
Race start	✓	✓	✓
Yellow flag mode			✓
Jump start	✓	✓	✓
Start reacƟon Ɵmes	✓	✓	✓
Lap counƟng	✓	✓	✓