
1 Annex B – EUT pictures

1.1 List of Pictures


Picture 1: EUT left side, T40FH S10	2
Picture 2: EUT right side, T40FH S10	2
Picture 3: PCB rotor front side, T40FH S10	3
Picture 4: PCB rotor rear side, T40FH S10	3
Picture 5: PCB stator front side, T40FH S10	4
Picture 6: PCB stator rear side, T40FH S10	4
Picture 7: EUT left side, T40FH S11	5
Picture 8: EUT right side, T40FH S11	5
Picture 9: PCB rotor front side, T40FH S11	6
Picture 10: PCB rotor rear side, T40FH S11	6
Picture 11: PCB stator front side, T40FH S11	7
Picture 12: PCB stator rear side, T40FH S11	7
Picture 13: Labels, T40FH S10, S11	8
Picture 14: Data cable termination box - front	9
Picture 15: Data cable termination box - right side	9
Picture 16: Data cable termination box - left side	10
Picture 17: DC power supply	10



1.2 EUT pictures - T40FH S10

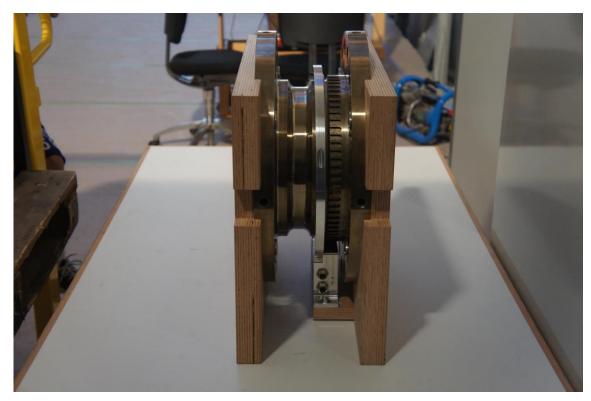

Picture 1: EUT left side, T40FH S10

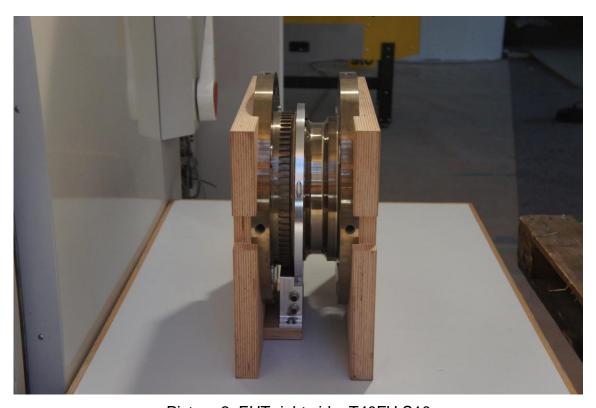


Picture 2: EUT right side, T40FH S10




EMV **TESTHAUS** GmbH Gustav-Hertz-Straße 35 94315 Straubing Germany Revision: 1.7 Hottinger Baldwin Messtechnik GmbH Torque meter T40FH S10, S11

150866-AU01+W02 Annex B

Page 2 of 10

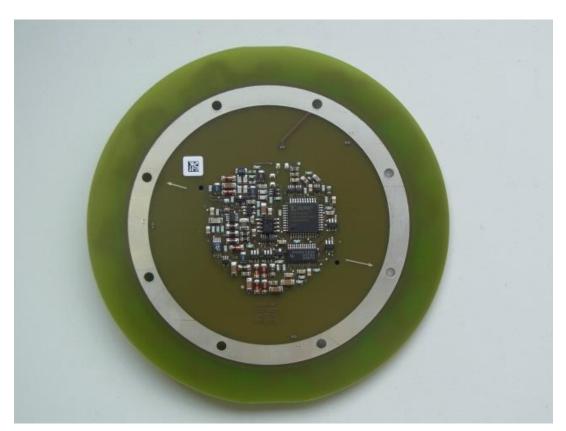

Picture 3: PCB rotor front side, T40FH S10

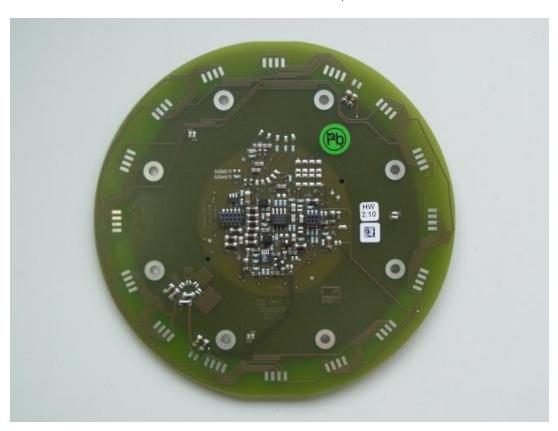


Picture 4: PCB rotor rear side, T40FH S10



EMV **TESTHAUS** GmbH Gustav-Hertz-Straße 35 94315 Straubing Germany Revision: 1.7 Hottinger Baldwin Messtechnik GmbH Torque meter T40FH S10, S11

150866-AU01+W02 Annex B

Page 3 of 10

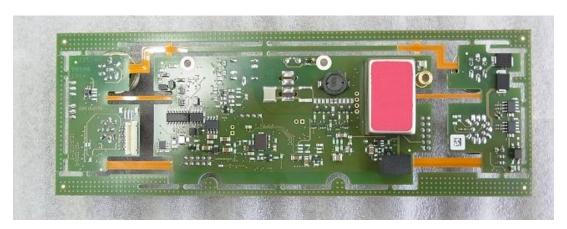


Picture 5: PCB stator front side, T40FH S10




Picture 6: PCB stator rear side, T40FH S10



1.3 EUT pictures - T40FH S11

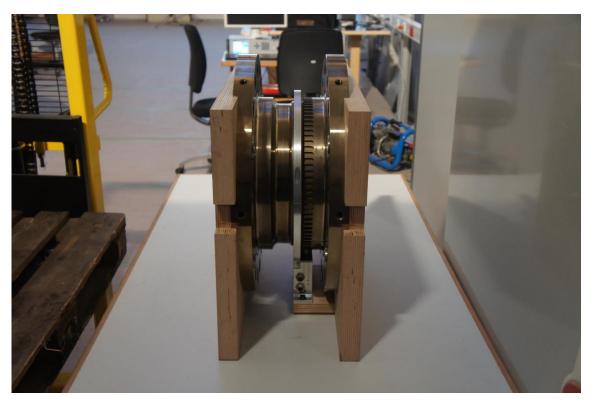

Picture 7: EUT left side, T40FH S11

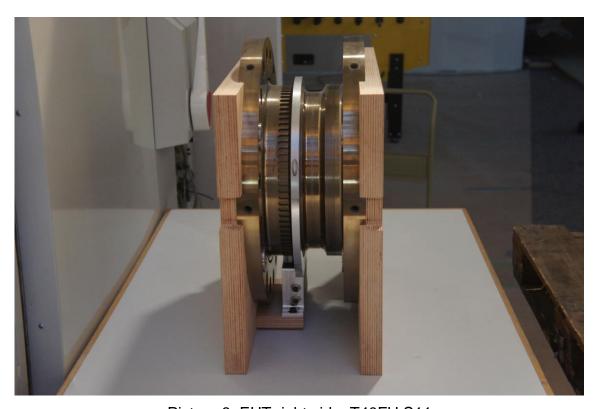


Picture 8: EUT right side, T40FH S11




EMV **TESTHAUS** GmbH Gustav-Hertz-Straße 35 94315 Straubing Germany Revision: 1.7 Hottinger Baldwin Messtechnik GmbH Torque meter T40FH S10, S11

150866-AU01+W02 Annex B

Page 5 of 10

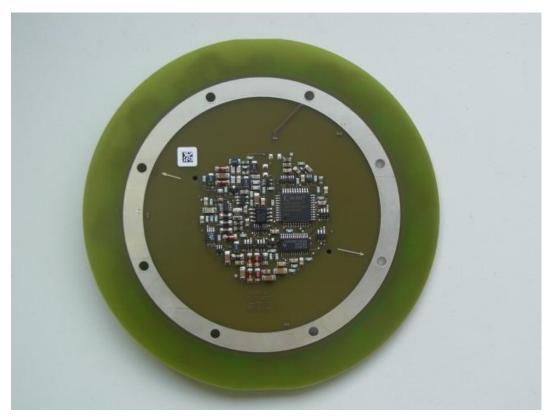

Picture 9: PCB rotor front side, T40FH S11

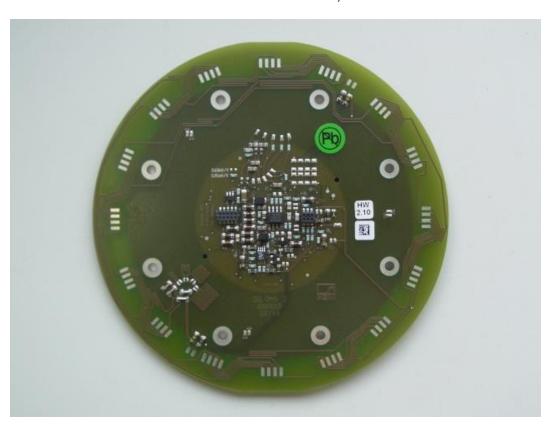


Picture 10: PCB rotor rear side, T40FH S11



EMV **TESTHAUS** GmbH Gustav-Hertz-Straße 35 94315 Straubing Germany Revision: 1.7 Hottinger Baldwin Messtechnik GmbH Torque meter T40FH S10, S11

150866-AU01+W02 Annex B

Page 6 of 10

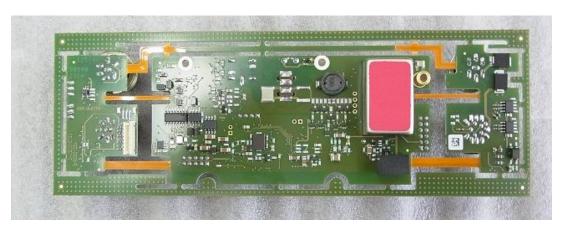

Picture 11: PCB stator front side, T40FH S11



Picture 12: PCB stator rear side, T40FH S11



1.4 EUT pictures - labels

Model: T40S10

FCC ID: 2ADAT-T40S10TOS11 IC: 12438A-T40S10TOS11

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Model: T40S11

FCC ID: 2ADAT-T40S10TOS11 IC: 12438A-T40S10TOS11

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Picture 13: Labels, T40FH S10, S11



EMV TESTHAUS GmbH Gustav-Hertz-Straße 35 94315 Straubing Germany Revision: 1.7 Hottinger Baldwin Messtechnik GmbH Torque meter T40FH S10, S11


150866-AU01+W02 Annex B

Page 8 of 10

1.5 EUT pictures - peripheral devices



Picture 14: Data cable termination box - front

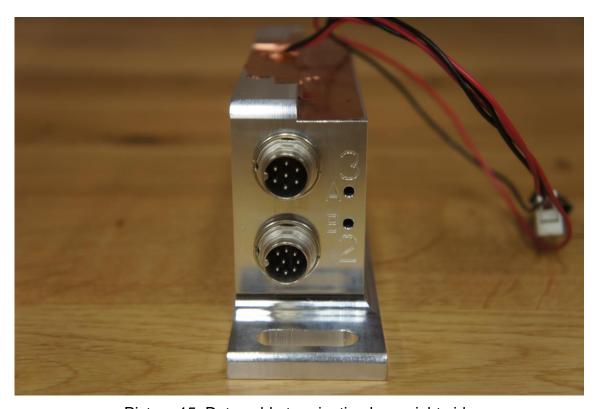


Picture 15: Data cable termination box - right side



EMV TESTHAUS GmbH Gustav-Hertz-Straße 35 94315 Straubing Germany Revision: 1.7 Hottinger Baldwin Messtechnik GmbH Torque meter T40FH S10, S11

150866-AU01+W02 Annex B

Page 9 of 10

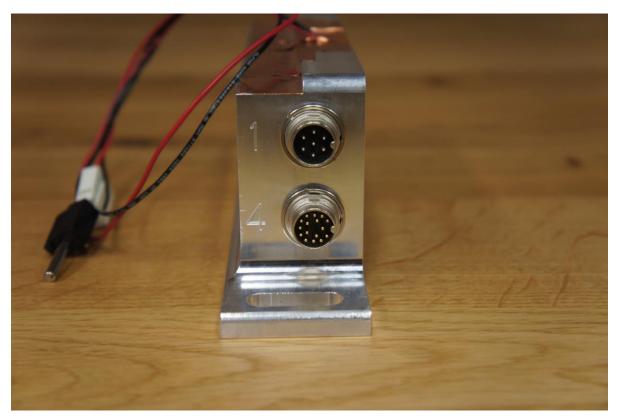

Picture 16: Data cable termination box - left side



Picture 17: DC power supply



EMV **TESTHAUS** GmbH Gustav-Hertz-Straße 35 94315 Straubing Germany Revision: 1.7 Hottinger Baldwin Messtechnik GmbH Torque meter T40FH S10, S11

150866-AU01+W02 Annex B

Page 10 of 10