


Install the APK application

- 1.Copy the needed APK format application into the device or TF card.
- 2.Tap "File Manager" to find the APK format application you want to install.




3. Tap the APK format application you want to install, then pop up "Do you want to install this application?"

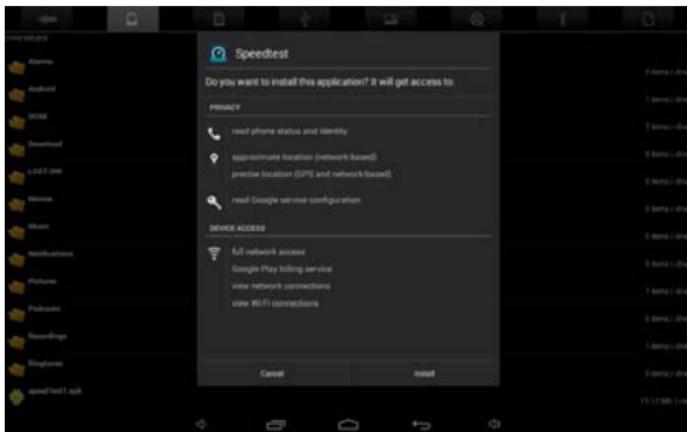


- 4.Tap "Install" to begin the installation of APK application

Uninstall APK application

1. Tap "Settings" into Settings menu, then tap "Apps" and display installed applications list.

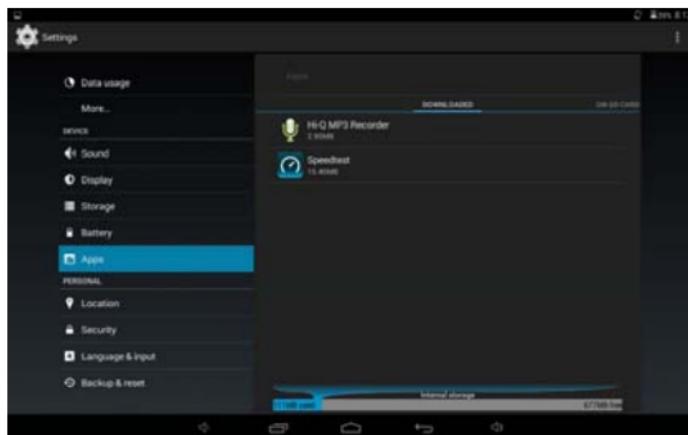

2. Tap the application you want to uninstall, pop up prompt uninstall boxes.

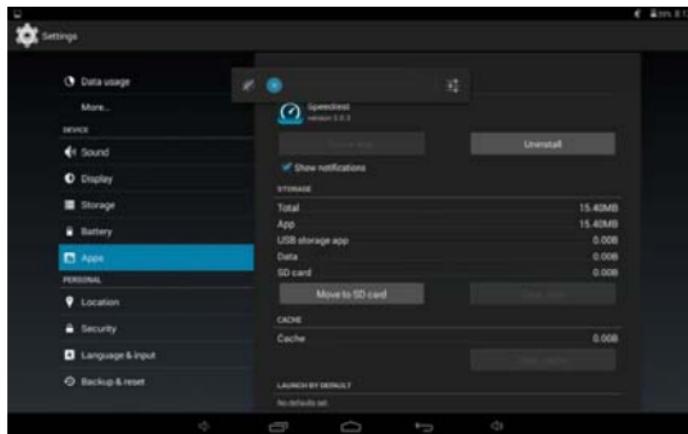

Movies

- 1.Tap “4K ” Video Icon in the home screen to enter the video library.
- 2.Play video: Tap the select video and wait a minute, after analysis, press  to play.
- 3.When the video plays, the screen display is as follows:



- “  <img alt="next file icon" data-bbox="198 661 255 681}” : Play the previous file/ play the next file. Drag the progress bar to any time point- “<img alt="play/pause icon" data-bbox="141 684 198 704}” : Play / Pause the video;- Tap“<img alt="setting menu icon" data-bbox="141 707 208 727}” to enter the setting menu:

Camera



From the main interface, click icon follow. To enter camera interface, see picture below



Click the icon To In front of and behind the camera to switch from each other


Click the icon To choose the camera or video interface.

Click icon To take photo.

Hint: it also can choose the photo/video function from the video player status.

Music

Select "Music" in application bar to access music file list screen.

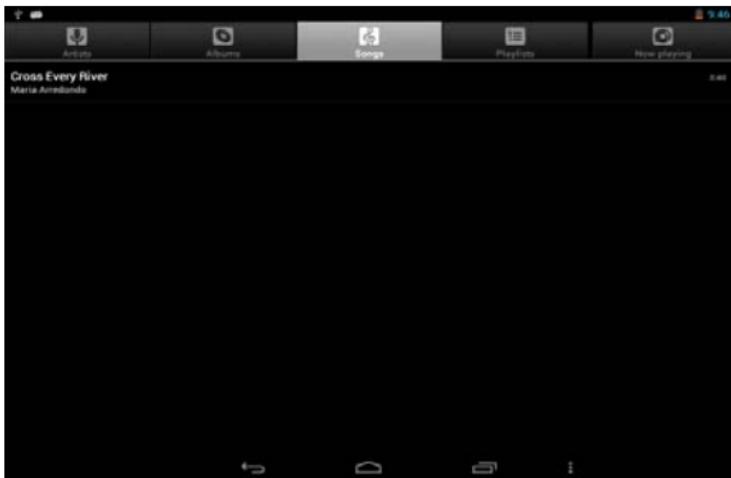


- Files: tap the music you selected and play music.
- Tap back to home screen, tap back to previous screen.
- Tap up and down to process page.
- Artist: display music files classified by Artist.
- Albums: display music files classified by album.
- Songs: display all music files.
- Play lists : display music files now playing;
- Access to the background music player interface.

Bluetooth




Data transmission via Bluetooth

- a. Open Bluetooth, in the default status, the Bluetooth is off, click the right of the bar, and it will automatically turn Bluetooth on and show the icon
- b. Click "Search for devices" option to search Bluetooth device
- c. Click these arched Bluetooth device to bring out "Bluetooth pairing request" interface, "click"Pair" option to finish pairing.

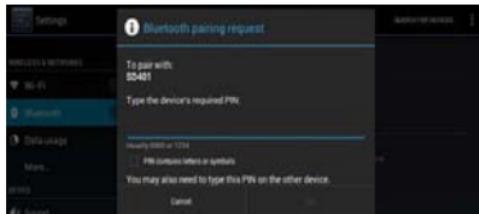

- d. Select the files (such as picture), share the files to the paired Bluetooth device via Bluetooth, as shown below.

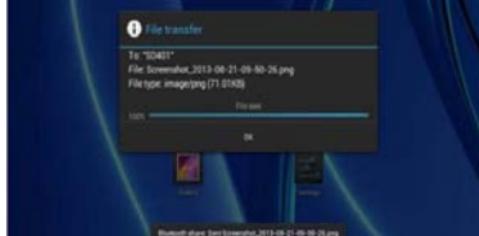

Regular Settings

1. Select "settings" after access into application bar to see list of all apps and launch.

2. WIRELESS & NETWORKS Wi-Fi function on or off

Wi-Fi settings set up and manage a network connection.

3. Sound

Volumes: Adjust the volume level for call ring-tones, music and videos, alarm ring-tones, device system, and notifications.

Default Notification: Choose default notification sound; choose to activate default notification for different functions.

Screen lock sounds: Set the device to sound when you lock the touch screen.

4. Display

Brightness: Set the brightness of the display.

Wallpaper: Select wallpaper for the home screen.

Auto-rotate screen: View in portrait or landscape, adjusting automatically to fit the new orientation.

Sleep: Set sleeping time.

Font Size: Set the size of the font.

Accelerometer coordinate system: Set the accelerometer coordinate system.

Screen adaptation: Used to adjust part of games' screen size.

5. Storage

Displays the memory card and USB storage settings of available storage space.

6. Battery

Displays the battery level or charging status.

Caution: Risk of explosion if battery is replaced by an incorrect type.

7. Apps

View "DOWNLOADED", "ON SD CARD", "RUNNING" and "ALL" applications list, etc.

8. Accounts & sync

Change the settings for the auto sync feature or manage accounts for synchronization.

9. Location Services

Set to use the "Google's location service" and "Location & Google search" to gather and use data based on your location.

10. Security

Screen lock: Set screen lock and owner info.

Encrypt tablet.

Passwords: Make passwords visible.

Device administrators: View or deactivate device administrators.

Trusted credentials: Display trusted CA certificates.

Install from SD card: Install certificates from SD card.

Clear credentials: Remove all certificates.

11. Language & input

Language: Select a display language for all menus and applications.


Personal dictionary: Add a word by touching the Add (+) button KEYBOARD & INPUT METHODS: Set keyboard and input methods.

SPEECH: Set the voice search and text-to-Speech (TTS) output

MOUSE / TRACKPAD: Set pointer speed.

12. Back up and reset

Back up my data and reset factory data.

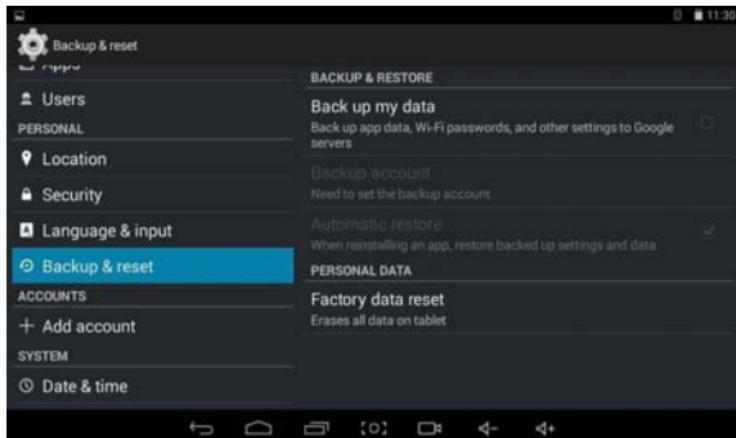

13. Date & time

Set date and time.

14. Accessibility

Talk back: Set turn on /off Talk back.

Large text: Display large text.

Auto-rotate screen.

Touch & hold delay: Set the time of touch and hold delay.

Install web scripts: Set whether to allow the installation of web scripts.

15. Developers options

USB Debugging: Debug mode when USB is connected.

Stay awake: Screen will never sleep while charging.

Allow mock locations.

HDCP checking: Use HDCP checking for DRM content only.

Desktop backup password: Set the full desktop backup password.

Strict mode enabled: Flash screen when apps operating do long operations on main thread.

Pointer location: Screen overlay showing current touch data.

Don't keep activities: Destroy every activity as soon as the user leaves it.

Background process limit: Standard limit.

Show all ANRS: Show App Not Responding dialog for background apps.

DEVICE SPECIFICATION

| Specifications | |
|------------------|--|
| CPU | MT8127 Quad-Core,ARM Cortex A7 @1.3Ghz |
| GPU | Mali-450MP2 |
| Operation system | Android 4.4.2 |
| Language | Support multiple languages |
| RAM | 1GB DDR3 |
| Storage Device | Nand Flash Standard 16 GB |
| | Memory card Micro-SD(Support up to 32GB) |
| Gravity | 4-Directions gravity sensing |
| Display Screens | 10.1 inch, 1024*600 pixel |
| WIFI | WIFI:IEEE802.11b/g/n wireless network |
| Bluetooth | Support bluetooth 4.0 |
| Touch Panel | Multi-touch Capacitive screen |
| I/O Port | Micro USB*1, TF card slot*1, 3.5mm stereo headset*1, mini HDMI*1 |
| Function Key | Power/Vol+/Vol- |
| Camera | Front 0.3M/Rear 2.0M |
| Power adapter | DC 5V,2A |
| Battery | 4500mAh |
| Size | 256*149.4*7.9mm |

Accessories

1.USB Connecting Cable

2.ACADOPTER

The company reserves the right to change/improve this device.

Information on the specification/design is subject to changes without prior notification. (This tablet is not waterproof)

Connect computer

The device could connect to PC via USB wire for data copy and delete.

1. Connect the device to PC port via USB wire, then it will show "USB connected" on PC screen.
2. Tap "USB connected" option, select "open USB storage setting", then you can see movable hardware icon which can be operated like using USB.

