




A3 Overview

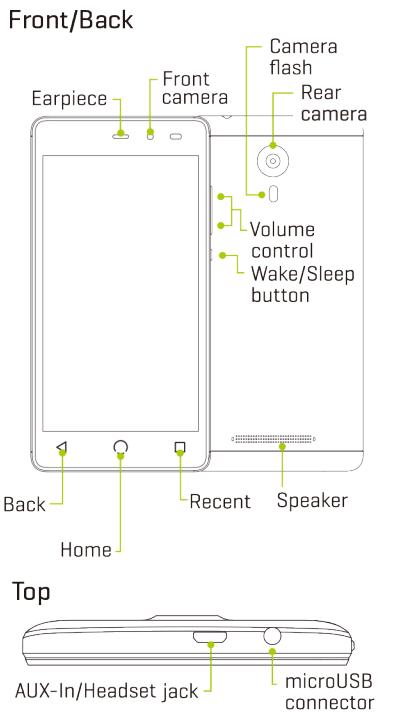

Getting Started With Your A3



www.nuumobile.com

FCC Information

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference.
 (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement: Your wireless phone is a radio transmitter and receiver. It is designed and

Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.940W/Kg and when worn on the body, as described in this user guide, is 0.478W/Kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 0.855W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/efccid> after searching on FCC ID: 2ADINNUA3. Additional information on Specific Absorption Rates (SAR) can be found on the

Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:
 (1) This device may not cause interference, and
 (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for end user to ensure RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue.

The highest SAR value for this model phone when tested for use at the ear is 0.940W/Kg and when worn on the body is 0.484W/Kg. The maximum scaled SAR in hotspot mode is

0.855W/Kg. This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna.

Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Ce dispositif est conforme aux normes autorisées du Canada RSS d'industrie.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Cet équipement est conforme avec l'exposition aux radiations IC définies pour un environnement non contrôlé. L'utilisateur final doit respecter les instructions de fonctionnement spécifiques pour satisfaire la conformité aux expositions RF. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec une autre antenne ou transmetteur. Ces exigences définissent la valeur SAR limite à 1.6 W / kg en moyenne par grammme de tissu.

La valeur SAR la plus élevée pour ce modèle de téléphone testé à l'oreille est 0.940W/Kg et lorsque porté sur le corps est 0.484W/Kg. L'échelle maximale sar en mode hotspot est de 0.855W/kg. Cet appareil a été testé pour des opérations portées sur le corps typiques. Pour se conformer aux exigences d'exposition aux radiofréquences, une distance minimale de 15 mm doit être maintenue entre le corps de l'utilisateur et le combiné, y compris l'antenne. Les pinces de ceinture, les étuis et autres accessoires similaires utilisés par cet appareil ne doivent pas contenir des composants métalliques. Les accessoires portatifs qui ne répondent pas à ces exigences peuvent ne pas se conformer aux exigences d'exposition RF et doit être évitée. Utilisez uniquement l'antenne fournie ou une antenne approuvée.

Getting Started

How to use the phone keys

In any screen, tap the back key "**<**" to return to previous screen or exit the application.
 Tap the home key "**□**" to return to the home screen. Tap the recent key "**□**" to display all the programs that are currently in use. Tap the "on/off" button, to turn on or off the screen and block the screen. Long press "on/off" to shut down or to restart your mobile. Press and hold the "on/off" button and then press the volume down key to take a screen capture.

Language

Tap the settings icon, Scroll down under "Personal" and tap "Language & Input", then select your preferred language by tapping "Language".

Calls

Tap the "Phone" icon, then tap on "Contacts" to select the contact you would like to make a call to. Or, simply make a call by inputting the number after selecting the "dial" application.

Message

Tap the "Messages" icon, then "+" to create a new message. Input a name or number into the receiver field or choose someone from your contact list, then input your message. Press the clipboard button if you want to attach a picture, video or other media. When done, click "Send".

Writing and copying a text

The phone will make recommendations as you type. If you want to copy or cut text, long press the text for a few seconds and use the selecting arrows to select, or use the "select all" option, then copy or paste your text.

Camera

Tap the "camera" icon to open the camera. The phone supports a variety of picture modes such as HDR, flash, Face beauty etc. To access these modes, select the "options" icon.

Gallery

Tap the "gallery" icon to open the gallery to browse your photos, tap in one photo to open it. Tap "**□**" to enter the edit mode. You can add color filter effects, rotate, crop and so on. Click "Save".

Video camera

Tap the "camera" icon to open the camera and switch to "video" mode by tapping "**□**" to record.

Mail

Tap the "Gmail" icon. Then select the "pen" icon on the lower right corner to compose a new message. Use the pen/paper to attach files or images. Tap on "send" when done. Note: You must set up an email account first.

Music

Tap the "Music" icon. Select playlist or song you would like to listen to. Playlists can be categorized by Artist, Albums, Genre or what you have created.

FM Radio

Connect headphones to the audio jack, tap the "FM Radio" icon and select frequency.

Correos Electrónicos

Pulse el icono de "Gmail". Después seleccióna el icono de "pluma" que se encuentra en la esquina de la parte inferior a la derecha para componer un nuevo mensaje. Usa el clip para afijar archivos o imágenes. Pulsá en "Enviar" cuando terminés. Nota: Debes crear primamente una cuenta electrónica.

Música

Pulse el icono de "Música". Elige la lista de canciones que te gustaría escuchar. La lista de canciones puede ser localizada por medio de Artista, Álbum. Generó ó como la hayas creado.

Radio FM

Conecta los audífonos a la entrada auxiliar, pulsa el icono de "Radio FM" y selecciona la frecuencia.

Comenzando

¿Cómo usar los Botones del teléfono?

Durante el uso, apriete sobre la pantalla para activar la pantalla táctil o para salir de la aplicación. Pulse la tecla de flecha "**<**" para regresar a la pantalla principal o para salir de la aplicación que estás usando. Pulse la tecla "**□**" para activar o desactivar la función de encuadre. Apriete sobre la touch "recent" "**□**" para activar todos los programas que están actualmente en cours d'utilisation. Apriete sobre la touch "on/off" "**□**" para activar o desactivar la pantalla. Mantén pulsado el botón de "on/off" y luego presiona el botón que baja el volumen para obtener una captura de pantalla.

Idioma

Pulse el icono de configuración. Deslízase la pantalla por debajo de "Personal" y pulse "Idioma y entrada de texto", después elige tu idioma de preferencia pulsando "idioma".

Llamadas

Pulse el icono de "Teléfono", y después presiona en "Contactos" para seleccionar al contacto que la quieras llamar. O, simplemente haz la llamada al escribir el número después de elegir la aplicación "Marcar".

Mensajes

Pulse el icono de "Mensajes", después el de "**+**" para crear un nuevo mensaje. Escribe un nombre o el número dentro del campo de destinatario o bien elige a alguno de tu lista de contactos, después escribe tu mensaje. Presiona el botón del clip si quieres agregar una foto, un video u otro medio. Al terminar, pulsa el botón de "Enviar".

Escribir y copiar un texto

Te teléfono hará recomendaciones mientras escribes. Si deseas copiar o cortar un texto, pulsa el texto durante unos segundos y usa la flecha de selección para escoger, o usar la opción de "elijir todo", después copia y pega tu texto.

Cámara

Pulse el icono de "Cámera" para tomar una foto. El teléfono incluye una variedad de modos tales como el de HDR, Flash, Face Beauty, etc. Para tener acceso a estos modos, elige el icono de "Opciones".

Galería

Pulse el icono de "Galería" para abrir y ver tus fotos, pulsa en una foto para abrir. Pulsa "**□**" para entrar al modo de edición. Puedes agregar filtros de color con efectos, rotar, recortar, etc. Presiona el botón de "guardar".

Cámara de Video

Pulse el icono de "Cámera" para abrir la cámara y cambiarlo al modo de "video" pulsando "**□**" para entrar al modo de edición. Puedes agregar filtros de color con efectos, rotar, recortar, etc. Presiona el botón de "guardar".

Correos Electrónicos

Pulse el icono de "Gmail". Después seleccióna el icono de "pluma" que se encuentra en la esquina de la parte inferior a la derecha para componer un nuevo mensaje. Usa el clip para afijar archivos o imágenes. Pulsá en "Enviar" cuando terminés. Nota: Debes crear primamente una cuenta electrónica.

Música

Pulse el icono de "Música". Elige la lista de canciones que te gustaría escuchar. La lista de canciones puede ser localizada por medio de Artista, Álbum. Generó ó como la hayas creado.

Radio FM

Conecta los audífonos a la entrada auxiliar, pulsa el icono de "Radio FM" y selecciona la frecuencia.

Commencer

Comment utiliser les touches du téléphone

Dans tout écran, tappez la touche "**<**" pour revenir à la page précédente ou pour sortir de l'application. Tappez la touche "**□**" pour retourner à la page principale ou pour bloquer la fonctionnalité de l'écran. Tapez la touche "**recent**" "**□**" pour afficher toutes les programmes qui sont actuellement en cours d'utilisation. Appuyez sur la touche "on/off" "**□**" pour activer ou désactiver la fonctionnalité de l'écran. Tenir la touche "on/off" et tenir la touche "on/off" pour prendre une capture d'écran.

Langue

Appuyez sur l'icône des paramètres. Descendez vers le bas de la rubrique "Personnel" et appuyez "Langue et saisie", puis sélectionnez votre langue préférée en appuyant sur "Langue".

Appels

Appuyez sur l'icône des paramètres. Descendez vers le bas de la rubrique "Personnel" et appuyez "Langue et saisie", puis sélectionnez votre langue préférée en appuyant sur "Langue".

Messages

Appuyez sur l'icône "Messages", puis "+" pour créer un nouveau message. Entrer un nom ou numéro dans le récepteur ou choisir quelqu'un dans votre liste de contacts, puis entrer votre message. Appuyez sur le bouton de留存 si vous souhaitez d'ajouter une photo, une vidéo ou d'autre média. Lorsque vous avez terminé, cliquez sur "Envoyer".

Écrire et copier du texte

Le téléphone fera des recommandations quand vous tapez. Si vous voulez copier ou couper du texte, Faire un appui long sur le texte pour quelques secondes et utiliser les flèches de sélection pour sélectionner, ou utiliser l'option "select all" "Sélection tout", Enfin, copier ou coller votre texte.

Caméra

Appuyez sur l'icône "Caméra" pour ouvrir la caméra. Ce téléphone supporte une variété de mode d'images telles que HDR, le frêne, le visage de beauté, etc. Pour accéder à ces modes, sélectionnez l'icône "options".

Galería

Appuyez sur l'icône "Galerie" pour ouvrir la galerie afin de parcourir vos photos, appuyez sur une photo pour l'ouvrir. Appuyez sur "**□**" pour entrer le mode d'édition. Vous pouvez ajuster les effets par rapport à la couleur, la rotation, la redimensionnement et ainsi de suite. Cliquez "Enregistrer".

Caméra de Video

Appuyez sur l'icône "Caméra" pour l'ouvrir et changer au mode "video" en tapant "**□**" pour enregistrer.

Correul

Appuyez sur l'icône "Gmail". Ensute, sélectionnez l'icône "style" en bas à droite pour composer un nouveau message. Utiliser le trombone pour attacher les fichiers ou les images. Appuyez sur "envoyer" quand vous avez terminé. Note: Vous devez d'abord créer un compte du courriel électronique.

Musique

Appuyez sur l'icône "Musique". Sélectionnez playlist ou chanson que vous voulez écouter. Les playlists peut être catégorisées par les artistes, les albums, les genres ou ce que vous avez créé.

Radio FM

Conneter les écouteurs à la prise audio, appuyez sur l'icône "Radio FM" et sélectionnez la fréquence.

Warranty Information

Limited One Year Warranty Information

NUU Limited (hereafter referred to as NUU), warrants this device to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Removable lithium-polymer battery is covered under warranty for a period of one (1) year from date of original purchase. If you are experiencing any problems with the operation or function of your product, please make sure you have downloaded our full owner's manual from our website for reference or contact the authorized local distributor. Should this fail to resolve the matter and service is still required by reason of any defect or malfunction during the warranty period, NUU will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to a designated factory service center. The product must include proof of purchase, including date of purchase. To obtain the Warranty Service, Customer must contact the authorized local distributor within the applicable warranty period to obtain warranty service authorization. Dated proof of original purchase from the authorized reseller will be required. NUU is not responsible for Customer's products or parts received without a warranty service authorization. Products or parts shipped by Customer to local distributor must be sent prepaid and packaged appropriately for safe shipment, and it is recommended that they be insured or sent by a method that provides for tracking of the package.

THIS WARRANTY SHALL NOT BE EXTENDED, ALTERED OR VARIED EXCEPT BY A WRITTEN INSTRUMENT DULY SIGNED BY NUU. WARRANTIES EXCLUSIVE: IF THIS PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPLACEMENT OR REPAIR OF THE PRODUCT OR PART OR REFUND OF THE PURCHASE PRICE PAID, AT NUU. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES (OR CONDITIONS), EXPRESSED OR IMPLIED, INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR A PARTICULAR PURPOSE. NUU SHALL NOT BE LIABLE FOR LOSS OF PROFITS OR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES WHICH THE PURCHASER MAY SUSTAIN. IN NO EVENT SHALL NUU'S LIABILITY EXCEED THE PURCHASE PRICE OF THE DEFECTIVE PRODUCT. NUU NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME