

KMC Media Center

KMC1

Owners Manual | English



Media Center


Gauge Style Media Center



Thank you for purchasing the KMC1 Media Center. We recommend reading through the entire manual for detailed instructions on how to install and operate the unit. For support please call: 1-800-844-2774

| Authorized KICKER Dealer: | |
|---------------------------|--|
| Purchase Date: | |
| Serial Number | |

INSTALLATION OVERVIEW

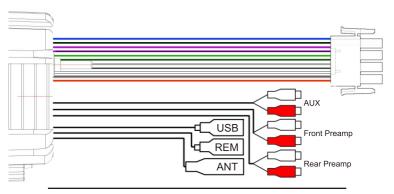

Connection:

Pin 1- Red-12V Ignition

Pin 2- White/Blk- Left Front Spkr Neg

Pin 3- White- Left Front Spkr +

Pin 4- Empty

Pin 5- Grey/Blk- Right Front Spkr Neg

Pin 6- Grey- Right Front Spkr +

Pin 7- Blue- Remote Turn On


Pin 8- Green/Blk- Left Rear Spkr Neg


Pin 9- Green- Left Rear Spkr +

Pin 10- Black- Ground

Pin 11- Purple/Blk- Right Rear Spkr Neg

Pin 12- Purple- Right Rear Spkr +



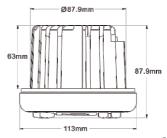

The button layout below will give you a quick overview of the button functionality.

| BUTTONS: 1 - Power | 2 1 |
|-----------------------|------|
| 2 - APS | |
| 3 - Band | |
| | |
| 4 - Mode | |
| 5 - Volume + | |
| 6 - Volume - | |
| 7 - Play/Pause | |
| 8 - Tune Up | 5.4 |
| 9 - Tune Down | 6——— |
| | 8 7 |

| Function: | How To: |
|----------------|--|
| Power On | Press the Power (1) button once. |
| Power Off | Hold the Power (1) button for 2 seconds. |
| Volume Up | Press the VOL + (5) button. |
| Volume Down | Press the VOL - (6) button. |
| Seek Up | Press APS (2) once. |
| Tune Up | Hold down Tune Up (8). |
| Tune Down | Hold down Tune Down (9). |
| Pause/Play | Press Play/Pause (7) once. |
| Mute | Press Power (1) button once. |
| Audio/Settings | Hold down Mode (4) button. |

Sources

To change any of the sources, press the Mode (4) button on the KMC1. Continue to press Mode until the desired source is reached.

FM Source:

Function:

Seek Up:

Press the APS (2) button once.

Tune Up:

Hold Tune Up (8) button for 1 second. Then press (8) once.

Tune Down:

Hold Tune Down (9) button for 1 second. Then press (9) once.

Mute:

Press the Power (1) button.

AM Source:

Function:

Seek Up:

Press the APS (2) button once.

Tune Up:

Hold Tune Up (8) button for 1 second. Then press (8) once.

Tune Down:

Hold Tune Down (9) button for 1 second. Then press (9) once.

Mute:

Press the Power (1) button.

Presets:

Press and Hold APS (2) button. Programs strongest stations into FM and AM Presets. Pressing Tune Up (8) and Tune Down (9) will change preset stations. To set a custom preset, press Tune Up (8) for desired preset number. Then use Manual Tune to change to desired station. Press Play/Pause to set new station into preset number.

Sources

USB Source:

Function:

Next Track:

Press the Seek Up (8) button once.

Previous Track:

Press the Seek Down (9) button once.

Fast Forward:

Hold Tune Up (8) button.

Rewind:

Hold Tune Down (9) button.

Pause:

Press the Play/Pause (7) button.

Repeat:

Press APS (2) to Repeat 1, Press again to Repeat all.

Search:

Press and Hold APS (2) to search a specific track #, then press VOL+ (5) or VOL- (6) to change to that track #.

Bluetooth (BT) Source:

Function:

Next Track:

Press the Seek Up (8) button once.

Previous Track:

Press the Seek Down (9) button once.

Pause:

Press the Play/Pause (7) button.

BT Source Cont.

Pairing Mode:

When BT MUSIC is flashing, the KMC1 is in pairing mode.

Locate the device name on your phone to pair.

Device Name: Media Center

<u>Disconnect Device:</u> Press APS (2) button.

Settings

Press and Hold Mode (4) to enter Settings Menu. Press and Release Mode (4) to change Menu Items. To adjust setting, press VOL+ (5) or VOL- (6). Adjustable settings are: Bass, Treble, Balance, Fader, Beep, EQ, Loud, and Tuner Region.

WARRANTY

Electronics Limited Warranty (including KICKER Accessories)

When purchased from an Authorized KICKER Dealer, CPS warrants this product to be free from defects in material and workmanship under normal use for a period of ONE (1) YEAR from date of original purchase with receipt. If this product is identified as Refurbished or B Goods, the warranty is limited to a period of THREE (3) MONTHS from the date of original purchase. In all cases you must have the original receipt. Should service be necessary under this warranty for any reason due to manufacturing defect or malfunction during the warranty period, CPS will repair or replace (at its discretion) the defective merchandise with equivalent merchandise. Warranty replacements may have cosmetic scratches and blemishes. Discontinued products may be replaced with more current equivalent products. Warranty is valid only for the original purchaser and is not extended to owners of the product subsequent to the original purchaser. Any applicable implied warranties are limited in duration to a period of the express warranty as provided herein beginning with the date of the original purchase at retail, and no warranties, whether express or implied, shall apply to this product thereafter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

7

Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment complied with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

