



intiinti.com

安全上のご注意

⚠ **危険**：人体が死亡もしくは重症を負いかねない危険が明らかに生じることを想定される内容。

⚠ **警告**：人体が死亡または重傷を負いかねないことが生じることが想定される内容。

⚠ **注意**：人体が損害をおいかねなく、物的障害の発生を想定される内容。

⚠ マークは危険、警告、注意を即す内容について告げる内容です。

◎ マークは禁止（してはいけない行為）であることを告げる内容です。

！ マークは強制（必ず実行して頂く行為）であることを告げる内容です。

*お客様また第三者が、本製品の誤った使用、使用中に生じた故障、不具合及び本製品によって受けられた損害につきましては、法令上の賠償責任が認められた場合を除き、当社は一切その責任を負いませんので、あらかじめご了承ください。

⚠ **危険**

① 使用中煙が出たり、匂いがした場合はただちに使用をやめ電源プラグをコンセントから抜いて下さい。発火、異常発熱、破損の原因になります。

◎ 濡れた手で電源プラグに触れたりコードを抜き挿ししないで下さい。

◎ 長時間、継続的に強い光を直視していると、視覚を損なうおそれがあります。光を直視ではなく、目に当てることが重要です。直接正面から光を見るのではなく、目線から外して光を浴びるようにしてください。また、光を浴びて疲れやだるさを感じたら、一度光を消し、使用を中止してください。

◎ コンセントを針金などの金属類でショートさせないで下さい。また、ケースのスリットに針金などの異物を入れないで下さい。感電、発火の原因になります。

⚠ **警告**



！ 本製品を布などで覆ったりしないで下さい。
熱がこもりケースが変形したり火災の原因になります。

◎ 本製品の使用環境温度範囲は5°C～35°Cです。この温度範囲外では使用しないで下さい。

◎ 本製品はすでに最良の状態に調整されております。絶対に分解、改造しないで下さい。火災、感電、故障原因になります。

◎ 本製品を濡れた手で触れないで下さい。火災、感電、故障原因になります。

◎ 雨が直接当たる場所や水などに濡れやすいところ、湿度が極端に高い場所では使用しないで下さい。火災、感電、故障原因になります。

！ 医療機器など人命に関わる機器に使用しないで下さい。

！ 指定された入力電圧、定格容量を超える機器は使用しないで下さい。

！ バッテリーを自分で交換しようとしている場合は、バッテリーが損傷して過熱や負傷を引き起こすおそれがあります。ニッケル水素電池の交換は、「カスタマーサポートセンター」にお問い合わせください。不要になったバッテリーは、リサイクルするか、家庭のごみとは分けて廃棄してください。バッテリーを焼却処分しないで下さい。

◎ 充電には、付属の電源アダプタを使用してください。損傷したケーブルまたは充電器を使用したり、湿気の多い場所で充電すると、火災、感電、負傷、またはその他の物品の破損を招くおそれがあります。

◎ 本製品を規定以上に長時間使用すると発熱します。直射日光の当たる場所では使用しないで下さい。

◎ 小さなお子様の手の届く場所には置かないで下さい。

安全上のご注意

⚠ 注意



- ⌚ 医療電気機器ではありませんので、病気やその他の症状の診断、または病気の治療、緩和、治療、予防における使用には適合していません。
- ⌚ 本製品の上に乗ったり、重いものを置いたりしないで下さい。
- ⌚ 病状（目の病気、てんかん発作、意識喪失、眼精疲労、頭痛など）があり、こうした病状に影響するおそれがあるとご自身が判断する場合は、使用する前に医師に相談してください。
- ⌚ 窒息の危険性：アクセサリにより、幼児の窒息事故が生ずる危険性があります。これらのアクセサリは、小さなお子様の手の届かないところで使用および保管してください。
- ❶ 本製品を移動する場合は、安全のため必ずライトを OFF にして、電源プラグをコンセントから抜き、全ての配線を外したことを確認してから行ってください。

*液晶ディスプレイについて

画面の一部に点灯しない画素や常時点灯する画素が存在する場合があります。また、液晶の特性上、明るさにムラが生じる事がありますが、故障ではありません。

可動部について


本体と発光面は 90 度可動します。
90 度開いた状態から更に強い力を加えないようにしてください。
また、可動部の接地面に身体の一部や物を挟まないように注意してください。

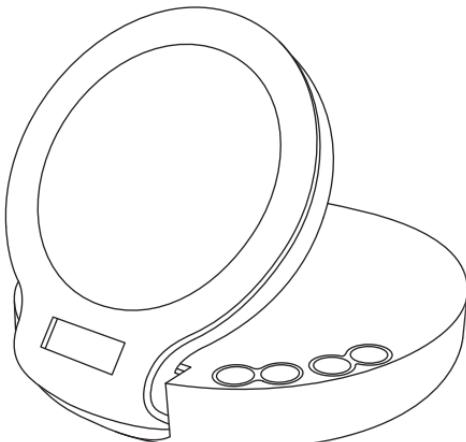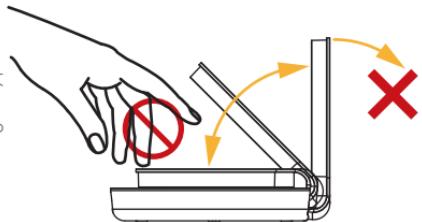

目次

各部名称	5
同梱物	6
ボタンとアイコン	6
基本操作	7
時計の設定	8
エナジーライト オンオフ	9
ライトを切る	10
明るさの設定	11
サンライズチャート	12
サンライズの設定	13
サンライズのオンオフ	14
アラーム / サンダー	15
リラックスモード	16
Bluetooth/ アプリ	17
正しい使い方	18
トラブルシューティング	19
保証について	20

各部名称

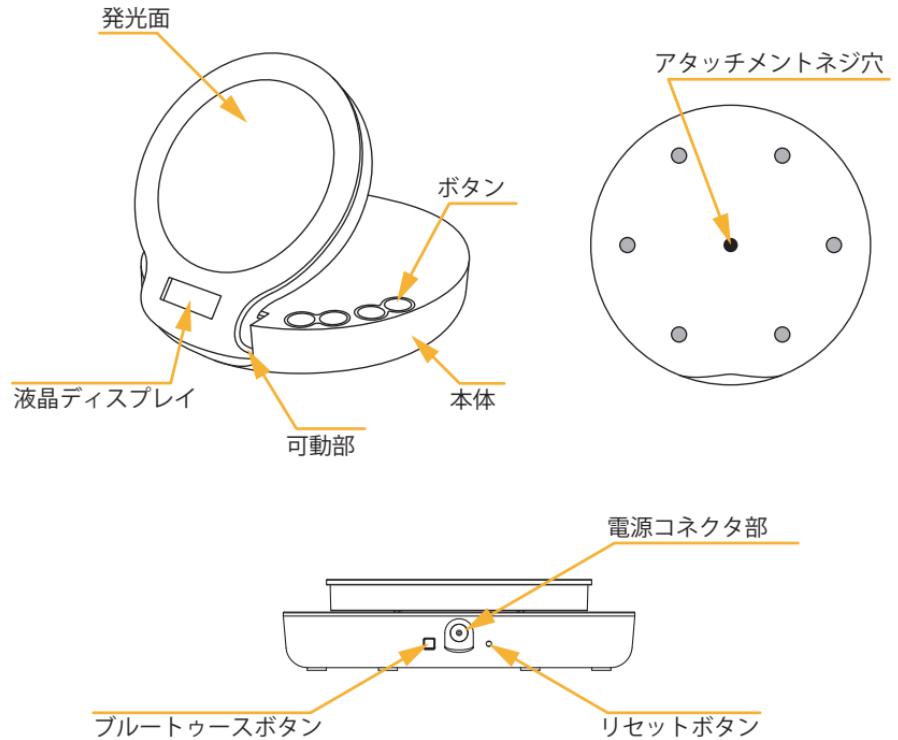

同梱物

inti(インティ本体)、取扱説明書、携帯用バッグ、電源アダプター


ボタンとアイコン




基本操作




時計の設定

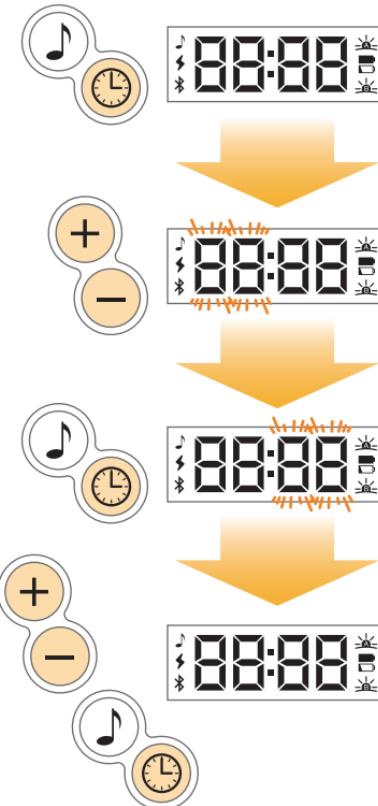

エナジーライトのオンとオフ

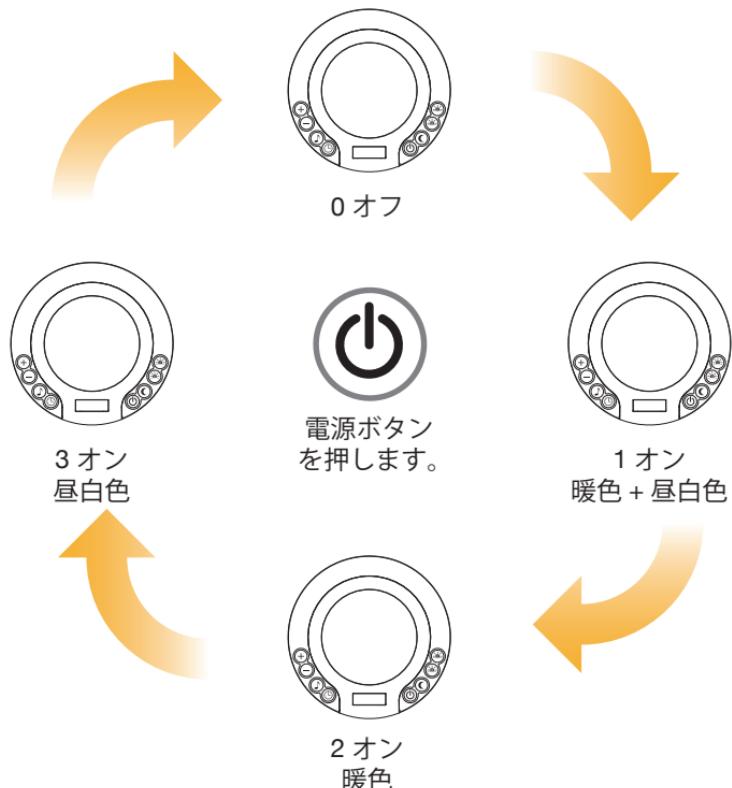


エナジーライトの強制終了

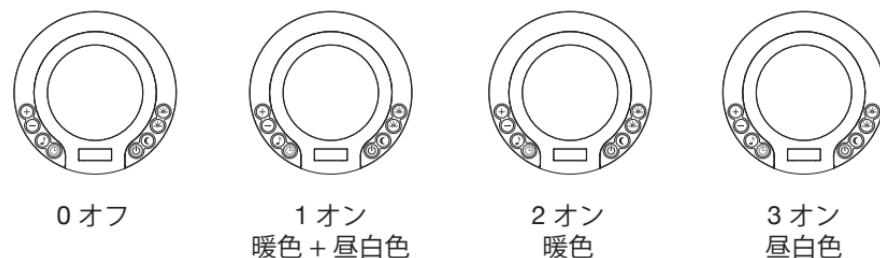

どの状態からでも



電源ボタンを 2 秒以上長押しすると
エナジーライトは消灯します。

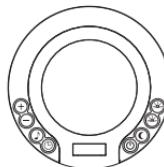


0 オフ


明るさの調節



プラスボタンで
明るくなります。

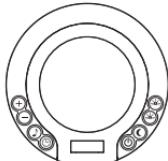

0 オフ

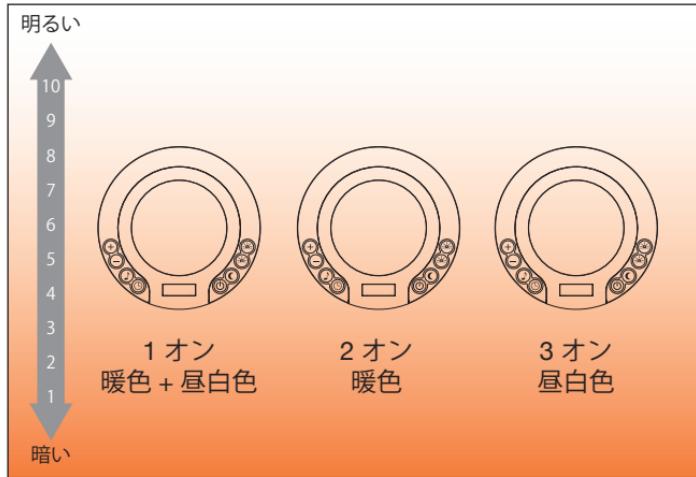


マイナスボタンで
暗くなります。



明るさのレベルは液晶パディスプレイに表示されます。
10段階の明るさを調節することができます。

サンライズチャート

起床時刻を 7:00 に設定し、日の出時間を 30 分に設定した時の
日の出シュミレーションチャートです。

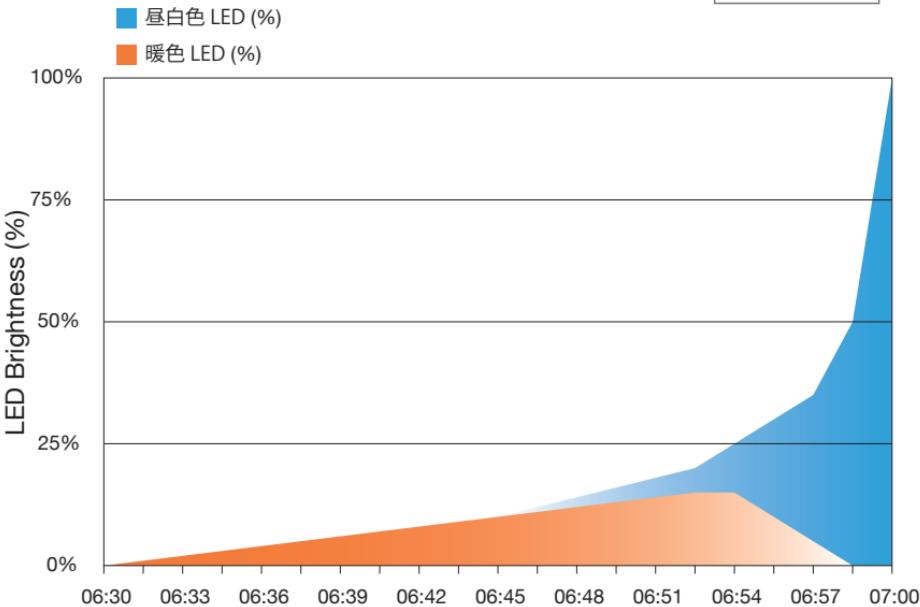

サンライズの設定

サンライズ B も同様の設定です。
A を平日、B を祝日の起床時刻などに
すると、ワンタッチで切替可能です。


- ① サンライズ A ボタンを 2 秒以上長押しすると、サンライズ A の設定が可能になります。



- ② プラス・マイナスボタンで起きたい「時」を設定します。



- ③ サンライズ A ボタンを押して「時」を確定します。
「分」の設定に変わります。

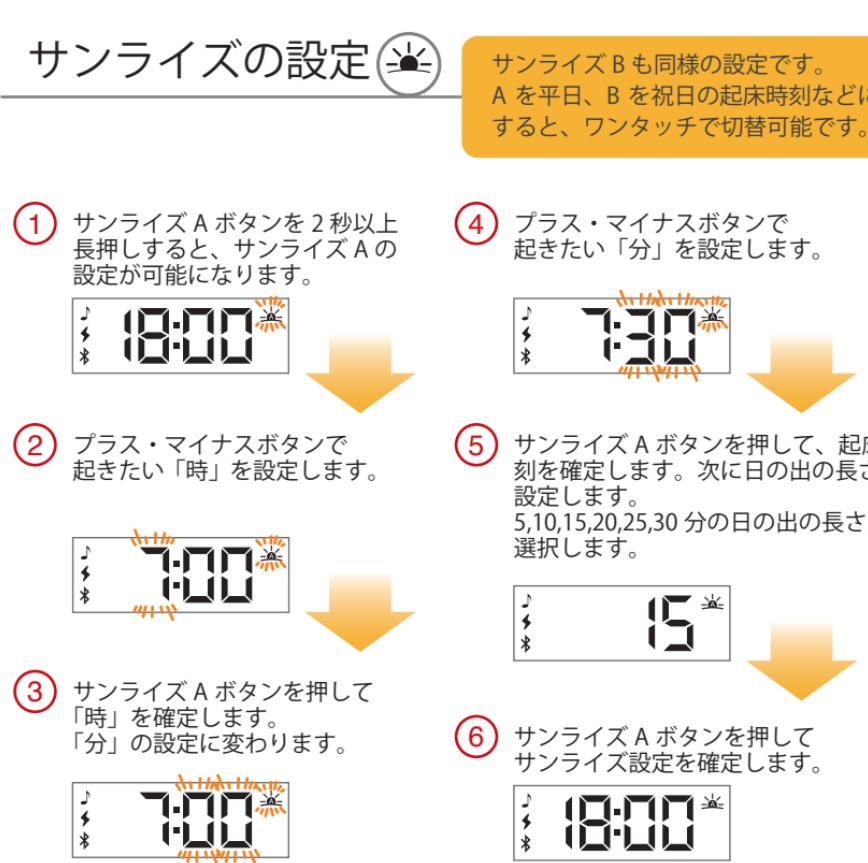

サンライズのオンとオフ

- ① サンライズ A ボタンを押してオンにします。



- ② サンライズ A アイコンが点灯します。
設定した時刻が点滅します。



- ③ サンライズ A ボタンを押してオフにします。



- ④ サンライズ A のアイコンが消えます。
-

- ⑤ サンライズ B ボタンを押してオンにします。



- ⑥ サンライズ B アイコンが点灯します。
設定した時刻が点滅します。



- ⑦ サンライズ B ボタンを押してオフにします。



- ⑧ サンライズ B のアイコンが消えます。
-

アラームとサンダースヌーズのオンとオフ

サンダースヌーズ機能は、二度寝や起きられない不安を抱えるあなたを助けます。設定した起床時刻の9分後に、光が雷のように点滅してあなたを起こします。inti APP と連携すれば、雷の音でサンダースヌーズはさらに強力になります。

※サンライズ A/B がオンの時（液晶ディスプレイにアイコンが点いている状態の時）だけの機能です。



リラックスモードの設定

- ① リラックスボタンを2秒以上長押しします。



- ② リラックスモードのオートオフタイマー時間を1~99分の間で設定します。設定した時間が経過すると、リラックスモードは自動で消灯します。



- ③ リラックスボタンを押してリラックスモードのオートオフタイマー時間の設定を確定します（時計表示に戻ります）。



- ④ リラックスボタンを押します。



- ⑤ 液晶パディスプレイにオートオフタイマー時間がひょうじされ、暖色の光りが点き、揺らぎ始めます。設定したオートオフ時間（分）に自動で消灯します。



- ⑥ 途中でリラックスモードを切りたい場合は、もう一度リラックスボタンを押します。



また

- ⑦ 電源ボタンを2秒以上長押しすることでオフになります。




Bluetooth とアプリ連動について

inti は専用のスマートフォンアプリと連動することが出来ます。

- ① 左記の inti アプリをダウンロードして立ち上げてください。




- ② 本体の Bluetooth ボタンを長押しし、アプリとペアリングします。




- ③ アプリ画面に Bluetooth が表示されれば、本機とのペアリングが確立されました。

スマートフォンから inti の設定をすることが可能です。

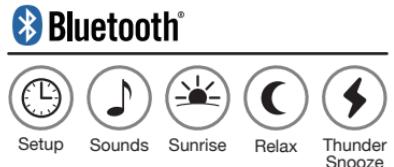


正しい使い方

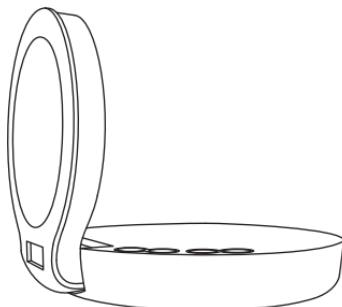

インティの発光面を立てて、ベッドサイドに置いてご使用ください。
また、壁掛けアタッチメントを使用することで、壁に設置することも可能です。

Caution HOT

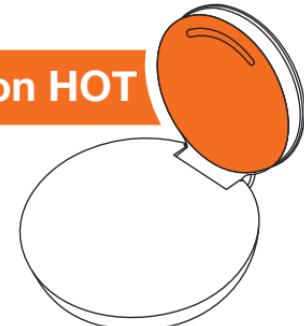

発光面の裏側は暑くなりますので、
触れないようご注意ください。

トラブルシューティング

不具合が起きたと思ったら、一旦電源を切り、電源アダプターを抜き、リセットボタンを押してください。

本製品に温度的な異常を感じた場合には、一旦電源を切り、温度が下がった状態でリセットボタンを押してください。

アフターサービス

エナジーライト inti のご購入日より 1 年間の保証をしております。

この製品のお取り扱い・故障・修理や保守についてのお問い合わせ

インティカスタマーサポートセンター

0120-959-843

info@intiinti.com

お問い合わせ受付時間

平日 10:00～17:00（土・日・祝・弊社休業日を除く）

保証書

製品名：inti（インティ） 型番：inti

本書はお買い上げ日から夏季期間中に故障が発生した場合には
下記の保証規定により無料修理を行うことをお約束するものです。

お買い上げ日： 年 月 日		保証期間：お買い上げより 1 年間
お客様	お名前	
	ご住所	
	電話番号	
販売店		

マニュアルに従った正常な使用状況で故障及び破損した場合には、弊社が無料修理いたします。
修理をお受けになる場合には、左記サポートセンターまでご連絡ください。

次のような場合は、保証期間内でも有料修理とさせていただきます。

- ① 使用上の誤り及び不当な修理屋改造による故障及び損傷。
- ② お買い上げ後の落下などによる故障及び損傷。
- ③ 火災、地震、その他の天災地変による故障及び損傷。
- ④ 納品後の移動、輸送または什器備品等との接触による故障及び損傷。
- ⑤ 不具合の原因が本製品以外（外部要因）による場合。

本書は再発行いたしませんので紛失しないように大切に保管してください。

Safety precautions

DANGER: indicates the potential and imminent danger of death or serious injury to a person.

WARNING: indicates the possibility of death or serious injury to a person.

CAUTION: indicates the possibility of personal injury to a person or physical damage.

⚠ This symbol indicates the presence of danger, warning, and caution.

∅ This symbol indicates prohibited actions.

❶ This symbol indicates compulsory actions.

* Moon moon, Inc. shall not be liable to you or to any third party for any damages or losses caused by user due to misuse, failure, or defect, except to the extent required by applicable law.

DANGER

❶ If smoke or odor is present, stop to use immediately and disconnect the power plug from the outlet. Otherwise fire, overheating or functional failure may occur.

∅ Do not touch the power plug or plug/unplug the power cord with wet hands.

∅ Looking continuously and straight into the strong light source for a long time could cause damage to the eyes. Although the light should be directed toward your eyes, do not stare at the light. There is no need to look straight into the light as long as it faces you. If you feel tired or exhausted to be exposed to the light, turn off and discontinue use of the product for a while.

∅ Never short the electrical outlet with needles or metal objects. Do not insert any foreign bodies such as needles into any gaps of the device as this may cause electric shock or fire.

WARNING



❶ Do not cover or wrap with clothing.
Heat may build up resulting in deformation or fire.

∅ Use this product with ambient temperatures ranging from 5 to 35°C. Do not use the product outside this range.

∅ Never attempt to disassemble or modify any part of the device as this may cause fire, electric shock, or malfunction.

∅ Never handle the product with wet hands as this may cause fire, electric shock, or malfunction.

∅ Do not expose the product to rain, any type of liquid, or excessive moisture as this may cause fire, electric shock, or malfunction.

❶ Never use the product for medical purposes involving serious risk to life.

❶ Do not exceed the specified input voltage and rated capacity.

❶ Do not attempt to replace the battery yourself. May cause the battery to overheat or injury. When the nickel-metal hydride battery needs to be replaced, please contact the Customer Support Center. Do not dispose of unneeded battery with general waste. The battery may require recycling in accordance with local laws. Never dispose of battery in a fire.

∅ Use the provided electrical adapter. Do not charge with the use of damaged cable or charger. Do not charge in a humid place as this may cause fire, electric shock, injury, or damage to the device and other items.

∅ The product may generate heat for continuous use of long time. Do not use the product in a place exposed to direct sunlight.

∅ Ensure the device is stored out of reach of small children.

Safety precautions

⚠ CAUTION



- ∅ This product is not an electronic medical equipment and is not intended to diagnose, cure, mitigate, treat, or prevent any disease or other medical conditions.
- ∅ Never step on top of, nor place heavy objects on the product.
- ∅ If you have any medical condition that you believe could be affected by the product (eye disease, seizures, eyestrain, loss of consciousness, headaches, or other), consult with your physician prior to using the product.
- ∅ Choking hazard: the accessories may present a choking hazard to small children. To avoid danger from suffocation, use or store the accessories out of reach of small children.
- ❶ Before moving the product, be sure to turn the power off, disconnect the power plug from the outlet, and disconnect all cables.

*Liquid crystal display (LCD)

Some of the picture elements may not be displayed evenly and their shade may vary. This is due to the structural properties of the LCD display and is not a malfunction.

Movable part


The movable part cannot be turned more than 90 degrees. With an opening angle of 90 degrees, avoid applying excessive force to the movable part (light emitting part). Be careful not to pinch your body parts or objects between movable and base parts.

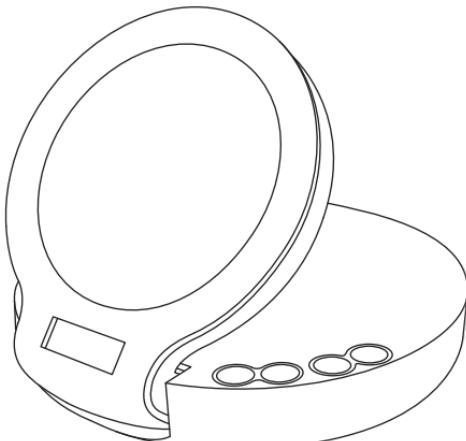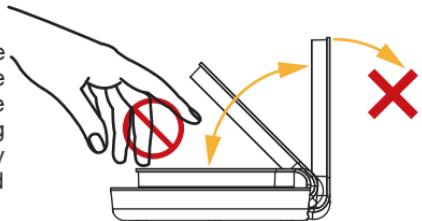

Index

Device parts	25
Box contents	26
Buttons and display	26
Basic features	27
Clock setup	28
Turning ON and OFF	29
Turning OFF	30
Brightness control	31
Sunrise chart	32
Sunrise setup	33
Sunrise ON/OFF	34
Alarm & Thunder snooze	35
Relax timer setup	36
Bluetooth & App	37
Best practice	38
Troubleshooting	39
Limited warranty	40

Device parts

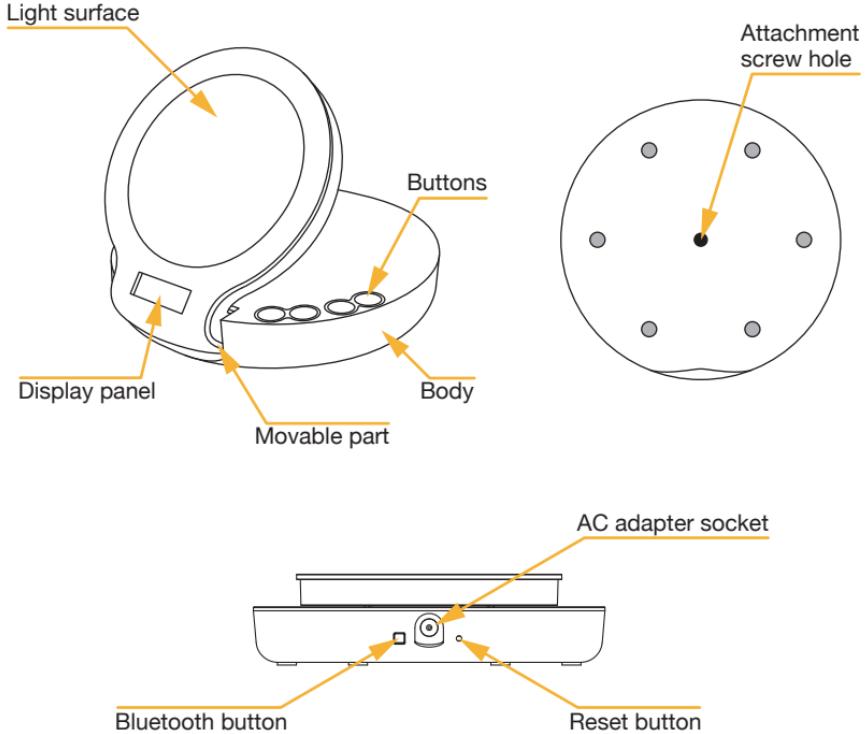

Box contents

inti, User's guide, Carry bag, AC adapter

Buttons and display



Plus



Minus



Alarm



Clock



Sunrise A



Sunrise B



Relax mode




Power / Light type



Basic features




- ① Press any button
- ② All backlights turn on for 3 seconds

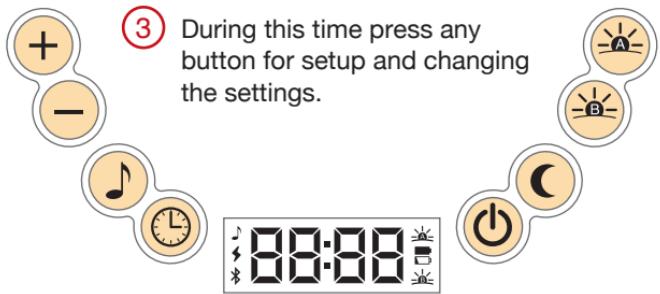


- ③ During this time press any button for setup and changing the settings.
- ④ Backlights stay on for the duration of setup. They turn off after 3 seconds of inactivity.

Clock setup

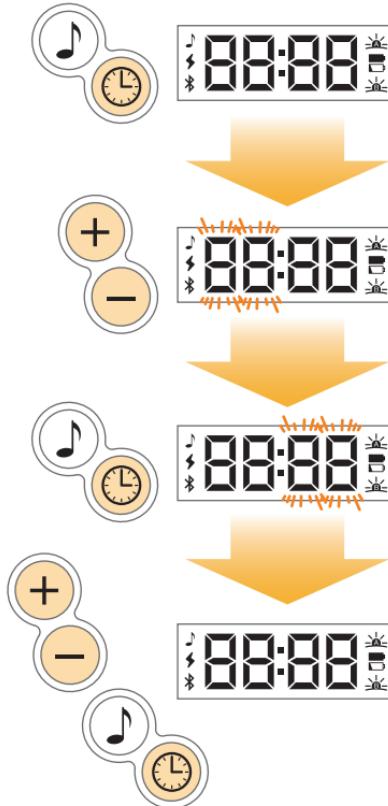


- ① Press the clock button for 2 seconds.
- ② The hour digits start blinking. Use the plus and minus buttons to set the hour.
- ③ Touch the clock button to fix the hour. The minute digits begin to blink.
- ④ Use the plus and minus buttons to set the minutes.
- ⑤ Press the clock button to fix the minutes.

Turning ON and OFF the Energy Light

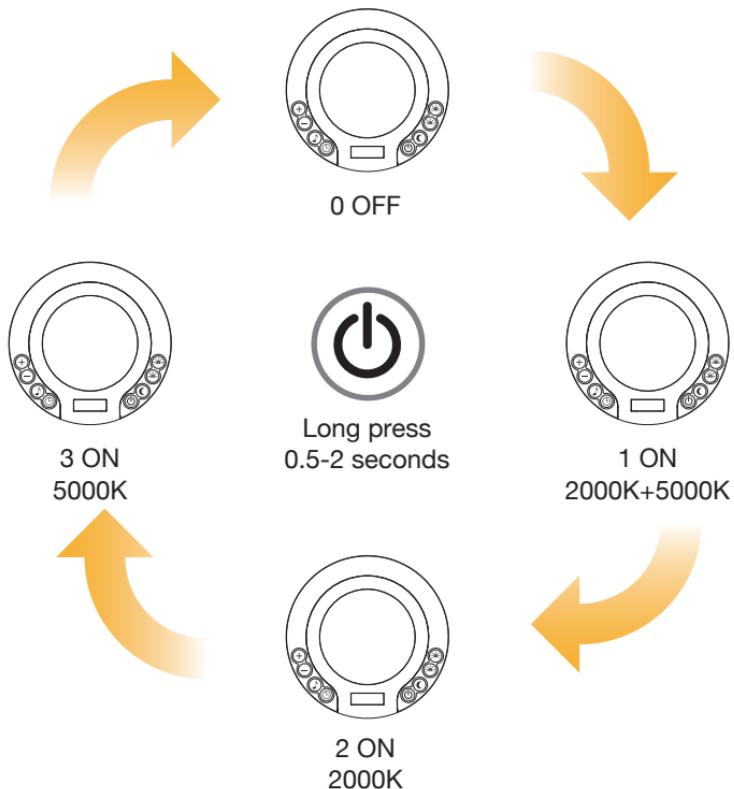


Turning OFF the Energy Light

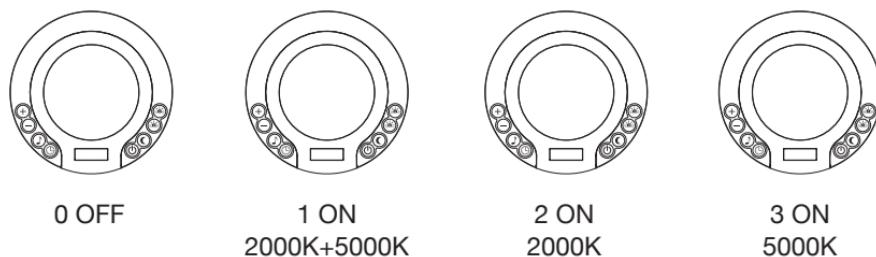

Regardless of the device state:





Press for over 2 seconds
to turn off

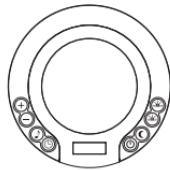

Brightness control



Press plus button to increase light level.

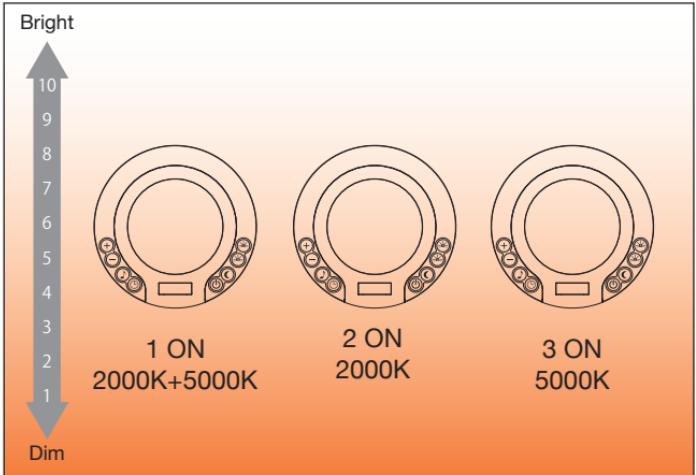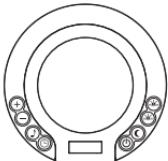

Press minus button to reduce light level.




Brightness level is shown on the LCD.
After 3 seconds the clock comes back again.

Sunrise chart



In the case where wake up time setting is
and the length of the sunrise is 30min.

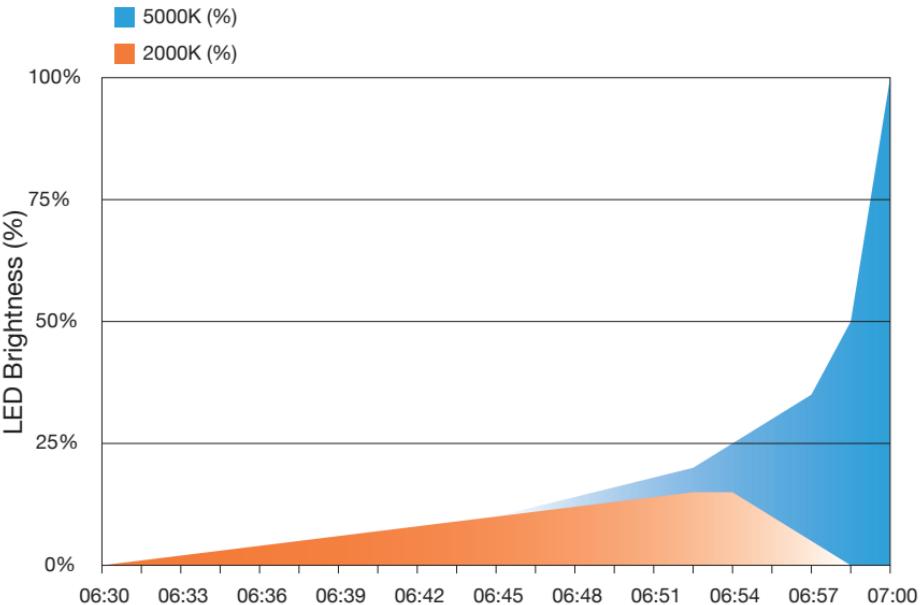

Sunrise setup



Use same steps for sunrise B setup.
You can use sunrise A for weekdays
and sunrise B for weekends.

- ① Press sunrise A button for 2 seconds. Icon and hour digits start blinking.



- ② Set the wake-up hour using the plus and minus buttons.



- ③ Press sunrise A again to fix the hour. Minute digits start blinking.



- ④ Set the minutes using the plus and minus buttons.



- ⑤ Press sunrise A again to fix the minutes. You can then set the sunrise length. It can be between 5 minutes to 30 minutes. Use the plus and minus buttons again.



- ⑥ Press sunrise A again to finalize the sunrise A setup.



Sunrise ON/OFF



- ① Press sunrise A button to turn on sunrise.



- ② Sunrise A icon appears.
The wake up time you set starts blinking.



- ③ Press sunrise A button to turn off sunrise.



- ④ Sunrise A icon disappears.



- ⑤ Press sunrise B button to turn on sunrise.



- ⑥ Sunrise B icon appears.
The wake up time you set starts blinking.



- ⑦ Press sunrise B button to turn off sunrise.



- ⑧ Sunrise B icon disappears.




Alarm & Thunder snooze ON/OFF



Thunder snooze function is a back up feature for users who are at risk of falling asleep again. This function makes lights flash on and off for one minute, nine minutes after the wake up time. If you are using the Inti app you can even add the sound of thunder.

NOTE: This feature can only be used when sunrise A/B is on.

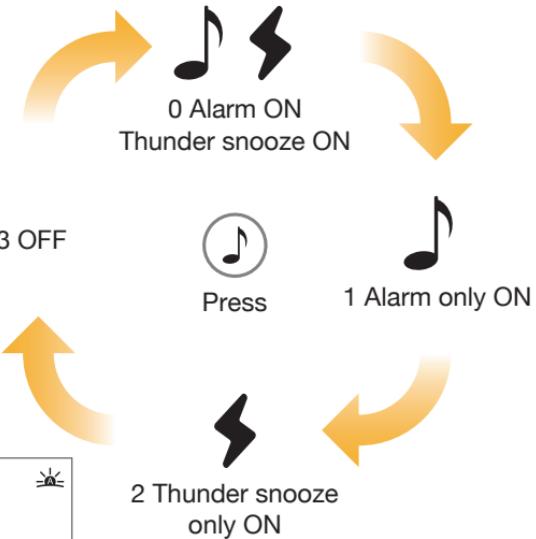

Relax mode setup



- ① Press relax button for 2 seconds. A number starts blinking.



- ② Choose the length of relax timer using the plus and minus buttons. The time can be between 1 minute to 99 minutes.



- ③ Press relax button again to fix the relax timer. This concludes the timer setup.



- ④ Press relax button to turn the relax timer on.



- ⑤ The light starts flickering like a candle and gradually goes out by the end of the chosen time.



- ⑥ Press the relax button again to turn off the relax timer.



or

- ⑦ Press the power button for 2 seconds.



Bluetooth & App

inti can be used together with a dedicated Inti smart phone app.

- ① Download the app and launch it.




Inti App


- ② There is a Bluetooth button on the side of the device. Press it and hold it down for a few seconds.



- ③ The connection is established when a Bluetooth logo appears in the upper left corner of the app and on the device display.

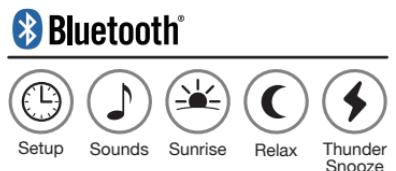


Best practice

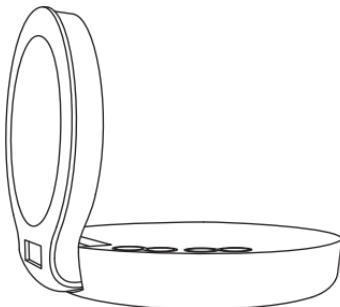

Inti performs best when opened and placed on a table or other flat surface. Other recommended way is to attach it to a wall using an adapter.

Caution HOT

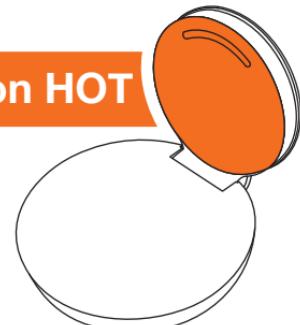

Avoid touching the back side of the light as it becomes hot.

Troubleshooting

If a problem occurs, turn the power off , unplug AC adapter and press the reset button.

If you notice any abnormality such as overheating, immediately turn the power off and make the product cool down. Then press the reset button.

Service

The Energy Light inti has a limited one year warranty from the date of purchase. Contact customer support on repair, maintenance, and operation of the product.

inti Customer Support Center.
info@intiinti.com

Hours of Operation
from 10:00 a.m. to 5:00 p.m. local time, Monday through Friday,
(except holidays, Saturdays, Sundays, and National holidays)

Limited warranty

Your inti product is warranted against defects in materials and workmanship for a period of one year from the date of original retail purchase from an authorized inti dealer. If a defect exists, inti at its option will (1) repair the product at no charge using new or refurbished parts, (2) exchange the product with a functional equivalent product that is new or refurbished, or (3) refund the original purchase price. This does do not cover normal wear and tear, cut cords, bent jacks, scratches, loss or theft. This warranty excludes damages resulting from abuse, accident, modifications or other causes that are not defects in materials and workmanship. Customization of your product will void your warranty.

Any recovery is limited to the original purchase price. No other person is authorized to modify this limited warranty. Your seller is responsible for any other warranties.

This warranty gives you specific legal rights, and you may have other rights that vary by state and jurisdiction. These rights shall not be affected by this limited warranty. This warranty cannot be transferred or assigned.

To obtain warranty service, contact inti using the information provided at www.intiinti.com.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.