

maxwest Nitro 55R User Manual

Overview

Front Camera
Volume Keys
Power Key
Menu
Home
Back
Flash and Rear Camera

SIM Card Installation

A SIM card contains your phone number and other necessary data. Your device has dual SIM slots that both supports 3G(WCDMA) SIM cards.

To Install the SIM Card

1. Make sure the device is turned off and the front facing down. Hold the firmly and use the notch at the bottom corner to loosen the cover. Use moderate pressure, thin edge such as your fingernail or a credit card to carefully run along the seam to loosen, then lift the cover until it detaches completely.
2. Remove the battery if it is in. Locate the SIM card slot and insert the proper SIM card into the proper slot. For more information on SIM card installation, check out the included **SIM Card & Micro SD Card Installation Guide**.
3. To turn on/off a SIM card go to Settings->SIM management, then slide the SIM card switch. Turn on/off a SIM card if "3" data connection, go to Settings->SIM management and then select "Data connection" option, and select a SIM card that has 3G capability.

Charging battery

New batteries are shipped partially charged. Before using your device, install and charge the battery. Batteries perform best after several full charge / discharge cycles.

Please charge the battery using the following methods:

1. Charge the phone by connecting it to a computer via the USB cable.
2. Connect the USB cable to the phone and the AC adapter. Plug the adapter into an electrical outlet to start charging.

As the battery charges, an icon will appear in the status bar of the home screen when the battery is fully charged, a full battery icon appears on screen.

Audio Profile/Sleep Mode

Intelligent keyboard

From the home screen, swipe up to open APP Drawer & select "Settings". Go to "Sound" and change the audio settings by Changing Sound levels and change your ringtone.

Phone Features

Description Icons

Icons	Descriptions	Icons	Descriptions
	Show the phone's network signal strength.		Show the phone's battery capacity.
	Speaker has been activated.		You have unread SMS.
	Call on hold		USB storage Turned on.
	The ringing type is set on Vibration.		Right Mode
	2G network in use.		3G network in use.
	You have missed calls.		A clock alarm is active.
	In call		Bluetooth ON

Main Menu & Its Functions

Select to enter the main menu... Allow you to view a list of features available in your phone.

1. **Clock**: Allow you to set the alarm from Clock.
2. **Browser**: Browse the internet. Search engine-default set as Google.
3. **Calculator**: Allow you to make tedious calculations quickly.
4. **Calendar**: View the calendar & add events.
5. **Camera**: Allow you to click pictures anytime you want. Your Nitro 55R has a 8.0 MP High Definition camera with LED Flash supporting many special features like Face detection which ensures you to take good quality of pictures and store them in the Gallery. In Camera, easily choose Camcorder to record Video.
6. **Contact**: See your list of Contacts. Access your digital phonebook through this function.
7. **Email**: Allows you to set up your POP/IMAP email accounts.

Phone Features

8. Gallery
Allow you to save & view photos & videos.
Log in to your Gmail account to view all the applications & download from thousands of applications available on Google Play.

9. Play Store
To connect this app please connect to an internet connection.

10. Messaging
Allow you to view messages sent & received as a thread.
View the list of songs available in your phone. View the artists, albums, played and more.

11. Music
Allow you to play music.

12. Phone
Allow you to make phone calls.

13. MAX KIT
This service is provided by the operator. It provides phone plan.

14. Sound Recorder
Allows you to record sounds.

15. Videos
View from list of videos.

maxwest Nitro 55R

Phone calls/Texting

To Make Phone Calls

1. Touch the phone icon.
2. Select SIM1 card or SIM2 card.
3. Click on a contact from your contact list to make a call.

Composing text messages

Maxwest automatically corrects and suggests words as you type.

Cut, Copy and Paste

Touch and hold text content to bring up the magnifying glass, and then slide your finger to move the insertion point. Then choose to cut/copy or paste. It's very easy to copy text from web pages, emails, or text messages.

WLAN

Turn on WLAN

Maxwest supports WLAN Direct which allows Android™ 8.1 Oreo™ (Go edition) or later devices with the appropriate hardware to connect directly to each other via WiFi without an intermediate access point. Using the APs, you can discover and connect to other devices, if each device supports WiFi Direct. WiFi Direct is useful for sharing files over distances much longer than a Bluetooth connection. This is useful for applications that share data among users, such as a multiplayer game or file sharing.

Camera

Log into your e-mail accounts.

You may log into your e-mail accounts from the phone account you have created. From the home screen select Application "Gmail" and then enter your email address, password and tap "Next". Select which type of email account you are setting up and enter the prepossessing. (POP3 / IMAP / Microsoft Exchange Accounts). You will need to enter your user name, password, and server information depending on the type of email account or you can change the settings by tapping "Manual setup" at the top right corner screen. Tap "Next" and select "OK" to accept.

Connecting to E-mails

File Transfer

Connecting Smartphone to PC

Connect the USB cable to your smartphone and computer. Once connected successfully, on your phone, slide the top menu down and click on "Android System", then, press "Transferring" button. A new storage named "Nitro 55R" will appear on your PC file "My Computer". Click on it to review files in the smartphone and for transfer files between devices. When finished, press Disconnect device from PC. Photos taken with the camera will be saved under the "DCIM" folder. Screenshots captured will be saved under "Pictures" folder. Musics in the "Music" folder for the files to be played properly.

Warning

Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the condition that this device does not cause harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

■ SAR tests are conducted using standard operating positions accepted by the FCC/ISED with the device transmitting at its highest power level in all frequency bands, although SAR is measured over the highest certified power level, the actual SAR level of the device while operating will be well below the maximum value. In general, the closer you are to a wireless base station or antenna, the higher the SAR value.










■ Before a new device is available for sale to the public, it must be tested and certified to the FCC/ISED that it does not exceed the exposure limit established by the FCC/SED. Tests for each device are performed in positions and locations as required by the FCC/SED.

■ For body worn operation, this device has been tested and meets the FCC/ISED RF exposure guidelines. The device should be used with an accessory that maintains a minimum distance of 10 mm between the device and the body. The device should not contain any metal and that positions the handset a minimum of 10 mm from the body.

■ Non-compliance with the above restrictions may result in violation of RF exposure guidelines.



Manuel d'utilisation

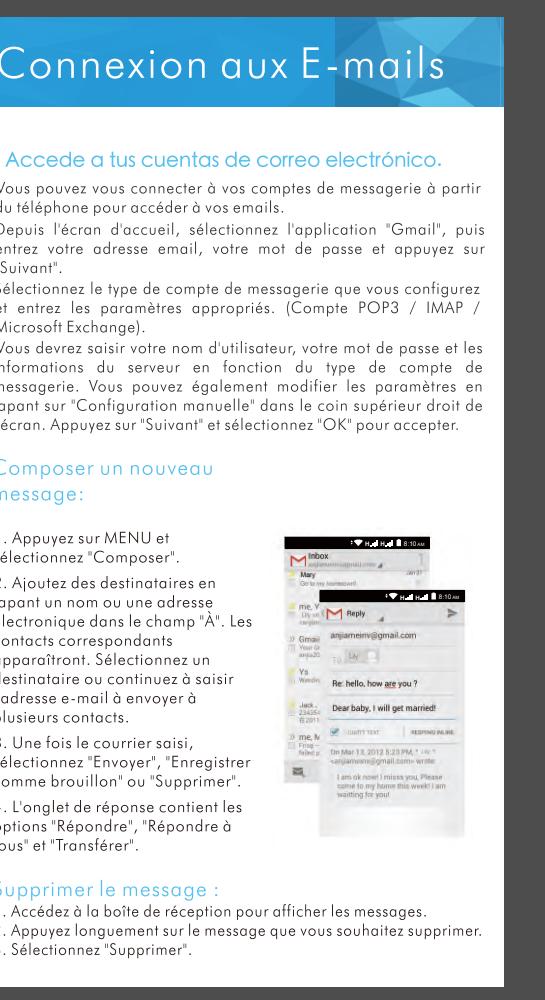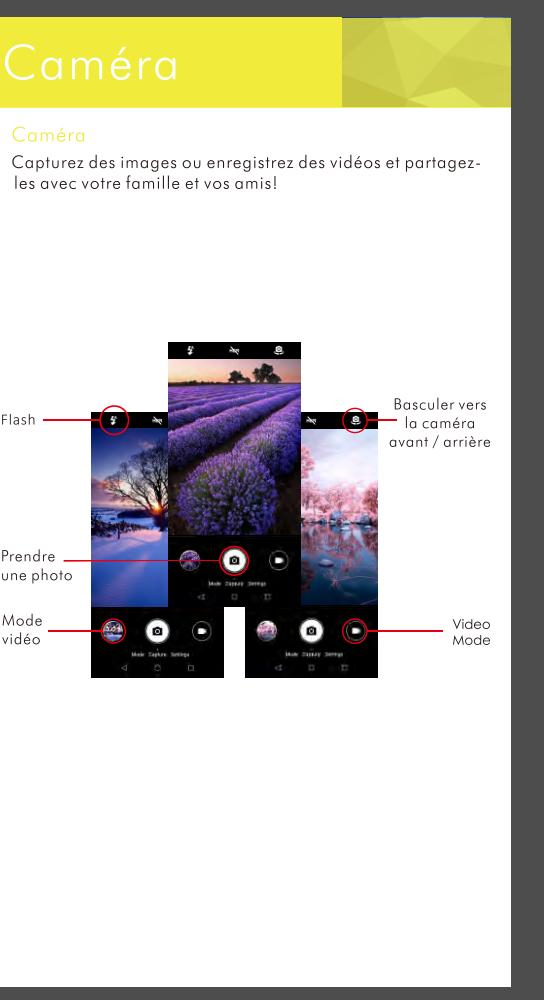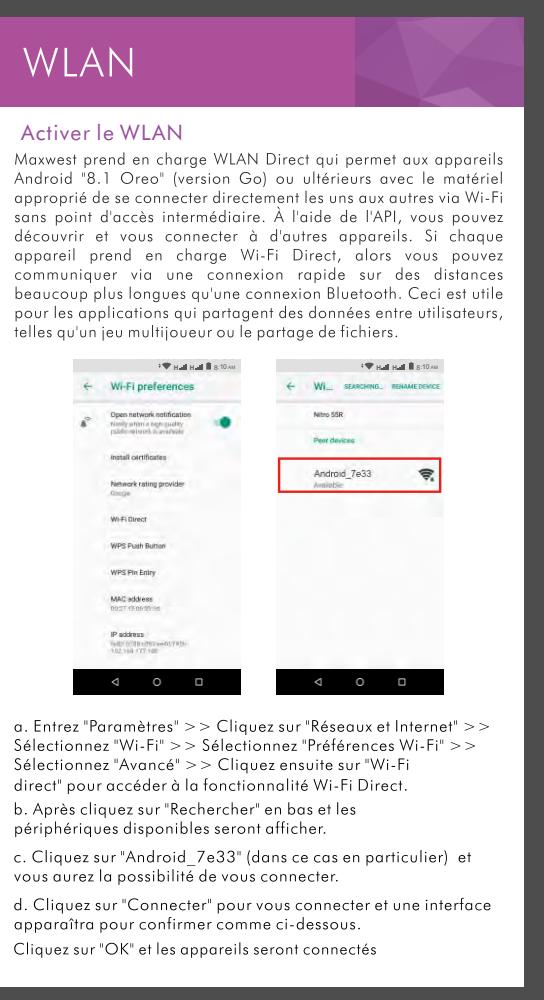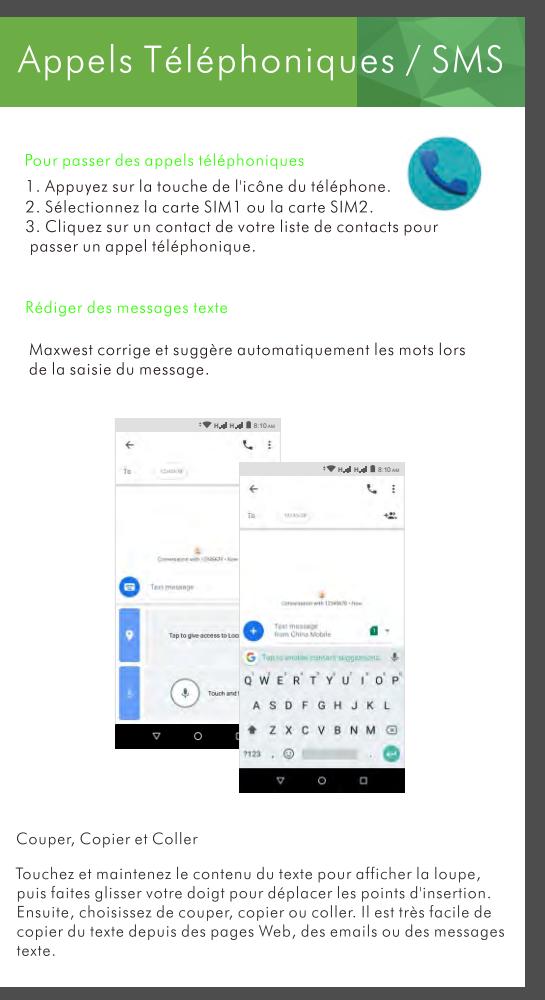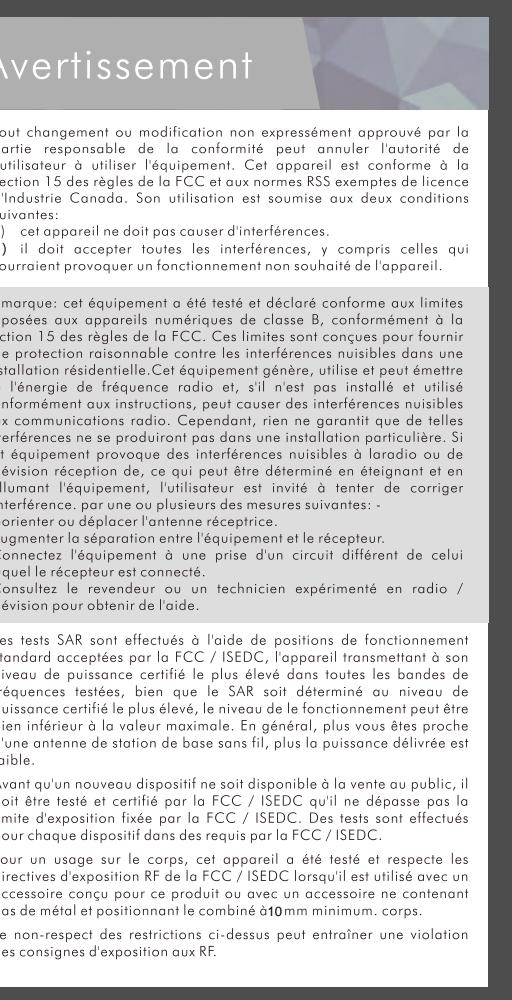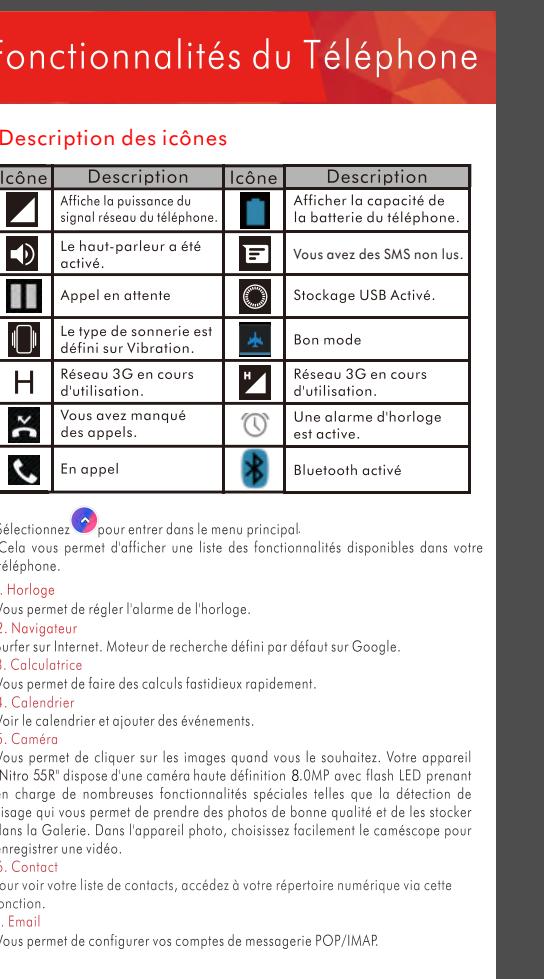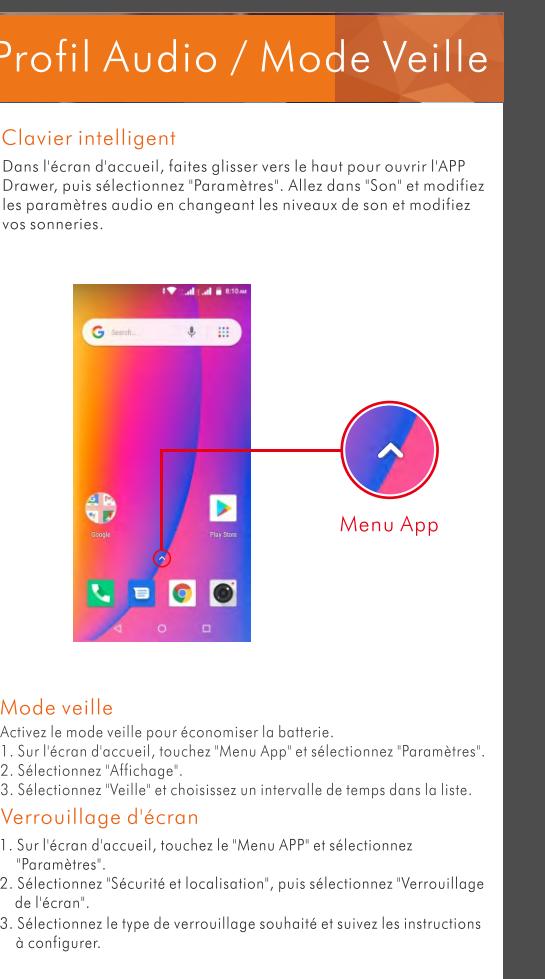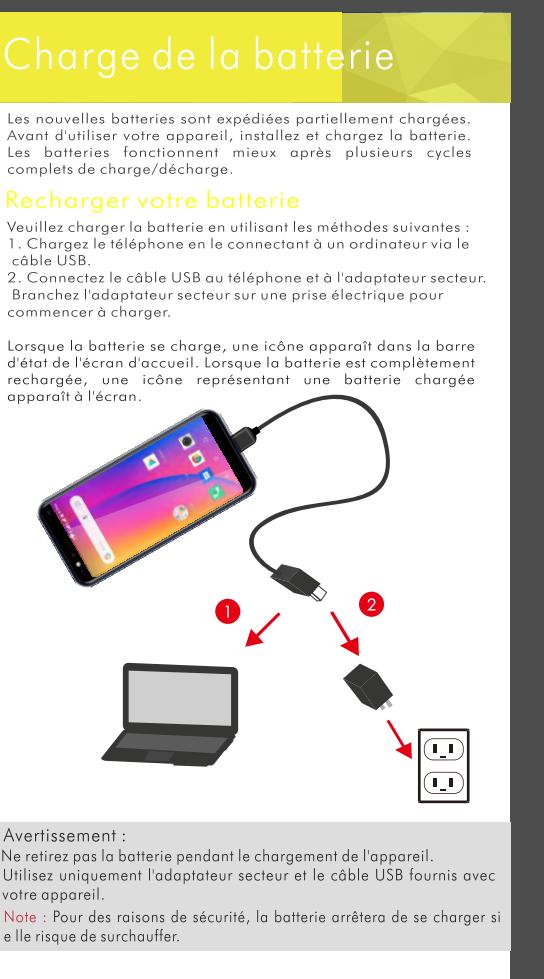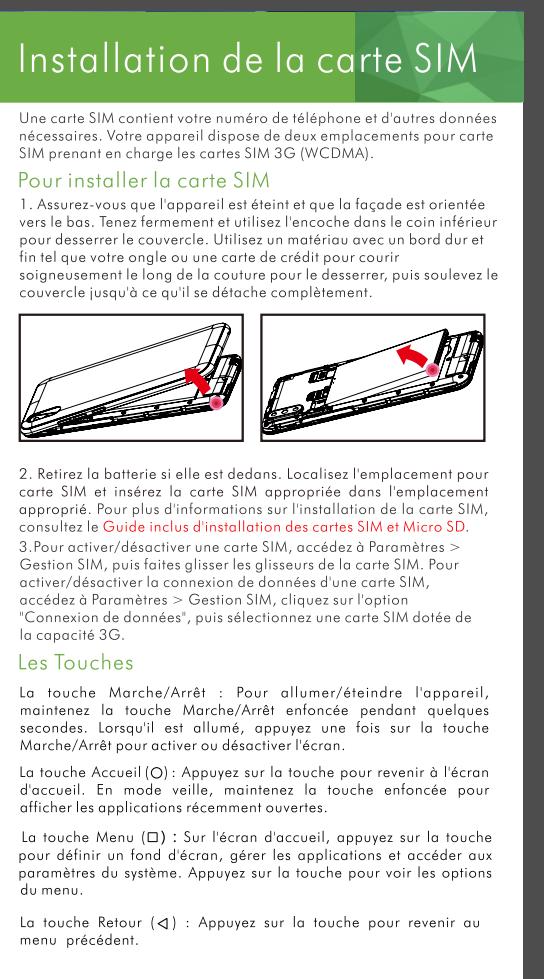

© 2018 Maxwest et le logo Maxwest sont des marques déposées de Google, Android, Google Play et les autres marques sont des marques déposées de Google LLC; Oreo est une marque commerciale du groupe Mondelez International, Inc.