


Owner's Guide

Bluetooth Speaker: BTN2



HIGH PERFORMANCE BLUETOOTH SPEAKER

Model: BTI	٧2
Serial No.	

CONGRATULATIONS

Thank you for purchasing this Hitachi product. Please read these instructions carefully.

For additional assistance please call Toll Free 800.HITACHI (800.448.2244) or visit our website at www.hitachi.us/tv. Keep this owner's guide for future reference.

Record the serial number of your Bluetooth speaker for future reference. This information is located on the bottom of the speaker unit.







CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICE-ABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL

TIMES.

CAUTION: TO PREVENT ELECTRIC SHOCK, DO NOT USE THE AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment

- Reorient or relocate the receiving antenna.
- interference by one or more of the following measures: - Increase the separation between the equipment and receiver

off and on, the user is encouraged to try to correct the

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

E-WASTE / RECYCLE NOTICE

This product may contain lead and should be disposed or recycled according to local electronic waste (e-waste) laws. For product recycling and disposal information, contact your local government agency or www. eRecycle.org (in California), the Electronic Industries Alliance at www. ecyclingcentral.com (in the U.S.) or the Electronic Product Stewardship Canada at www.epsc.ca (in Canada). FOR MORE INFORMATION, call 800.HITACHI (800.448.2244) (USA/ CANADA).



- CAUTION: To comply with FCC RF exposure compliance requirements, a separation distance of at least 8 inches must be maintained between the speaker unit of this device and all persons.
 - This product's transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.
 - Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this product.

CAUTION: The speaker unit's battery pack is not user replaceable.

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the

"E-WASTE/RECYCLE NOTICE".

Declaration of Conformity

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation. For questions regarding this declaration, contact:

Hitachi America, Ltd. 2420 Fenton Street, Suite 200 Chula Vista, CA 91914-3556 Tel: 800.HITACHI (800.448.2244) ATTN: Customer Relations

CONDENSATION

Moisture will form in the operating section of the product if the product is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. If this occurs, the product's performance may be impaired temporarily. To prevent this, let the product stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually. Condensation may also form during the summer if the product is exposed to the breeze from an air conditioner. In such cases, change the location of the product.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- Keep these instructions.
- 3) Heed all warnings.
- Follow all instructions.
- 5) Do not use this product near water.
- 6) Clean only with dry cloth.
- Do not block any ventilation openings. Install only in accordance with instructions in this owner's guide.
- Do not install near any heat sources such as radiators, heat registers, stoves, or any other apparatus (including amplifiers) that produces heat.
- 9) Do not defeat the safety purpose of the polarized or groundingtype plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the product.
- Only use attachments/accessories specified by the manufacturer.
- 12) Use only with cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the product (if any). When a cart is used, use caution when moving the cart/product combination to avoid injury from tipo



- Unplug this product during lightning storms or when unused for long periods of time.
- 14) This product does not contain any serviceable or replaceable parts. Do not attempt to service or repair this product. Opening, or attempting to service or repair, this product will void the

IMPORTANT SAFETY INSTRUCTIONS (continued)

manufacturer's limited warranty. If operational problems are encountered during the product's limited warranty period, please contact 800 HITACHI

- 15) Product should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the product.
- Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock.
- 17) Do not push objects through any openings in this unit, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.


Charging the Battery

- This battery powered speaker uses an internal rechargeable battery.
- Important Note: The battery is not replaceable. Do not attempt to replace the battery.
- 3) Connect the speaker to a USB port with a minimum 5V/1A rating.
- Important Note: For the best performance, the first time you charge the battery please allow the battery to fully charge before using. (Approximately 2.5 hours)
- When charging, the power key light will flash to indicate that charging is active.
- 5) Playing music while charging will extend the charging time.
- 6) When charging is complete the power key light will stop flashing.

Package Contents

- Speaker Unit
- · USB charging cable
- 3.5mm audio cable
- · Owner's Guide

Product Layout

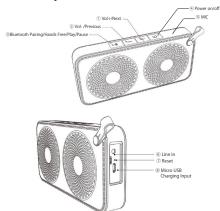

- ① Vol+/Next: Increase volume.
- ② Vol-/Previous: /Decrease volume.
- ③ Bluetooth Pairing/Hands Free/Play/Pause: See table on page 9.
- Power On/Off: Short press to power on, long press (press and hold) to power off. Battery charging and status light.
- ⑤ MIC: Microphone.
- © Line In: 3.5mm input for external sources.
- ② Reset: Press to power off the speaker if the speaker stops responding.
- Micro USB Charging Input: Used to charge the speaker's battery.

1 Bluetooth button operation (Pairing/Hands Free/Play-Pause):

	Bluetooth button
Speaker Status	Long press
Bluetooth mode	Disconnect Bluetooth

Speaker Status	Short press
Bluetooth mode with an incoming call	Answer the incoming call
Bluetooth mode with a call	End the call
Bluetooth mode & Music playing	Play / Pause
Line In mode & Music playing	Mute

Speaker Status	Double press
Bluetooth mode	Call back
Bluetooth mode with an incoming call	Refuse the incoming call

2 Vol +/Vol - button operation (Volume/Next/Previous):

	Vol+/Vol- button
Speaker Status	Short/Long press
Bluetooth mode	Volume up/Volume down
Line in mode	Volume up/Volume down

Speaker Status	Double press
Bluetooth mode	Next/Previous song

2 Playing Music

2.1 Bluetooth mode:

- Power on the speaker. The Bluetooth button will blink continuously indicating that the speaker is ready to pair with a device.
- On your Bluetooth enabled device search for and pair with the Hitachi Bluetooth speaker "BTN2". When pairing is successful the Bluetooth button will stop blinking. You are now ready to listen to music on your Hitachi Bluetooth speaker.
- If you need to unpair an already paired Bluetooth device and switch to another device, press and hold the Bluetooth button until the Bluetooth button starts to blink. The speaker is now ready for pairing consistent with step 1 above.
- When the speaker is powered on, it will automatically connect to the last paired device.

2.2 Line In mode:

When a 3.5mm audio cable is inserted into the LINE IN input, the speaker will automatically switch to the LINE IN input. Connect one end of the 3.5mm audio cable to the speaker unit and the other end to the device you wish to play music from. To switch back to Bluetooth mode, disconnect the 3.5mm audio cable.

3 How to clean the speaker

- 1. Always power off the speaker before cleaning it.
- Do not use volatile solvents (such as ethanol, rosin, or toluene solvents) to clean the speaker. These types of chemicals may damage the speaker.
- 3. Use a cotton or microfiber cleaning cloth.
- 4. When cleaning the speaker, do not directly put water on the speaker's enclosure. Lightly moisten a cotton or microfiber cleaning cloth and then gently wipe down the speaker.

4 Low battery warning

When the battery is low in charge, the speaker will output a warning sound every 1 minute and the power key will flash.

Troubleshooting

The following table contains common problems and solutions. Please read carefully.

Problem	Solution
The speaker has no sound	Make sure the speaker was charged before use. Increase the volume settings on the source and speaker. Make sure the cable is correctly connected. Make sure that the audio playback device is connected and in play mode.
Humming noise or distorted sound	Make sure that the cable is correctly connected. Ensure that the device that is connected to the speaker is not the source of the humming noise or distortion. Replace the audio cable.
Not charging	Ensure that the Micro USB charging cable is connected correctly. Ensure that the Micro USB charging cable can charge other equipment normally.
Bluetooth pairing fails	Check that the speaker is in the pairing state (Bluetooth button is blinking). If it is not, press and hold the Bluetooth button (until it blinks) to set the speaker to pairing mode and pair again. Make sure that the Line In (3.5mm) cable is disconnected.

Audio is interrupted or breaks up	Ensure that the speaker and Bluetooth device to which it is connected are within 33 feet (10 meters) of each other. Ensure that there is no obstruction between the speaker and the connected Bluetooth device.
Speaker is not respond- ing and will not turn off	Locate the small pinhole marked RESET located on the right side of the speaker (under the protective, rubber cover). Insert a straightened paper clip through the pinhole and depress the switch inside. The speaker unit will automatically power off.

Care and Maintenance

- · Keep all parts out of reach of children.
- Keep the speaker dry. Precipitation, humidity and other liquids containing minerals can corrode electronic circuits.
- · Do not use or store in dusty or dirty areas.
- Do not store in hot areas. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.
- Do not store in very cold areas. Moisture can form inside the case, which may damage electronic circuit boards.
- Do not attempt to open the case. Non-expert handling of the device may damage the system.
- · Avoid dropping or strong shocks.

Specifications Model Name

Bluetooth Range

Hands-free

Woder Name	BINZ
Speaker	2 x 1.5 inch full frequency speaker, 3W, 4ohm
Frequency response	100Hz-20KHz (+/-3dB)
Power amplifier	Class D @ 3 W x 2 CH
THD (Distortion Ratio)	< 10% @ 500 mV/1kHz
SNR (Signal to Noise Ratio)	>75dB(A)
Sound pressure level	93dB± 3dB (500mV@1M)
Play mode	Bluetooth/Line In
Charging input	DC 5V,1A (Micro USB)
Battery	Lithium polymer battery/3.7V/ 1300mAh/4.8Wh
Dimensions	6 5/16 (W) x 3 1/8 (H) x 1-1/8 (D) inches; 16.0 (W) x 7.7 (H) x 2.9 (D) cm
Weight	0.6lbs (300g)
Bluetooth version	BT2.1+EDR

10m (Line of sight)

DSP MIC hands-free system

BTN2

Note: Specifications subject to change without notice

IP54

This product has an IP54 water and dust resistant design. It can tolerate a limited splash of water, but do not let this product be submerged in water or overly soaked. If liquid is spilled onto the surface of this product, please use a dry cloth or paper towel to wipe it off; if water is immersed inside the product, please immediately shut it down and contact the customer service center.

- 1. IP5X + IPX4 = IP54, the standard definition of these 2 items:
 - Dust prevention level IP5X: Prevents harmful dust from accumulating.
 - Water prevention level IPX4:Liquid splashing the surface from all direction will do no harm.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hitachi is under license. Other trademarks and trade names are those of their respective owners.

800.HITACHI (800.448.2244)

Monday ~ Friday 9:00 am - 6:00 pm EST

www.hitachi.us/tv



Inspire the Next

HITACHI AMERICA, LTD., DIGITAL MEDIA DIVISION

HITACHI has made every effort to assure you enjoy trouble free operation from your Hitachi product. Should you require service assistance with OPERATIONAL, HOOK UP, TECHNICAL ASSISTANCE OR WARRANTY SERVICE SUPPORT. please contact 800.HITACHI (800.448.2244).

Please be prepared to submit proof of purchase and/or delivery receipts to your 800.HITACHI Customer Service Representative. Warranty coverage will be provided in accordance with the provisions of your Limited Warranty (see the Limited Warranty page in this operating guide).

Pour de plus amples renseignements sur le service durant la periode couverte par la garantie. sur le fonctionnement ou pour de l'assistance techniquie communiquez avec:

Au Canada: 800.HITACHI (800.448.2244) Lundi ~ Vendredi

9:00 am - 6:00 pm HNF

Hitachi America, Ltd., Digital Media Division Customer Service Support

P.O. Box 99652 Trov. MI 48099

customerservice.ce@hal.hitachi.com

HITACHI Inspire the Next

Limited Warranty

(VALID IN THE UNITED STATES AND PUERTO RICO ONLY.)

LIMITED WARRANTY TERMS AND CONDITIONS. Subject to the conditions and limitations set forth below, this HTACHI® Bluetoth Speaker product (the "Product") is warranted to be free from defects in materials and workmanship for a period of 1 year starting from the original date of purchase (the "Limited Warranty Period"), if the original purchaser ("Purchaser"). During the Limited Warranty Period, if the Product does not work properly due to a defect in materials or workmanship, Hilachi will, at Hilachi's option, eithert. () repair the Product with even or refurbished parts, or (ii) replace the Product with a new or refurbished product with equal or greater features and functions as the Product. If Purchaser rejects, refuses or otherwise does not accept Hilachi's repair or replacement offer, this Limited Warranty shall be void and of no further force or effect. This Limited Warranty extends to the Purchaser only and is not transferable. To qualify for coverage under this Limited Warranty, Periodaser must notify Hilachi of a warranty claim during the Limited Warranty Period by calling 800-HITACHI and must provide a dated sales receipt for the Product.

PARTS AND LABOR: There will be no charge for any replacement parts or labor required to correct a qualifying defect that arises during the Limited Warranty Period. Any replacement part used to repair the Product may be, at Hitachi's option, a new or refurbished part, and such replacement part will be warranted only for 90 days or the remainder of the original 1-year Limited Warranty Period, whichever is later.

SERVICE LOCATIONS AND RETURNS: Products must be transported or shipped to a Hitach-lesignated service center (call 800-HITACH) for more information). Hitachi will not be responsible for any costs of transporting or shipping the Product to Hitachi-designated service center, but Hitachi will be responsible for the cost of return-shipping repaired or replacement Product to Purchaser. The purchaser must obtain pre authorization from Hitachi before shipping any Product to Hitachi for replacement, and Purchaser must ship the Product with all shipping charges prepaid using the Product's original box and packaging, including all original parts, written materials and accessories.

WARRANTY LIMITATIONS: This Hitachi Limited Warranty does not cover: (a) any Product that has been modified or repaired in a manner not previously authorized by Hitachi in writing; (b) any Product whose serial number (if any) has been removed, altered, replaced, defaced or rendered lilegible; (c) any defect, malfunction, or failure caused by or resulting from non-authorized service, maintenance, repair or part replacements; (d) damage resulting from abuse, misuse, misuse, mishandling, neglect or damage caused by exposure to hostile or unstable operating environments, such as areas containing dust and/or smoke, or in any manner other than those identified as acceptable in the Product's Owner's Guide; (e) damage caused by power surges, accidents, natural disasters/occurrences or any other events or circumstance for accidents. natural disasters/occurrences or any other events or circumstances. outside Hitachi's control; (f) any Product used in any manner inconsistent with the safe and proper set-up, usage and installation requirements and configurations identified in the Product's Owner's Guide; (g) improper opening, tampering with, or modification of the Product or any Purchaser misadjustments of user-operated controls; (h) any obligation related to the removal of Product from a custom cabinet or other specialized product installation; (i) product knobs, buttons, switches, batteries or accessories; (j) damage caused by cleaning Product in any manner other than as specified in the Product's Owner's Guide; (j) normal usage or ordinary wear and tear, including, without limitation, scratches or marks on the Product's exterior; (k) any damage to a Product returned to Hitachi or any Hitachi-designated facility for repair or replacement that is attributable to improper packaging. mishandling or shipping by Purchaser; (I) any Product purchased or serviced outside the United States (including Puerto Rico); (m) any Product that has been used for commercial or industrial purposes; or (n) any Product purchased in non-new or nonfactory-sealed condition, such as in "AS IS", "refurbished", "reconditioned," or "previously owned" condition or any other similar condition, NO PERSON, AGENT, DISTRIBUTOR, DEALER, SERVICE FACILITY, OR COMPANY IS AUTHORIZED. TO CHANGE MODIFY OR AMEND THE TERMS OF THIS LIMITED WARRANTY IN ANY MANNER WHATSOEVER. EXCEPTAS PROVIDED IN THIS LIMITED WARRANTY, HITACHI MAKES NO EXPRESS WARRANTY REGARDING THE PRODUCT. FURTHER, ALL IMPLIED WARRANTIES RELATING TO ANY PORTION OF THE PRODUCT, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY EXPRESSLY DISCLAIMED BY HITACHI TO THE MAXIMUM EXTENT PREMITTED BY APPLICABLE LAW, HITACHI SHALL NOT BE LIABLE TO PURCHASER OR TO ANY OTHER PERSON FOR ANY INDIRECT. INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR ANY LOSS OF PROFIT LOSS OF DATA, OR DAMAGE TO THE PRODUCT THAT IS ALLEGED TO HAVE BESULTED FROM ANY DEFECT IN OR MALEUNCTION OR FAILURE OF THE PRODUCT BECAUSE SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR THE EXCLUSION OF INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES. THE ABOVE LIMITATIONS MAY NOT APPLY TO EVERY PURCHASER. THIS LIMITED WARRANTY CONFERS SPECIFIC LEGAL RIGHTS, INCLUDING CERTAIN OTHER RIGHTS THAT MAY VARY DEPENDING ON PURCHASER'S JURISDICTION. THIS LIMITED WARRANTY SHALL BE GOVERNED BY AND CONSTRUED IN ACCORDANCE WITH THE LAWS OF THE STATE OF PURCHASER'S RESIDENCE. FOR QUESTIONS ABOUT THE PRODUCT OR THIS LIMITED WARRANTY, PLEASE CALL 800.HITACHI OR VISIT www.hitachiserviceusa.com.