# **User Manual**

# Bluetooth Earbuds




# Prepared for:Linpaworld Group Li Mited




## Charging the earbuds

- 1. Plug the small end of the Micro USB charging cable into the Micro USB charging port on the earbuds.
- 2. Plug the large end of the Micro USB charging cable into a USB port on your computer or other USB charging
- 3. The LED charging indicator light is RED when charging. It will turn BLUE when the earbuds are fully charged.

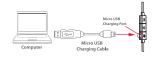

#### Location of controls

# Front

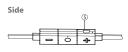

# **Back Side**

- 1. LED indicator light
- [-] button:
- •Quickpress = decrease volume Long press = skip to previous song
- · Long press = power ON/OFF;
- reject a call
  •Quick press = play/pause; answer/end call
- 4. [ + ] button:
- Quickpress = increase volume
   Long press = skip to next song
  5. Micro USB charging port
- 6. Microphone

#### Pairing the earbuds

- 1. Make surethe earbuds are turned off
- 2. Long press the [O] button until a tone is heard and the LED Bluetooth indicator light alternately flashes RED and BLUE.
- 3. Keep the earbuds and Bluetooth enabled device within 3 feet of each other during the pairing process.
- 4. Set your Bluetooth enabled device to search for Bluetooth devices.



• Go to SETTINGS > BLUETOOTH (Make sure Bluetooth is turned ON)



- On a Blackberry
- Go to SETTINGS/OPTIONS > BLUETOOTH
   Enable BLUETOOTH (Make sure Bluetooth is turned ON)



On an Android Phone
Go to SETTINGS > BLUETOOTH > MENU > Search for devices (Make sure Bluetooth is



#### On other Cell Phones/Devices

· Review the instruction manual that came with



- When the Bluetooth enabled device finds the earbuds, select "MERKURY BTE22" from the list
- of found devices.
  6. If required, enter the password 0000. Select OK or
- Yes to pair the two units.

  7. After successful registration, a tone will be heard and the LED Bluetooth indicator light will flash BLUE twice every few seconds.

NOTE: If you would like to connect the earbuds to ther device, you must unpair them from the rently paired device first. In your device's Bluetooth ings, select "MERKURY BTE22", then select "unpair". enthe earbuds have been unpaired, they automati callygo into pairing mode again.

## Using the earbuds

- To turn on, long press the [O] button until you see a BLUE light. To turn OFF, long press the [O] button until you see a RED light.
- Check that your Bluetooth features are turned ON. If you have already paired the earbuds with a Bluetooth enabled device, it will automatically connect.
- If you are using the earbuds for the first time, go to the "Pairing the Farguds" section of this User Manual. and pair the earbuds to your desired Bluetooth device

#### Adjusting the volume

 Ouick press the [ + ] button to increase the volume. · Quick press the [ - ] button to decrease the volume.

#### Answering / ending a call

To answer a call, quick press the [O] button.
To end a call, quick press the [O] button.

# Rejecting a call

Long press the [O] button to reject a call.

## Playing music

To enjoy listening to music wirelessly on your Magnetic Sports Earbuds, make sure you are connected to a Bluetooth enabled device, (see "Pairing the Earbuds"). Once connected, press PLAY on your Bluetooth device. When playback has begun, control the music and volume with your connected device or the buttons on the earbuds.

#### Play/ Pause • Quick press the [O] button to pause the music.

• To resume music playback, quick press the [O]

Skipping Songs
• Long press the [+] button to skip to the next song. Long press the [ - ] button to skip to the previous

#### Adjusting the volume

• Quick press the [+] button to increase the volume.

- Ouick press the [-] button to decrease the volume.

#### **Troubleshooting tips**

- 1. Make sure your Bluetooth device supports A2DP
- profile.

  Turn up the volume on your Bluetooth device.

  You may have to unpair the earbuds, then re-pair to your device.
- 1. Long press the [O] button until a tone is heard and the LED Bluetooth indicator light alternately flashes RED and BLUE.
- 2. Keep the earbuds and Bluetooth enabled device within 3 feet of each other during the pairing process.
- 3. Check that your device's Bluetooth feature is turned
- 4. Try repeating the pairing process. See "Pairing the Farbuds."
- 5. Make sure the earbuds are fully charged.

- 1. Long press the [O] button until a tone is heard and the LED Bluetooth indicator light alternately flashes RED and BLUE.
- The earbuds are now in pairing mode.

## Safety instructions

- Read these instructions.
- 2. Keep these instructions. 3. Heed all warnings.

- Follow all instructions.
   Do not use this apparatus near water.
- 6. Clean only with a dry cloth. 7. Do not block any ventilation openings. Install in accordance with the
- manufacturer's instructions.

  8. Do not install near any heat sources such as radiators, heat registers,
- stoves, or other apparatus (including amplifiers) that produce heat Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other Agrounding type plug has two blades with one wider than the other Agrounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When
- the provided plug does not fit into your outlet, consult an electrician for eplacement of the obsolete outlet. 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from
- 11. Only use attachments/accessories specified by the manufacture
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination during



- 13. Unplug the apparatus during lightning storms or when unused for
- All, Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

  WARNING: The mains plug is used as a disconnect device; the
- 16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on apparatus.
- 17. This equipment is a Class || or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.





This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Pades. These limits are designed to provide reasonable specerious against hamful interference in a disease of the provided of the property of

- was no uncouraged to try to correct the interference by one or more of the following measures:

  Routest the reparation between the equipment and receiver:

  Connect the equipment into an outler on a circuit affirment from that to which connect the equipment into an outler on a circuit affirment from that to which connect the equipment into an outler on a circuit and individual containing for help. Causino: Any changes or modifications to this device not explicitly approved by manufacturer condition vide your architecture to persent this explicit payment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (C) This device must not count harmful interference, and (C) this device must accept any interference received, including a first think the part of the device than the conditions of the conditions of the device than the conditions of the conditions without restriction.